


Gas hurner

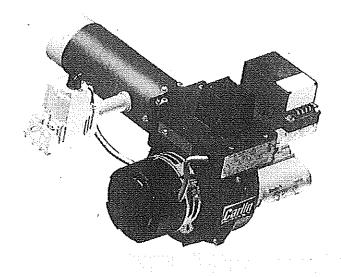

Instruction manual

Ratings

Input:	50,000 to 275,000 Btuh
Fuels:	Natural gas or propane gas
	Max. supply pressure14 inches w.c.
	Min. supply pressure5 inches w.c.
	Manifold pressure3.5 inches w.c.
Electrical:	Power120V/60 Hz/1-Phase
	Motor1/15, 1/7, or 1/6 HP, 3450 RPM
	Current Approx. 2.0, 2.5 or 2.3 amps
Ignition:	Carlin Model 41800 solid state ignitor
Control:	Carlin Model 60200FR microprocessor contro
Agencies:	UL Listed (US and Canada)
	LISTED

Contents

PLEASE read this first2
Codes and standards2
EZGas Pro burner at-a-glance3
Prepare site • prepare burner • mount burner 4
Install gas piping9
Wire burner 10
Check system • start-up burner/appliance 11
Perform checkout procedure • fill out certificate 14
Maintenance and service procedures 15
Troubleshooting17
Dimensions and mounting information
Replacement parts20

Installer/servicer — Except where specifically stated otherwise, this manual must be used only by a qualified service technician. (In the state of Massachusetts, this product must be installed by a licensed Plumber or Gas Fitter.) Failure to comply with this or other requirements in this manual could result in severe personal injury, death or substantial property damage.

Western Co.

User - Refer only to User's Information manual for information regarding operation of this burner. The burner Instruction Manual is intended only for your service technician. The burner and heat exchanger must be inspected and started at least annually by your service technician.

© Copyright 2013 — Carlin Combustion Technology, Inc.

Carlin Combustion Technology, Inc. 70 Maple Street

East Longmeadow, MA 01028

TECH SUPPORT 800-989-2275

Ph 413-525-7700

carlincombustion.com

Fx 413-525-8306