



Features:

- Durable Die Cast Manual Pull Station
- Matching Fire Alarm Control Panel Key
- Mounts in Single Gang Box
- Single or Dual Action
- Compatible with all PFC-6000, PFC-8000, and P-Series Panels

Rated Voltage	22 to 24 VDC
Standby Current Draw	0.325 mA
Alarm Current Draw	0.325 mA
Temperature Range	32°F to 120°F (0°C to 49°C)
Relative Humidity Range	0 to 93% (non-condensing)



APS-SA Addressable Pull Station Single Action	1430810
APS-DA Addressable Pull Station Dual Action	1430811

Description

The APS-SA and APS-DA addressable manual pull stations are non-coded that provide an addressable point to a Potter alarm system. The APS series has terminals that allow the signaling line circuit (SLC) to be wired directly to the device and then exit to the next device in the loop. The APS series will mount in a single gang box or the Potter P32-BB surface mount back box.

Operation

The APS-SA is activated by simply pulling the white "T" bar handle down. The APS-DA is activated by lifting the front cover and then pulling the white "T" bar. Once activated, the "T" bar cannot be reset without opening the front cover. Opening the front cover will also activate the manual pull station.

To reset the pull station, use the Potter WS-93 key and turn the lock to open the front cover. Once the cover is open, push the white "T" bar into the normal position and re-secure the front cover to the device.

Setting the Address

The APS series must have the address set prior to installation of the manual pull station. This is accomplished using the handheld programmer or the SLC programmer on the fire alarm control panel (FACP). The address is stored on the module attached to the pull station and should be uniquely addressed. The device address should be recorded on the mounting plate of the pull station for future reference.

ADA Compliance


The APS series is required to be mounted between 42" (106.7 cm) and 48" (121.9 cm) from the finished floor. The maximum side reach is allowed to be 54 inches (137.2 cm).

CAUTION
This device is to be installed per the manufactures instructions in accordance with the applicable NFPA standards, national and local fire and electrical codes. The Authority Having Jurisdiction (AHJ) should be consulted if there are any questions or local requirements.

This device should be tested in accordance with NFPA standards.

Failure to follow the manufacturers recommendations could lead to the APS failing to report an alarm condition. It is the responsibility of the alarm installer to ensure this device is installed as intended. If there are questions, contact Potter's Technical Support for clarification.

Pull Station Front View

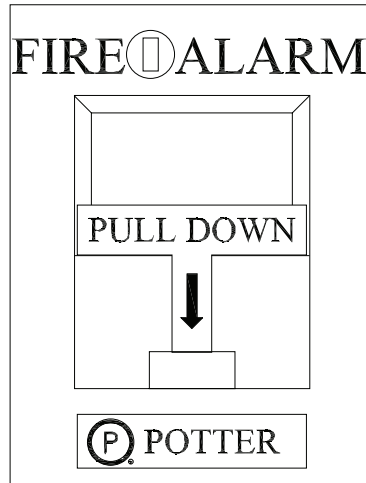

Pull Station Back View

