


## FA System Pull Station

- ∨System Pull Horn Strobe
- MH System Mini Horn
- System Strobe Only
- S System Smoke
- (H) System Heat
- **FS** System Flow Switch
- **System Tamper Switch**
- KB Knox Box
- Ann. Remote Annunciator
- ADR Area Of Refuge Call Station
- ADRP Area Of Refuge Panel
- w Indicates Wall Mount
- E Indicates Existing Device
- SSS 120v Single Station Smoke
- SOSS 120v Single Station Smoke CO Combo
- SSSV 120v Single Station Audio Visual Smoke
- **OSSV 120v Single Station Audio Visual CO**
- $\bigcup_{120} 120v Visual Only$

## Exit Emergency Legend

- Emergency Light
- Remote Emergency Head
- Exit Light
- Exit Emergency Combo
- E Indicates Existing Fixture
- EM Indicates Battery Back-Up Fixture

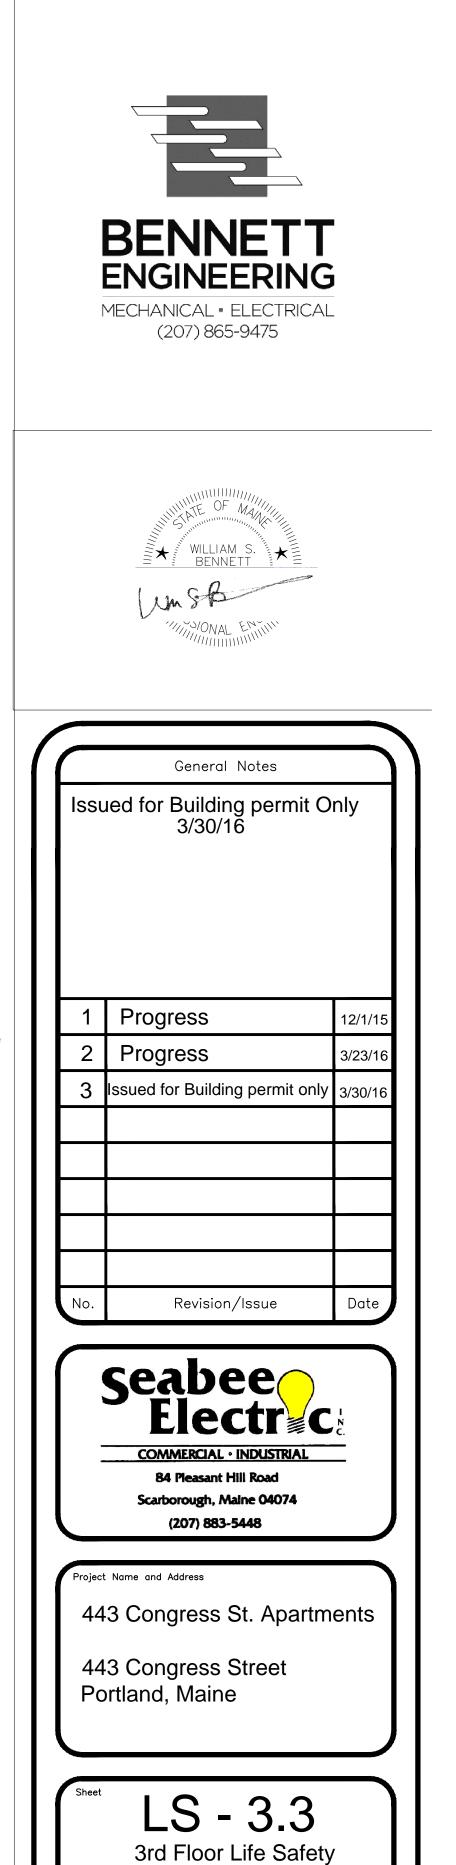

1⁄4" = 1'