






BREAKER PANEL TO CONTROL PANEL
 Responsibility: Electrician
 BREAKER SIZE SHOWN IS THE MAXIMUM ALLOWED

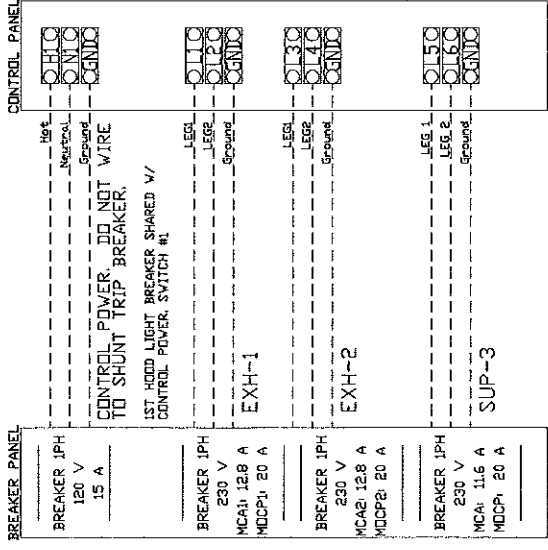

CONTROL PANEL TO FANS
 Responsibility: Electrician

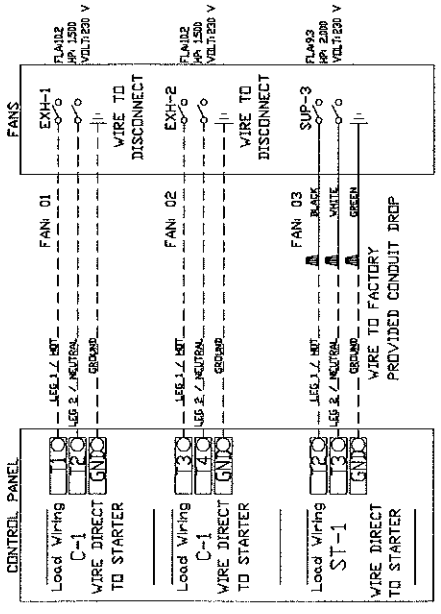

CONTROL PANEL TO ACCESSORY ITEMS
 Responsibility: Electrician

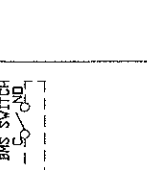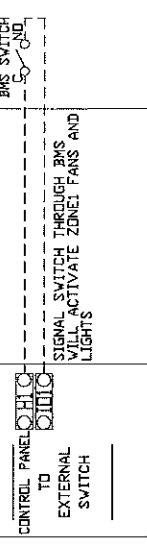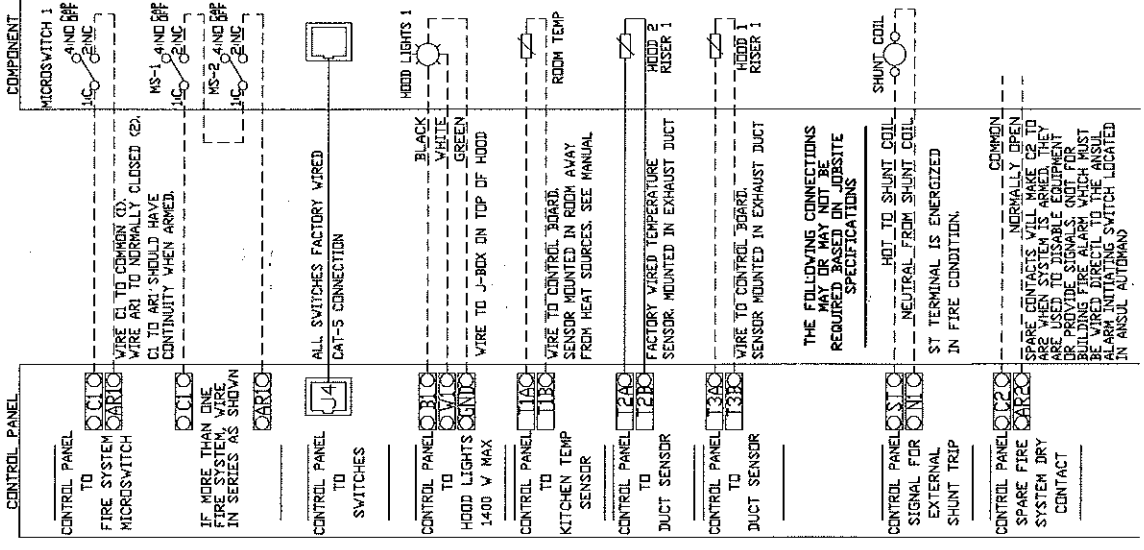

THE FOLLOWING CONNECTIONS MAY OR MAY NOT BE REQUIRED BASED ON JOBSITE SPECIFICATIONS

SPARE CONTACTS WILL MAKE UP TO USE USED TO DISABLE EQUIPMENT OR PROVIDE SIGNALS NOT FOR BUILDING FIRE ALARM WHICH MUST BE WIRED DIRECT TO THE ANSUL BEARING INITIATING SWITCH LOCATED IN ANSUL AUTOMAT