



NOTES:

1. INTERLOCK IMMERSION HEATERS WITH SPRAY WATER CIRCULATING PUMP TO DE-ENERGIZE HEATERS WHEN SPRAY PUMP IS RUNNING.
2. CONTROL THERMOSTAT IS TO BE AT 40°F. DO NOT SET THERMOSTAT LOWER THAN 40°F.
3. FUSE PROTECTION AND POWER SUPPLY WIRING ARE TO BE SIZED TO MATCH HEATER REQUIREMENTS. WIRING MUST COMPLY WITH APPLICABLE CODES AND ORDINANCES.

* Refer to heater package drawings for heater power values.

SYMBOLS

DESCRIPTION

- BROKEN LINES INDICATE WIRING AND COMPONENTS SUPPLIED BY OTHERS.
- SOLID LINES INDICATE WIRING AND COMPONENTS SUPPLIED BY BAC.

ORDER NO: **U150762301**

DATE: **3/6/2015 1:27:09 PM**



BALTIMORE AIRCOIL COMPANY

**Electric Immersion Heater Wiring
Single Contactor with Terminal Block**

DRAWING NUMBER:
HW-U150762301