

31 EXCHANGE/46 MARKET ST FIRE ALARM INPUT/OUTPUT MATRIX

System Inputs	Activate Alarm LED on FACP & Remote Annunciator	Activate Local & Remote Alarm Audible Signal	Activate Supervisory LED on FACP	Activate Local & Remote Supervisory Audible Signal	Indicate Trouble LED on FACP & Remote Annunciator	Activate Local & Remote Trouble Audible Signal	Indicate System Status & Location on FACP	Transmit Alarm Status & Location Audible Signal	Transmit Alarm Signal to Central Station	Transmit Trouble Signal to Central Station	Transmit Supervisory Signal to Central Station	Transmit Alarm Signal Through Radio
Manual Pull Station (Exchange St & Market 3rd & 4th Floor)	X	X				X	X	X				X
Manual Pull Station (Market St. Basement & First Floor)	X	X				X	X	X				
Smoke Detector	X	X				X	X	X				X
Low Battery				X	X	X			X			
Loss of AC Power				X	X	X			X			
Open Circuit				X	X	X			X			
Short Circuit				X	X	X			X			
Ground Fault				X	X	X			X			
Sprinkler Flow	X	X				X	X	X			X	
Sprinkler Tamper			X	X		X			X			
Hood Suppression	X	X				X	X	X				X

