


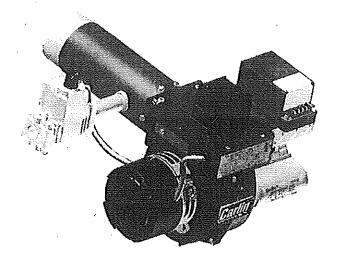

Gas burner



Instruction manual

Ratings

Input: 50,000 to 275,000 Btuh Fuels:Natural gas or propane gas Max. supply pressure.....14 inches w.c. Min. supply pressure......5 inches w.c. Manifold pressure3.5 inches w.c. Electrical: Power...... 120V/60 Hz/1-Phase Motor......1/15, 1/7, or 1/6 HP, 3450 RPM Current..... Approx. 2.0, 2.5 or 2.3 amps Ignition: Carlin Model 41800 solid state ignitor Control: Carlin Model 60200FR microprocessor control Agencies:UL Listed (US and Canada)

Contents

PLEASE read this first2
Codes and standards2
EZGas Pro burner at-a-glance3
Prepare site • prepare burner • mount burner 4
Install gas piping9
Wire burner10
Check system • start-up burner/appliance 11
Perform checkout procedure • fill out certificate 14
Maintenance and service procedures15
Troubleshooting17
Dimensions and mounting information19
Replacement parts

MANUTE.

Installer/servicer — Except where specifically stated otherwise, this manual must be used only by a qualified service technician. (In the state of Massachusetts, this product must be installed by a licensed Plumber or Gas Fitter.) Failure to comply with this or other requirements in this manual could result in severe personal injury, death or substantial property damage.

William !

User — Refer only to User's Information manual for information regarding operation of this burner. The burner Instruction Manual is intended only for your service technician. The burner and heat exchanger must be inspected and started at least annually by your service technician.

© Copyright 2013 — Carlin Combustion Technology, Inc.

Carlin Combustion Technology, Inc. 70 Maple Street East Longmeadow, MA 01028

Tech support 800-989-2275

Ph 413-525-7700

carlincombustion.com

Fx 413-525-8306