




- NOTE
1. ALL ROOM SPEAKERS ARE SET AT 5 WATT.
  2. ALL STAIRWAY SPEAKERS AND ICE MACHINE ROOMS ARE SET AT 25 WATT.
  3. ALL OTHER SPEAKERS ARE SET AT 1 WATT UNLESS OTHERWISE NOTED.

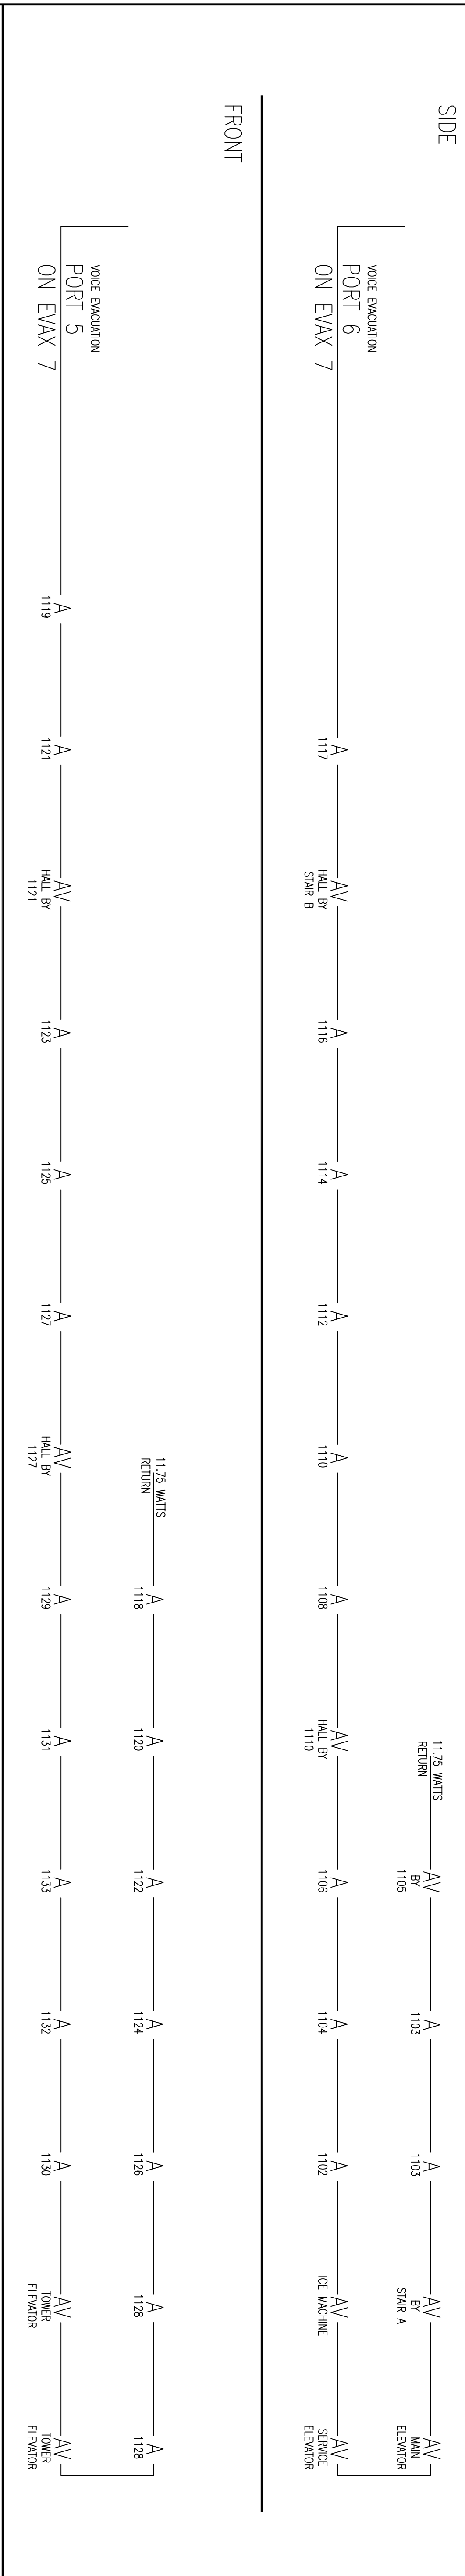

- NOTE
1. ALL ROOM SPEAKERS ARE SET AT 5 WATT.
  2. ALL STAIRWAY SPEAKERS AND ICE MACHINE ROOMS ARE SET AT 25 WATT.
  3. ALL OTHER SPEAKERS ARE SET AT 1 WATT UNLESS OTHERWISE NOTED.

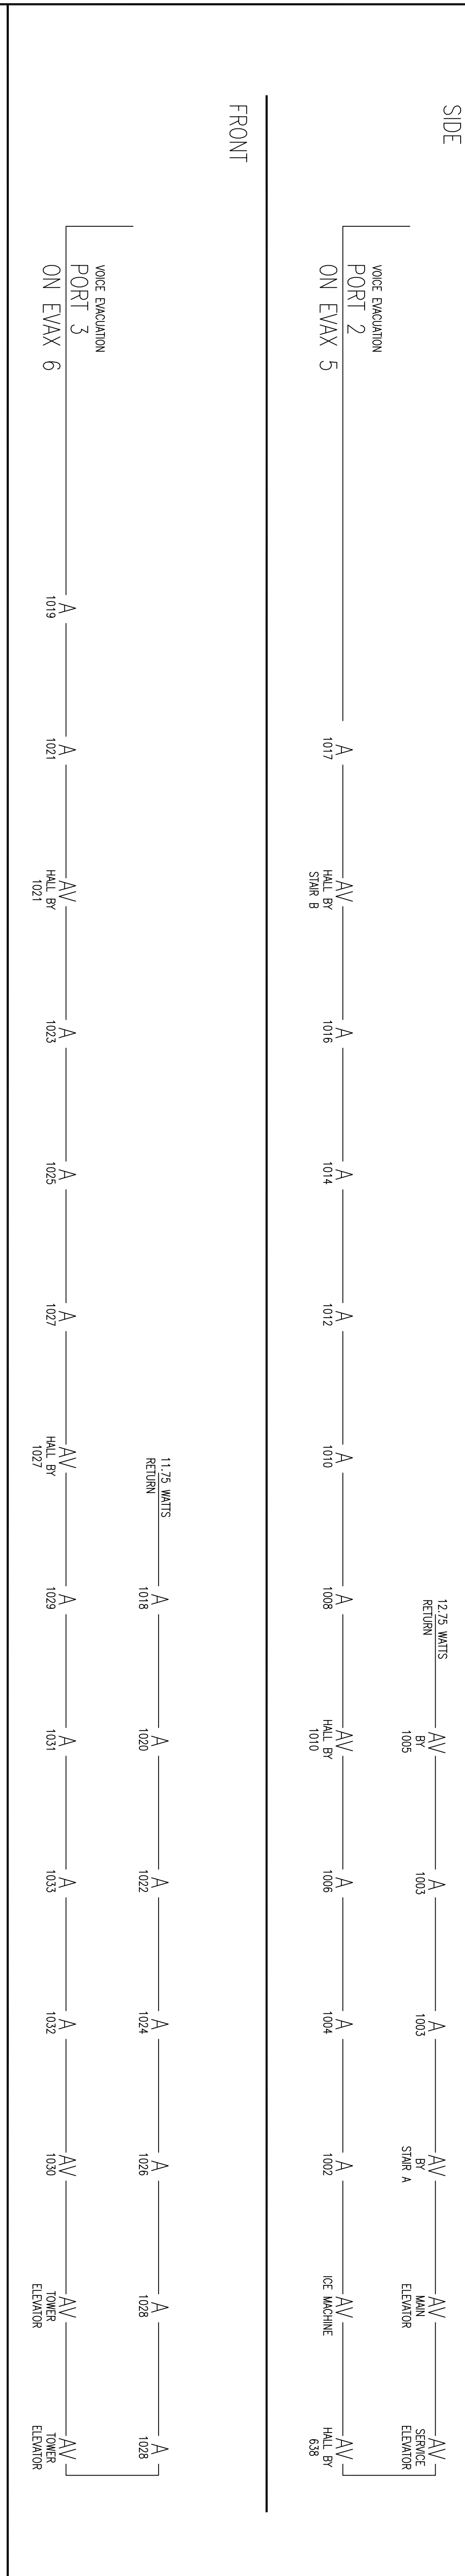

- NOTE
1. ALL ROOM SPEAKERS ARE SET AT 5 WATT.
  2. ALL STAIRWAY SPEAKERS AND ICE MACHINE ROOMS ARE SET AT 25 WATT.
  3. ALL OTHER SPEAKERS ARE SET AT 1 WATT UNLESS OTHERWISE NOTED.

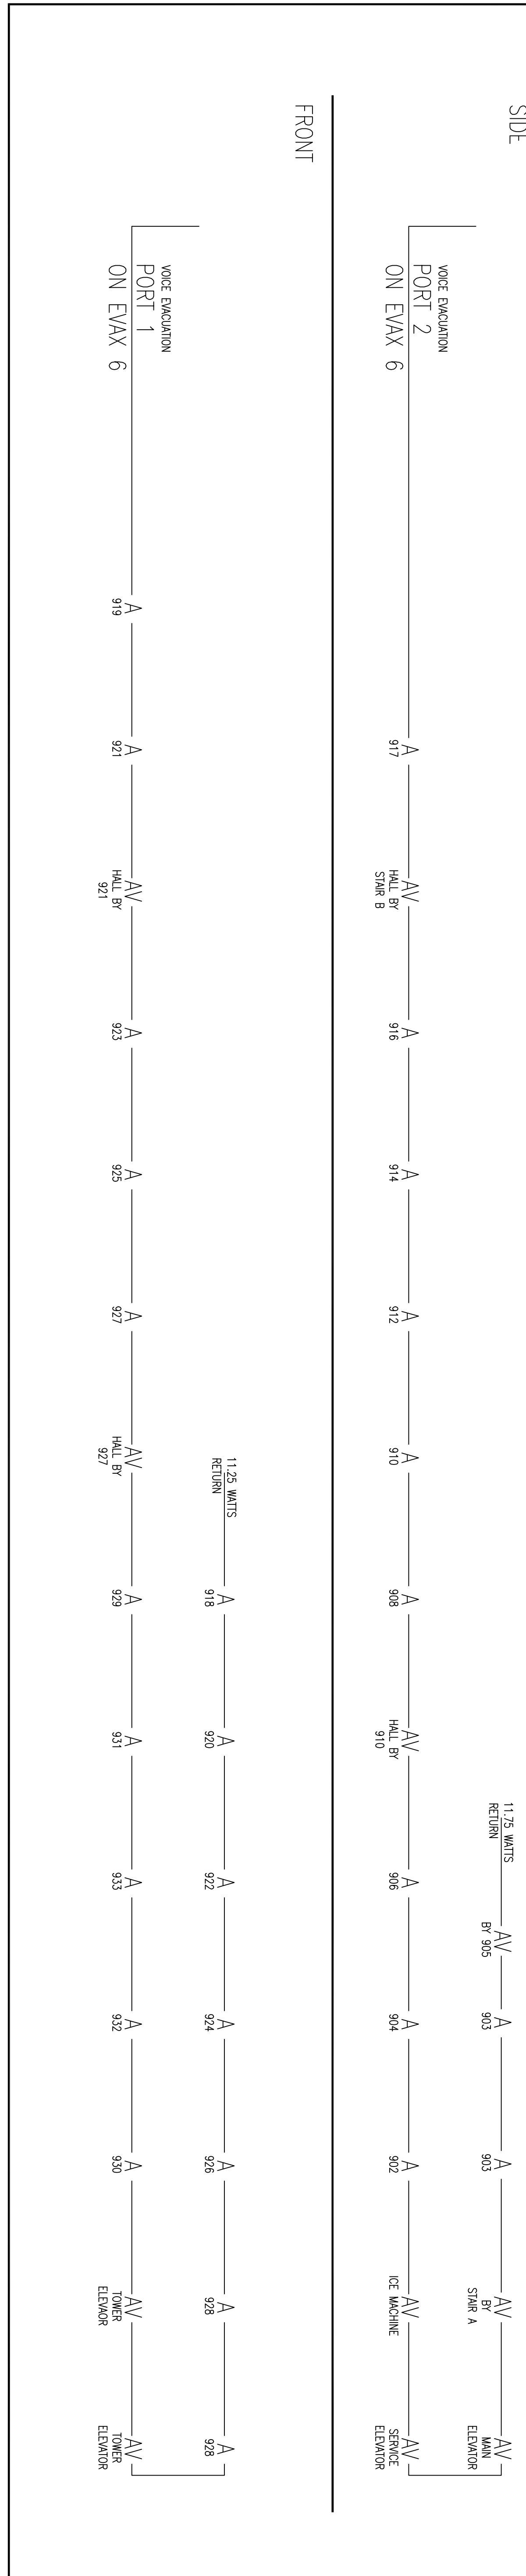

REVISIONS