

CARLTON COURT FIRE ALARM INPUT/OUTPUT MATRIX PHASE I

System Inputs	Activate Alarm LED on FACP	Activate Local Alarm Audible Signal	Activate Supervisory LED on FACP	Activate Local Supervisory Audible Signal	Activate Trouble LED on FACP	Indicate System Status & Zone Location	Activate Audible/Visual Evacuation Signals in Dwelling Units	Activate Alarm LED on Remote Annunciator	Activate Remote Alarm Audible Signal	Activate Supervisory LED on Remote Annunciator	Activate Remote Supervisory Audible Signal	Indicate System Status and Location on Remote Display
Manual Pull Station	X	X				X	X					
Smoke Detector	X	X				X	X					
Heat Detector	X	X				X	X					
Low Battery				X	X	X						
Loss of AC Power				X	X	X						
Open Circuit				X	X	X						
Short Circuit				X	X	X						
Ground Fault				X	X	X						

CARLTON COURT FIRE ALARM INPUT/OUTPUT MATRIX PHASE II

System Inputs	Activate Alarm LED on FACP	Activate Local Alarm Audible Signal	Activate Supervisory LED on FACP	Activate Local Supervisory Audible Signal	Indicate System Status & Location on FACP	Activate Audible/Visual Evacuation Signals in Dwelling Units	Activate Alarm LED on FACP Display	Activate Remote Supervisory Signals in Common Areas	Activate Supervisory LED on Remote Annunciator	Activate Trouble LED on Remote Annunciator	Indicate System Status and Location on Remote Display
Manual Pull Station	X	X				X	X	X	X	X	
Smoke Detector	X	X				X	X	X	X	X	
Heat Detector	X	X				X	X	X	X	X	
Low Battery				X	X	X					X
Loss of AC Power				X	X	X					X
Open Circuit				X	X	X					X
Short Circuit				X	X	X					X
Ground Fault				X	X	X					X