

LONGFELLOW COMMONS ALARM INPUT/OUTPUT

System Inputs	Activate Alarm LED on FACP	Activate Local Alarm Audible Signal	Activate Supervisory LED on FACP	Activate Local Supervisory Audible Signal	Activate Trouble LED on FACP	Indicate System Status & Location on FACP	Activate Audible/Visual Evacuation Signals in Common Area	Activate Alarm LED on Remote Annunciator	Activate Supervisory LED on Remote Annunciator	Activate Trouble LED on Remote Annunciator	Indicate Remote Supervisory Audible Signal	Transmit System Status and Location	Transmit Alarm Status and Location	Transmit Supervisory Signal to Central Station	Close Fire Doors	Activate Trouble LED on Remote Display	Trip City Master Box	Activate Code 4 Audible Sounder Base
Manual Pull Station	X	X				X	X							X			X	
Smoke Detector	X	X				X	X							X			X	
Heat Detector	X	X				X	X							X			X	
Low Battery				X	X	X					X	X			X			
Loss of AC Power				X	X	X					X	X			X			
Open Circiut				X	X	X					X	X			X			
Short Circuit				X	X	X					X	X			X			
Ground Fault				X	X	X					X	X			X			
Sprinkler Tamper			X	X						X	X				X			
Sprinkler Flow			X	X			X	X	X	X				X			X	
Elevator Smokes			X	X			X	X	X	X				X		X	X	
C/O Detectors	X	X							X	X				X				X