



Service Location	
Customer:	<u>Waynflete Lower Schools</u>
Address 1:	<u>360 Spring Street</u>
Address 2:	
Address 3:	
City:	<u>Portland</u> State: <u>ME</u> Zip: <u>04101</u>
Phone:	Fax:
Email:	
Attention:	PO #: 7079

Billing Address	
Customer:	<u>Enterprise Electric</u>
Address 1:	<u>46 Capital Ave</u>
Address 2:	
Address 3:	
City:	<u>Lisbon Falls</u> State: <u>ME</u> Zip: <u>04252</u>
Phone:	Fax:

Bill of Materials

<u>Quantity</u>	<u>Part Number</u>	<u>Description</u>
1	IFP-2000	Intelligent Fire Alarm Control Panel
1	RA-2000	Remote Fire Alarm Annunciator, Red
1	DNR	Intelligent Non-Relay Duct Smoke Detector
1	DST5	Metal Sampling Tube, Duct Widths 4' to 8'
3	IDP-HEAT	Intelligent Addressable Thermal Detector
68	B210LP	6" Mounting Base
65	IDP-PHOTO	Intelligent Addressable Photoelectric Detector
11	IDP-PULL-DA	Addressable Manual Dual Action Pull Station
7	IDP-RELAY	Addressable Relay Module
2	IDP-RELAYMON-2	Multiple Module with 2 Relay Outputs and 2 Monitor Inputs
1	IDP-MONITOR-2	Addressable Dual Monitor Module
10	IDP-MONITOR	Addressable Monitor Module
1	P2RK	2-Wire Horn/Strobe Standard MultiCandela, outdoor/red
40	P2RL	L-Series, Red, Wall-Mountable, Clear Lens, 2-wire, Horn/Strobe
11	SRL	L-Series, Red, Wall-Mounted, Clear Lens, Strobe
1	PC2RL	L-Series, Red, Ceiling-Mountable, Clear Lens, 2-Wire, Horn/Strobe
2	6914	12 Volt, 18AH Battery
5	DH24120FPC	Door Holder 24/120V, Semi-Flush, Powder Coated Chrome

Bill of Materials

Quantity

Part Number

Description

Spare Parts Bill of Materials

Quantity	Part Number	Description
1	DNR	Intelligent Non-Relay Duct Smoke Detector
1	IDP-HEAT	Intelligent Addressable Thermal Detector
2	B210LP	6" Mounting Base
7	IDP-PHOTO	Intelligent Addressable Photoelectric Detector
1	IDP-PULL-DA	Addressable Manual Dual Action Pull Station
1	IDP-RELAY	Addressable Relay Module
1	IDP-MONITOR	Addressable Monitor Module
1	P2RK	2-Wire Horn/Strobe Standard MultiCandela, outdoor/red
1	P2RL	L-Series, Red, Wall-Mountable, Clear Lens, 2-wire, Horn/Strobe
1	SRL	L-Series, Red, Wall-Mounted, Clear Lens, Strobe
1	PC2RL	L-Series, Red, Ceiling-Mountable, Clear Lens, 2-Wire, Horn/Strobe
1	DH24120FPC	Door Holder 24/120V, Semi-Flush, Powder Coated Chrome

Scalable Analog/Addressable Fire Alarm Control System

IFP-2000 / RPS-2000

The IFP-2000 is an intelligent analog/addressable fire alarm control panel (FACP). The basic IFP-2000 panel contains one built in signaling line circuit (SLC), which can support 159 IDP sensors and 159 IDP modules or 127 SD devices per loop. Additional SLC loops can be added using the model 5815XL SLC expander to increase the overall point capacity to a maximum of 636 points per panel.

IFP-2000 has the interconnection capability for up to 16 panels. The system has two modes of operation, Multiple panels covering one larger building, or multiple independent buildings.

RPS-2000 is used in a networked system where at least one IFP-2000 is in the system. It is the same as an IFP-2000 without the display.

IFP-2000 has eight on-board Flexput™ circuits that can be configured for auxiliary power, notification outputs, or for conventional smoke detector inputs (Class A or Class B). The FACP also has a built-in, dual-line digital fire communicator, Form C trouble relay, and two programmable Form C relays. IFP-2000 has powerful features such as detector sensitivity, day/night thresholds, drift compensation, pre-trouble maintenance alert, and calibration trouble alert.

IFP-2000 supports a variety of devices, including RA-2000 remote annunciator, 5824 serial/parallel printer interface module (for event logging system reports), RPS-1000 intelligent power module, and IDP or SD protocol SLC devices.

Features

- Built-in support for up to 159 IDP sensors and 159 IDP modules or 127 SD devices SLC devices. SLC expander will increase overall capacity to 636 points per IFP-2000 panel.
- RPS-2000 is used in a networked system where at least one IFP-2000 is in the system.
- Up to 16 IFP-2000 or RPS-2000 panels can be networked providing up to 10,176 total points.
- Networked panels can be configured to emulate a large virtual system or can be segmented into separate sites for multiple building applications.
- Built-in UL listed digital communicator for remote reporting of system activity and system programming.
- 9.0A of output power is available through 8 sets of terminals for notification and auxiliary applications per panel.
- Supports Class B (Style 4) and Class A (Style 6 or Style 7) configuration for SLC, and SBUS.
- JumpStart auto programming allows for faster set up time by selecting default options for many programming tasks.
- System automatically tests IDP addressable devices.
- 999 software zones and 999 output groups.

Agency Listings



City of
New
York




IFP-2000

- Flexput™ I/O circuits configurable for auxiliary power, notification outputs, or conventional smoke detector inputs. Notification circuits can be configured as Class A (Style Z) or Class B (Style Y). 2- and 4-wire smoke detectors can be configured as Class A (Style D) or Class B (Style B).
- Two RS-485 buses provide communication to system accessories.
- Built-in USB interface for programming.
- Dedicated Form C trouble relay and two general purpose Form C programmable relays rated at 2.5 amps at 24 VDC.
- 13 preset notification cadence patterns (including ANSI 3.41) and four user programmable patterns.
- Four line LCD display with 40 characters per line.
- Built-in synchronization for appliances from AMSECO, Gentex®, System Sensor®, and Wheelock®.
- Programmable date setting for Daylight Saving Time.
- The IFP-2000 / RPS-2000 can be surface or flush mounted.
- Four programmable function keys.



Model IFP-2000 Basic Operating Instructions

These Instructions must be framed and displayed next to the IFP-2000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

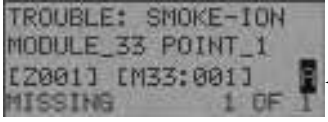Operation	Task to Perform
Silence Alarms and Troubles	Press then rotate the key or enter a code if prompted. Silence LED will light.
Reset Alarms	Press then rotate the key or enter a code if prompted.
Acknowledge Alarms and Troubles	Press then rotate the key or enter a code if prompted. When the Alarm or Trouble is acknowledged an will appear in the annunciator display as shown Below. 
View Alarms, Supervisories, and Troubles	For each type of condition press the or button associated for Alarms, Supervisories, or Troubles.
Normal Standby	Green LED on. "Silent Knight IFP-2000 All Systems Normal"
Conduct a Fire Drill	Hold the button enter a code if prompted. OR 1. Press to access Main Menu. 2. Then press to select System Tests. 3. Enter code if prompted, then press to select Fire Drill. 4. Press to start the fire drill. 5. Press to end the fire drill.
View a Point's Status	1. Press to access Main Menu, then rotate the key or enter a code if prompted. 2. Then press to select Point Functions. 3. Enter code if prompted, then press to select Point Status. 4. Select the module the device is located on by using the or . Then press . 5. Enter the point number.
Check Detector Sensitivity	1. Follow steps 1 through 5 for viewing a point status. 2. Press to view detector sensitivity.
Set Time and Date	1. Press to access Main Menu. 2. Then press to select Set Time & Date. Enter a code if prompted 3. Make changes in the fields on the screen as necessary. 4. Press if you wish to keep the changes. 5. Press to set the entered time and date.
Enable / Disable a Point	1. Press to access Main Menu, then rotate the key or enter a code if prompted. 2. Then press to select Point Functions. 3. Enter code if prompted, then press to select Disable / Enable Pt. 4. Select the module the point is located on by using the or . Then press . 5. Enter the point number.
View Event History	1. Press to access Main Menu, then rotate the key or enter a code if prompted. 2. Press to select Event History. 3. Press the or to view events in the history buffer.
For Service call:	

Cut Along the Dotted Line



**SILENT
KNIGHT**

by Honeywell

RA-2000 Remote Annunciator Installation

The optional Model RA-2000 red remote annunciator, shown in Figure 1, performs the same functions as the on-board annunciator. Operation is identical. The RA-2000 can be surface or flush mounted and is available in gray color as RA-2000GRAY.

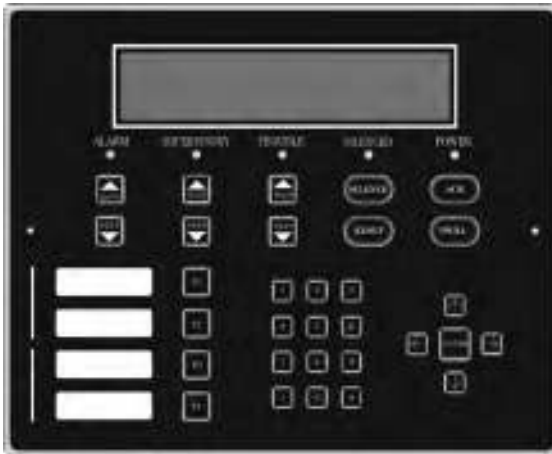


Figure 1: Model RA-2000 Remote Annunciator

RA-2000 installation involves the following steps:

1. Make sure power is off at the panel.
2. Mount the RA-2000 in the desired location (see Section "Mounting the RA-2000").
3. Connect the RA-2000 to the panel (see Figure 2).
4. Use the dipswitches on the back of the RA-2000 to assign an ID# to the RA-2000 (see Section 4.10.1 of Manual P/N 151430).
5. The RA-2000 module must be added to the system through programming. JumpStart Auto Programming will add the module automatically (refer to Manual P/N 151430).

Wiring Connections

Wire the RA-2000 to the FACP as Shown in Figure 2.

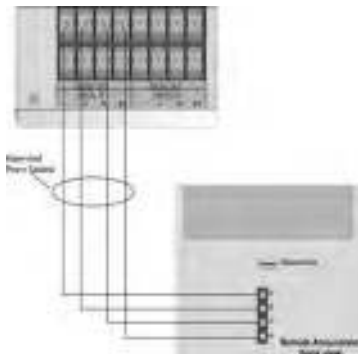


Figure 2: SBUS Connections

Specifications

Parameter	Value	
Operating Voltage:	24 VDC	
Current	Standby:	25 mA
	Alarm:	50 mA
Operating Temperature:	0° to 49° C (32° to 120° F)	
Dimensions:	Flush Mount:	Overall: 12-1/4" W x 11.5" H x 7/8" D 31.1 cm W x 29.2 cm H x 2.2 cm D See "Flush Mounting" for back box dimensions.
	Surface Mount:	Including trim ring: 12-1/4" W x 11.5" H x 3" D 31.1 cm W x 29.2 cm H x 7.6 cm D

Mounting the RA-2000

This section of the manual describes mounting the remote annunciator. The annunciator can be flush- or surface-mounted.

Flush Mounting

This section of the manual describes flush mounting.

Follow these steps to flush mount the RA-2000

1. The back box dimensions are 9-3/8" w x 8-3/8" h. The minimum depth 2". The back box can be mounted prior to the complete installation of the RA-2000 using any of the mounting holes shown in Figure 3.

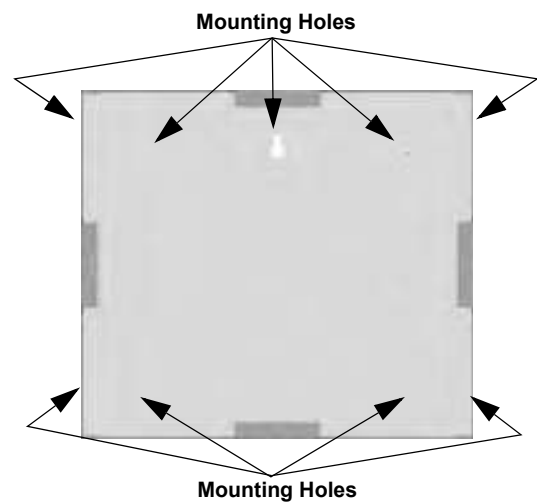


Figure 3: Back Box Mounting Holes

2. Remove knockout holes as needed for wires. See Figure 4

for backbox knockout locations

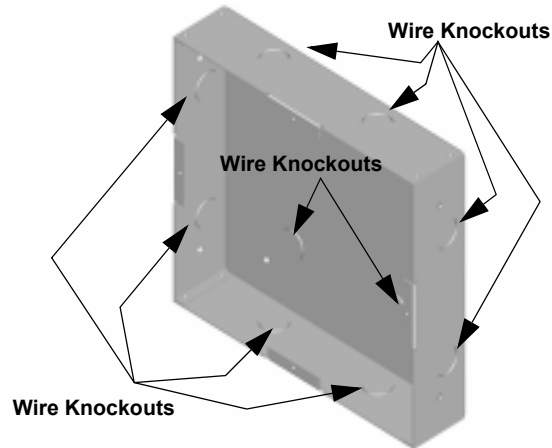


Figure 4: Back Box Knockout Locations

3. Wire the Annunciator board to the main control panel. See Figure 2.
4. Attach the annunciator and door assembly to back box as shown in Figure 5 using the supplied screws.

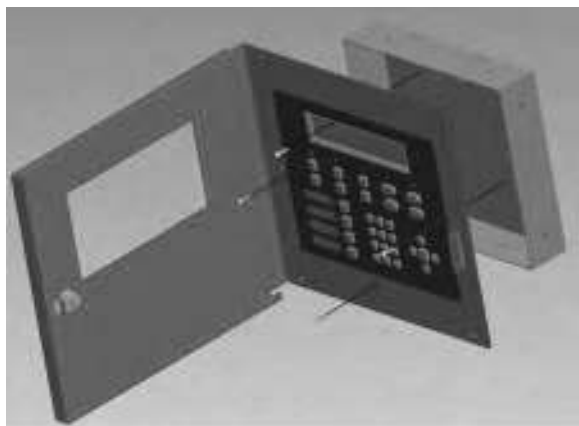


Figure 5: Attaching Annunciator/Door Assembly to Backbox

Surface Mounting

The Model RA-2000TR red trim ring and RA-2000GRAYTR gray trim ring kits are available for use when surface mounting.

1. Remove the desired knock out. See Figure 4.
2. To properly mount the back box, insert a single screw into the key shaped mounting hole. Do not tighten all the way. See Figure 6.

Place a level on top of the back box, with the back

box level insert the rest of the mounting screws.

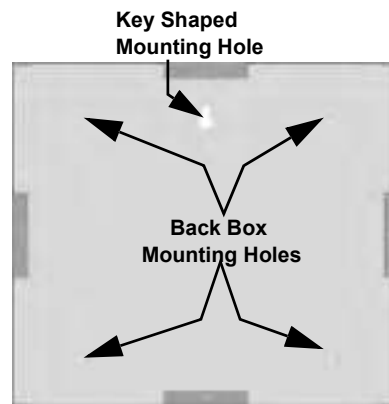


Figure 6: Back Box Surface Mount Holes

3. Run wires to the control panel.
4. Place the trim ring over the back box as shown in Figure 7.



Figure 7: Installing Trim Ring

5. Attach the Door assembly to the back box using screws provided.
6. After the annunciator wiring to the panel has been completed, replace the electronic assembly in the back box. Place the bezel over the back box and tighten the set screws on the bezel.



12 Clintonville Road
Northford, CT 06472-1610 USA
203-484-7161
Fax: 203-484-7118
www.silentknight.com

© 2009 Honeywell International Inc.

Addressable Dual Relay/Monitor Module

IDP-RELAYMON-2

The IDP-RELAYMON-2 multi output-input module is designed for use with Silent Knight IFP-series fire alarm control panels (FACPs).

The addressable module is intended for use in intelligent, two-wire loops. It includes two individual relay control modules and two Class B monitor modules. Each relay output is intended for Form C switching applications which do not require wiring supervision for the load circuit. Each monitor input provides an interface between a fire alarm control panel and one or more normally open contact-type devices. Each relay output has its own green LED.

Features

- Monitor two circuits, with unique addresses, simultaneously
- Two Form C relay contacts with each having a unique address
- Fully supervised support for Class B input wiring
- Relay programming is completely flexible – can be mapped to zone conditions
- Individual LEDs for each monitored input and relay output
- Attractive ivory cover plate
- Rotary address switches for fast installation
- SEMS screws for easy wiring
- UL listed
- CSFM: 7300-0559:0155

Agency Listings



IDP-RELAYMON-2


Installation

The IDP-RELAYMON-2 mounts directly into a 4" square electrical box. The box must have a minimum depth of 2-1/8". A surface mount electrical box (System Sensor® PN SMB500) is available from Silent Knight

Compatibility

The IDP-RELAYMON-2 is compatible with the following FACPs:

- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 Intelligent Fire Panel
- IFP-100 Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel

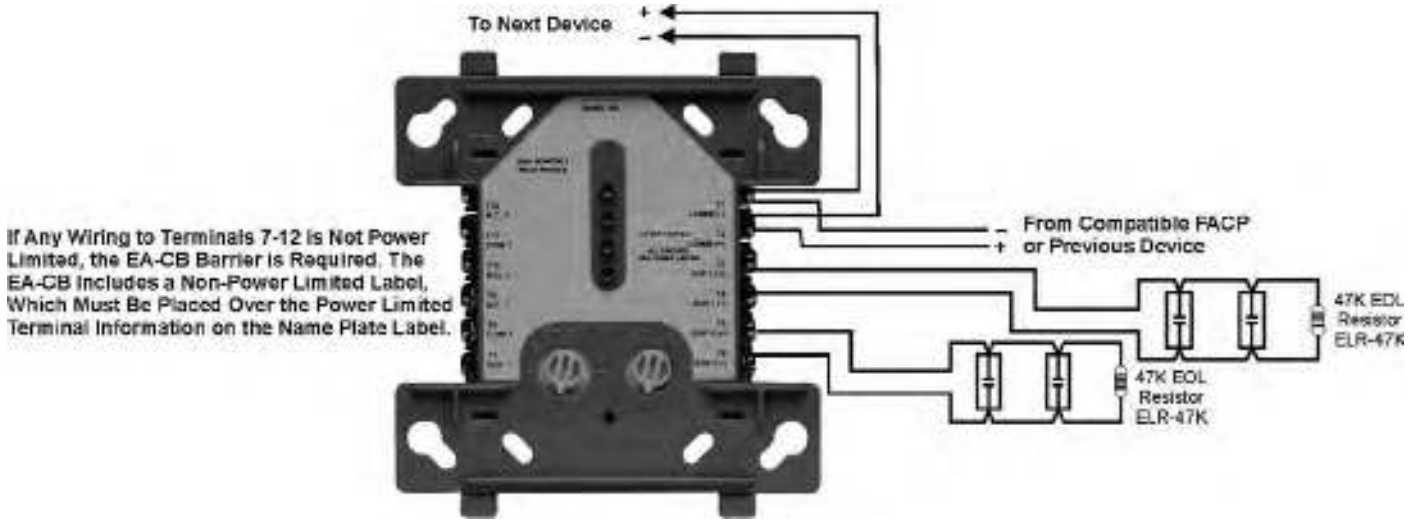

Specifications

Physical

Size: 4.675" H x 4.275" W x 1.4" D (mounts to a 4" square by 2 1/8" deep box)

Shipping Weight: 6.3oz (178.6 grams)

Electrical

Operating Voltage: 15 – 32 VDC

Maximum Current Draw: 24 mA max (4 LEDs on)

Average Operating Current: 1300µA

Environmental

Operating Temperature: 32°F to 120°F (0° to 49° C)

Relative Humidity: 10% - 93% non-condensing

Relay Contact Ratings

Current Rating	Max Voltage	Load Description	Application
2 A	25 VAC	PF=0.35	Non-coded
3 A	30 VDC	Resistive	Non-coded
2 A	30 VDC	Resistive	Coded
0.46 A	30 VDC	L/R = 20 ms	Non-coded
0.7 A	70.7 VAC	PF = 0.35	Non-coded
0.9 A	125 VAC	Resistive	Non-coded
0.5 A	125 VAC	PF = 0.75	Non-coded
0.3 A	125 VAC	PF = 0.35	Non-coded

Ordering Information

IDP-RELAYMON-2 Relay Module

Accessories

SMB500

4" Square Surface Mount Electrical Box



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. www.farenhyt.com



Made in the U.S.A.

Addressable Relay Module

IDP-Relay-6

The IDP-Relay-6 is an addressable relay module for use with Silent Knight IFP-series fire alarm control panels (FACPs). The IDP-Relay-6 has six Form C relays. It allows a Silent Knight FACP to switch discrete contacts by code command. If needed, you can disable a maximum of three unused modules on the IDP-Relay-6 board. No supervision is provided for the notification appliance circuit.

The IDP-Relay-6 contacts can be used for virtually any normally open or normally closed application. Each IDP-Relay-6 is programmed with a unique signaling line circuit (SLC) loop address. When an event occurs that controls the IDP-Relay-6, the relay is triggered by the FACP.

Features

- Six Form C contacts
- Removable 12 to 18 AWG plug-in terminal blocks
- Relay programming is completely flexible—can be mapped to zone conditions
- Individual LED for each relay contact
- Two module mounting in the IDP-ACB cabinet
- Up to three unused modules can be disabled
- Rotary address switches for fast installation
- Mounting hardware included
- UL Listed

Installation

The IDP-Relay-6 mounts in the Silent Knight IDP-ACB cabinet (PN IDP-ACB). The IDP-ACB has a built-in chassis that will accommodate one or two IDP-Relay-6 modules.

Agency Listings



MEA

386-02-E Vol. 2



IDP-Relay-6

Compatibility

The IDP-Relay-6 is compatible with the following FACPs:


- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel

Ordering Information

IDP-Relay-6 Six Relay Control
Module.

Accessories

IDP-ACB IDP Module Cabinet.
Cabinet holds two
IDP-Relays.

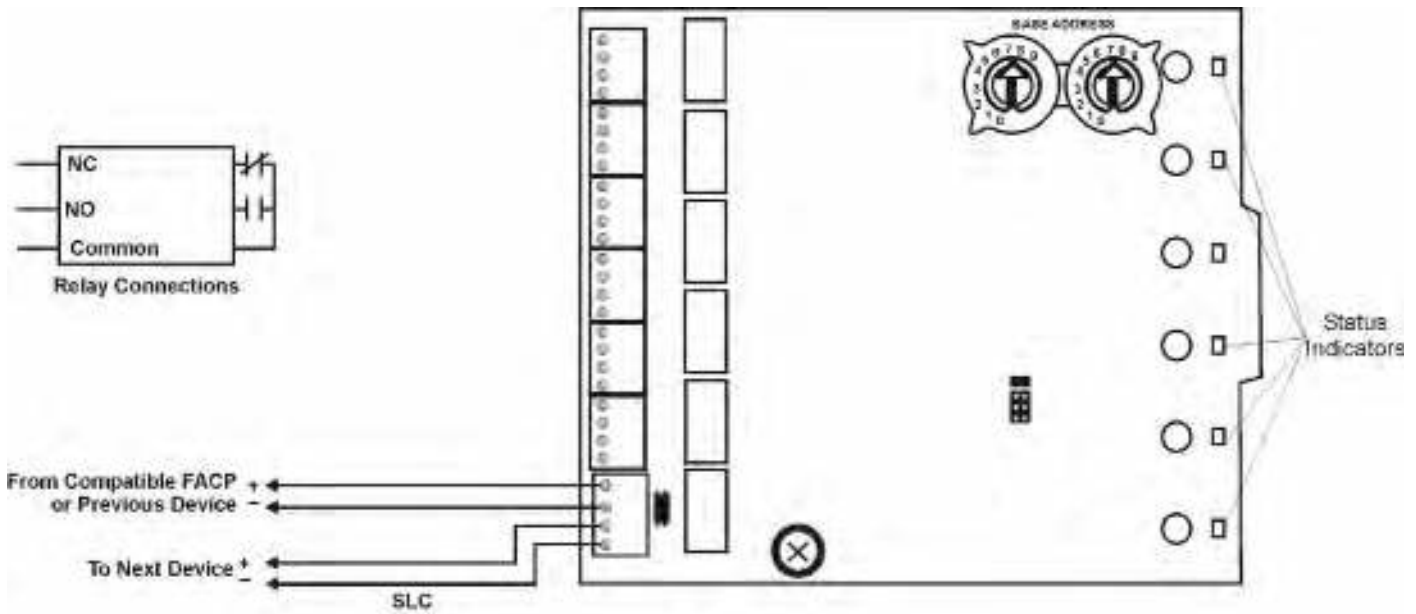

Wiring the IDP-Relay-6 Relay Module

Specifications

Physical

IDP-Relay-6	IDP-ACB
Height: 6.8" (17.3 cm)	15.25" (38.7 cm)
Width: 5.8" (14.7 cm)	12.5" (31.8 cm)
Depth: 1" (2.5 cm)	3" (7.6 cm)
Shipping Weight: 6.3 oz (196 g)	6.5 lbs (2.8 kg)

Environmental

Operating Temperature: 32°F – 120°F (0°C – 49°C)
 Humidity: 10% – 93% non-condensing

Electrical

Wire Gauge: 12 – 18 AWG
 Operating Voltage: 15 – 32 VDC
 Alarm Current: 32 mA max (assumes all six relays have been switched once and all six LEDs solid on)
 Relay Current: 30 mA relay pulse with 15.6 mS pulse duration (FACP controls pulse)
 Standby Current: 1.45 mA max
 SLC Loop Resistance: 40Ω max

Relay Contact Ratings

Current Rating	Max Voltage	Load Description	Application
3A	30 VDC	Resistive	Noncoded
2A	30 VDC	Resistive	Coded
0.9A	110 VDC*	Resistive	Noncoded
0.9A	125 VAC*	Resistive	Noncoded
0.5A	30 VDC	Inductive (L/R = 5 ms)	Coded
1A	30 VDC	Inductive (L/R = 2 ms)	Coded
0.3A	125 VAC*	Inductive (PF = 0.35)	Noncoded
1.5A	25 VAC	Inductive (PF = 0.35)	Noncoded
0.7A	70.7 VAC*	Inductive (PF = 0.35)	Noncoded
2A	25 VAC*	Inductive (PF = 0.35)	Noncoded

* UL only



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. For Technical Support, Please call 800-446-6444. www.farenhyt.com



Addressable Relay Module

IDP-Relay

The IDP-Relay is an addressable relay module for use with Silent Knight IFP-series fire alarm control panels (FACPs). The IDP-Relay allows a Silent Knight FACP to switch discrete contacts by code command. The relay contains two isolated sets of Form C contacts, which operate as a DPDT switch. No supervision is provided for the notification appliance circuit.

The IDP-Relay contacts can be used for virtually any normally open or normally closed application. Each IDP-Relay is programmed with a unique signaling line circuit (SLC) loop address. When an event occurs that controls the IDP-Relay, the relay is triggered by the FACP.

Features

- Two sets of Form C contacts
- Contacts are rated for a variety of amps (see Specifications)
- Panel controlled status LED that flashes green in normal state and is solid red in alarm
- Relay programming is completely flexible—can be mapped to zone conditions
- Polling LED visible through the cover plate
- Attractive ivory cover plate
- Rotary address switches for fast installation
- SEMS screws for easy wiring
- UL Listed

Installation

The IDP-Relay mounts directly into a 4" square electrical box. The box must have a minimum depth of 2-1/8". A surface mount electrical box (System Sensor® PN SMB500) is available from Silent Knight.

Agency Listings



MEA
386-02-E Vol II



IDP-Relay

Compatibility

The IDP-Relay is compatible with the following FACPs:


- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel
- IFP-25 Intelligent Fire Panel

Ordering Information

IDP-Relay Relay Module

Accessories

SMB500 4" Square Surface Mount
Electrical Box
CB500 Module Barrier

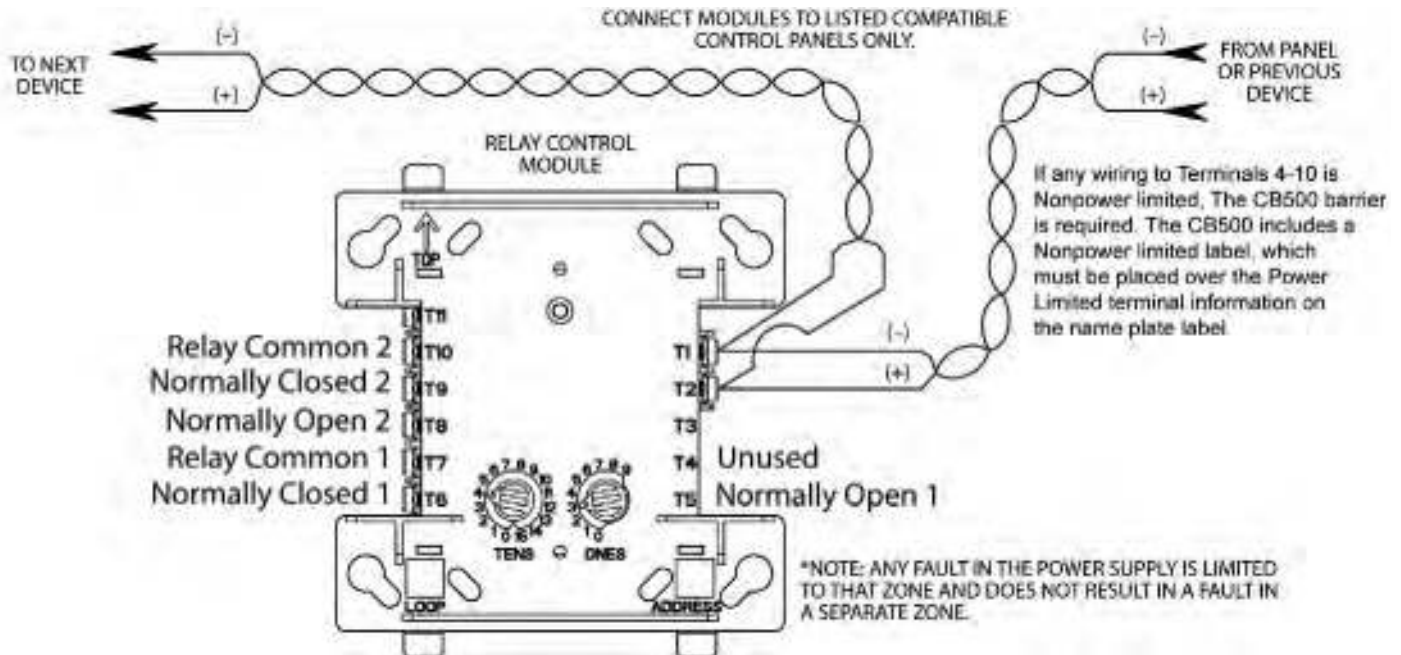

Specifications

Physical

Height: 4.5" (11.4 cm)

Width: 4.25" (10.2 cm)

Depth: 1.3" (3 cm)

Shipping Weight: 6.3 oz (196 g)

Environmental

Operating Temperature: 32°F – 120°F (0°C – 49°C)

Humidity: 10% – 93% non-condensing

Electrical

Operating Voltage: 15 – 32 VDC

LED Current: 5.5 mA (with LED latched on)

Operating Current:

230 µA (LED flashing) direct poll

255 µA (LED flashing) group poll

End-of-Line Resistance: Not used

Standby Current: 300 µA max @ 24 VDC (one communication every 5 sec with LED enabled)

Relay Contact Ratings

Current Rating	Max Voltage	Load Description	Application
3 A	30 VDC	Resistive	Noncoded
2 A	30 VDC	Resistive	Coded
0.7 A	70.7 VDC	PF = 0.35	Noncoded
0.9 A	125 VAC	Resistive	Noncoded
0.46 A	30 VDC	L/R = 20 ms	Noncoded
0.5 A	125 VAC	PF = 0.75	Noncoded
0.3 A	125 VAC	PF = 0.35	Noncoded
2 A	25 VAC	PF= 0.35	Noncoded



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. For Technical Support, Please call 800-446-6444. www.farenhyt.com



Made in the U.S.A.

Farenhyt



Addressable Single Action and Dual Action Pull Stations

IDP-Pull-SA & IDP-Pull-DA

The IDP-Pull-SA is a single action pull station requiring only one motion to activate the station. The IDP-Pull-DA is a dual action pull station requiring two motions to activate the station. Both pull stations are designed to work with Silent Knight IFP-series fire alarm control panels (FACPs).

Features

- Installer can open station without causing an alarm condition
- Dual-color LED is visible through handle of station blinks green to indicate normal operation and remains steady red in an alarm condition
- Key operated test and reset lock using lock plate actuator
- Key matches compatible FACP locks
- Meets the Americans with Disabilities Act Accessibility Guidelines (ADAAG) controls and operating mechanisms guidelines (Section 4.1.3[13])
- Meets ADA requirement for 5 lbs maximum pull force to active
- Shell, door, and handle molded from durable LEXAN®
- Reliable analog communications for trouble-free operation
- Braille text on station handle
- Handle latches in down position and the word *Activated* appears, clearly indicating the station has been pulled
- Rotary address switches for fast installation
- UL Listed, including UL 38, Standard of Manually Actuated Signaling System

Installation

The IDP-Pull-SA and IDP-Pull-DA can be surface mounted to an SB-I/O surface back box or semi-flush mounted on a standard single-gang with a minimum depth of 2.13" (5.40 cm) or double-gang or 4" (10.61 cm) square electrical box. You can also use the optional (System Sensor® PN BG-TR) trim ring if the station is being semi-flush mounted.

Agency Listings



MEA

67-02-E Vol. IX
For IDP-Pull-DA



IDP-Pull-SA



IDP-Pull-DA


Compatibility

The IDP-Pull-SA and IDP-Pull-DA are compatible with the following FACPs:

- IFP-2000/RPS-2000 Intelligent Fire Panel
- IFP-1000 Intelligent Fire Panel
- IFP-100 Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel

P/N 350286 Rev E

© 2010 Honeywell International Inc

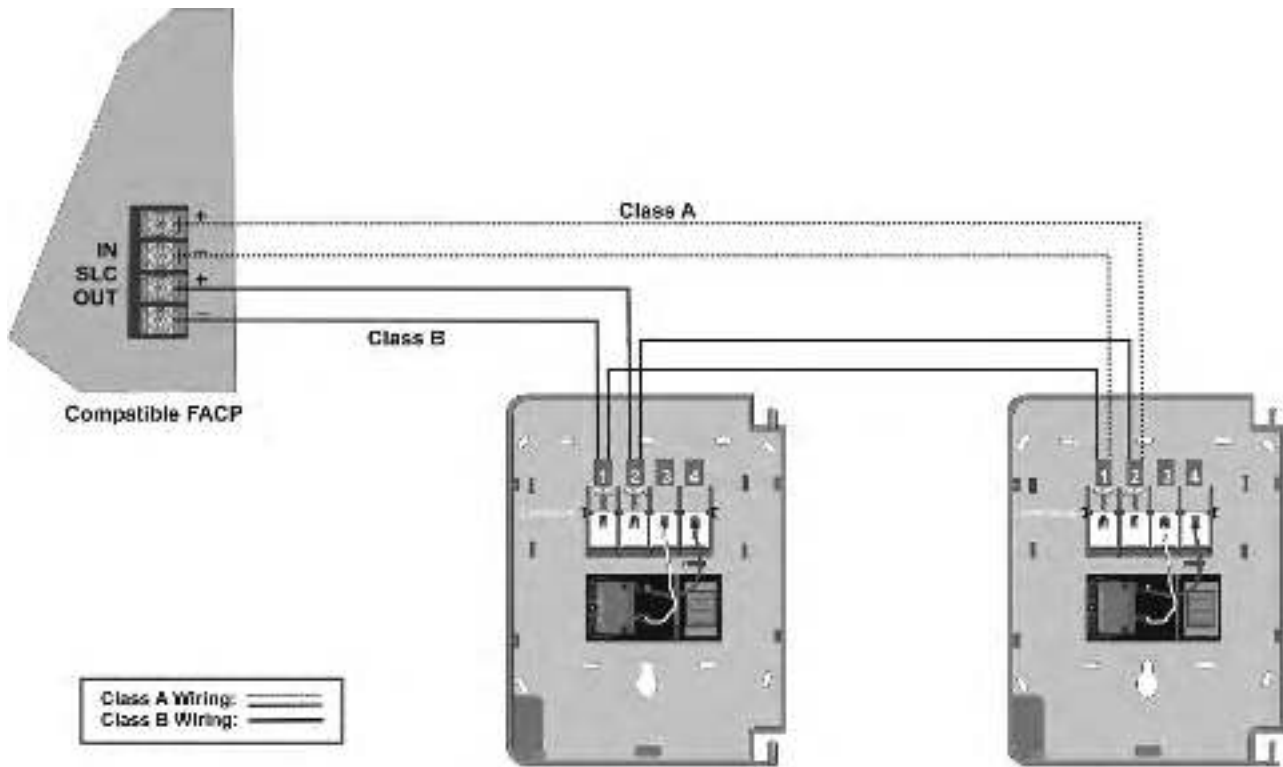

Wiring IDP-Pull-SA & IDP-Pull-DA Pull Stations

Specifications*

Physical

Height: 5.5" (14 cm)

Width: 4" (10.2 cm)

Depth: 5.4 oz. (3.7 cm)

Housing Material: LEXAN polycarbonate resin

Bi-Colored LED:

Blinking Green: Normal

Steady Red: Alarm

Switch: Single pole, single throw (SPST) normally open (N/O) switch which closes upon activation of the pull station

Electrical

Operating Voltage: 15–32 VDC

Operating Current (LED flashing): 300 μ A

Wire Gauge: Up to 12 AWG (3.1 mm²)

Environmental

Operating Temperature 32° – 120°F (0°C – 49°C)

Humidity: 10% – 93% non-condensing

Ordering Information

IDP-Pull-SA Single Action Pull Station

IDP-Pull-DA Dual Action Pull Station

Accessories

BG-TR Optional trim ring.

SB-I/O Surface backbox, indoor/outdoor.

* Unless otherwise noted, specifications apply to IDP-Pull-SA and IDP-Pull-DA.



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. www.farenhyt.com



Made in the U.S.A.

Farenhyt



Intelligent Photoelectric Smoke Detector & Photoelectric Smoke with Thermal

IDP-Photo, IDP-Photo-T and IDP-PhotoR

The IDP-Photo is a photoelectric smoke detector and the IDP-Photo-T is a photoelectric smoke detector with thermal. These plug in smoke detectors, with integral communication, provide features that surpass conventional detectors and are for use with Silent Knight IFP-series fire alarm control panels (FACPs).

Detector sensitivity can be programmed from the FACP software. Sensitivity is continuously monitored and reported to the FACP. Point ID capability allows each detector's address to be set with rotary address switches, providing exact detector locations for selective maintenance when chamber contamination reaches unacceptable levels.

IDP-Photo and IDP-Photo-T have a unique optical sensing chamber that is engineered to sense smoke produced by a wide range of combustion sources. In the IDP-Photo-T, dual electronic thermistors add 135°F (57°C) thermal technology to maximize detection.

The IDP-PhotoR is a remote test capable detector for use with the DNR (W) duct smoke detectors.

Features

- Sleek, low-profile design
- Reliable analog communications for trouble-free operation
- Age resistant polymer housing
- Dual electronic thermistor design on the IDP-Photo-T
- Superior EMI resistance for reliability
- Simple field cleaning for code compliance
- Variety of mounting options to meet any application
- Dual LED indicators for 360° visibility
- Detector transmits signal to indicate maintenance is required
- Optional remote LED annunciator (System Sensor® PN RA100Z)
- Plug-in mounting provides ease of installation
- Tamper-proof feature available on mounting bases
- Listed for use in duct applications
- Rotary address switches for fast installation
- UL Listed



MEA

225-02-E Vol. V



IDP-Photo (Base not Included)

Installation

The IDP-Photo and IDP-Photo-T plug into a compatible IDP-series detector base. The IDP-PhotoR is a remote test capable detector for use with the DNR (W) duct smoke detectors

Compatibility

The IDP-Photo, IDP-Photo-T and IDP-PhotoR are compatible with the following IDP-series detector bases:


- B210LP 6" Mounting Base
- B501 4" Mounting Base
- B224BI 6" Isolator Base
- B224RB 6" Relay Base
- B200SR 6" Sounder Base

The IDP-Photo, IDP-Photo-T and IDP-PhotoR are compatible with the following FACPs:

- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel
- IFP-25 Intelligent Fire Panel

P/N 350280 Rev F

Copyright © 2013 Honeywell International Inc.

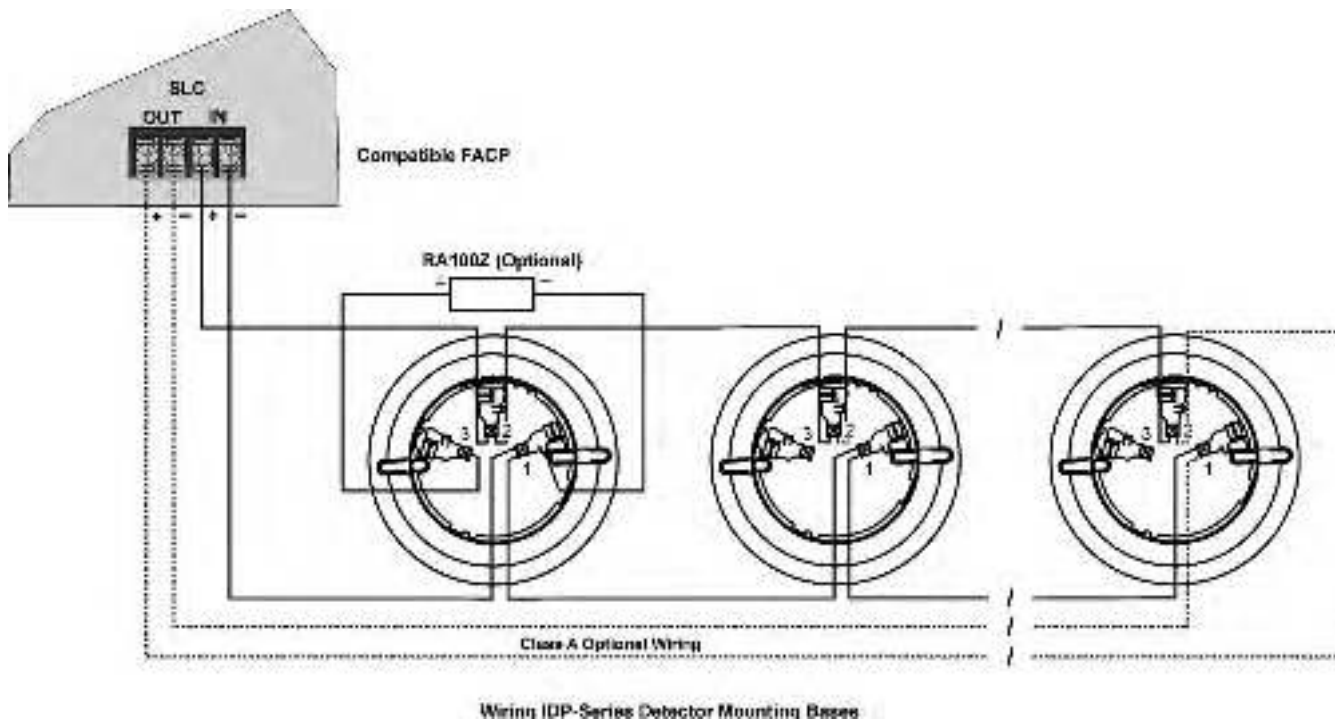

Wiring IDP-Series Detector Mounting Bases

Specifications*

Physical

Height: 2.0" (5.0 cm)

Diameter: 4.1" (10.4 cm) installed in B501 base

Electrical

Operating Voltage: 15–32 VDC

Standby Current:

250 μ A @ 24 VDC (no communication; LED off)

300 μ A @ 24 VDC (one communication every 5 sec with LED enabled)

Alarm Current: 6.5 mA @ 24 VDC max (with LED on)

Environmental

Operating Temperature

IDP-Photo: 32° – 120°F (0°C – 49°C)

IDP-Photo-T: 32° – 100°F (0°C – 38°C)

Humidity: 10% – 93% non-condensing

Other Ratings

IDP-Photo-T Thermal: Fixed temperature setpoint 135°F (57°C)

Velocity: 0 – 4000 fpm (0 – 20 m/sec) (suitable for installation in ducts)

IDP-Photo Insect Screen Hole Size: 0.016" (0.41 mm) nominal

Ordering Information

IDP-Photo	Photoelectric Smoke Detector
IDP-Photo-T	Photoelectric Smoke Detector with Thermal (135°F)
IDP-PhotoR	Photoelectric smoke detector, remote test capable, for use with DNR (W) duct smoke detector

Accessories

RA100Z	Remote LED Annunciator.
XR2B	Detector Removal Tool. A removal and replacement tool for IDP plug-in detectors. Includes the T55-127-000.
M02-04-01	Detector Test Magnet.
M02-09-00	Test Magnet with Telescoping Handle.
XP-4	Extension Pole for XR2B. Extends from 5 – 15 ft.
T55-127-000	Detector Removal Head.
BCK-200B	Black Detector Kit. For IDP-series detectors.

* Unless otherwise noted, specifications apply to IDP-Photo and IDP-Photo-T.



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. For Technical Support, Please call 800-446-6444. www.farenhyt.com



Made in the U.S.A.

Addressable Monitor Module

IDP-Monitor-2

The IDP-Monitor-2 is an addressable monitor module with two initiating circuits for use with Silent Knight IFP-series fire alarm control panels (FACPs). The IDP-Monitor-2 acts as an interface to contact devices, such as waterflow switches and pull stations.

The IDP-Monitor-2 supports Class B supervised wiring to the load device. Conventional 4-wire smoke detectors can be monitored for alarm and trouble conditions.

Because the IDP-Monitor-2 is capable of monitoring two separate Class B circuits, it is ideal for waterflow tamper switch and flow switch monitoring.

Features

- Monitor two circuits, with unique addresses, simultaneously
- Support for Class B wiring
- Fully supervised
- Panel controlled status LED that flashes green in normal state and is solid red in alarm
- Attractive ivory cover plate
- Rotary address switches for fast installation
- SEMS screws for easy wiring
- UL Listed

Installation

The IDP-Monitor-2 mounts directly into a 4" square electrical box. The box must have a minimum depth of 2-1/8". A surface mount electrical box (System Sensor® PN SMB500) is available from Silent Knight.

Agency Listings



MEA
457-99-E Vol. V




IDP-Monitor-2

Compatibility

The IDP-Monitor-2 is compatible with the following FACPs:

- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel

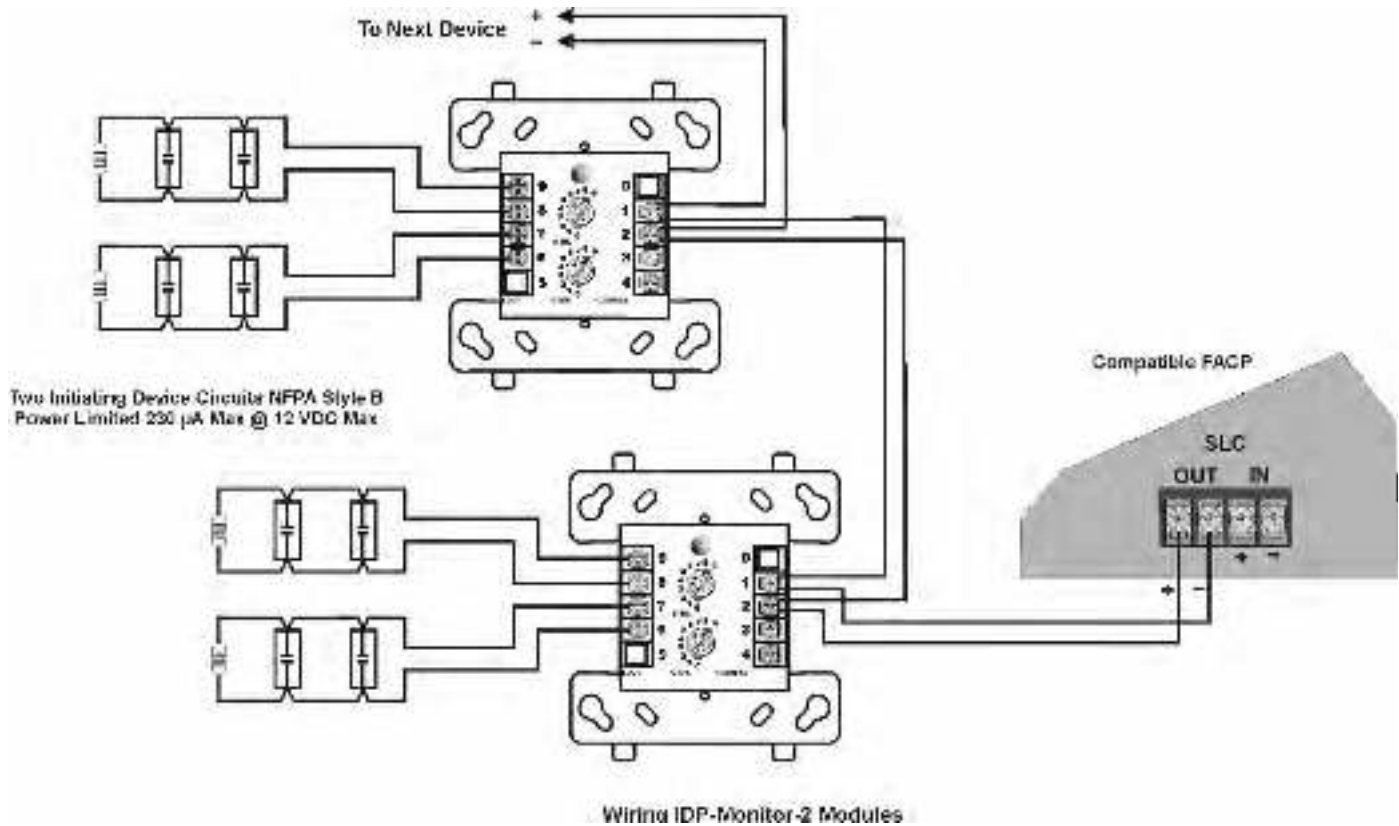

Specifications

Physical

Height: 4.5" (11.4 cm)

Width: 4" (10.2 cm)

Depth: 1.3" (3.2 cm)

Shipping Weight: 6.3 oz (196 g)

Electrical

Operating Voltage: 15 – 32 VDC

Current Draw (LED on): 5.7 mA max

Operating Current (LED flashing): 750 μ A

Standby Current:

750 μ A max @ 24 VDC (one communication every 5 sec with 47K EOL)

970 μ A max @ 24 VDC (one communication every 5 sec)

End-of-Line Resistance: 47K Ω

Initiating Device Circuit Wiring Resistance: 1,500 Ω max

SLC Line Loop Resistance: 40 Ω max.

Environmental

Operating Temperature: 32°F – 120°F (0°C – 49°C)

Humidity: 10% – 93% non-condensing

Ordering Information

IDP-Monitor-2 Dual Monitoring Module

Accessories

SMB500 4" Square Surface Mount Electrical Box



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. For Technical Support, Please call 800-446-6444. www.farenhyt.com



Made in the U.S.A.

Farenhyt



Intelligent Device

Addressable Monitor Module

IDP-Monitor

The IDP-Monitor is an addressable monitor module for use with Silent Knight IFP-series fire alarm control panels (FACPs). The IDP-Monitor acts as an interface to contact devices, such as waterflow switches and pull stations.

The IDP-Monitor supports Class A supervised or Class B supervised wiring to the load device. Conventional 4-wire smoke detectors can be monitored for alarm and trouble conditions.

Features

- Single contact monitor
- Support for Class A and Class B wiring
- Fully supervised
- Panel controlled status LED that flashes green in normal state and is solid red in alarm
- Attractive ivory cover plate
- Rotary address switches for fast installation
- SEMS screws for easy wiring
- UL Listed

Installation

The IDP-Monitor mounts directly into a 4" square electrical box. The box must have a minimum depth of 2-1/8". A surface mount electrical box (System Sensor® PN SMB500) is available from Silent Knight.

Agency Listings



MEA

386-0-E-Vol 2



IDP-Monitor

Compatibility

The IDP-Monitor is compatible with the following FACPs:

- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel

Ordering Information


IDP-Monitor Monitoring Module

Accessories

SMB500 4" Square Surface Mount
Electrical Box

P/N 350288 Rev G

Copyright © 2013 Honeywell International Inc.

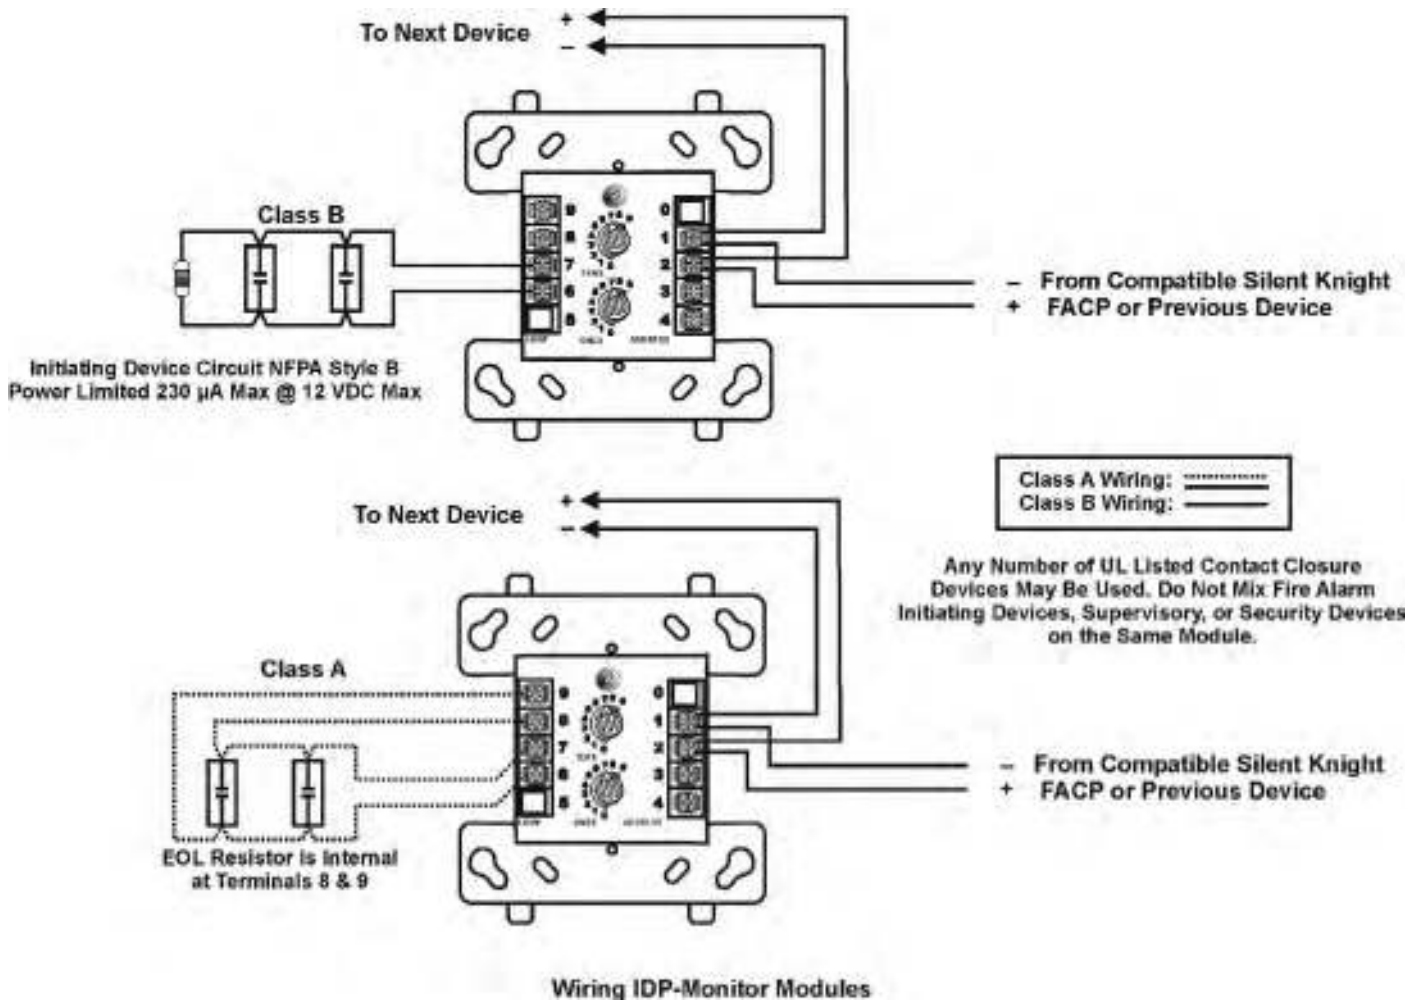

Specifications

Physical

Height: 4.5" (11.4 cm)

Width: 4" (10.2 cm)

Depth: 1.25" (3 cm)

Shipping Weight: 6.3 oz (196 g)

Electrical

Operating Voltage: 15 – 32 VDC

Current Draw (LED on): 5.0 mA max

Operating Current (LED flashing): 375 μ A

Standby Current:

400 μ A max @ 24 VDC (one communication every 5 sec with 47K EOL)

550 μ A max @ 24 VDC (one communication every 5 sec with EOL <1K)

5.5 mA (with LED latched on)

LED Current: 5.5 mA (with LED latched on)

End-of-Line Resistance: 47K Ω

Initiating Device Circuit Wiring Resistance: 1,500 Ω max

SLC Loop Resistance: 40 Ω max.

Environmental

Operating Temperature: 32°F – 120°F (0°C – 49°C)

Humidity: 10% – 93% non-condensing



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. For Technical Support, Please call 800-446-6444. www.farenhyt.com



Made in the U.S.A.

IDP-Minimon

The IDP-Minimon is a compact and light weight addressable monitor module for use with Silent Knight IFP-series fire alarm control panels (FACPs). The IDP-Minimon acts as an interface to contact devices, such as waterflow switches and pull stations.

The IDP-Minimon supports Class B supervised wiring to the load device. Conventional 4-wire smoke detectors can be monitored for alarm and trouble conditions.

Features

- Single contact monitor
- Small and lightweight size allows for flexible mounting options
- Support for Class B wiring
- Fully supervised
- Rotary address switches for fast installation
- Analog communications
- UL Listed

Installation

The IDP-Minimon can be mounted in a single gang junction box directly behind the monitored device. Its small size and light weight allow it to be installed without rigid mounting requirements.

Agency Listings



MEA
457-99-E Vol. V




IDP-Minimon

Compatibility

The IDP-Minimon is compatible with the following FACPs:

- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel
- IFP-25 Intelligent Fire Panel

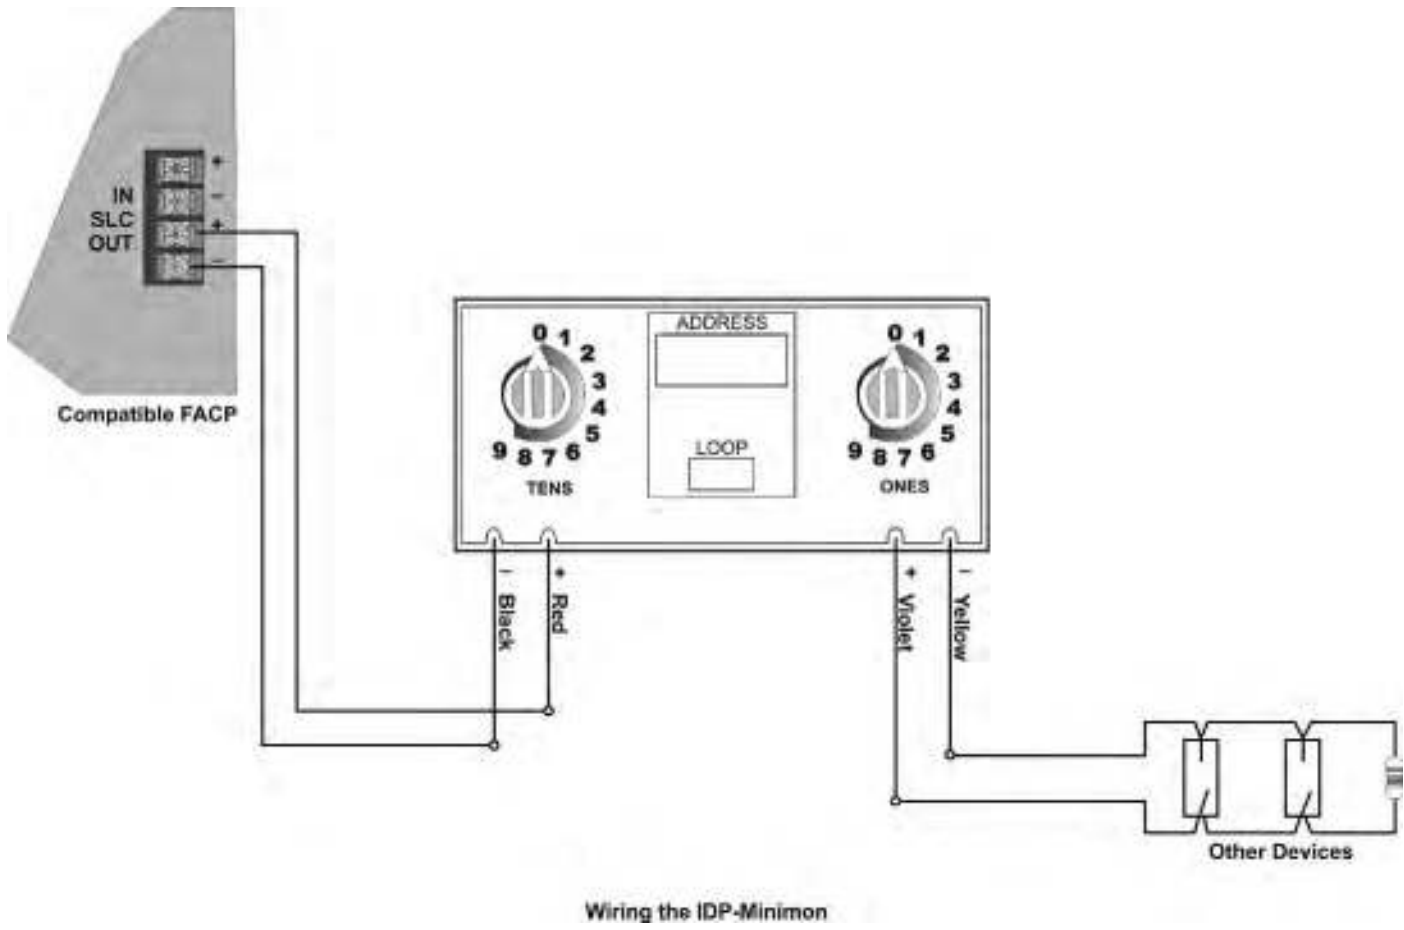

Specifications

Physical

- Height: 1.3" (3.3 cm)
- Width: 2.8" (7 cm)
- Depth: 0.5" (1.3 cm)
- Shipping Weight: 1.2 oz (37 g)

Electrical

- Operating Voltage: 15 – 32 VDC
- Standby Current: 375 μ A; 600 μ A max (communicating, IDC shorted)
- End-of-Line Resistance: 47K Ω
- Initiating Device Circuit Wiring Resistance: 1,500 Ω max
- SLC Loop Resistance: 40 Ω max.
- Wire Length: 6" min.

Environmental

- Operating Temperature: 32°F – 120°F (0°C – 49°C)
- Humidity: 10% – 93% non-condensing

Ordering Information

- IDP-Minimon Miniature Monitoring Module



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. For Technical Support, Please call 800-446-6444. www.farenhyt.com



Made in the U.S.A.

Farenhyt



Intelligent Thermal and Rate-of-Rise Thermal Detectors

IDP-Heat, IDP-Heat-HT, & IDP-Heat-ROR

The IDP-Heat, IDP-Heat-HT, and IDP-Heat-ROR are plug in thermal detectors, with integral communication, that provide features that surpass conventional detectors. These thermal detectors are for use with Silent Knight IFP-series fire alarm control panels (FACPs).

Detector sensitivity can be programmed from the FACP software. Sensitivity is continuously monitored and reported to the FACP. Point ID capability allows each detector's address to be set with rotary address switches, providing exact detector locations for selective maintenance when chamber contamination reaches unacceptable levels.

IDP-Heat is a fixed temperature thermal detector that uses a thermistor sensing circuit to produce 135°F (57°C) fixed thermal detection.

IDP-Heat-HT is a variable high temperature detector that provides high temperature detection at 135°F – 190°F (57°C – 88°C).

IDP-Heat-ROR is a fixed temperature and rate-of-rise thermal detector that uses a thermistor sensing circuit to produce 135°F (57°C) thermal protection.

Features

- Sleek, low-profile design
- Reliable analog communications for trouble-free operation
- Age resistant polymer housing
- Innovative thermistor sensing circuit
- Superior EMI resistance for reliability
- Variety of mounting options to meet any application
- Dual LED indicators for 360° visibility
- Detector transmits signal to indicate maintenance is required
- Plug-in mounting provides ease of installation
- Optional remote LED annunciator (System Sensor® PN RA100Z)
- Tamper-proof feature available on mounting bases
- Rotary address switches for fast installation
- UL Listed

Installation

The IDP thermal detectors plug into a compatible IDP-series detector base.

Agency Listings



MEA

383-02-E Vol. VI



IDP-Heat Installed in the B210LP Mounting Base
(Base Not Included)

Compatibility

The IDP-Heat, IDP-Heat-HT, and IDP-Heat-ROR are compatible with the following IDP-series detector bases:

- B210LP 6" Mounting Base
- B501 4" Mounting Base
- B224BI 6" Isolator Base
- B224RB 6" Relay Base
- B200SR Sounder Base

The IDP-Heat-HT, and IDP-Heat-ROR are compatible with the following FACPs:


- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel

The IDP-Heat is compatible with the following FACPs:

- IFP-2000 / RPS-2000 Intelligent Fire Panel
- IFP-1000 / ECS Intelligent Fire Panel
- IFP-100 / ECS Intelligent Fire Panel
- IFP-50 Intelligent Fire Panel
- IFP-25 Intelligent Fire Panel

P/N 350285 Rev F

Copyright © 2013 Honeywell International Inc.

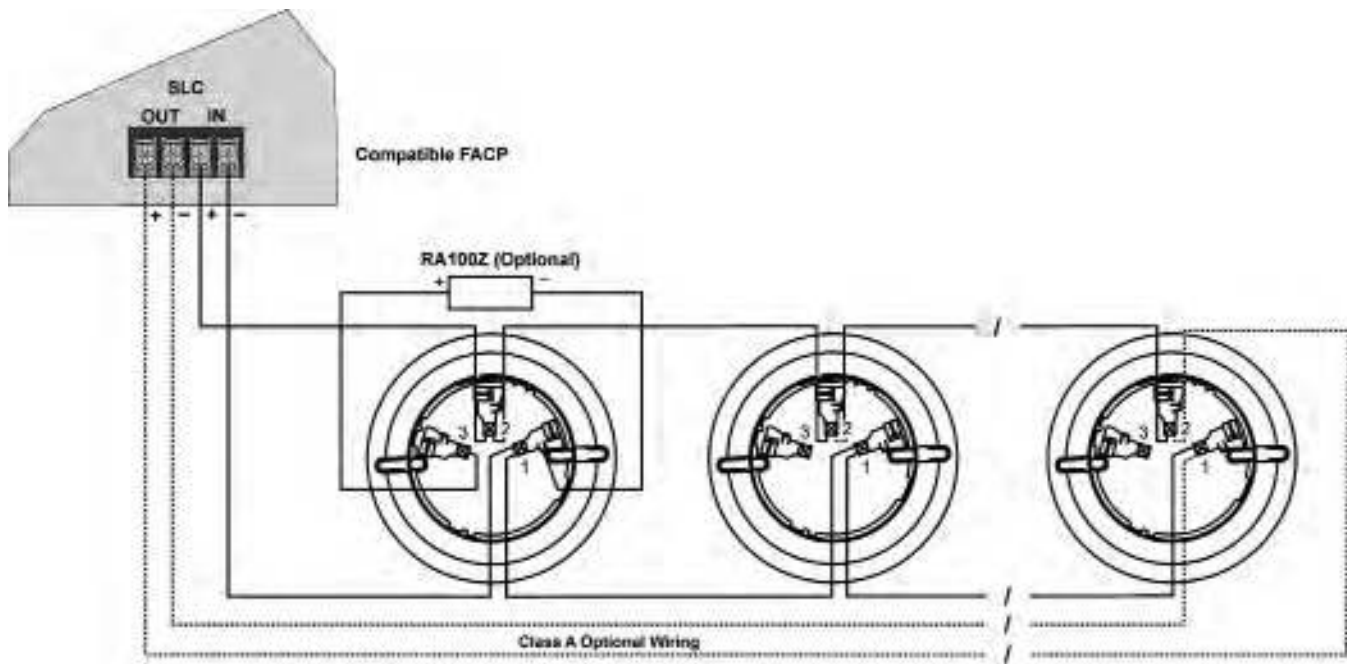

Wiring IDP-Series Detector Mounting Bases

Specifications*

Physical

Height: 2.0" (5.0 cm)
 Diameter: 4.1" (10.4 cm)
 Shipping Weight: 4.8 oz (136 g)

Electrical

Operating Voltage: 15 – 32 VDC
 Standby Current
 IDP-Heat:
 200 μ A @ 24 VDC (no communication; LED off)
 300 μ A @ 24 VDC (one communication every 5 sec with LED enabled)
 IDP-Heat-HT & IDP-Heat-ROR:
 150 μ A @ 24 VDC (no communication; LED off)
 200 μ A @ 24 VDC (one communication every 5 sec with LED enabled)
 Alarm Current: 6.5 mA @ 24 VDC max (with LED on)

Environmental

Operating Temperature
 IDP-Heat & IDP-Heat-ROR: -4° – 100°F (-20°C – 38°C)
 IDP-Heat-HT: -4° – 150°F (-20°C – 66°C)
 Humidity: 10% – 93% non-condensing

Thermal Ratings

IDP-Heat: Fixed temperature setpoint 135°F (57°C)
 IDP-Heat-HT: High temperature heat 135°F – 190°F (57°C – 88°C)

IDP-Heat-ROR: Rate-of-rise detection 15°F/min (9°C/min)

Ordering Information

IDP-Heat	Fixed Temperature Thermal Detector
IDP-Heat-HT	Fixed High Temperature Thermal Detector
IDP-Heat-ROR	Fixed Temperature and Rate-of-Rise Thermal Detector

Accessories

RA100Z	Remote LED Annunciator.
XR2B	Detector Removal Tool. A removal and replacement tool for IDP plug-in detectors. Includes the T55-127-000.
M02-04-00	Replacement Test Magnet.
M02-09-00	Test Magnet with Telescoping Handle.
XP-4	Extension Pole for XR2B. Extends from 5 – 15 ft.
T55-127-000	Detector Removal Head.
BCK-200B	Black Detector Kit. For IDP-series detectors.

* Unless otherwise noted, specifications apply to all IDP thermal detectors.



This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice. For more information, contact Silent Knight 12 Clintonville Road, Northford, CT 06472-1610 Phone: (800) 328-0103, Fax: (203) 484-7118. For Technical Support, Please call 800-446-6444. www.farenhyt.com



Made in the U.S.A.



3825 Ohio Avenue, St. Charles, Illinois 60174
 1-800-SENSOR2, FAX: 630-377-6495
 www.systemsensor.com

DNR Duct Smoke Detector

SPECIFICATIONS

Operating Temperature:	-4° to 158° F (-20° to 70° C); 32° F to 120° F (0° C to 49° C) with module installed in the DNR
Storage Temperature:	-22° to 158° F (-30° to 70° C)
Humidity:	0% to 93% Relative Humidity Non-condensing
Air Velocity:	100 to 4000 ft./min. (0.5 to 20.3 m/sec.)
Rectangular Footprint Dimensions:	14.38 in L x 5 in W x 2.5 in D (37 cm L x 12.7 cm W x 6.36 cm D)
Square Footprint Dimensions:	7.75 in L x 9 in W x 2.5 in D (19.7 cm L x 22.9 cm W x 6.35 cm D)
Weight:	1.6 pounds; 0.73 kg
Electrical (See applicable detector head installation manual for electrical specifications. Use the Base/Sensor Cross Reference chart at http://www.systemsensor.com to determine applicable sensor head.)	

Table of Contents

	Page
[1] Limitations of Duct Smoke Detectors	1
[2] General Description	1
[3] Contents of the Duct Smoke Detector Kit	1
[4] Detector Installation	1
[5] Sampling Tube Installation	2
[6] Measurement Tests	3
[7] Field Wiring	4
[8] Verification of Operation	4
[9] Detector Cleaning Procedures	5
[10] Sensor Replacement	5
[11] Optional Accessories	5
Warranty	6

BEFORE INSTALLING

Read the System Sensor Guide for *Proper Use of Smoke Detectors in Duct Applications* (A05-1004), which provides detailed information on detector spacing, placement, zoning, wiring, and special applications. Copies of this manual are available online at www.systemsensor.com. NFPA Standards 72 and 90A should also be referenced for detailed information.

NOTICE: This manual shall be left with the owner/user of this equipment.
 IMPORTANT: This detector must be tested and maintained regularly following NFPA 72 requirements. The detector should be cleaned at least once a year.

[1] LIMITATIONS OF DUCT SMOKE DETECTORS



The National Fire Protection Association has established that DUCT DETECTORS MUST NOT BE USED AS A SUBSTITUTE FOR OPEN AREA DETECTOR PROTECTION as a means of providing life safety. Nor are they a substitute for early warning in a building's regular fire detection system.

System Sensor supports this position and strongly recommends that the user read NFPA Standards 90A, 72, and 101. The DNR Air Duct Smoke Detectors are listed per UL 268A.

This device will not operate without electrical power. Fire situations may cause an interruption of power. The system safeguards should be discussed with your local fire protection specialist.

This device will not sense smoke unless the ventilation system is operating and the cover is installed.

For this detector to function properly, it MUST be installed according to the instructions in this manual. Furthermore, the detector MUST be operated within ALL electrical and environmental specifications listed in this manual and the sensor head installation manual. Failure to comply with these requirements may prevent the detector from activating when smoke is present in the air duct.

ACCESSORY CURRENT LOADS AT 24 VDC		
DEVICE	STANDBY	ALARM
RA400Z/RA100Z	0mA	12mA Max.
RTS451/RTS151	0mA	12mA Max.
RTS451KEY/RTS151KEY	12mA	12mA Max.

[2] GENERAL DESCRIPTION

Smoke introduced into this air duct system will be distributed throughout the entire building. Smoke detectors designed for use in air duct systems are used to sense the presence of smoke in the duct.

Model DNR Air Duct Smoke Detector utilizes photoelectric technology for the detection of smoke. This detection method, when combined with an efficient housing design, samples air passing through the duct and allows detection of a developing hazardous condition. When sufficient smoke is sensed, an alarm signal is initiated at the fire control panel monitoring the detector, and appropriate action can be taken to shut off fans, blowers, change over air handling systems, etc. These actions can facilitate the management of toxic smoke and fire gases throughout the areas served by the duct system.

The DNR incorporates a sensor cover tamper feature that provides a trouble signal at the panel immediately if the cover is removed or improperly installed. Proper installation of the sensor cover removes the trouble condition.

If programmed with the system control panel, two LEDs on each duct smoke detector light to provide local visible indication.

The DNR provides a remote alarm output for use with auxiliary devices, such as the RA400Z/RA100Z remote LED annunciator, as well as remote test capability with the RTS451/RTS151 or RTS451KEY/RTS151KEY Remote Test Stations.

[2.1] DETECTOR FEATURE SET

- Utilizes plug-in head
- Sampling tubes install from front and rear
- Compatible with existing accessories
- Able to address detector per code switches on sensor head.

[3] CONTENTS OF THE DUCT SMOKE DETECTOR KIT

1. Sensor/power board assembly and covers (use appropriate sensor per the system control panel)
2. Three #10 sheet metal screws for mounting
3. One test magnet
4. Drilling template
5. One sampling tube end cap
6. One plastic exhaust tube


NOTE: A sampling tube must be ordered to complete the installation. It must be the correct length for the width of the duct where it will be installed. See Table 1 on page 3 to determine the inlet tube required for different duct widths.

[4] DETECTOR INSTALLATION

[4.1] VERIFY DUCT AIR FLOW DIRECTION AND VELOCITY

Model DNR detectors are designed to be used in air handling systems having air velocities of 100 to 4000 feet per minute. Duct widths from 6 inches to 12 feet can be accommodated. Be sure to check engineering specifications to ensure that the air velocity in the duct falls within these parameters. If necessary, use a velocity meter (anemometer) to check the air velocity in the duct.

FIGURE 1. EXPLODED VIEW OF DUCT SMOKE DETECTOR COMPONENTS:

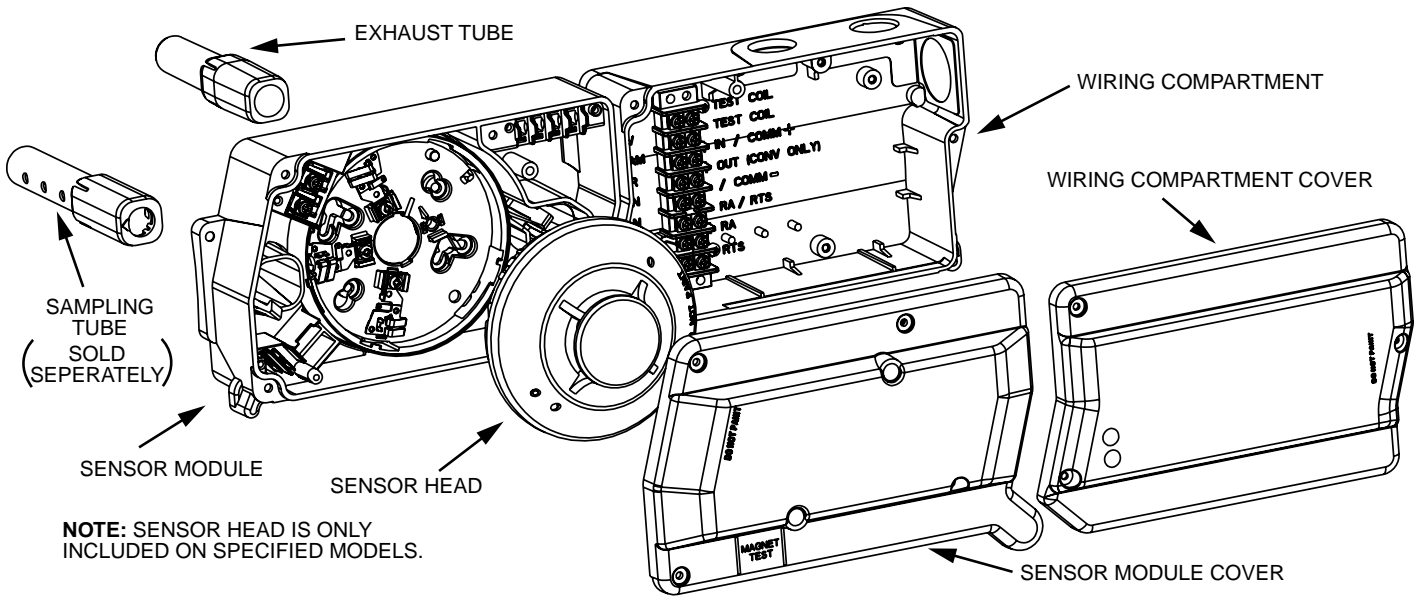

H0569-00


[4.2] DETERMINE MOUNTING LOCATION AND CONFIGURATION

On ducts wider than 18 inches it is recommended that the detector be mounted downstream of a bend, obstruction in the duct, or the supply or return air inlet.

Exception: Installation of duct detectors can be on or within a commercial packaged rooftop heating and air-conditioning system, fire/smoke dampers and economizers. They may be mounted in either the supply and/or return air section as determined by local code.

Once a suitable location is selected, determine if the detector is to be mounted in a side-by-side “rectangular” configuration or a top-over-bottom “square” configuration as shown in Figure 2. If mounting in the square configuration, remove the rear attachment screw, rotate the unit at hinge, and replace the screw into the new attachment hole as shown in Figure 2. Do NOT remove the hinge screw during this process. Final installation approval shall be based upon passing differential pressure and smoke entry tests described in the Measurement Tests section.

FIGURE 2:

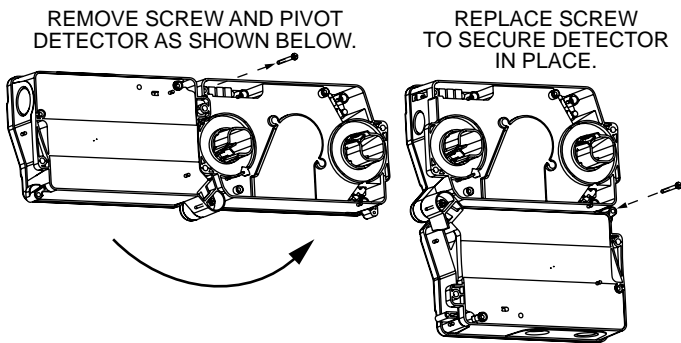

H0550-00

[4.3] DRILL THE MOUNTING HOLES

Remove the paper backing from the mounting template supplied. Affix the template to the duct at the desired mounting location. Make sure the template lies flat and smooth on the duct.

[4.3.1] FOR RECTANGULAR SIDE-BY-SIDE MOUNTING CONFIGURATION:

Center punch at (4) target centers: (2) “A” for sampling tubes and (2) “B” for the rectangular configuration mounting tabs as shown on mounting template. Drill pilot holes at target “A” centers and cut two 1.375 inch diameter holes using a 1 3/8 inch hole saw or punch. Drill .156 inch diameter holes using a 5/32 inch drill at target “B” centers.

[4.3.2] FOR SQUARE TOP-OVER-BOTTOM MOUNTING CONFIGURATION:

Center punch at (4) target centers: (2) “A” for sampling tubes and (2) “C” for the square configuration mounting tabs as shown on mounting template. Drill pilot holes at target “A” centers and cut two 1.375 inch diameter holes using a 1 3/8 inch hole saw or punch. Drill .156 inch diameter holes using a 5/32 inch drill at target “C” centers. If desired, drill an additional .156 inch hole at the location of one of the mounting tabs on the lower housing.

[4.4] SECURE THE DUCT DETECTOR TO THE DUCT

Use two (rectangular configuration) or three (square configuration) of the provided sheet metal screws to screw the duct detector to the duct.

CAUTION: Do not overtighten the screws.

[5] SAMPLING TUBE INSTALLATION

[5.1] SAMPLING TUBE SELECTION

The sampling tube must be purchased separately. Order the correct length, as specified in Table 1, for width of the duct where it will be installed. The sampling tube length must extend at least 2/3 across the duct width for optimal performance.


The sampling tube is always installed with the air inlet holes facing into the air flow. To assist proper installation, the tube’s connector is marked with an arrow. Make sure the sampling tube is mounted so that the arrow points into the airflow as shown in Figure 3. Mounting the detector housing in a vertical orientation is acceptable provided that the air flows directly into the sampling tube holes as indicated in Figure 3. The sampling tube and exhaust tube can be mounted in either housing connection as long as the exhaust tube is mounted downstream from the sampling tube.

TABLE 1. SAMPLING TUBES RECOMMENDED FOR DIFFERENT DUCT WIDTHS:

Outside Duct Width	Sampling Tube Recommended*
Up to 1 ft.	DST1
1 to 2 ft.	DST1.5
2 to 4 ft.	DST3
4 to 8 ft.	DST5
8 to 12 ft.	DST10 (2-piece)

*Must extend a minimum of 2/3 the duct width

FIGURE 3. AIR DUCT DETECTOR SAMPLING TUBE:

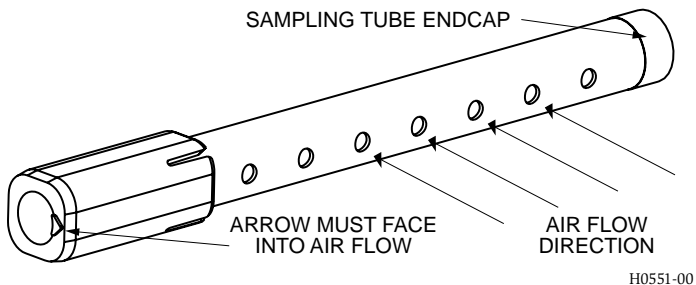


CAUTION: The sampling tube end cap, included with the detector, is critical to proper operation of the duct smoke detector. The end cap is needed to create the proper air flow to the sensor of the duct smoke detector. Once any sampling tube length adjustments are made, plug the end of the sampling tube with the provided end cap.

A plastic exhaust tube is included with the unit to be installed if needed. Install into the housing connection that is downstream from the sampling tube connection. The exhaust tube can be installed from the front of the detector or the back. A longer 1 foot exhaust tube, model ETX, is available as an accessory in cases where the molded exhaust tube does not extend at least 2 inches into the duct.

[5.2] SAMPLING TUBE INSTALLATION

- For tubes shorter than the width of the duct, slide the sampling tube, with installed end cap, into the housing connection that meets the air-flow first. Position the tube so that the arrow points into the airflow as shown in Figure 3. Per NFPA sampling tubes over 3 feet long should be supported at the end opposite of the duct detector. In ducts wider than 8 feet, work must be performed inside the duct to couple the other section of the sampling tube to the section already installed using the 1/2 inch conduit fitting supplied. Make sure that the holes on both sections of the air inlet sampling tube are lined up and facing into the airflow.
- For tubes longer than the width of the air duct, the tube should extend out of the opposite side of the duct. Drill a 3/4 inch hole in the duct opposite the hole already cut for the sampling tube. Ensure that the sampling tube is angled downward from the duct smoke detector to allow for moisture drainage away from the detector. The sampling tube should be angled at least 1/4" downward for every 12" of duct width per Figure 4. There should be 10 to 12 holes spaced as evenly as possible across the width of the duct. If there are more than 2 holes in the section of the tube extending out of the duct, select a shorter tube using Table 1. Otherwise, trim the tube to leave approximately 1 to 2 inches extending outside the duct. Plug the end with the end cap and tape closed any holes in the protruding section of the tube. Be sure to seal the duct where the tube protrudes.

FIGURE 4.

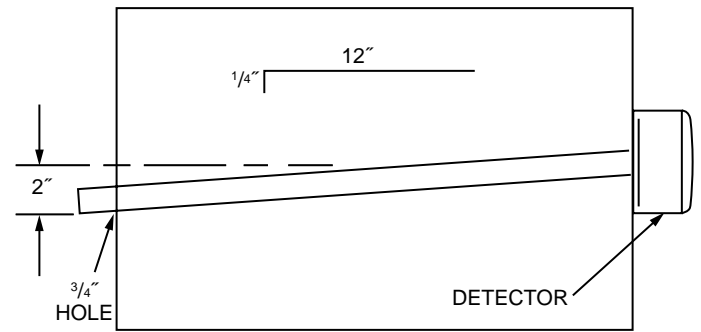

H0215-00

NOTE: Air currents inside the duct may cause excessive vibration, especially when the longer sampling tubes are used. In these cases, a 3 inch floor flange (available at most plumbing supply stores) may be used to fasten the sampling tube to the other side of the duct. When using the flange/connector mounting technique, drill a 1 to 1 1/4 inch hole where the flange will be used

[5.3] MODIFICATIONS OF SAMPLING TUBES

There may be applications where duct widths are not what is specified for the installation. In such cases, it is permissible to modify a sampling tube that is longer than necessary to span the duct width.

Use a 0.193-inch diameter (#10) drill and add the appropriate number of holes so that the total number of holes exposed to the air flow in the duct is 10 to 12. Space the additional holes as evenly as possible over the length of the tube.

CAUTION: This procedure should only be used as a temporary fix. It is not intended as a permanent substitute for ordering the correct length tubes.

[5.4] REMOTE SAMPLING TUBE INSTALLATION

The detector arrangement can also incorporate the remote mounting of the sampling tube and/or exhaust tube. In this case both the detector, sampling tube and exhaust tube (if included) should be rigidly mounted to withstand the pressure and vibrations caused by the air velocity. The location of the detector's sampling tube should be such that there is uniform airflow in the cross section area.


Pressure differential across the sampling and exhaust ports in the detector housing shall be verified to be between 0.01 and 1.11 inches of water. Do so by measuring the pressure difference between the inlet and outlet ports on the detector housing using a manometer as described in the Measurement Tests section of this manual.

[6] MEASUREMENT TESTS

[6.1] AIR FLOW

The DNR is designed to operate over an extended air speed range of 100 to 4000 FPM. To verify sufficient sampling of ducted air, turn the air handler on and use a manometer to measure the differential pressure between the two sampling tubes. The differential pressure should measure at least 0.01 inches of water and no more than 1.11 inches of water. Because most commercially available manometers cannot accurately measure very low pressure differentials, applications with less than 500 FPM of duct air speed may require one of the following: 1) the use of a current-sourcing pressure transmitter (Dwyer Series 607) or 2) the use of aerosol smoke, see below for test descriptions.

FIGURE 5. PROCEDURE FOR VERIFYING AIR FLOW:

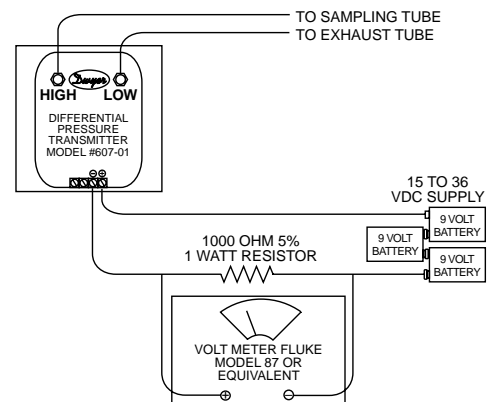

H0163-01

[6.2]LOW FLOW AIR FLOW TEST USING DWYER SERIES 607 DIFFERENTIAL PRESSURE TRANSMITTER

Verify the air speed of the duct using an anemometer. Air speed must be at least 100 FPM. Wire the Dwyer transmitter as shown in Figure 5. Connect the leads of the meter to either side of the 1000Ω resistor. Allow unit to warm up for 15 seconds. With both HIGH and LOW pressure ports open to ambient air, measure and record the voltage drop across the 1000Ω resistor (measurement 1), 4.00 volts is typical. Using flexible tubing and rubber stoppers, connect the HIGH side of the transmitter to the sampling tube of the duct smoke detector housing, and the LOW side of the transmitter to the exhaust tube of the duct smoke detector housing. Measure and record the voltage drop across the 1000Ω resistor (measurement 2). Subtract the voltage recorded in measurement 1 from the voltage recorded in measurement 2. If the difference is greater than 0.15 volts, there is enough air flow through the duct smoke detector for proper operation.

[7]FIELD WIRING; INSTALLATION GUIDELINES

All wiring must be installed in compliance with the National Electrical Code and the local codes having jurisdiction. Proper wire gauges should be used. The conductors used to connect smoke detectors to control panels and accessory devices should be color-coded to prevent wiring mistakes. Improper connections can prevent a system from responding properly in the event of a fire.

For signal wiring (the wiring between detectors or from detector to auxiliary devices), it is usually recommended that single conductor wire be no smaller than 18 gauge. The duct smoke detector terminals accommodate wire sizes up to 12 gauge. Flexible conduit is recommended for the last foot of conduit; solid conduit connections may be used if desired.


Duct smoke detectors and alarm system control panels have specifications for Signaling Line Circuit (SLC) wiring. Consult the control panel manufacturer's specifications for wiring requirements before wiring the detector loop.

[7.1]WIRING INSTRUCTIONS

Disconnect power from the communication line before installing the DNR duct smoke detector.

The DNR detectors are designed for easy wiring. The housing provides a terminal strip with clamping plates. Wiring connections are made by sliding the bare end under the plate, and tightening the clamping plate screw. See Figure 6 on below for system wiring.


FIGURE 6. SYSTEM WIRING DIAGRAM FOR DNR:

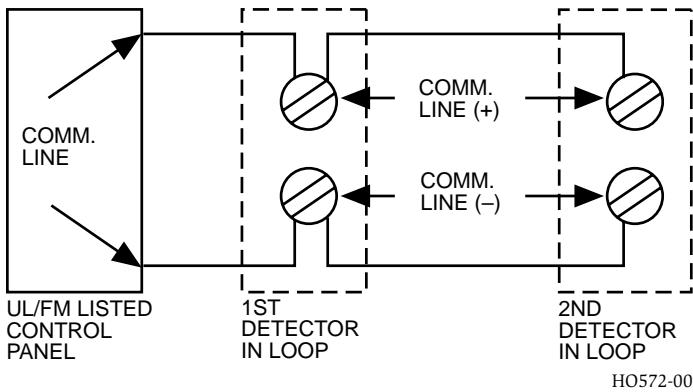

[7.2] SET THE ADDRESS

Set the desired address on the sensor head code wheel switches. on the back of the sensor head.

FIGURE 7. ROTARY ADDRESS SWITCHES

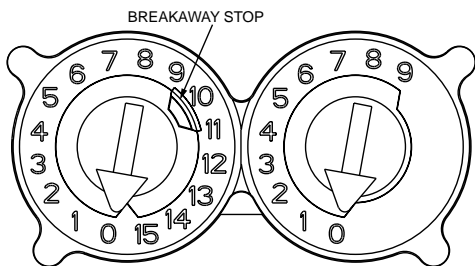

Note: Some panels support extended addressing. In order to set the sensor above the address number 99 on compatible systems, carefully remove the stop on the left hand rotary switch with pliers as shown in Figure 7.

NOTE: Verify sensor cover gasket is properly seated on cover prior to cover installation

[8] VERIFICATION OF OPERATION

[8.1]INSTALL THE COVER

Install the covers making sure that the cover fits into the base groove. Tighten the seven screws that are captured in the covers. Note that the cover must be properly installed for proper operation of the sensor.

NOTE: Verify sensor cover gasket is properly seated on cover prior to cover installation.

[8.2] POWER THE UNIT

Activate the communication line on terminals COM + and COM —.

[8.3] DETECTOR CHECK

Standby - If programmed by the system control panel, look for the presence of the flashing LEDs through the transparent housing cover. The LED will flash with each communication.

Trouble - If programmed by the system control panel and the detector LEDs do not flash, then the detector lacks power (check wiring, missing or improperly placed cover, panel programming, or power supply), the sensor head is missing (replace), or the unit is defective (return for repair).

[8.4]DUCT SMOKE DETECTOR TEST & MAINTENANCE PROCEDURES

Test and maintain duct smoke detectors as recommended in NFPA 72. The tests contained in this manual were devised to assist maintenance personnel in verification of proper detector operation.

Before conducting these tests, notify the proper authorities that the smoke detection system will be temporarily out of service. Disable the zone or system under test to prevent unwanted alarms.

[8.4.1]TEST THE UNIT

1. M02-04-00 Magnet Test - This sensor can be functionally tested with a test magnet. The test magnet electronically simulates smoke in the sensing chamber, testing the sensor electronics and connections to the control panel.
2. Remote Test Accessory - The use of a remote accessory for visible indication of power and alarm is recommended.

Verify system control panel alarm status and control panel execution of all intended auxiliary functions (i.e. fan shutdown, damper control, etc.).

Two LEDs on the sensor are controlled by the panel to indicate sensor status. Coded signals, transmitted from the panel, can cause the LEDs to blink, latch on, or latch off. Refer to the control panel technical documentation for sensor LED operation and expected delay to alarm.

[8.4.2] THE DETECTOR MUST BE RESET BY THE SYSTEM CONTROL PANEL [8.4.3]SMOKE ENTRY TEST USING AEROSOL SMOKE

This test is intended for low-flow systems (100-500 FPM). If the air speed is greater than 500 FPM, use a conventional manometer to measure differential pressure between the sampling tubes, as described under Measurement Tests on Page 3.

Drill a 1/4 inch hole 3 feet upstream from the duct smoke detector. With the air handler on, measure the air velocity with an anemometer. Air speed must be at least 100 FPM. Spray aerosol smoke* into the duct through the 1/4 inch hole for five seconds. Wait two minutes for the duct smoke detector to alarm. If the duct smoke detector alarms, air is flowing through the detector. Remove the duct smoke detector cover and blow out the residual aerosol smoke from the chamber and reset the duct smoke detector at the panel. Use duct tape to seal the aerosol smoke entry hole. Remember to replace the cover after the test or the detector will not function properly.

*Aerosol smoke can be purchased from Home Safeguard Industries at home-safeguard.com, model 25S Smoke Detector Tester, and Chekkit Smoke Detector Tester model CHEK02 and CHEK06 available from SDi. When used properly, the canned smoke agent will cause the smoke detector to go into alarm. Refer to the manufacturer's published instructions for proper use of the canned smoke agent.

CAUTION

Canned aerosol simulated smoke (canned smoke agent) formulas will vary by manufacturer. Misuse or overuse to these products may have long term adverse effects on the smoke detector. Consult the canned smoke agent manufacturer's published instructions for any further warnings or caution statements.

[9] DETECTOR CLEANING PROCEDURES

Notify the proper authorities that the smoke detector system is undergoing maintenance, and that the system will temporarily be out of service. Disable the zone or system undergoing maintenance to prevent unwanted alarms and possible dispatch of the fire department.

[9.1] DETECTOR SENSOR

1. Remove the sensor to be cleaned from the system.
2. Remove the sensor cover by pressing firmly on each of the four removal tabs that hold the cover in place.
3. Vacuum the screen carefully without removing it. If further cleaning is required continue with Step 4, otherwise skip to Step 7.
4. Remove the chamber cover/screen assembly by pulling it straight out.
5. Use a vacuum cleaner or compressed air to remove dust and debris from the sensing chamber.
6. Reinstall the chamber cover/screen assembly by sliding the edge over the sensing chamber. Turn until it is firmly in place.
7. Replace the cover using the LEDs to align the cover and then gently pushing it until it locks into place.
8. Reinstall the detector.

[9.2] REINSTALLATION

1. Reinstall the detector in its housing.
2. Restore system power.
3. Perform Detector Check.
4. Notify the proper authorities testing has been completed and the smoke detector system is back in operation.


[10] SENSOR REPLACEMENT

1. Remove the sensor head by rotating counterclockwise.
2. Pull gently to remove it.
3. To replace the sensor head, align the mounting features and rotate clockwise into place.

[11] OPTIONAL ACCESSORIES

Optional accessories include RA400Z/RA100Z, RTS451/RTS151 and RTS451KEY/RTS151KEY

FIGURE 8. WIRING DIAGRAM FOR DNR TO RA400Z/RA100Z:

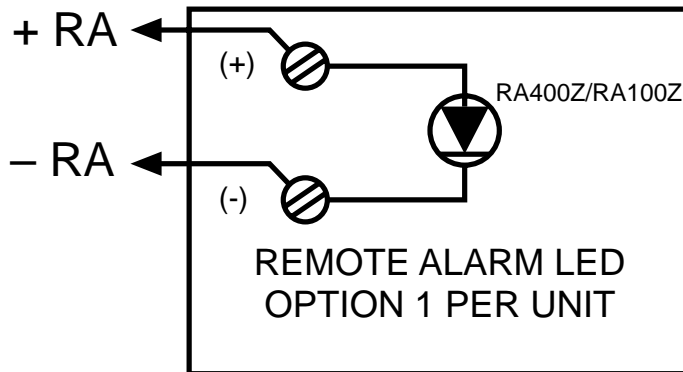

H0570-03

Note: If using a RA400Z, the tab should be broken for use with the intelligent duct smoke detector. If using RA100Z, ensure that jumper is removed.

[11.1] RTS451/RTS151/RTS451KEY/RTS151KEY REMOTE STATION WITH OPTIONAL TEST COIL

The RTS451/RTS151/RTS451KEY/RTS151KEY Remote Test Station facilitates test of the alarm capability of the duct smoke detector. These accessories provide the stimulus to initiate an alarm condition at the detector. The DNR duct smoke detector must be reset by the system control panel.

NOTE: The use of a remote test station requires the installation of an accessory coil, part number DCOIL, sold separately.

- 1) Install DCOIL in housing pocket insuring that arrow is pointing toward detector
 - 2) Install DCOIL mounting screw
 - 3) Connect each DCOIL lead to a Test Coil Terminal
- See Figure 9 below for reference.

FIGURE 9. DNR WITH OPTIONAL TEST COIL


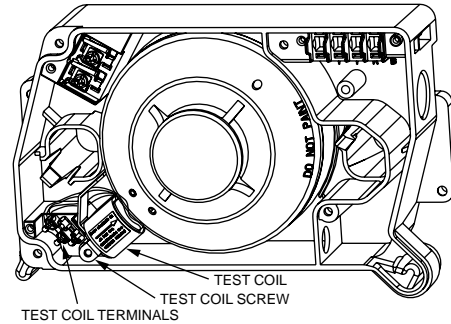


FIGURE 10. WIRING DIAGRAM FROM DNR TO RTS451/RTS151/RTS451KEY/RTS151KEY:

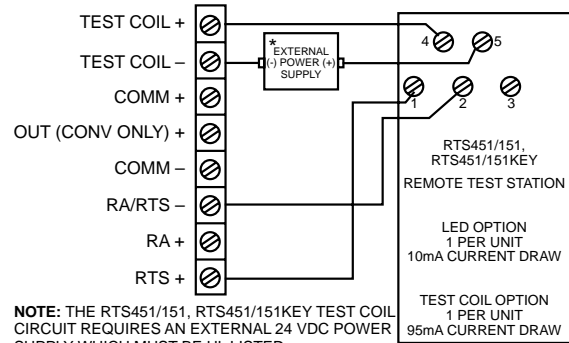

NOTE: THE RTS451/151, RTS451/151KEY TEST COIL CIRCUIT REQUIRES AN EXTERNAL 24 VDC POWER SUPPLY WHICH MUST BE UL LISTED.


NOTE: THE USE OF A REMOTE TEST STATION REQUIRES THE INSTALLATION OF AN ACCESSORY COIL, PART NUMBER DCOIL, SOLD SEPARATELY.

H0571-07

[11.2] RTS451/RTS151/RTS451KEY/RTS151KEY REMOTE STATION WITH OPTIONAL SENSOR REMOTE TEST CAPABILITY

To install the RTS451/RTS151/RTS451KEY/RTS151KEY, using the sensor with remote test capability connect the device as shown in Figure 11; wire runs must be limited to 25 ohms or less per interconnecting wire.

FIGURE 11. RTS451/RTS451KEY/RTS151/RTS151KEY

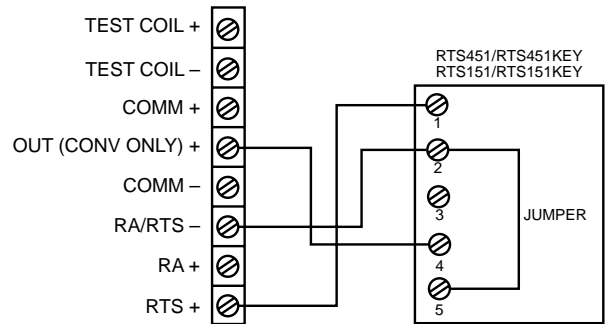

H0633-00

[11.3] ADDITIONAL MODULE OPTION

The DNR can also accommodate a relay or control module (sold separately) within the power board side of the housing. The relay or control module must be listed as compatible to the fire alarm control panel.

Physical Module Mounting

- 1) Remove the breakaway tabs at the four corners of the module
- 2) Locate the module at right most corner of the power board. The upper left corner mounting hole of the module will align with a screw boss in the housing.
- 3) Install a # 8 x 3/8" Plastite screw at the screw boss location

Note: See the corresponding module Installation Instructions for general description, control panel compatibility, wiring and ratings.

Please refer to insert for the Limitations of Fire Alarm Systems

THREE-YEAR LIMITED WARRANTY

System Sensor warrants its enclosed product to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for the enclosed product. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the replacement of any part of the product which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor's toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: System Sensor, Returns Department, RA

_____, 3825 Ohio Avenue, St. Charles, IL 60174. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

B210LP Plug-in Detector Base

SPECIFICATIONS

Base Diameter:	6.1 inches (155 mm)
Base Height:	.76 inches (19 mm)
Operating Temperature:	Refer to applicable sensor Operating Temperature Range using the Base/Sensor Cross Reference Chart at systemsensor.com
Electrical Ratings:	
Operating Voltage:	15 to 32 VDC
Standby Current:	170 μ A

BEFORE INSTALLING

Please read the *System Smoke Detectors Application Guide*, which provides detailed information on detector spacing, placement, zoning, wiring, and special applications. Copies of this application guide are available from System Sensor. NFPA 72 guidelines should be observed.

NOTICE: This manual should be left with the owner/user of this equipment.

IMPORTANT: The detector used with this base must be tested and maintained regularly following NFPA 72 requirements. The detector should be cleaned at least once a year.


GENERAL DESCRIPTION

The B210LP is a plug-in detector base intended for use in an intelligent system, with screw terminals provided for power (+ and -), and remote annunciator connections. Communication takes place over the power (+ and -) lines.

BASE TERMINALS

NO.	FUNCTION
1	Power (-), Remote Annunciator (-)
2	Power (+)
3	Remote Annunciator (+)

FIGURE 1. TERMINAL LAYOUT:

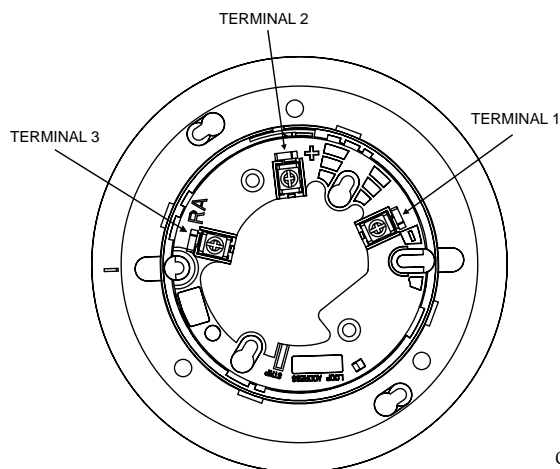


C0127-07

MOUNTING

This detector base mounts directly to 4-inch square (with and without plaster rings), 4-inch octagon, 3 1/2-inch octagon, and single gang junction boxes. To mount, remove the decorative ring by turning it in either direction to unhook the snaps, then separate the ring from the base. Install the base on the box using the screws supplied with the junction box and the appropriate mounting slots in the base.

Place the decorative ring on the base and rotate it in either direction until it snaps into place (see Figure 2).

FIGURE 2. MOUNTING DETECTOR TO BOX:

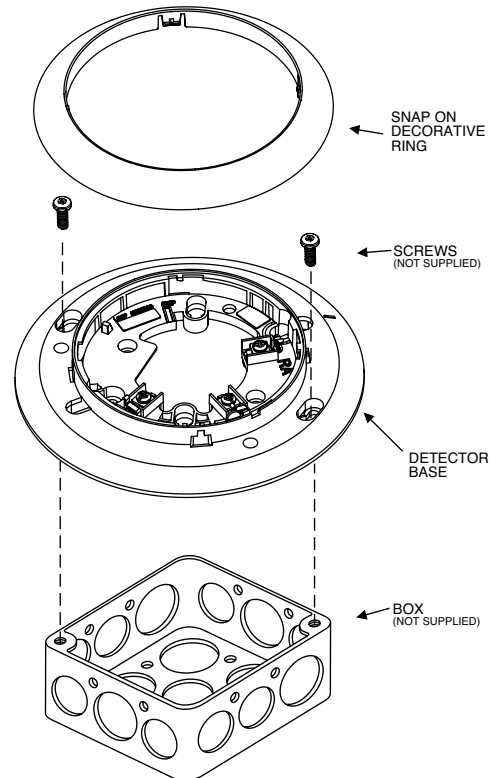

C0128-06

INSTALLATION AND WIRING GUIDELINES (SEE FIGURE 3)

All wiring must be installed in compliance with all applicable local codes and any special requirements of the authority having jurisdiction. Proper wire gauges should be used. The conductors used to connect smoke detectors to control panels and accessory devices should be color-coded to reduce the likelihood of wiring errors. Improper connections can prevent a system from responding properly in the event of a fire.

For signal wiring (the wiring between interconnected detectors), it is recommended that the wire be no smaller than 18 AWG (0.823 square mm). Wire sizes up to 12 AWG (3.31 square mm) may be used with the base.


Make electrical connections by stripping about 3/8 inch (10 mm) of insulation from the end of the wire (use strip gauge molded in base). Then slide the wire under the clamping plate and tighten the clamping plate screw. Do not loop the wire under the clamping plate. (See Figure 4)

Check the zone wiring of all bases in the system before installing the detectors. This includes checking the wiring for continuity, correct polarity, ground fault testing and performing a dielectric test.

The base includes an area for recording the zone, address, and type of detector being installed. This information is useful for setting the detector head address and for verification of the detector type required for that location.


Once all detector bases have been wired and mounted, and the loop wiring has been checked, the detector heads may be installed in the bases.

FIGURE 3. TYPICAL WIRING DIAGRAM FOR 2-WIRE LOOP:

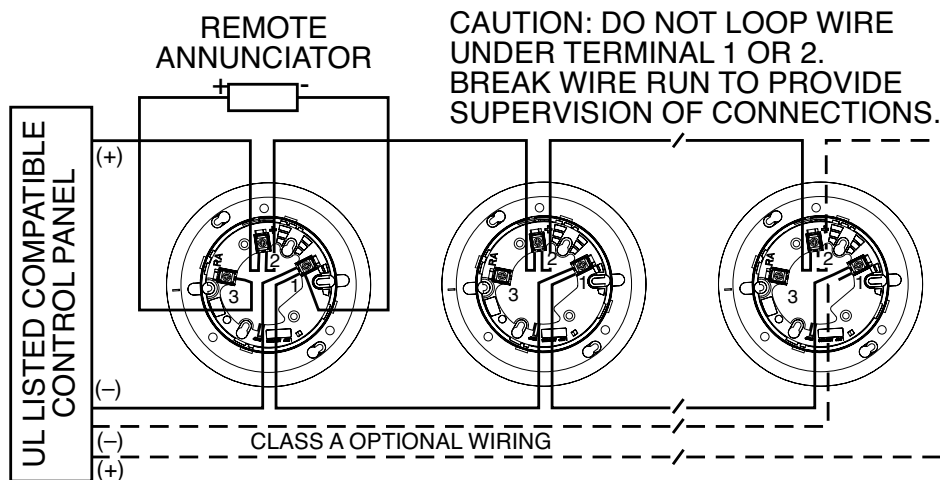

C0129-02

FIGURE 4.:

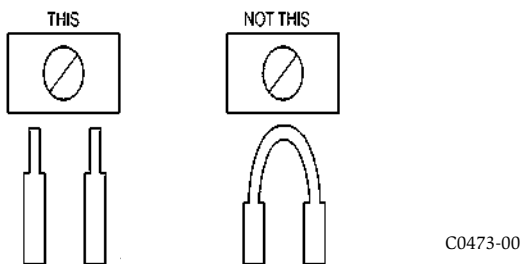

TAMPER-RESIST FEATURE

NOTE: Do not use the tamper-resist feature if the removal tool will be used.

The detector base includes a tamper-resist feature that prevents removal of the detector without using a small screwdriver or similar tool.

To activate this feature, use needle-nose pliers to break the tab on the detector base as shown in Figure 5A. Then, install the detector.

To remove the detector from the base once the tamper-resist feature has been activated, remove the decorative ring by rotating it in either direction and pulling it away from the base. Then, insert a small screwdriver into the notch, as indicated in Figure 5B, and press the plastic lever toward the mounting surface before rotating the detector counterclockwise for removal.


The tamper-resist feature can be defeated by breaking and removing the plastic lever from the base. However, this prevents the feature from being used again.

REMOTE ANNUNCIATOR (RA100Z)

Connect the remote annunciator between terminals 1 and 3 using the spade lug terminal included. The spade lug terminal is connected to the base terminal as shown in Figure 6.


It is not acceptable to have three stripped wires under the same wiring terminal unless they are separated by a washer or equivalent means. The spade lug supplied with the model RA100Z is considered an equivalent means. See Figure 3 for proper installation.

FIGURE 5A. ENABLING THE TAMPER-RESIST CAPABILITY:

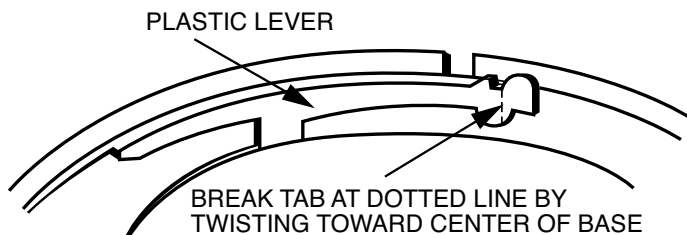


C0130-00

FIGURE 5B. REMOVING THE DETECTOR HEAD FROM THE BASE:

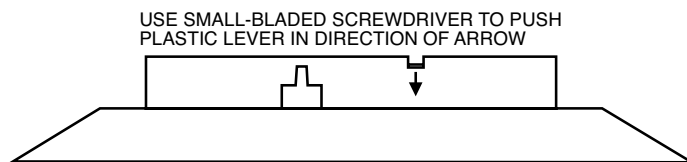

C0130-00

FIGURE 6. CONNECTION TO REMOTE ANNUNCIATOR TERMINAL:

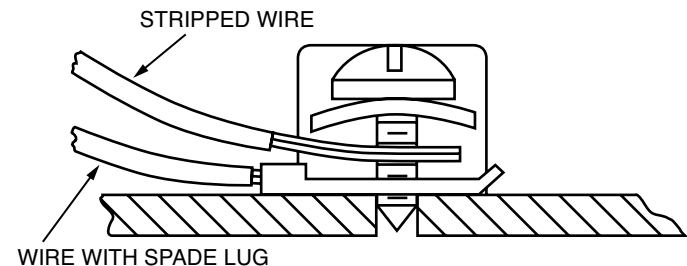

C0116-00

Please refer to insert for the Limitations of Fire Alarm Systems

THREE-YEAR LIMITED WARRANTY

System Sensor warrants its enclosed smoke detector base to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for this smoke detector base. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the repair or replacement of any part of the smoke detector base which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor's toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: System Sensor,

Repair Department, RA # _____, 3825 Ohio Avenue, St. Charles, IL 60174. Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to repair or replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Indoor Selectable-Output Horns, Strobes, and Horn Strobes for Wall Applications

System Sensor L-Series audible visible notification products are rich with features guaranteed to cut installation times and maximize profits with lower current draw and modern aesthetics.

Features

- Updated Modern Aesthetics
- Small profile devices for Horns and Horn Strobes
- Plug-in design with minimal intrusion into the back box
- Tamper-resistant construction
- Automatic selection of 12- or 24-volt operation at 15 and 30 candela
- Field-selectable candela settings on wall units: 15, 30, 75, 95, 110, 135, and 185
- Horn rated at 88+ dBA at 16 volts
- Rotary switch for horn tone and two volume selections
- Mounting plate for all standard and all compact wall units
- Mounting plate shorting spring checks wiring continuity before device installation
- Electrically Compatible with legacy SpectrAlert and SpectAlert Advance devices
- Compatible with MDL3 sync module
- Listed for wall mounting only

Agency Listings



S5512
S4011



FM approved except
for ALERT models
3057383, 3057072



7125-1653:0504
7135-1653:0503



The System Sensor L-Series offers the most versatile and easy-to-use line of horns, strobes, and horn strobes in the industry with lower current draws and modern aesthetics. With white and red plastic housings, standard and compact devices, and plain, FIRE, and FUEGO-printed devices, System Sensor L-Series can meet virtually any application requirement.

The L-Series line of wall-mount horns, strobes, and horn strobes include a variety of features that increase their application versatility while simplifying installation. All devices feature plug-in designs with minimal intrusion into the back box, making installations fast and foolproof while virtually eliminating costly and time-consuming ground faults.

To further simplify installation and protect devices from construction damage, the L-Series utilizes a universal mounting plate for all models with an onboard shorting spring, so installers can test wiring continuity before the device is installed.

Installers can also easily adapt devices to a suit a wide range of application requirements using field-selectable candela settings, automatic selection of 12- or 24-volt operation, and a rotary switch for horn tones with two volume selections.

L-Series Specifications

Architect/Engineer Specifications

General

L-Series standard horns, strobes, and horn strobes shall mount to a standard 2 x 4 x 1 7/8-inch back box, 4 x 4 x 1 1/2-inch back box, 4-inch octagon back box, or double-gang back box. L-Series compact products shall mount to a single-gang 2 x 4 x 1 7/8-inch back box. A universal mounting plate shall be used for mounting ceiling and wall products for all standard models and a separate universal mounting plate shall be used for mounting wall compact models. The notification appliance circuit wiring shall terminate at the universal mounting plate. Also, L-Series products, when used with the Sync•Circuit™ Module accessory, shall be powered from a non-coded notification appliance circuit output and shall operate on a nominal 12 or 24 volts. When used with the Sync•Circuit Module, 12-volt-rated notification appliance circuit outputs shall operate between 8.5 and 17.5 volts; 24-volt-rated notification appliance circuit outputs shall operate between 16.5 and 33 volts. Indoor L-Series products shall operate between 32 and 120 degrees Fahrenheit from a regulated DC or full-wave rectified unfiltered power supply. Strobes and horn strobes shall have field-selectable candela settings including 15, 30, 75, 95, 110, 135, and 185.

Strobe

The strobe shall be a System Sensor L-Series Model _____ listed to UL 1971 and shall be approved for fire protective service. The strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1 Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system.

Horn Strobe Combination

The horn strobe shall be a System Sensor L-Series Model _____ listed to UL 1971 and UL 464 and shall be approved for fire protective service. The horn strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1 Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system. The horn shall have two audibility options and an option to switch between a temporal three pattern and a non-temporal (continuous) pattern. These options are set by a multiple position switch. The horn on horn strobe models shall operate on a coded or non-coded power supply.

Synchronization Module

The module shall be a System Sensor Sync•Circuit model MDL3 listed to UL 464 and shall be approved for fire protective service. The module shall synchronize SpectraAlert strobes at 1 Hz and horns at temporal three. Also, while operating the strobes, the module shall silence the horns on horn strobe models over a single pair of wires. The module shall mount to a 4 1/16 x 4 1/16 x 2 1/8-inch back box. The module shall also control two Style Y (class B) circuits or one Style Z (class A) circuit. The module shall synchronize multiple zones. Daisy chaining two or more synchronization modules together will synchronize all the zones they control. The module shall not operate on a coded power supply.

Physical/Electrical Specifications

Standard Operating Temperature	32°F to 120°F (0°C to 49°C)
Humidity Range	10 to 93% non-condensing
Strobe Flash Rate	1 flash per second
Nominal Voltage	Regulated 12 DC or regulated 24 DC/FWR ^{1,2}
Operating Voltage Range	8 to 17.5 V (12 V nominal) or 16 to 33 V (24 V nominal)
Operating Voltage Range MDL3 Sync Module	8.5 to 17.5 V (12 V nominal) or 16.5 to 33 V (24 V nominal)
Input Terminal Wire Gauge	12 to 18 AWG
Wall-Mount Dimensions (including lens)	5.6" L x 4.7" W x 1.91" D (143 mm L x 119 mm W x 49 mm D)
Compact Wall-Mount Dimensions (including lens)	5.26" L x 3.46" W x 1.91" D (133 mm L x 88 mm W x 49 mm D)
Horn Dimensions	5.6" L x 4.7" W x 1.25" D (143 mm L x 119 mm W x 32 mm D)
Compact Horn Dimensions	5.25" L x 3.45" W x 1.25" D (133mm L x 88mm W x 32mm D)

1. Full Wave Rectified (FWR) voltage is a non-regulated, time-varying power source that is used on some power supply and panel outputs.

2. Strobe products will operate at 12 V nominal only for 15 cd and 30 cd.

UL Current Draw Data

UL Max. Strobe Current Draw (mA RMS)				
Candela Range	Candela	8-17.5 Volts		
		DC	16-33 Volts DC	FWR
Candela Range	15	88	43	60
	30	143	63	83
	75	N/A	107	136
	95	N/A	121	155
	110	N/A	148	179
	135	N/A	172	209
	185	N/A	222	257

UL Max. Horn Current Draw (mA RMS)				
Sound Pattern	dB	8-17.5 Volts		
		DC	16-33 Volts DC	FWR
Temporal	High	39	44	54
Temporal	Low	28	32	54
Non-Temporal	High	43	47	54
Non-Temporal	Low	29	32	54
3.1 KHz Temporal	High	39	41	54
3.1 KHz Temporal	Low	29	32	54
3.1 KHz Non-Temporal	High	42	43	54
3.1 KHz Non-Temporal	Low	28	29	54
Coded	High	43	47	54
3.1 KHz Coded	High	42	43	54


UL Max. Current Draw (mA RMS), 2-Wire Horn Strobe, Candela Range (15-115 cd)										
DC Input	8-17.5 Volts		16-33 Volts							
	15cd	30cd	15cd	30cd	75cd	95cd	110cd	135cd	185cd	
Temporal High	98	158	54	74	121	142	162	196	245	
Temporal Low	93	154	44	65	111	133	157	184	235	
Non-Temporal High	106	166	73	94	139	160	182	211	262	
Non-Temporal Low	93	156	51	71	119	139	162	190	239	
3.1K Temporal High	93	156	53	73	119	140	164	190	242	
3.1K Temporal Low	91	154	45	66	112	133	160	185	235	
3.1K Non-Temporal High	99	162	69	90	135	157	175	208	261	
3.1K Non-Temporal Low	93	156	52	72	119	138	162	192	242	
FWR Input	16-33 Volts									
	15cd	30cd	75cd	95cd	110cd	135cd	185cd			
Temporal High	83	107	156	177	198	234	287			
Temporal Low	68	91	145	165	185	223	271			
Non-Temporal High	111	135	185	207	230	264	316			
Non-Temporal Low	79	104	157	175	197	235	283			
3.1K Temporal High	81	105	155	177	196	234	284			
3.1K Temporal Low	68	90	145	166	186	222	276			
3.1K Non-Temporal High	104	131	177	204	230	264	326			
3.1K Non-Temporal Low	77	102	156	177	199	234	291			

Horn Tones and Sound Output Data


Horn and Horn Strobe Output (dBA)					
Switch Position	Sound Pattern	dB	8-17.5 Volts		FWR
			DC	16-33 Volts DC	
1	Temporal	High	84	89	89
2	Temporal	Low	75	83	83
3	Non-Temporal	High	85	90	90
4	Non-Temporal	Low	76	84	84
5	3.1 KHz Temporal	High	83	88	88
6	3.1 KHz Temporal	Low	76	82	82
7	3.1 KHz Non-Temporal	High	84	89	89
8	3.1 KHz Non-Temporal	Low	77	83	83
9*	Coded	High	85	90	90
10*	3.1 KHz Coded	High	84	89	89

* Settings 9 and 10 are not available on the 2-wire horn strobes.


L-Series Dimensions

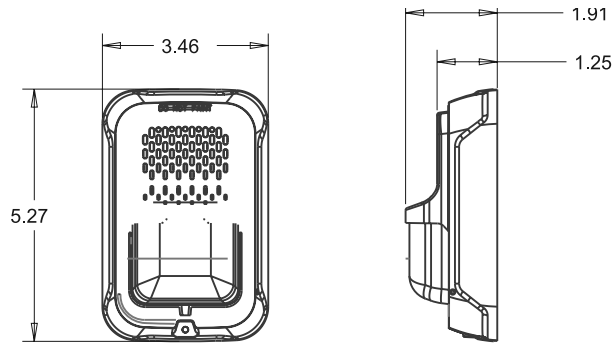


Compact Strobe / Horn Strobe

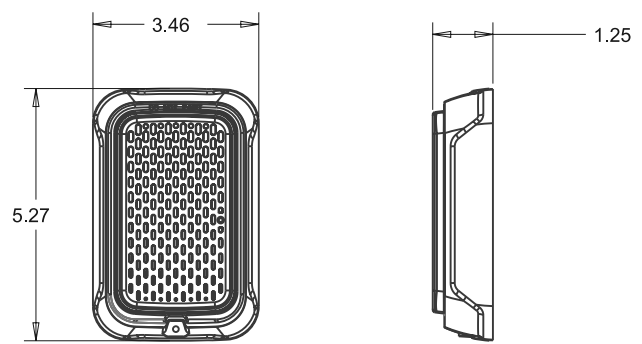

Compact Horn

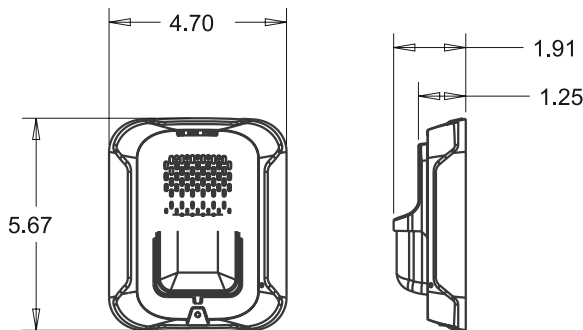

Strobe / Horn Strobe

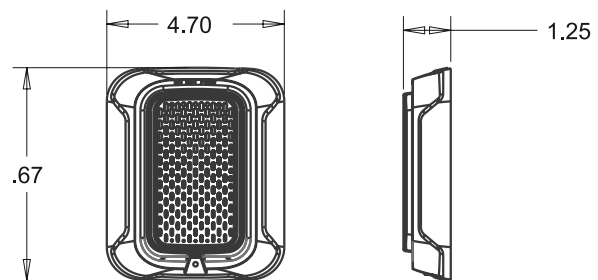

Horn

L-Series Ordering Information

Model	Description
Wall Horn Strobes	
P2RL	2-Wire, Horn Strobe, Red
P2WL	2-Wire, Horn Strobe, White
P2GRL	2-Wire, Compact Horn Strobe, Red
P2GWL	2-Wire, Compact Horn Strobe, White
P2RL-P	2-Wire, Horn Strobe, Red, Plain
P2WL-P	2-Wire, Horn Strobe, White, Plain
P2RL-SP	2-Wire, Horn Strobe, Red, FUEGO
P2WL-SP	2-Wire, Horn Strobe, White, FUEGO
Wall Strobes	
SRL	Strobe, Red
SWL	Strobe, White
SGRL	Compact Strobe, Red
SGWL	Compact Strobe, White
SRL-P	Strobe, Red, Plain
SWL-P	Strobe, White, Plain
SRL-SP	Strobe, Red, FUEGO
SWL-CLR-ALERT	Strobe, White, ALERT

Model	Description
Horns	
HRL	Horn, Red
HWL	Horn, White
HGRL	Compact Horn, Red
HGWL	Compact Horn, White
Accessories	
TR-2	Universal Wall Trim Ring Red
TR-2W	Universal Wall Trim Ring White
SBBRL	Wall Surface Mount Back Box, Red
SBBWL	Wall Surface Mount Back Box, White
SBBGRL	Compact Wall Surface Mount Back Box, Red
SBBGWL	Compact Wall Surface Mount Back Box, White

Notes:

- All -P models have a plain housing (no "FIRE" marking on cover)
- All -SP models have "FUEGO" marking on cover
- All -ALERT models have "ALERT" marking on cover



3825 Ohio Avenue • St. Charles, IL 60174
 Phone: 800-SENSOR2 • Fax: 630-377-6495
www.systemsensor.com

©2017 System Sensor.
 Product specifications subject to change without notice. Visit www.systemsensor.com
 for current product information, including the latest version of this data sheet.
 AVDS86503 • 03/17



Selectable Output Horn Strobes, Chime Strobes and Strobes – Wall Mount

3825 Ohio Avenue, St. Charles, Illinois 60174
800/736-7672, FAX: 630/377-6495
www.systemsensor.com

For use with the following models:

Standard Wall Mount Horn Strobes: P2RL, P2WL, P2RL-P, P2WL-P, P2RL-SP, P2WL-SP

Compact Wall Mount Horn Strobes: P2GRL, P2GWL

Standard Wall Mount Chime Strobes: CHSRL, CHSWL

Standard Wall Mount Strobes: SRL, SWL, SRL-P, SWL-P, SRL-SP, SWL-CLR-ALERT

Compact Wall Mount Strobes: SGRL, SGWL

PRODUCT SPECIFICATIONS

Standard Operating Temperature: 32°F to 120°F (0°C to 49°C)
 Humidity Range: 10 to 93% Non-condensing
 Strobe Flash Rate: 1 flash per second
 Nominal Voltage: Regulated 12VDC or regulated 24DC/FWR
 Operating Voltage Range: 8 to 17.5V (12V nominal) or 16 to 33V (24V nominal)
 Operating Voltage with MDL3 Sync Module: 8.5 to 17.5V (12V nominal) or 16.5 to 33V (24V nominal)
 Input terminal wire gauge: 12 to 18 AWG

DIMENSIONS FOR PRODUCTS AND ACCESSORIES

WALL PRODUCTS	Length	Width	Depth
Standard Strobe, Chime Strobe and Horn Strobe	5.6" (143mm)	4.7" (119mm)	1.25" (32mm)
Compact Strobe and Horn Strobe	5.26" (133 mm)	3.46" (88 mm)	1.93 (49 mm)
Standard device with SBBRL/WL Surface Mount Back Box	5.9" (149 mm)	4.9" (125 mm)	1.85" (47 mm)
Compact device with SBBGRL/WL Surface Mount Back Box	5.5" (140 mm)	3.7" (94 mm)	1.6" (39 mm)

NOTE: SBBRL/WL Surface Mount Back Box intended only for standard horn strobes, chime strobes and strobes. SBBGRL/WL Surface Mount Back Box intended for compact horn strobes and strobes.

MOUNTING BOX OPTIONS

Standard 2-Wire Indoor Products: 4" x 4" x 1½", Single Gang, Double Gang, 4" Octagon, SBBRL/WL (wall), SBBGRL/WL (wall)
 Compact 2-Wire Indoor Products: Single Gang, SBBGRL/WL (wall)

NOTICE: This manual shall be left with the owner/user of this equipment.

BEFORE INSTALLING

Please read the System Sensor Audible Visible Application Reference Guide, which provides detailed information on notification devices, wiring and special applications. Copies of this manual are available from System Sensor. NFPA 72 and NEMA guidelines should be observed.

Important: The notification appliance used must be tested and maintained following NFPA 72 requirements.

GENERAL DESCRIPTION

System Sensor series of notification appliances offer a wide range of audible and visible devices for life safety notification. Our 2-wire horn strobes, chime strobes and strobes come with 8 field selectable tone and volume combinations and 7 field selectable candela settings. Intended for indoor applications and approved for wall mount installations only. Available in two attractive mounting designs, standard and compact (horn strobe and strobe only).

2-wire horn strobes and strobes are public mode notification appliances intended to alert occupants of a life safety event. The 2-wire chime strobe is a private mode notification appliance. The horn is listed to ANSI/UL 464 requirements (public mode) and the strobe is listed to ANSI/UL 1638 (public mode). 2-wire chime strobe is a private mode notification appliances intended to alert trained personnel to investigate a life safety event and take appropriate actions. The chime portion of the chime strobe is listed to ANSI/UL 464 (private mode) and the strobe portion is listed to ANSI/UL 1638 (private mode).

System Sensor notification appliances are designed to be used in either 12 VDC, 24VDC, or 24V FWR (full wave rectified) systems. System Sensor AV devices can be activated by a compatible fire alarm control panel or power supply. Refer to the appropriate fire alarm control panel manufacturer or power supply for more information.

System Sensor wall 2-wire horn strobes, 2-wire chime strobes, and strobes are electrically backward compatible with the previous generation, since 1996, of notification appliances. They come enabled with System Sensor synchronization protocol which requires connections to a power supply capable of generating the System Sensor synchronization pulses, a FACP NAC output configured to System Sensor synchronization protocol, or the use of MDL3 module to generate the synchronization protocol.

FIRE ALARM SYSTEM CONSIDERATIONS

The National Fire Alarm and Signaling Code, NFPA 72, requires that all notification appliances, used for building evacuation installed after July 1, 1996, produce temporal coded signals. Signals other than those used for evacuation purposes do not have to produce the temporal coded signal. System Sensor recommends spacing notification appliances in compliance with NFPA 72.

SYSTEM DESIGN

The system designer must make sure that the total current draw by the devices on the loop does not exceed the current capability of the panel supply, and that the last device on the circuit is operated within its rated voltage. The current draw information for making these calculations can be found in the tables within the manual. For convenience and accuracy, use the voltage drop calculator on the System Sensor website (www.systemsensor.com).

When calculating the voltage available to the last device, it is necessary to consider the voltage due to the resistance of the wire. The thicker the wire, the smaller the voltage drop. Wire resistance tables can be obtained from electrical handbooks. Note that if Class A wiring is installed, the wire length may be up to twice as long as it would be for circuits that are not fault tolerant. The total number of strobes on a single NAC must not exceed 69 for 24 volt applications.

AVAILABLE TONES

System Sensor offers a wide variety of tones for your life safety needs, including temporal 3 pattern (½ second on, ½ second off, ½ second on, ½ second off, ½ second on, 1½ off and repeat) which is specified by ANSI and NFPA 72 for standard emergency evacuation signaling.

To select the tone, turn the rotary switch on the back of the product to the desired setting. (See Figure 1.)

Available horn settings can be found in Table 1. Available chime settings can be found in Table 2.

TABLE 1. HORN TONES

Pos	Tone	Volume Setting
1	Temporal	High
2	Temporal	Low
3	Non-Temporal	High
4	Non-Temporal	Low
5	3.1 KHz Temporal	High
6	3.1 KHz Temporal	Low
7	3.1 KHz Non-Temporal	High
8	3.1 KHz Non-Temporal	Low

TABLE 2. CHIME TONES

Pos	Tone	Volume Setting
1	1 Second Chime	High
2	1 Second Chime	Low
3	1/4 Second Chime	High
4	1/4 Second Chime	Low
5	Temporal Chime	High
6	Temporal Chime	Low
7	5 Second Whoop	High
8	5 Second Whoop	Low

AVAILABLE CANDELA SETTINGS

System Sensor offers a wide range of candela settings for your life safety needs. In order to select your candela output, adjust the slide switch on the rear of the product to the desired candela setting on the selector switch. (See Figure 2.)

The candela setting can also be verified by looking into the small window on the front of the unit. See Table 3 for candela settings for wall products. All products meet the light output profiles specified in the appropriate UL Standards. (See Figures 3 and 4.)

CURRENT DRAW AND AUDIBILITY RATINGS

For the strobe, the current draw for each setting is listed in Table 3. For the horn strobe, the current draw and audibility settings are listed in Table 4. For the chime strobe, the current draw and audibility settings are listed in Table 5.

FIGURE 1. AUDIO SELECTOR

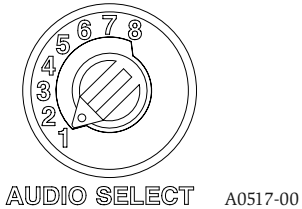


FIGURE 2. CANDELA SELECTOR

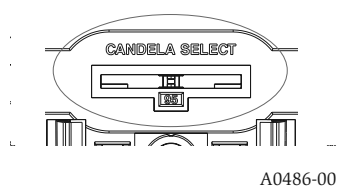


TABLE 3. WALL-MOUNT STROBE CURRENT DRAW (mA)

Candela	8-17.5 Volts		16-33 Volts	
	DC	DC	FWR	
15	88	43	60	
30	143	63	83	
75	-	107	136	
95	-	121	155	
110	-	148	179	
135	-	172	209	
185	-	222	257	

NOTE: Products set at 15 and 30 candela automatically work on either 12V or 24V power supplies. The products are not listed for 12V DC operation when set to any other candela settings.

FIGURE 3. LIGHT OUTPUT – HORIZONTAL DISPERSION

Degrees*	Percent of Rating
0	100
5-25	90
30-45	75
50	55
55	45
60	40
65	35
70	35
75	30
80	30
85	25
90	25
Compound 45 to the left	24
Compound 45 to the right	24


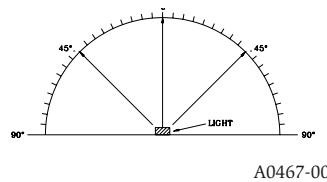


FIGURE 4. VERTICAL DISPERSION – WALL TO FLOOR

Degrees*	Percent of Rating
0	100
5-30	90
35	65
40	46
45	34
50	27
55	22
60	18
65	16
70	15
75	13
80	12
85	12
90	12

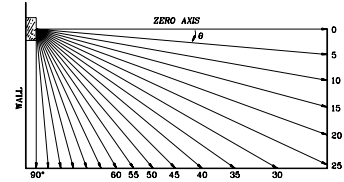

*Tolerance of ± 1 degree is permitted.

WIRING AND MOUNTING

All wiring must be installed in compliance with the National Electric Code and the local codes as well as the authority having jurisdiction. Wiring must not be of such length or wire size which would cause the notification appliance to operate outside of its published specifications. Improper connections can prevent the system from alerting occupants in the event of an emergency.

Wire sizes up to 12 AWG (2.5 mm²) may be used with the mounting plate. The mounting plate ships with the terminals set for 12 AWG wiring.

Make wire connections by stripping about 3/8" of insulation from the end of the wire. Then slide the bare end of the wire under the appropriate clamping plate and tighten the clamping plate screw.

We provide a wire strip guide. See Figure 5 for wiring terminals and strip guide reference.


CAUTION

Factory finish should not be altered: Do not paint!

CAUTION

Do not over tighten mounting plate screws; this may cause mounting plate to flex.


FIGURE 5. WIRING TERMINALS, SHORTING SPRING, AND STRIP GUIDE

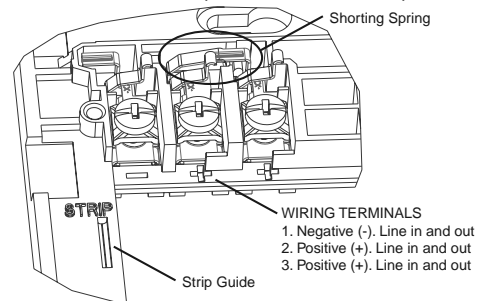

SYSTEM WIRING

The 2-wire horn strobe, chime strobe and strobe only require two wires for power and supervision. (See Figure 6.) Please consult your FACP manufacturer or power supply manufacturer for specific wiring configurations and special cases.

FIGURE 6. 2-WIRE CIRCUIT

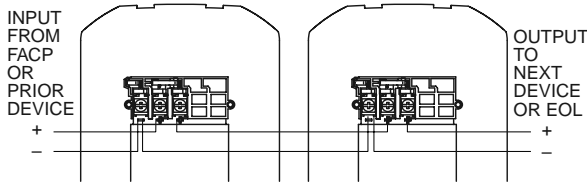

A0367-02


SHORTING SPRING FEATURE

System Sensor notification appliances come with a shorting spring that is provided between terminals 2 and 3 of the mounting plate to enable system continuity checks after the system has been wired, but prior to installation of the final product. (See Figure 5.) This spring will automatically disengage when the product is installed, to enable supervision of the final system.

MOUNTING

1. Attach mounting plate to junction box. The standard mounting plate is compatible with 4" square, single gang, double gang, and 4" octagon junction boxes. The compact mounting plate is compatible with single gang junction boxes. (See Figures 7 and 8, respectively.)
2. Connect field wiring according to terminal designations. (See Figures 5 and 6.)
3. If the product is not to be installed at this point, use the protective dust cover to prevent contamination of the wiring terminals on the mounting plate.
4. To attach product to mounting plate, hook tabs on the top of the product housing into the grooves on mounting plate. Then, hinge the product into

FIGURES 7 AND 8. MOUNTING

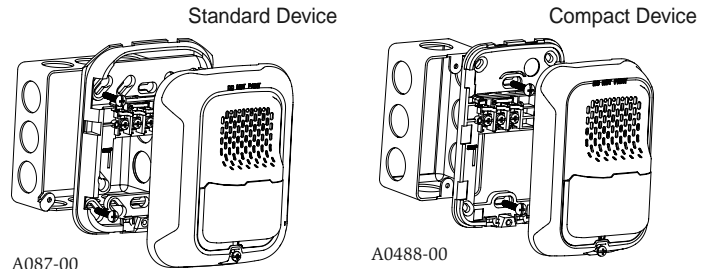

FIGURES 9 AND 10. SURFACE MOUNT BACK BOX MOUNTING:

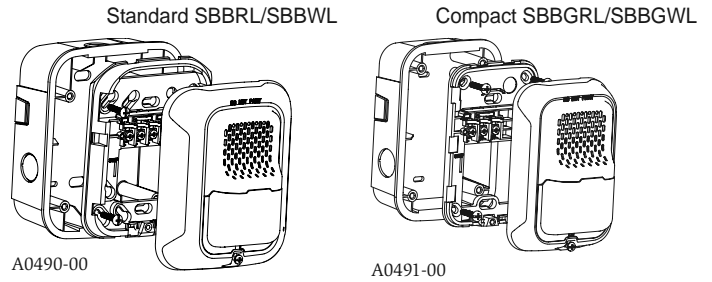


TABLE 4. WALL-MOUNT HORN STROBE CURRENT DRAW (mA) AND SOUND OUTPUT (dBA)

Pos	Tone	Volume Setting	Current draw (mA)															Sound Output (dBA)			
			8-17.5 VDC		16-33 VDC						16-33 FWR						8-17.5 V		16-33 V		
			15	30	15	30	75	95	110	135	185	15	30	75	95	110	135	185	DC	DC	FWR
1	Temporal	High	98	158	54	74	121	142	162	196	245	83	107	156	177	198	234	287	84	89	89
2	Temporal	Low	93	154	44	65	111	133	157	184	235	68	91	145	165	185	223	271	75	83	83
3	Non-Temporal	High	106	166	73	94	139	160	182	211	262	111	135	185	207	230	264	316	85	90	90
4	Non-Temporal	Low	93	156	51	71	119	139	162	190	239	79	104	157	175	197	235	283	76	84	84
5	3.1 KHz Temporal	High	93	156	53	73	119	140	164	190	242	81	105	155	177	196	234	284	83	88	88
6	3.1 KHz Temporal	Low	91	154	45	66	112	133	160	185	235	68	90	145	166	186	222	276	76	82	82
7	3.1 KHz Non-Temporal	High	99	162	69	90	135	157	175	208	261	104	131	177	204	230	264	326	84	89	89
8	3.1 KHz Non-Temporal	Low	93	156	52	72	119	138	162	192	242	77	102	156	177	199	234	291	77	83	83

NOTE: Products set at 15 and 30 candela automatically work on either 12V or 24V power supplies. The products are not listed for 12VDC operation when set to any other candela settings.

TABLE 5. WALL MOUNT CHIME STROBE CURRENT DRAW (mA) AND SOUND OUTPUT (dBA)

Pos	Chime Tone	Volume Setting	Current draw (mA)															Sound Output (dBA)			
			8-17.5 VDC		16-33 VDC						16-33 FWR						8-17.5 V		16-33 V		
			15	30	15	30	75	95	110	135	185	15	30	75	95	110	135	185	DC	DC	FWR
1	1 Second	High	90	154	51	71	116	136	161	202	242	70	90	160	176	197	233	275	61	62	62
2	1 Second	Low	89	154	50	70	115	136	154	199	238	67	88	158	175	191	232	271	56	55	55
3	1/4 Second	High	90	154	52	72	117	137	168	201	242	69	93	159	175	198	233	272	67	70	70
4	1/4 Second	Low	89	153	49	70	115	136	165	199	241	68	93	154	169	196	232	270	61	61	61
5	Temporal	High	88	153	49	69	112	137	168	201	246	65	90	145	170	189	228	283	64	66	66
6	Temporal	Low	88	152	47	68	111	136	167	196	241	64	89	142	170	188	219	282	59	60	60
7	5 Second Whoop	High	91	154	52	70	113	132	176	206	243	70	93	145	168	187	223	278	76	78	78
8	5 Second Whoop	Low	87	149	46	66	108	130	170	202	240	62	84	137	159	180	216	272	62	64	64

NOTE: Products set at 15 and 30 candela automatically work on either 12V or 24V power supplies. The products are not listed for 12VDC operation when set to any other candela settings.

position to engage the pins on the product with the terminals on the mounting plate. Make sure that the tabs on the back of the product housing fully engage with the mounting plate.

5. Secure product by tightening the single mounting screw in the front of the product housing.

SURFACE MOUNT BACK BOX MOUNTING

1. The surface mount back box may be secured directly to the wall or ceiling. A grounding bracket with ground screw capability is provided if needed. For standard size devices see Figure 9, and for compact devices see Figure 10.

2. The wall mount back box must be mounted with the up arrow pointing up. (See Figure 12.)

3. Threaded knockout holes are provided for the sides of the box for 1/2 inch conduit adapter. Knockout holes in the back of the box can be used for 1/2 inch rear entry.


4. To remove the 1/2 inch knockout, we recommend you use a flat head screwdriver, place the blade of the flat head screwdriver in the inner edge of the knockout. Strike the screwdriver as you work your way around as shown in Figure 13.

NOTE: For 1/2 in. installation, use caution not to strike the knockout near the top edge of the surface mount back box.

5. V500 and V700 raceway knockouts are also provided. Use V500 for low profile applications and V700 for high profile applications.


6. To remove the knockout turn pliers up, as shown in Figure 13.

FIGURE 12. SMBB UP ARROW

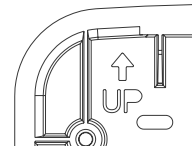


A0481-00

FIGURE 13. KNOCKOUT AND V500/V700 REMOVAL FOR SURFACE MOUNT BACK BOX

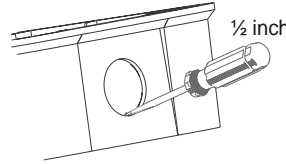

A0482-00

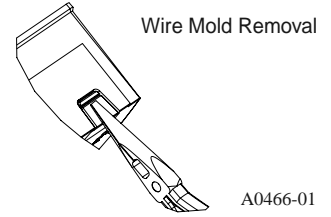


A0466-01

TAMPER SCREW

For tamper resistance, the standard captive screw may be replaced with the enclosed Torx screw.

1. To remove the captive screw, back out the screw and apply pressure to the back of the screw until it disengages from the housing. Replace with the supplied Torx screw. (See Figure 11.)

FIGURE 11. TAMPER SCREW

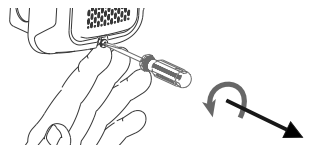

A0478-00

Please refer to insert for the Limitations of Fire Alarm Systems



THE LIMITATIONS OF HORN/STROBES

The horn and/or strobe will not work without power. The horn/strobe gets its power from the fire/security panel monitoring the alarm system. If power is cut off for any reason, the horn/strobe will not provide the desired audio or visual warning.

The horn may not be heard. The loudness of the horn meets (or exceeds) current Underwriters Laboratories' standards. However, the horn may not alert a sound sleeper or one who has recently used drugs or has been drinking alcoholic beverages. The horn may not be heard if it is placed on a different floor from the person in hazard or if placed too far away to be heard over the ambient noise such as traffic, air conditioners, machinery or music appliances that may prevent alert persons from hearing the alarm. The horn may not be heard by persons who are hearing impaired.

NOTE: Strobes must be powered continuously for horn operation.

The signal strobe may not be seen. The electronic visual warning signal uses an extremely reliable xenon flash tube. It flashes at least once every second. The strobe must not be installed in direct sunlight or areas of high light intensity (over 60 foot candles) where the visual flash might be disregarded or not seen. The strobe may not be seen by the visually impaired.

The signal strobe may cause seizures. Individuals who have positive photoic response to visual stimuli with seizures, such as persons with epilepsy, should avoid prolonged exposure to environments in which strobe signals, including this strobe, are activated.

The signal strobe cannot operate from coded power supplies. Coded power supplies produce interrupted power. The strobe must have an uninterrupted source of power in order to operate correctly. System Sensor recommends that the horn and signal strobe always be used in combination so that the risks from any of the above limitations are minimized.

THREE-YEAR LIMITED WARRANTY

System Sensor warrants its enclosed product to be free from defects in materials and workmanship under normal use and service for a period of three years from date of manufacture. System Sensor makes no other express warranty for this product. No agent, representative, dealer, or employee of the Company has the authority to increase or alter the obligations or limitations of this Warranty. The Company's obligation of this Warranty shall be limited to the replacement of any part of the product which is found to be defective in materials or workmanship under normal use and service during the three year period commencing with the date of manufacture. After phoning System Sensor's toll free number 800-SENSOR2 (736-7672) for a Return Authorization number, send defective units postage prepaid to: Honeywell, 12220 Rojas Drive, Suite 700, El Paso TX 79936.

Please include a note describing the malfunction and suspected cause of failure. The Company shall not be obligated to replace units which are found to be defective because of damage, unreasonable use, modifications, or alterations occurring after the date of manufacture. In no case shall the Company be liable for any consequential or incidental damages for breach of this or any other Warranty, expressed or implied whatsoever, even if the loss or damage is caused by the Company's negligence or fault. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

FCC STATEMENT

System Sensor Strobes and Horn/Strobes have been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and

can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

System Sensor® is a registered trademark of Honeywell International, Inc.



Absorbent Glass Mat (AGM) technology for superior performance. Valve regulated, spill proof construction allows safe operation in any position. Approved for transport by air. D.O.T., I.A.T.A., F.A.A. and C.A.B. certified. U.L. recognized under file number MH 20567.

Maintenance-Free

Specification

Nominal Voltage	12 volts		
Nominal Capacity	77° F (25° C)		
20-hr. (0.90A)	18 Ah		
10-hr. (1.67A)	16.74 Ah		
5-hr. (3.06A)	15.30 Ah		
1-hr. (10.80A)	10.80 Ah		
Approximate Weight	11.9 lbs (5.4 kgs)		
Internal Resistance (approx.)	18mΩ		
Shelf Life (% of normal capacity at 77° F (25° C))			
3 Months	6 Months	12 Months	
91%	82%	64%	
Temperature Dependency of Capacity (20 hour rate)			
104° F (40° C)	77° F (25° C)	32° F (0° C)	5° F (-15° C)
102%	100%	85%	65%
AGM Operational Temperature			
Charge	32° F to 104° F (0° C to 40° C)		
Discharge	5° F to 113° F (-15° C to 45° C)		
AGM Storage Temperature	5° F to 104° F (-15° C to 40° C)		



*Can be used outdoors.

Charge Method (Constant Voltage)


Cycle Use (Repeating Use)

Initial Current	5.4 A or smaller
Control Voltage	14.6 - 14.8 V

Float Use

Control Voltage	13.6 - 13.8 V
-----------------	---------------


Physical Dimensions: in (mm)

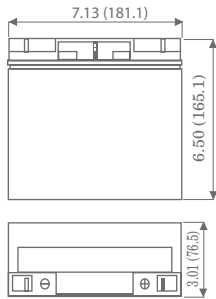

L: 7.13in (181.1 mm)
W: 3.01in (76.5 mm)
H: 6.50in (165.1 mm)
TH: 6.57in (166.9 mm)


Tolerances are +/- 0.04 in. (+/- 1mm) and +/- 0.08 in. (+/- 2mm) for height dimensions. All data subject to change without notice.

 Terminals




Dimension or Type	L	W	w	H	T
F2	7.80 mm 0.31 in	6.35 mm 0.25 in	7.80 mm 0.31 in	6.00 mm 0.24 in	0.80 mm 0.03 in

Discharge Time vs. Discharge Current

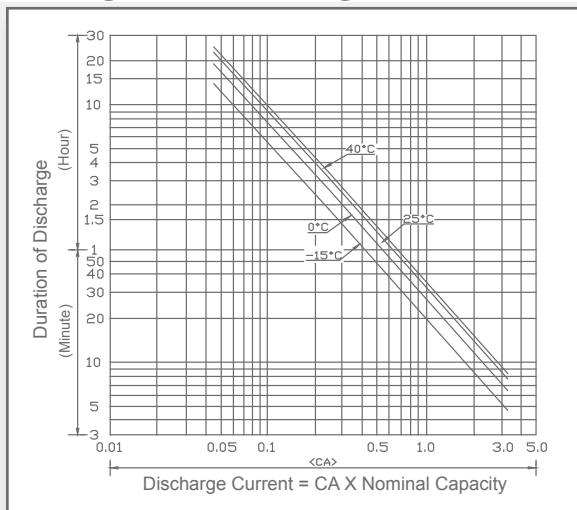


Discharge Characteristics

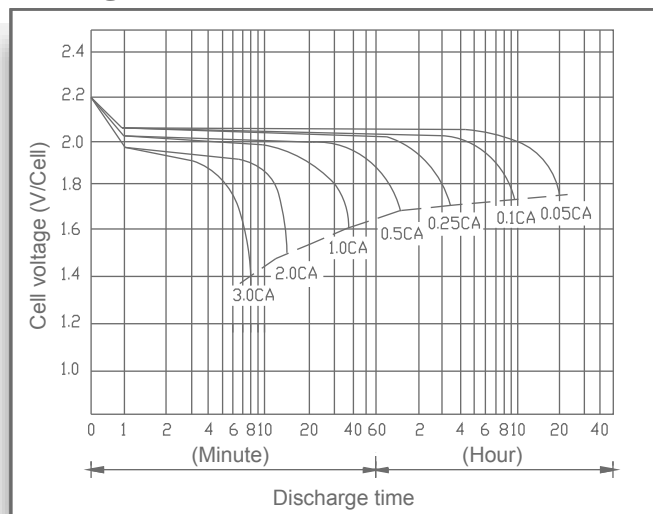


UB12180

Maintenance-Free


Shelf Life & Storage

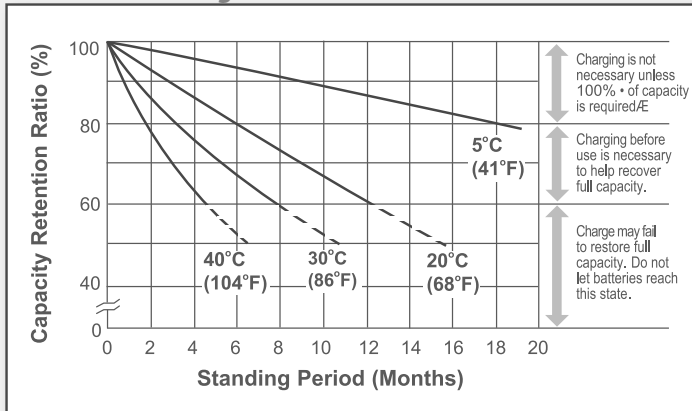


Cycle Life vs Depth of Discharge

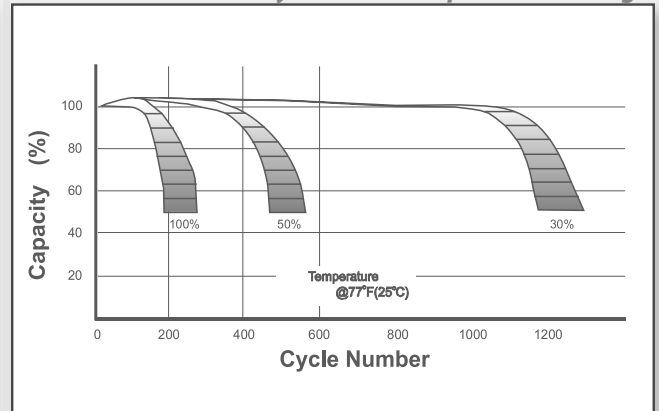

Open Circuit Voltage vs Residual Capacity

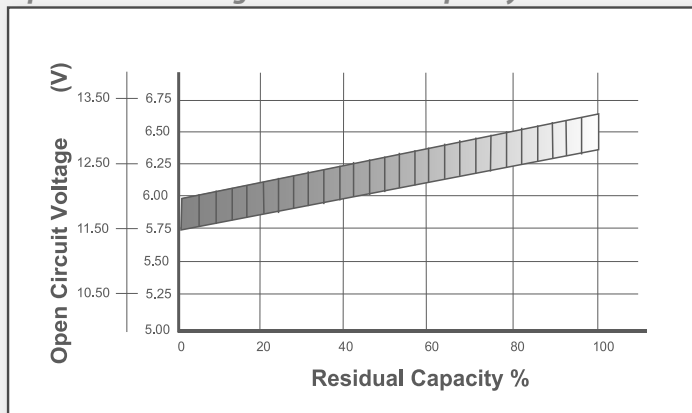

Effect of Temperature on Capacity

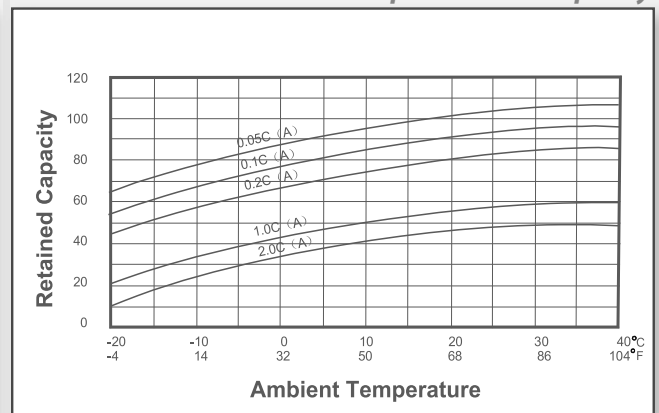

Charge Current & Final Discharge Voltage

Application	Charge Voltage(V/Cell)			Max.Charge Current	Final Discharge Voltage V/Cell	1.75	1.70	1.60	1.30
	Temperature	Set Point	Allowable Range						
Cycle Use	25°C(77°F)	2.45	2.40~2.50	0.30°C	Discharge Current(A)	0.2C>(A)	0.2C<(A)<0.5C	0.5C<(A)<1.0C	(A)>1.0C
Standby	25°C(77°F)	2.30	2.27~2.30						



Let UPG Power Your Life.

www.upgi.com



GENESIS SERIES

**Power Limited Fire Alarm Cable
Part No. 4112**

Description: 16 AWG 4/C SOL FPL-CL2
Compliance: UL Standards 13 & 1424; NEC Articles 725 & 760

Construction:

Conductor 16 AWG Solid Bare Copper
No. of Conductors 4

Insulation

Type	Polypropylene
Color	Black, Red, Ylw, Grn
Thickness	0.006" nom.
Diameter	0.062" nom.
Lay Length	2.5" nom.

Jacket

Type	PVC
Color	Red
Thickness	0.015" nom.
Diameter	0.180" nom.

Legend (Ink Print) HONEYWELL P/N 4112 4C16 E175105 (UL) FPL OR CL2 SUN RES 75C (RoHS)
W/O# XXXXXX-XXXXXX XXXXX FT DEVICE/ZONE A B C D E F 1 2 3 4 5 6 7 8 9

Properties:

Temperature Rating	-20 to 75 oC
Operating Voltage	300 Volts max.
Capacitance	20 pf/ft nom.
Impedance	81 Ohms nom.
DC Resistance	4.15 Ohms/M' at 20oC
Flame Rating	UL 1685 Vertical Tray



GENESIS SERIES

**Power Limited Fire Alarm Cable
Part No. 4111**

Description: 16 AWG 2/C SOL FPL-CL2
Compliance: UL Standards 13 & 1424; NEC Articles 725 & 760

Construction:

Conductor 16 AWG Solid Bare Copper
No. of Conductors 2

Insulation

Type	Polypropylene
Color	Black, Red
Thickness	0.006" nom.
Diameter	0.062" nom.
Lay Length	2.25" nom.

Jacket

Type	PVC
Color	Red
Thickness	0.015" nom.
Diameter	0.158" nom.

Legend (Ink Print) HONEYWELL P/N 4111 2C16 E175105 (UL) FPL OR CL2 SUN RES 75C (RoHS)
W/O# XXXXXX-XXXXXX XXXXX FT DEVICE/ZONE A B C D E F 1 2 3 4 5 6 7 8 9

Properties:

Temperature Rating	-20 to 75 oC
Operating Voltage	300 Volts max.
Capacitance	20 pf/ft nom.
Impedance	81 Ohms nom.
DC Resistance	4.15 Ohms/M' at 20oC
Flame Rating	UL 1685 Vertical Tray

Description: 14 AWG 2/C SOL FPL-CL2
Compliance: UL Standards 13 & 1424; NEC Articles 725 & 760

Construction:

Conductor 14 AWG Solid Bare Copper
No. of Conductors 2

Insulation

Type	Polypropylene
Color	Black, Red
Thickness	0.010" nom.
Diameter	0.084" nom.
Lay Length	3.0" nom.

Jacket

Type	PVC
Color	Red
Thickness	0.016" nom.
Diameter	0.200" nom.

Legend (Ink Print) HONEYWELL P/N 4113 2C14 E175105 (UL) FPL OR CL2 SUN RES 75C (RoHS)
W/O# XXXXXX-XXXXXX XXXXX FT DEVICE/ZONE A B C D E F 1 2 3 4 5 6 7 8 9

Properties:

Temperature Rating	-20 to 75 oC
Operating Voltage	300 Volts max.
Capacitance	22 pf/ft nom.
Impedance	70 Ohms nom.
DC Resistance	2.6 Ohms/M' at 20oC
Flame Rating	UL 1685 Vertical Tray



**SILENT
KNIGHT**

by Honeywell

IFP-2000/ECS RPS-2000

**Analog /Addressable Fire System
Emergency Communication System**

Farenhyt™ Series

**Installation and
Operations Manual**

Document 151430-L8

01/29/15

Rev: **L**

P/N 151430-L8-L ECN: 14-0574

Installation Procedure

Installation Precautions - Adherence to the following will aid in problem-free installation with long-term reliability:

WARNING - Several different sources of power can be connected to the fire alarm control panel. Disconnect all sources of power before servicing. Control unit and associated equipment may be damaged by removing and/or inserting cards, modules, or interconnecting cables while the unit is energized. Do not attempt to install, service, or operate this unit until manuals are read and understood. **CAUTION** - System Re-acceptance Test after Software Changes: To ensure proper system operation, this product must be tested in accordance with NFPA 72 after any programming operation or change in site-specific software. Re-acceptance testing is required after any change, addition or deletion of system components, or after any modification, repair or adjustment to system hardware or wiring. All components, circuits, system operations, or software functions known to be affected by a change must be 100% tested. In addition, to ensure that other operations are not inadvertently affected, at least 10% of initiating devices that are not directly affected by the change, up to a maximum of 50 devices, must also be tested and proper system operation verified. This system meets NFPA requirements for operation within the range of 0°C-49°C (32°F-120°F) or humidity within the range of 10%-93% at 30°C (86°F) non-condensing. However, the useful life of the system's standby batteries and the electronic components may be adversely affected by extreme temperature ranges and humidity. Therefore, it is recommended that this system and its peripherals be installed in an environment with a normal room temperature of 15-27° C/60-80° F. **Verify that wire sizes are adequate** for all initiating and indicating device loops. Most devices cannot tolerate more than a 10% I.R. drop from the specified device voltage. **Like all solid state electronic devices**, this system may operate erratically or can be damaged when subjected to lightning induced transients. Although no system is completely immune from lightning transients and interference, proper grounding will reduce susceptibility. Overhead or outside aerial wiring is not recommended, due to an increased susceptibility to nearby lightning strikes. Consult with the Technical Services Department if any problems are anticipated or encountered. **Disconnect AC power and batteries** prior to removing or inserting circuit boards. Failure to do so can damage circuits. Remove all electronic assemblies prior to any drilling, filing, reaming, or punching of the enclosure. When possible, make all cable entries from the sides or rear. Before making modifications, verify that they will not interfere with battery, transformer, or printed circuit board location. **Do not tighten screw terminals** more than 9 in-lbs. Over-tightening may damage threads, resulting in reduced terminal contact pressure and difficulty with screw terminal removal. Silent Knight fire alarm control panels contain static-sensitive components. Always ground yourself with a proper wrist strap before handling any circuits so that static charges are removed from the body. Use static suppressive packaging to protect electronic assemblies removed from the unit.

Follow the instructions in the installation, operating, and programming manuals. These instructions must be followed to avoid damage to the control panel and associated equipment. Fire Alarm Control Panel (FACP) operation and reliability depend upon proper installation.

While installing a fire alarm system may make lower insurance rates possible, it is not a substitute for fire insurance! **An automatic fire alarm system** - typically made up of smoke detectors, heat detectors, manual pull stations, audible warning devices, and a fire alarm control with remote notification capability - can provide early warning of a developing fire. Such a system, however, does not assure protection against property damage or loss of life resulting from a fire. **Any fire alarm system** may fail for a variety of reasons: Smoke detectors may not sense fire where smoke cannot reach the detectors such as in chimneys, in walls, or roofs, or on the other side of closed doors. **Smoke detectors** also may not sense a fire on another level or floor of a building. A second floor detector, for example, may not sense a first floor or basement fire. Furthermore, all types of smoke detectors, including ionization and photoelectric types, have sensing limitations. No type of smoke detector can sense every kind of fire caused by carelessness and safety hazards like smoking in bed, violent explosions, escaping gas, improper storage of flammable materials, overloaded electrical circuits, children playing with matches, or arson.

IMPORTANT! Smoke detectors must be installed in the same room as the control panel and in rooms used by the system for the connection of alarm transmission wiring, communications, signaling, and/or power. If detectors are not so located, a developing fire may damage the alarm system, crippling its ability to report a fire. **Audible warning devices** such as bells may not alert people if these devices are located on the other side of closed or partly open doors or are located on another floor of a building. **A fire alarm system** will not operate without any electrical power. If AC power fails, the system will operate from standby batteries only for a specified time. **Rate-of-Rise heat detectors** may be subject to reduced sensitivity over time. For this reason, the rate-of-rise feature of each detector should be tested at least once per year by a qualified fire protection specialist. **Equipment used in the system** may not be technically compatible with the control. It is essential to use only equipment listed for service with your control panel. **Telephone lines** needed to transmit alarm signals from a premise to a central monitoring station may be out of service or temporarily disabled. **The most common cause** of fire alarm malfunctions, however, is inadequate maintenance. All devices and system wiring should be tested and maintained by professional fire alarm installers following written procedures supplied with each device. System inspection and testing should be scheduled monthly or as required by national and/or local fire codes. Adequate written records of all inspections should be kept.

Contents

Section 1

Introduction 1

1.1	Overview of Basic System	1
1.1.1	Hardware Features	1
1.1.2	Network System Hardware Features	1
1.1.3	Software Features	2
1.1.4	IFP-2000ECS Features	2
1.2	About this Manual	2
1.2.1	Terms Used in this Manual	3
1.3	Compatible Products	4
1.4	How to Contact Silent Knight	5

Section 2

Agency Listings, Approvals, and Requirements 1

2.1	Federal Communications Commission (FCC)	1
2.2	Underwriters Laboratories (UL)	2
2.2.1	Requirements for All Installations	2
2.2.2	Requirements for Central Station Fire Alarm Systems	2
2.2.3	Requirements for Local Protected Fire Alarm Systems	2
2.2.4	Requirements for Remote Station Protected Fire Alarm Systems - (DACT)	3

Section 3

Before You Begin Installation 1

3.1	What's in the Box?	1
3.2	Environmental Specifications	1
3.3	Electrical Specifications	1
3.4	Wiring Specifications	4
3.5	Board Assembly Diagram	7
3.6	Calculating Current Draw and Standby Battery	8
3.6.1	Current Draw Worksheet Requirements	8
3.6.2	Current Draw Worksheet for IDP SLC Devices	9
3.6.3	Current Draw Worksheet for SD SLC Devices	12
3.6.4	Maximum Battery Standby Load	14
3.7	Installation Task Overview	15

Section 4

Control Panel Installation 1

4.1	Mounting the Control Panel Cabinet	1
4.1.1	Preventing Water Damage	1
4.1.2	Removing the IFP-2000 Assembly from the Housing	1

4.1.3 Ethernet Connection	1
4.2 AC Connection	1
4.3 Battery Connection	2
4.3.1 Battery Accessory Cabinets	3
4.3.1.1 Installing the RBB or AB-55 Accessory Cabinet and Batteries	3
4.4 SBUS Wiring	5
4.4.1 Calculating Wiring Distance for SBUS Modules	5
4.4.2 Wiring Configurations	8
4.5 RA-2000 Remote Annunciator Installation	9
4.5.1 Mounting the RA-2000	9
4.5.1.1 Flush Mounting	9
4.5.1.2 Surface Mounting	11
4.5.2 RA-2000 Connection to the Panel	12
4.5.3 Temporary Programming Display	13
4.6 5815XL Installation	13
4.6.1 5815XL Connection to the Panel	14
4.7 5824 Serial/Parallel Interface Module Installation	14
4.7.1 Selecting 5824 Options	16
4.8 5880 LED I/O Module	17
4.8.1 5880 Board Layout	17
4.8.2 FACP Connection	18
4.8.3 LED Wiring	18
4.8.4 Dry Contact Wiring	19
4.9 5865-3 / 5865-4 LED Annunciator Installation	20
4.9.1 FACP Connection	20
4.9.2 5865 Mounting	21
4.10 Configuring SBUS Modules	22
4.10.1 Assigning SBUS Module IDs	22
4.10.2 SBUS Bandwidth Considerations	22
4.11 Telephone Connection	23
4.12 Flexputs™ I/O Circuits	23
4.12.1 Conventional Notification Appliance	23
4.12.1.1 Class B Notification Wiring	23
4.12.1.2 Class A Notification Wiring	24
4.12.2 Conventional Input Switch Circuits	25
4.12.2.1 Class B Inputs	25
4.12.2.2 Class A Inputs	26
4.12.3 Installing 2-Wire Smoke Detectors	27
4.12.3.1 Installing 2-Wire Class B Smoke Detectors	27
4.12.3.2 Installing 2-Wire Class A Smoke Detectors	28
4.12.4 Installing 4-Wire Smoke Detectors	28
4.12.4.1 Installing a Class B 4-Wire Smoke Detectors	28
4.12.4.2 Installing 4-Wire Class A Smoke Detectors	29
4.12.5 Auxiliary Power Installation	30
4.12.5.1 Door Holder Power	31
4.12.5.2 Constant Power	31
4.12.5.3 Resettable Power	31
4.12.5.4 Sounder Sync Power	31
4.13 On-Board Relays (Conventional)	32
4.13.1 Trouble Relay	32
4.13.2 Programmable Relays	32
4.14 Remote Station Applications	33
4.14.1 Keltron Model 3158 Installation	33
4.14.2 City Box Connection Using the 5220 Module	34

4.14.3 Using the IDP-Relay Addressable Relay Module for City Box Connection	35
4.14.4 NFPA 72 Polarity Reversal	35
4.14.4.1 Using the 5220 Module	35
4.14.4.2 Using the 7644-L8* Module	36
4.14.5 Transmitter Activated by Dry Contacts	37

Section 5

Networking 1

5.1 Network System Hardware Features	1
5.1.1 Network ed Sites	1
5.1.2 Wiring Options to Connect Networked Panels	1
5.2 Model RPS-2000	1
5.3 Direct Connect Wiring Option	1
5.3.1 Installing using Direct Connection within a Site:	2
5.4 Repeater Wiring Options	3
5.4.1 Network Repeater Types	3
5.4.1.1 Accessory Mounting Kits	4
5.4.2 Network Repeater Installation	4
5.4.2.1 Network Repeater Cable Requirements	5
5.4.2.2 Unshielded Twisted Pair Wiring between Multiple Panels	5
5.4.2.3 Fiber Optic Repeater Wiring between Multiple Panels	6
5.4.2.4 Fiber Optic and Twisted Pair Repeater Wiring between Multiple Panels	6
5.5 Using Both Repeaters and Direct Connect Wiring on a Networked System	8
5.5.1 Setting the Network Terminators at Panel DIP Switches and Repeater Jumpers	8
5.6 Setting the Network ID for each Panel	10

Section 6

Network Management 1

6.1 Network Diagnostics	1
6.1.1 Ping Panel	1
6.1.2 Network Status	1
6.1.3 Repeater Power	1
6.2 Network Programming	1
6.2.1 Learn Network	1
6.2.2 Edit Network Names	2
6.2.3 Edit Panel ID	2
6.2.4 Computer Access	3
6.3 Access Codes	4
6.3.1 Edit Name	6
6.3.2 Edit Access Code	6
6.3.3 Panel Functions	6
6.4 Dialer	6
6.4.1 Dialer Assignments	6
6.4.2 Dialer Miscellaneous	6
6.4.3 Receiver Configuration	6
6.4.4 Dialer Report Table	7
6.5 Voice Options	7
6.5.1 Edit Timers	7

6.5.1.1 Cont rol Lockout	7
6.5.1.2 Auto Reset ECS Custom Event/Auto Reset ECS Event	7
6.5.2 Edit Voice Commands	8
6.6 Sync Network Options	9
6.7 Network Management Quick Reference	10

Section 7

IDP and SD SLC Device Installation

7.1 List of IDP SLC Devices	1
7.2 List of SD SLC Devices	2
7.3 Maximum Number of SLC Devices	3
7.4 Wiring Requirements for SLC Devices	3
7.4.1 Wiring 5815XL in Style 4 (Class B) Configuration	3
7.4.2 Wiring 5815XL in Style 6 & 7 (Class A) Configuration	5
7.5 Wiring IDP SLC Detectors	6
7.6 Addressing IDP SLC Devices	7
7.7 Wiring SD Detectors	8
7.8 Addressing SD Devices	9
7.8.1 SD505-APS, SD505-AHS, & SD505-AIS	9
7.8.2 SLC Devices with DIP Switches	10

Section 8

Programming Overview

8.1 Security and Data Protection	1
8.2 JumpStart AutoProgramming	1
8.2.1 Input Points	1
8.2.2 Output Points	2
8.2.3 Running JumpStart AutoProgramming	2
8.3 Mapping Overview	4
8.3.1 Input Point Mapping	5
8.3.2 Output Circuit Mapping	6
8.3.3 Event Mapping	7
8.3.4 Mapping LED Points	13
8.3.5 Mapping LED Points for a Networked System	14
8.4 Programming Using the 5655 Silent Knight PC Configuration Software 14	
8.5 Programming Using an Annunciator	14
8.5.1 Entering & Exiting Panel Programming	15
8.5.1.1 Moving through the Menus	15
8.5.1.2 Selecting Options and Entering Data	15
8.5.1.3 Editing Keys	16
8.6 Programming Menu Quick Reference	17

Section 9

Programming

9.1 UL 864 / UL 2572 Programming Requirements	1
9.2 Modules	1

9.2.1	Edit Modules	2
9.2.1.1	Editing Module ID	2
9.2.1.2	Naming Modules	2
9.2.1.3	Changing Module Options	2
9.2.2	Adding a Module	3
9.2.3	Deleting a Module	3
9.2.4	View Module List	3
9.3	Zone	3
9.3.1	Edit Zone	4
9.3.1.1	Edit Zone Name	4
9.3.1.2	Edit Zone Properties	4
9.3.1.3	Zone Accessory Options	6
9.3.2	View Zone Points	7
9.4	Group	7
9.4.1	Edit Group	7
9.4.1.1	Edit Group Name	8
9.4.1.2	Edit Group Properties	8
9.4.2	View Group Points	9
9.4.3	Edit OPG Template	9
9.5	Point	10
9.5.1	Point Programming For 5815XL Module	10
9.5.2	Point Programming For Internal or External Power Module (RPS-1000)	14
9.5.3	Point Programming For 5880/5865 Modules	16
9.5.4	Point Programming for 5496	17
9.5.5	Point Programming for ECS-AMP	17
9.5.6	Point Programming for ECS-VCM or ECS-RVM	18
9.6	System Options	20
9.6.1	Auto Test Time	20
9.6.2	Phone Lines	21
9.6.2.1	Dialing Prefix	21
9.6.2.2	Number of Answer Rings	21
9.6.2.3	Dial Option (TouchTone or Pulse, or TT/PL)	22
9.6.2.4	Rotary Format	22
9.6.2.5	Dial Tone Detection Disabled	22
9.6.2.6	Line Monitor	22
9.6.2.7	Answering Machine Bypass	22
9.6.2.8	Phone Line Unused	22
9.6.3	Daytime/Night time Sensitivity	23
9.6.4	Holiday Days	23
9.6.5	Time Options	24
9.6.5.1	Water Flow Delay	24
9.6.5.2	Alarm Verification Time	24
9.6.5.3	Low AC Report Delay	24
9.6.5.4	Change AC Line Frequency	25
9.6.5.5	Clock Display Format (AM/PM or Military)	25
9.6.6	Miscellaneous Options	25
9.6.6.1	Strobes Active when Silenced	25
9.6.6.2	Auto Display Events	26
9.6.6.3	IFP-RPT Repeater Installed	26
9.6.6.4	Both Ports Used	26
9.6.7	Daylight Saving Options	26
9.6.7.1	Automatic Daylight Saving Adjustment	26
9.6.7.2	Daylight Saving Time Start and End	26
9.6.8	Edit Banner	27

9.6.9	Edit SLC Family	27
9.6.10	Edit Ethernet	28
9.7	JumpStart AutoProgramming	28
9.8	Restore Defaults	28
9.9	Voice Options	29
9.9.1	ECS-VCM Maintenance	29
9.9.2	Edit Voice Settings	29
9.9.2.1	Enable Dual Channel System	29

Section 10

System Operation 1

10.1	User and Installer Default Codes	1
10.2	Annunciator Description	1
10.2.1	LCD Display	1
10.2.2	Banner	2
10.3	Menu System	2
10.3.1	Main Menu Overview	2
10.3.2	Using the Menus	3
10.4	Basic Operation	3
10.4.1	Setting Time and Date	3
10.4.2	Disable / Enable a Point	3
10.4.2.1	Disable / Enable NACs by Template	3
10.4.2.2	Disable / Enable NACs by Group	3
10.4.2.3	Disable / Enable Zone Points	3
10.4.2.4	Disable / Enable Point	3
10.4.2.5	Inhibit Output Group	4
10.4.3	View Event History	4
10.4.3.1	To clear the event history	4
10.4.4	Conduct a Fire Drill	4
10.4.5	Conduct an Indicator Test	4
10.4.6	Conduct a Walk Test	5
10.4.7	Conduct a Dialer Test	5
10.4.8	Silence Alarms or Troubles	5
10.4.9	Reset Alarms	5
10.4.10	Check Detector Sensitivity Through Point Status	6
10.4.11	View Status of a Point	6
10.4.12	View Alarms or Troubles	7
10.4.13	System Information	7
10.4.14	Communicating with a Remote Computer	7
10.5	Event Priority	8
10.5.1	System Control	8
10.5.2	System Override	8
10.5.3	Event Priority	8
10.5.4	Priority Rules	9
10.5.5	Other Priority Considerations	9
10.6	Operation Mode Behavior	10
10.7	Releasing Operations	15
10.7.1	Single Interlock Zone Releasing	17
10.7.2	Double Interlock Zone Releasing	18
10.8	Smoke Alarm Verification	19
10.9	Function Keys	19

10.9.1 Recording an F-Key Macro	19
10.9.2 Aborting an F-Key Macro Recording Session	19
10.9.3 Erasing an F-Key Macro	20
10.9.4 Using a Recorded F-Key Macro	20
10.9.5 F-Key Status Event	20
10.9.6 F-Key Map Inhibit	20

Section 11

Emergency Communication System Operation 1

11.1 Overview	1
11.2 LOC Functionality	1
11.2.1 Keys and LEDs	1
11.2.1.1 ECS Control Key	1
11.2.1.2 ECS Control LED	1
11.2.1.3 ECS Message Keys	2
11.2.1.4 ECS Message LEDs	2
11.2.1.5 Select Keys	2
11.2.1.6 Select Key LEDs	2
11.2.2 Gaining ECS Control	3
11.2.2.1 LOC Priority	3
11.2.2.2 LOC Lockout	3
11.2.2.3 User Profile Access Control	4
11.2.3 Manual ECS	4
11.2.3.1 Switching between Microphone Mode and Message Mode	4
11.2.3.2 Activating Output Groups Dynamically	4
11.2.4 Microphone Mode	4
11.2.5 Message Mode	5
11.2.6 Custom ECS Event	5
11.2.7 Passing ECS Control	5
11.2.8 Exit ECS Control Menu	6
11.2.9 Relinquish ECS Control	6
11.2.10 ECS Reset	6
11.3 ECS Super User	6
11.4 ECS Point Functionality	7
11.4.1 ECS Point Activations	7
11.4.2 ECS-VCM Points	7
11.5 Amplifier Programming	7
11.5.1 Adding an Amplifier	7
11.5.2 Editing an Amplifier	8
11.6 LOC Programming	8
11.6.1 Adding an LOC	8
11.6.2 Editing an LOC	8
11.6.2.1 LOC Priority	9
11.6.2.2 LOC Association	9
11.7 Using the Microphone	9
11.7.1 Microphone Functionality	9
11.7.2 Custom ECS Event	9
11.7.3 Fire Page	9
11.7.4 Emergency Page	9
11.7.4.1 Paging	10
11.8 Recording Custom Messages	10

11.8.1 Recording Messages 1-15 Using Aux Audio Input	11
11.8.2 Recording Messages 1-15 Using the Microphone	13
11.8.3 Erasing User Message ..	15
11.8.4 Using Farenhyt ECS Message Manager Software Tool	15

Section 12

Reporting

12.1 Receivers Compatible with the Control Panel	1
12.2 Reporting Formats Table	1
12.3 SIA - IntelliKnight / IFP-2000 Panels PI Modifier Reporting:	13
12.4 SIA – IFP-2000 Panel Dialer:	14

Section 13

Testing and Troubleshooting

13.1 Troubleshooting	1
13.2 Common Problems	1
13.3 Periodic Testing and Maintenance	2
13.4 Event History	2
13.5 Built-in Troubleshooting and Testing Tools	3
13.5.1 SLC Device Locator	3
13.5.2 SLC Multiple Device Locator	3
13.5.3 I/O Point Control ..	4
13.5.4 Earth Fault Resistance	4

Section 14

Installation Records

14.1 Detector and Module Point Record ..	1
14.2 Conventional Output Point Record ..	5

Appendix A	
Compatible Devices	1

Appendix B	
Editing Text Using the Built-In Programmer	1

Appendix C	
Cadence Patterns	1

Silent Knight Fire Product Warranty and Return Policy

Manufacturer Warranties and Limitation of Liability

Model IFP-2000 Basic Operating Instructions

Model IFP-2000ECS / ECS-RCU2000

Basic Operating Instructions

Section 1

Introduction

The IFP-2000 Fire Alarm Control/Communicator is an analog addressable fire control system that meets the requirements of UL 864. The RPS-2000 is used in a networked system where there is at least one IFP-2000 in the system. The RPS-2000 is the same as the IFP-2000 without the display. When using the RPS-2000 as a stand alone local unit, one RA-2000 must be connected, and the RA-2000 must be wired in conduit within 20' of the RPS-2000.

The IFP-2000ECS Fire Alarm Control/Communicator is an analog addressable fire control system combined with an Emergency Communication System that meets the requirements of UL standard 2572.

1.1 Overview of Basic System

The IFP-2000 base system is packaged as an assembled stack of 3 circuit boards mounted to an aluminum housing.

1.1.1 Hardware Features

- The basic IFP-2000 panel contains one built in signaling line circuit (SLC), which supports up to 159 IDP sensors and 159 IDP modules or 127 SD SLC devices. Additional SLC loops can be added using the model 5815XL SLC expander to increase overall point capacity to a maximum of 636 points. The SLC(s) supports both the SD Protocol and Intelligent Device Protocol (IDP).
- Each SLC supports 159 IDP sensors and 159 IDP modules or 127 SD devices to a maximum of 636 points per IFP-2000 control panel.
- 9.0A of output power is available through 8 sets of terminals for notification and auxiliary applications. Each circuit is power limited per UL 864 and can source up to 3.0A (total output power must not exceed 9.0A). The constant auxiliary power load must not exceed 6.0A for normal standby.
- Built-in dual phone line, digital alarm communicator/transmitter (DACT).
- Reports events to central station by point or by zone.
- UL Listed for pre-action and deluge releasing systems.
- Dedicated Form C trouble relay and two general purpose Form C programmable relays.
- Can be used with Model RA-2000 remote annunciators (sold separately).
- Supports the 5865-3, 5865-4, and 5880 LED annunciators. See sections 4.8 and 4.9 for additional information on these models (sold separately).
- Printing of event log available through the Model 5824 serial/parallel printer interface module (sold separately).
- Supports conventional 2-wire & 4-wire detectors using the 8 Flexput™ circuits or SLC zone modules.
- 999 software zones, 999 output groups.
- Add four notification/auxiliary power circuits with each 5496 Intelligent Power Module.
- Add six Flexput™ circuits with each RPS-1000 Remote Power Supply.
- Interconnection capability for up to eight panels.

1.1.2 Network System Hardware Features

- The default network setup can contain up to eight IFP-2000 / RPS-2000 panels connected within a networked system providing a maximum addressable point capacity of 5,088.
- The networked system can be configured to emulate a large virtual system or can be segmented into separate

sites for multiple building applications.

- Each building is referred to as a “site”. All panels in a site operate as a single panel.
- Panels can be interconnected using a BUS or CLASS A (style 7) topology.
- Panels can be connected cost effectively via shielded twisted pair copper wire within conduit when the panels are located no more than 20 feet apart and within the same room.
- Panels separated by more than 20 feet or located in multiple buildings use IFP-RPT network repeater hardware to provide up to 3000 ft. of separation with twisted pair copper wire or up to 8dB loss of signal separation for fiber optic cable. Both methods of panel connectivity can be used within the same networked system.
- The network architecture provides true peer to peer capability allowing network survivability for all hardware that remains operational in the event of partial system failure.

1.1.3 Software Features

- Advanced analog smoke detector features:
 - Three sensitivity settings (high, medium, low)
 - Automatic drift compensation
 - Maintenance alert region
 - Point status meets calibrated smoke test requirements for NFPA 72
 - Automatic day/night sensitivity adjustment
- “JumpStart AutoProgramming” feature for easy programming
- Non-volatile event history stores 1000 events per panel
- A choice of output patterns available for notification outputs, including ANSI 3.41 temporal signal
- Built-in synchronization appliance support for AMSECO, Gentex[®], System Sensor[®], and Wheelock[®]

1.1.4 IFP-2000ECS Features

- 15 Recordable one minute messages that can be mapped to eight ECS buttons.
- ECS messages can be selected as priority over fire.
- Support of up to 15 ECS-RCU2000's. The ECS-RCU2000 meets the requirements for an LOC.
- Programmable trigger inputs from an external source, such as a Monaco system, to either the ECS-VCM, ECS-RVM or 5880. Up to eight inputs available on the 5880 module.
- Support for up to 16 SBUS addressable amplifiers using a combination of ECS-50W, ECS-125W, ECS-INT50W or ECS-DUAL50W for a maximum of 2000 watts per system and up to 128 mappable speaker circuits.
- Support for dual channel and backup audio using the ECS-DUAL50W amplifier and ECS-50WBU back-up amplifier.
- Single enclosure for both Fire and Emergency Control System components.

1.2 About this Manual

This manual is intended to be a complete reference for all installation and operation tasks for the IFP-2000, IFP-2000ECS*, IFP-2000HV, IFP-2000ECSHV**, RPS-2000, and RPS-2000HV.

Please let us know if the manual does not meet your needs in any way. We value your feedback!

* All references to IFP-2000 within this manual are applicable to the IFP-2000ECS.

** All references to IFP-2000HV within this manual are applicable to the IFP-2000ECSHV.

1.2.1 Terms Used in this Manual

The following terminology is used with the above mentioned control panels:

Term	Description
SLC	Signaling line circuit
Module	The term module is used for all hardware devices except for SLC addressable devices and notification appliances. This includes the IFP-2000/RPS-2000 panels itself and the built-in power supply. It also refers to any (optional) 5815XL SLC expansion module.
Input Point	An addressable sensing device, such as a smoke, heat detector or a contact monitor device
Input Zone	A protected area made up of input points
Output Point (or "Output Circuit")	A notification point or circuit for notification appliances. Relay circuits and auxiliary power circuits are also considered output points
Group (or "Output Group" or OPG)	A group of output points. Operating characteristics are common to all output points in a group
Mapping	Mapping is the process of specifying which outputs are activated when certain events occur in the system. Section 8.3 explains mapping in detail
Networking	Up to 8 panels can be networked to sites that act like one panel
ECS	Emergency Communication System

1.3 Compatible Products

Table 1-1 lists the products available from Silent Knight for use with the IFP-2000.

Table 1-1: IFP-2000 Compatible Products

Type of Device	Model	Description	
IDP Addressable SLC Devices	See Section 7.1 for a list of compatible devices		
SD Addressable SLC Devices	See Section 7.2 for a list of compatible devices		
Other Modules	5815XL SLC Expander	Each 5815XL allows up to 159 IDP sensors and 159 IDP modules or up to 127 SD devices to be added to the system. The number of 5815XLs that can be added to the system is limited only by the maximum number of SBUS devices. However the maximum point count is limited to 636 per panel. This allows the installer to distribute the 636 points on more than two SLC loops and also allows all 636 points to be all sensors or all modules or any combination of sensors and modules.	
	RPS-2000 Addressable Power Supply w/no display	Same operation as IFP-2000 without display	
	5824 Serial/Parallel Printer Interface Module	Allows a printer to be attached for the on-site event logging. Maximum of two 5824s per control panel.	
	RPS-1000 Intelligent Power Module	Provides additional power, six Flexput™ circuits, and two Form C relays. See <i>Model RPS-1000 Installation Instructions P/N 151024</i> .	
	5496 Intelligent Power Module	Provides four additional Notification Appliance Circuits/Auxiliary power	
	RA-2000 Remote Fire Alarm Annunciator	Same operation, similar appearance as on-board annunciator	
	5865-3 and 5865-4 LED Annunciator	LED annunciator can display up to 30 LEDs (15 red and 15 yellow). 5865-4 has key switches for silence and reset, and a system trouble LED.	
	5880 LED I/O Module	Driver for up to 40 LEDs. Interfaces with customized annunciator boards. In addition, the 5880 has eight generic switch input points.	
	5883 General Purpose Relay Module	Provides 10 Form C relays. Designed to be driven by the 5880. Up to four, 5883s can be used with each 5880 module.	
	VIP-50*	50 watt audio amplifier	
	VIP-125**	125 watt audio amplifier	
	ECS-VCM	Voice Control Module used with the IFP-2000ECS	Refer to the ECS-Series installation manual PN 151455 for more info on these accessories.
	ECS-SW24	24 Switch expander	
	ECS-50W	50 watt audio amplifier	
	ECS-125W	125 watt audio amplifier	
	ECS-INT50W	50 watt Internal amplifier	
	ECS-CE4	Provides 4 additional audio circuits for the ECS-50W or the ECS-125W	
	ECS-RVM	Remote Voice Microphone used with the IFP-2000ECS	
	ECS-DUAL50W	Dual Channel amplifier	
	ECS-50WBU	Backup daughter card	
IFP-2000ECS	Contains IFP-2000 and ECS-VCM in single cabinet.		
Other Modules (cont.)	IFP-RCU2000ECS	Contains RA-2000 and ECS-RVM in single cabinet.	

Table 1-1: IFP-2000 Compatible Products

Type of Device	Model	Description
Misc.	7860 Telephone Cord	RJ31X cord for connecting phone line to the IFP-2000.
	Silent Knight 5655 Software Suite (SKSS-2)	For communication and panel programming with a Windows-based computer and modem (not sold by Silent Knight, see Table 1-2 for compatible modems). Enables remote viewing of detector status and event history.
	RBB	Remote Battery Box for mounting backup batteries up to 35AH that are too large to fit into the main control panel cabinet. Dimensions: 16" W x 10" H x 6" D (40.64 cm W x 25.4 cm H x 15.24 cm D)
	AB-55	Remote Battery Box for mounting backup batteries up to 55AH that are too large to fit into the main control panel cabinet. Dimensions: 20" W x 12" H x 7.5" D (50.8 cm W x 30.48 cm H x 19.05 cm D)
<i>Note: *All references to ECS-50W within this manual will be applicable to VIP-50.</i>		
<i>Note: ** All references to ECS-125W within this manual will be applicable to VIP-125</i>		

The following modems have been tested by Silent Knight for compatibility with the Silent Knight Software Suite software packages:

Table 1-2: Compatible Modems

Manufacturer	Model
US Robotics	28.8
Motorola	LifeStyle
	28.8, 3400 series
	Premier 33.6
MultiTech	MT19321ZDX

1.4 How to Contact Silent Knight

If you have a question or encounter a problem not covered in this manual, contact Silent Knight Technical Support at 800-446-6444.

To order parts, contact Silent Knight Sales at 800-328-0103.

Limitations of Fire Alarm Systems

Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premise following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, state and local codes, and the recommendations contained in Guide for the Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off or give early warning in as many as 35% of all fires. While fire alarm systems are designed to provide warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons. For example:

- Particles of combustion or smoke from a developing fire may not reach the sensing chambers of smoke detectors because:
 - Barriers such as closed or partially closed doors, walls, or chimneys may inhibit particle or smoke flow. Smoke particles may become cold, stratify, and not reach the ceiling or upper walls where detectors are located.
 - Smoke particles may be blown away from detectors by air outlets
 - Smoke particles may be drawn into air returns before reaching the detector.

In general, smoke detectors on one level of a structure cannot be expected to sense fires developing on another level.

- The amount of smoke present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm.
- Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.
- Smoke detectors are subject to false alarms and nuisance alarms and may have been disconnected by users. For example, a smoke detector located in or near a kitchen may go into nuisance alarm during normal operation of kitchen appliances. In addition, dusty or steamy environments may cause a smoke detector to falsely alarm. If the location of a smoke detector causes an abundance of false alarms or nuisance alarms, do not disconnect the smoke detector; call a professional to analyze the situation and recommend a solution.
- Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially within bedrooms), smoking in bed, violent explosions (caused by escaping gas, improper storage of flammable materials, etc.).
- Heat detectors do not sense particles of combustion and are designed to alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Heat detectors are designed to protect property, not life.
- Warning devices (including horns, sirens, and bells) may not alert people or wake up sleepers who are located on the other side of closed or partially open doors. A warning device that activates on a different floor or level of a dwelling or structure is less likely to awaken or alert people. Even persons who are awake may not notice the warning if the alarm is muffled by noise from a stereo, radio, air conditioner or other appliance, or by passing traffic. Audible warning devices may not alert the hearing-impaired (strobes or other devices should be provided to warn these people). Any warning device may fail to alert people with a disability, deep sleepers, people who have recently used alcohol or drugs, or people on medication or sleeping pills.

Please note that:

- i) Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
 - ii) Studies have shown that certain people, even when they hear a fire alarm signal, do not respond or comprehend the meaning of the signal. It is the property owner's responsibility to conduct fire drills and other training exercises to make people aware of fire alarm signals and instruct on the proper reaction to alarm signals.
 - iii) In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.
- Telephone lines needed to transmit alarm signals from a premises to a central station may be out of service or temporarily out of service. For added protection against telephone line failure, backup radio transmission systems are recommended.
 - System components, though designed to last many years, can fail at any time. As a precautionary measure, it is recommended that smoke detectors be checked, maintained, and replaced per manufacturer's recommendations.
 - System components will not work without electrical power. If system batteries are not serviced or replaced regularly, they may not provide battery backup when AC power fails.
 - Environments with high air velocity or that are dusty or dirty require more frequent maintenance.

In general, fire and emergency alarm systems and devices will not work without power and will not function properly unless they are maintained and tested regularly.

While installing an alarm system may make the owner eligible for a lower insurance rate, an alarm system is not a substitute for insurance. Property owners should continue to act prudently in protecting the premises and the people in their premises and should properly insure life and property and buy sufficient amounts of liability insurance to meet their needs.

Requirements and recommendations for proper use of fire alarm systems including smoke detectors and other fire alarm devices:

Early fire detection is best achieved by the installation and maintenance of fire detection equipment in all rooms and areas of the house or building in accordance with the requirements and recommendations of the current edition of the National Fire Protection Association Standard 72, *National Fire Alarm Code* (NFPA 72), the manufacturer's recommendations, State and local codes and the recommendations contained in Guide for the Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. For specific requirements, check with the local Authority Having Jurisdiction (ex. Fire Chief) for fire protection systems.

Requirements and recommendations include:

- Smoke detectors shall be installed in sleeping rooms in new construction and it is recommended that they shall also be installed in sleeping rooms in existing construction.
- It is recommended that more than one smoke detector shall be installed in a hallway if it is more than 30 feet long.
- It is recommended that there shall never be less than two smoke detectors per apartment or residence.
- It is recommended that smoke detectors be located in any room where an alarm control is located, or in any room where alarm control connections to an AC source or phone lines are made. If detectors are not so located, a fire within the room could prevent the control from reporting a fire.
- All fire alarm systems require notification devices, including sirens, bells, horns, and/or strobes. In residential applications, each automatic alarm initiating device when activated shall cause the operation of an alarm notification device that shall be clearly audible in all bedrooms over ambient or background noise levels (at least 15dB above noise) with all intervening doors closed.
- It is recommended that a smoke detector with an integral sounder (smoke alarm) be located in every bedroom and an additional notification device be located on each level of a residence.
- To keep your fire alarm system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations and UL and NFPA standards. At a minimum the requirements of Chapter 14 of NFPA 72, 2010 Edition shall be followed. A maintenance agreement should be arranged through the local manufacturer's representative. Maintenance should be performed annually by authorized personnel only.
- The most common cause of an alarm system not functioning when a fire occurs is inadequate maintenance. As such, the alarm system should be tested weekly to make sure all sensors and transmitters are working properly.

Section 2

Agency Listings, Approvals, and Requirements

2.1 Federal Communications Commission (FCC)

- The following information must be provided to the telephone company before the IFP-2000 can be connected to the phone lines:

A	Manufacturer:	Silent Knight by Honeywell
B	Model Number:	IFP-2000 / IFP-2000ECS
C	FCC registration number:	AC6AL11B6820
	Ringer equivalence:	0.8B
D	Type of jack:	RJ31X
E	Facility Interface Codes:	Loop Start: 02LS2
F	Service Order Code:	9.0F

This equipment complies with Part 68 of the FCC rules and the requirements adopted by ACTA. On the inside cover of this equipment is a label that contains, among other information, a product identifier. If requested, this information must be provided to the telephone company.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord (not provided) and modular jack must be utilized with this product. It is designed to be used with a modular jack that is also compliant.

The REN (ringer equivalence number) provided on this installation sheet is used to determine the number of devices that may be connected to the public switched telephone network. This number must not exceed 5.0. Since this product has an REN of 0.8, the number of devices is limited. The REN number is embedded in the FCC registration number as 11B.

If the IFP-2000 / IFP-2000HV / IFP-2000ECS / IFP-2000ECSHV causes harm to the telephone network, the telephone company will notify you in advance that the temporarily discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with the IFP-2000 / IFP-2000HV / IFP-2000ECS / IFP-2000ECSHV, for repair or warranty information, please contact Silent Knight at 1-800-328-0103 or www.silentknight.com. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the IFP-2000 / IFP-2000HV / IFP-2000ECS / IFP-2000ECSHV until the problem has been resolved.

This product cannot be adjusted or repaired in the field. It must be returned to the factory for service.

This equipment is not designed for use with party line service. Connection to party line service is subject to state tariffs. You may contact the state public utility commission, public service commission or corporation commission for information.

Since the IFP-2000, IFP-2000HV, IFP-2000ECS, or IFP-2000ECSHV is a commercial fire alarm panel, it must be connected upstream of all other equipment utilizing the phone lines. If you have questions about the

installation, contact your telephone company or a qualified installer.

Warning

This device has been verified to comply with FCC Rules Part 15. Operation is subject to the following conditions: (1) This device may not cause radio interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

2.2 Underwriters Laboratories (UL)

2.2.1 Requirements for All Installations

General requirements are described in this section. When installing an individual device, refer to the specific section of the manual for additional requirements. The following subsections list specific requirements for each type of installation (for example, Central Station Fire Alarm systems, Local Protected Fire Alarm systems, and so on). See Section 10.7 for information on releasing operation.

1. All field wiring must be installed in accordance with NFPA 70 National Electric Code.
2. Use the addressable smoke detectors specified in Section 7.1 (IDP devices) or Section 7.2 (SD devices) of this manual and/or conventional detectors listed in the compatibility chart in Appendix A.
3. Use UL listed notification appliances compatible with the IFP-2000 from those specified in Appendix A of this manual.
4. A full system checkout must be performed any time the panel is programmed.

Restricted Options:

- The loss of AC signal is defaulted to 3 hours, but the system still allows settings from 0 - 30 hours. For UL certified installations, this number must be set from 1 to 3 hours.
- The system allows the use of non-latching, spot type smoke detectors. This feature may not be used in commercial applications whereby a general alarm is sounded. It is intended for elevator recall, door holding applications, and hotel/motel room applications.
- The system allows the Alarm Verification confirmation time to be set from 1 to 250 seconds. For UL certified installations the setting must be a minimum of 60 seconds.
- Call forwarding shall not be used.
- When two count is used: detector spacing shall be cut in half, you shall not use the alarm verification feature, and no delay shall be used.
- P.A.S. (positive alarm sequence) feature shall be used only with automatic detectors.
- No ECS initiating devices on SLC loops.

2.2.2 Requirements for Central Station Fire Alarm Systems

1. Use both phone lines. Enable phone line monitors for both lines.
2. You must program a phone number and a test time so that the IFP-2000 sends an automatic daily test to the central station.
3. The AC Loss Hours option must be set from 1-3 hours.

2.2.3 Requirements for Local Protected Fire Alarm Systems

At least one UL listed supervised notification appliance must be used.

2.2.4 Requirements for Remote Station Protected Fire Alarm Systems - (DACT)

1. Do not exceed the current draw load restrictions shown in Section 3.6.
2. The AC Loss Hours option must be set from 1-3 hours.

Section 3

Before You Begin Installation

This section of the manual is intended to help you plan your tasks to facilitate a smooth installation. Please read this section thoroughly, especially if you are installing a IFP-2000 or RPS-2000 panel for the first time.

3.1 What's in the Box?

The IFP-2000 or RPS-2000 ships with the following hardware:

- A cabinet with all hardware assembled
- Two keys for the front door
- Ten 4.7K ohm end-of-line resistors
- A battery cable for batteries wired in series

3.2 Environmental Specifications

It is important to protect the IFP-2000 control panel from water. To prevent water damage, the following precautions should be FOLLOWED when installing the units:

- Intended for indoor use in dry locations only
- Do not mount directly on exterior walls, especially masonry walls (condensation)
- Do not mount directly on exterior walls below grade (condensation)
- Protect from plumbing leaks
- Protect from splash caused by sprinkler system inspection ports
- Do not mount in areas with humidity-generating equipment (such as dryers, production machinery)

When selecting a location to mount the IFP-2000 control panel, the unit should be mounted where it will NOT be exposed to: temperatures outside the range of 0°C- 49°C (32°F-120°F) or humidity exceeding 93% noncondensing.

3.3 Electrical Specifications

Terminal Label		Description	Rating		Earth Ground Faults
			Voltage	Current	
B		AC input (hot)	120/240 VAC, 50/60 Hz	5A for the IFP-2000, 2.5A for the IFP-2000HV	N/A
G		Earth ground	N/A	N/A	N/A
W		AC input (neutral)	120/240 VAC, 50/60 Hz	5A for the IFP-2000, 2.5A for the IFP-2000HV	N/A
X	*I/O 1	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω
O				100 mA for initiation circuits	

Terminal Label		Description	Rating		Earth Ground Faults	
			Voltage	Current		
X	*I/O 2	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω	
O				100 mA for initiation circuits		
X	*I/O 3	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω	
O				100 mA for initiation circuits		
X	*I/O 4	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω	
O				100 mA for initiation circuits		
X	*I/O 5	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω	
O				100 mA for initiation circuits		
X	*I/O 6	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω	
O				100 mA for initiation circuits		
X	*I/O 7	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω	
O				100 mA for initiation circuits		
X	*I/O 8	Flexput™ Circuits	24 VDC	3.0A notification and auxiliary power circuits	0Ω	
O				100 mA for initiation circuits		
B	SBUS1 OUT	SBUS communication	5 VDC	100 mA	0Ω	
A						
+		SBUS power	24 VDC	1.0 A		
-						
B	SBUS1 IN	Used for Class A installations			0Ω	
A						
+						
-						
B	SBUS2 OUT	SBUS communication	5 VDC	100 mA	0Ω	
A						
+		SBUS power	24 VDC	1.0 A		
-						
B	SBUS2 IN	Used for Class A installations			0Ω	
A						
+						
-						
A	NETWORK	NETWORKING CONNECTION	5V	100mA	N/A	
B						
GND						
N.C.	RELAY 1	General Purpose Relay 1	24 VDC	2.5 A, resistive	N/A	
C						
N.O.						

* Regulated for NAC circuits, special application when used for releasing or auxiliary power circuits.

Terminal Label		Description	Rating		Earth Ground Faults
			Voltage	Current	
N.C.	RELAY 2	General Purpose Relay 2	24 VDC	2.5 A, resistive	N/A
C					
N.O.					
N.C.	TROUBLE	Trouble Relay	24 VDC	2.5 A, resistive	N/A
C					
N.O.					
S-	SLC OUT	SLC terminals	32 VDC	150 mA	0Ω
S+					
SC-	SLC IN	Used for Class A installations			0Ω
SC+					
Ring		Phone Line 1 Telco Ring	N/A		0Ω
Tip		Phone Line 1 Telco Tip			
Ring		Phone Line 1 Premises Ring			
Tip		Phone Line 1 Premises Tip			
Ring		Phone Line 2 Telco Ring	N/A		0Ω
Tip		Phone Line 2 Telco Tip			
Ring		Phone Line 2 Premises Ring			
Tip		Phone Line 2 Premises Tip			
+	Battery	Battery Connection	24 VDC	1.12 A	N/A
-					


3.4 Wiring Specifications

Induced noise (transfer of electrical energy from one wire to another) can interfere with telephone communication or cause false alarms. To avoid induced noise, follow these guidelines:

- Isolate input wiring from high current output and power wiring. Do not pull one multi-conductor cable for the entire panel. Instead, separate the wiring as follows:

High voltage	AC power terminal
SLC loops	SLC In/Out Terminals
Audio input/output	Phone line circuits, Ring Tip Telco, Phone Terminals
Notification circuits	I/01-I/08 Terminals
SBUS	SBUS1 In/Out Terminals, SBUS 2 In/Out Terminals
Relay circuits	Trouble, Relay 1, Relay 2 Terminals
Network Communication	Local Connection, IFP-RPT twisted pair

- Do not pull wires from different groups through the same conduit. If you must run them together, do so for as short a distance as possible or use shielded cable. Connect the shield to earth ground at the panel. You must route high and low voltages separately.
- Route the wiring around the inside perimeter of the cabinet. It should not cross the circuit board where it could induce noise into the sensitive microelectronics or pick up unwanted RF noise from the high speed circuits. See Figure 3-1 for an example.
- High frequency noise, such as that produced by the inductive reactance of a speaker or bell, can also be reduced by running the wire through ferrite shield beads or by wrapping it around a ferrite toroid.

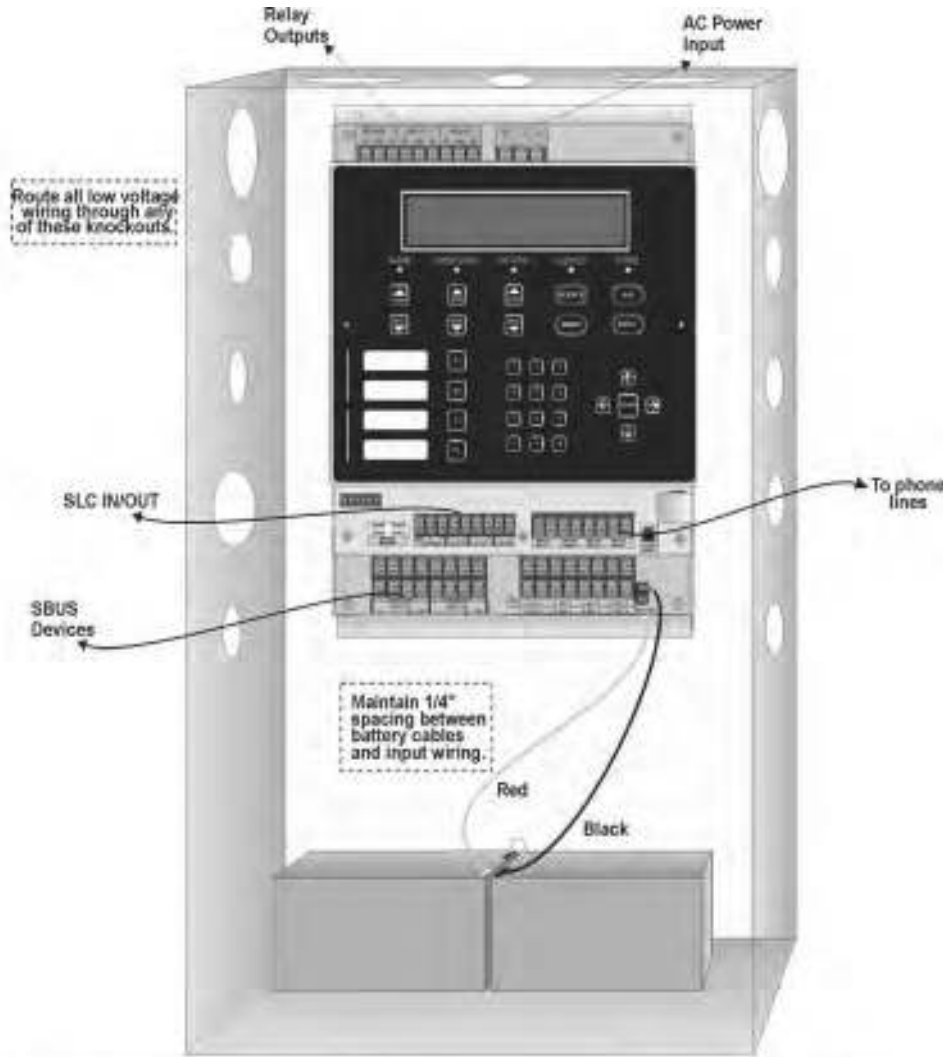

Fire alarm power-limited circuits are installed using types, FPL, FPLR, FPLP or permitted substitute cables, provided these power-limited cable conductors extending beyond the jacket are separated by a minimum of 0.25 in. (6.35 mm) or by a nonconductive sleeve or non-conductive barrier from all other conductors.

All circuits, except battery cables and AC, are power limited.
Maintain at least 1/4" spacing between power limited and non-power limited circuits.
Separate high and low voltage circuits.

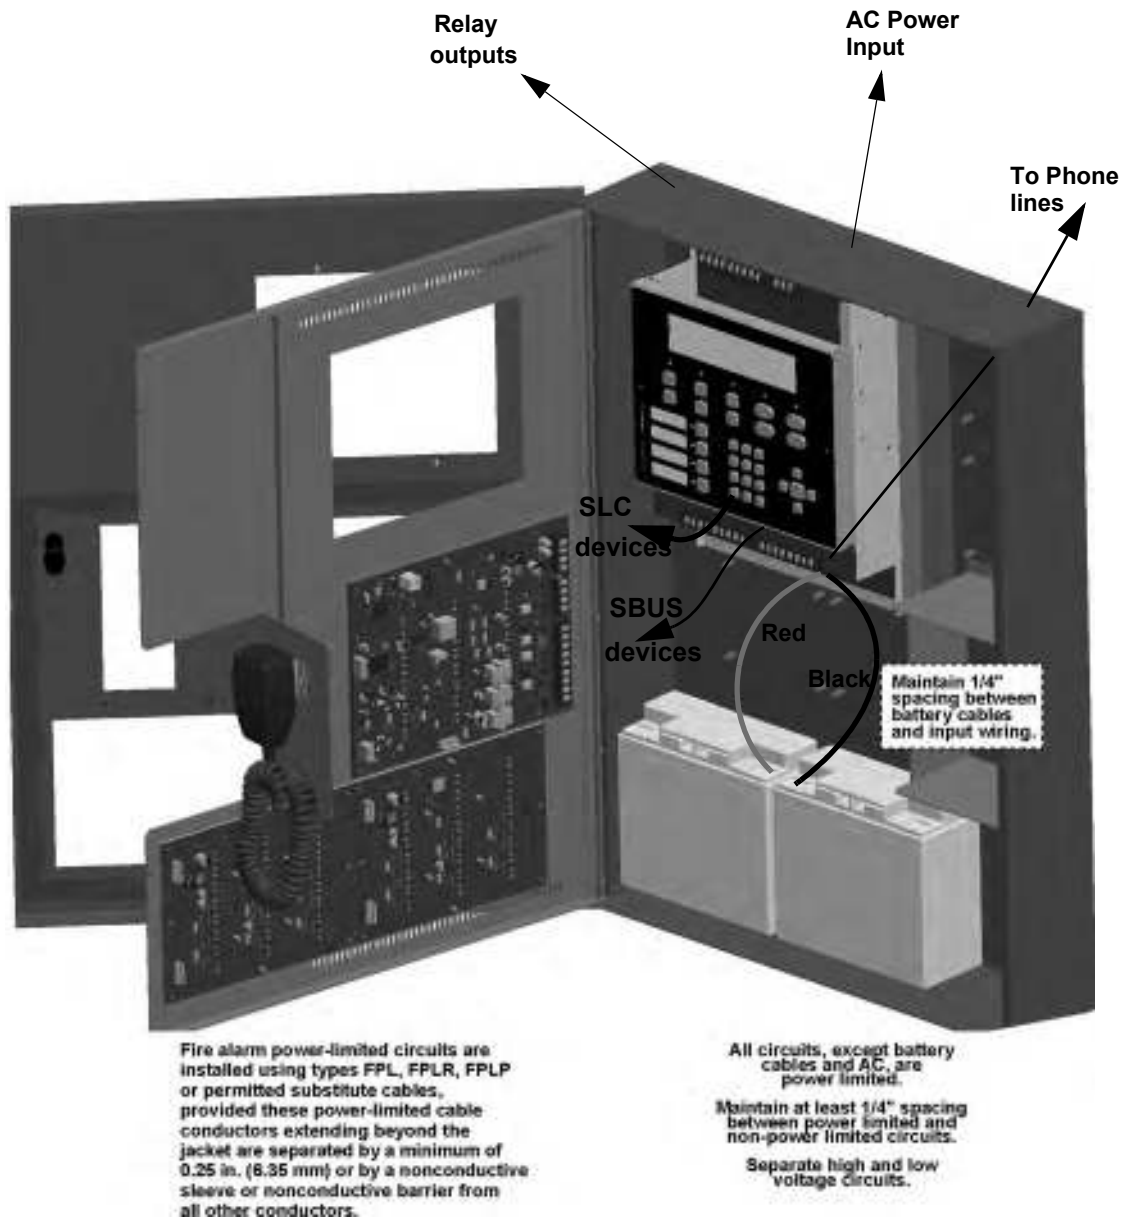


Figure 3-1 Wire Routing Example for IFP-200ECS

3.5 Board Assembly Diagram

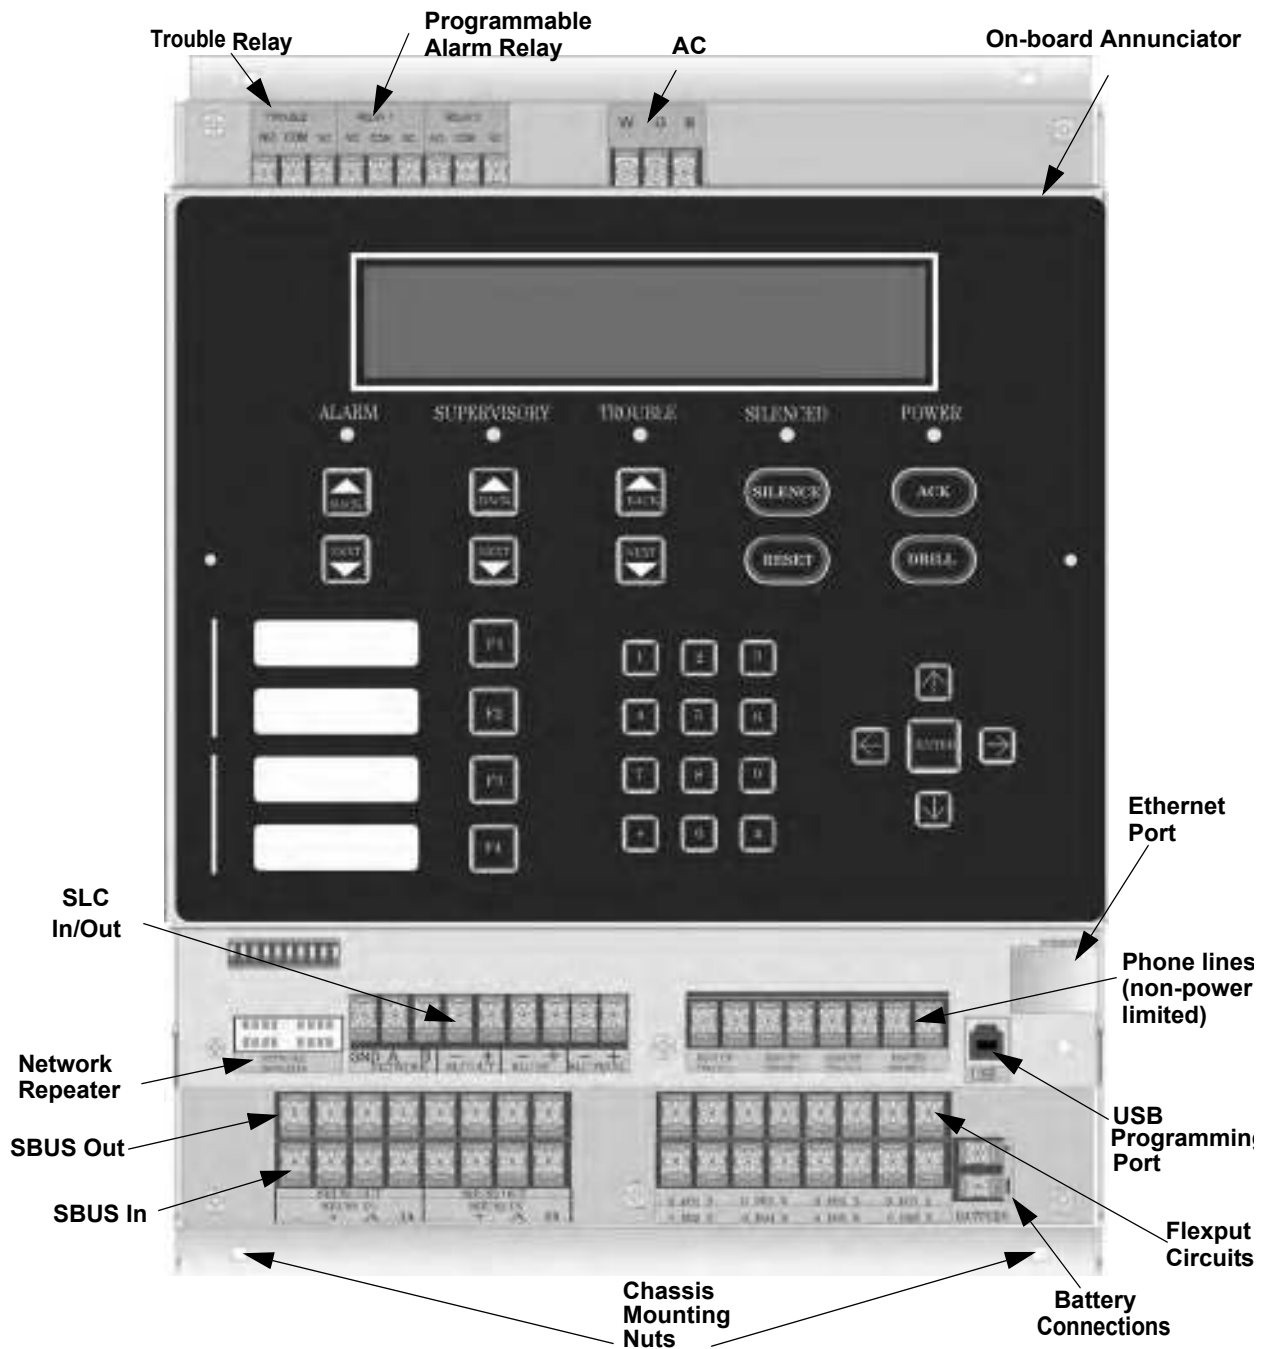


Figure 3-2 Model IFP-2000 Assembly

Figure 3-2 shows the circuit boards, metal housing and annunciator that attach the IFP-2000 assembly to the cabinet. If you should need to remove the board assembly for repair, remove the four mounting nuts which hold the assembly in the cabinet. Then lift the entire assembly out of the cabinet. Do not attempt to remove the circuit boards from the metal bracket.

3.6 Calculating Current Draw and Standby Battery

This section is for helping you determine the current draw and standby battery needs for your installation.

3.6.1 Current Draw Worksheet Requirements

The following steps must be taken when determining IFP-2000 current draw and standby battery requirements.

1. You will use the Current Draw Worksheet to determine current draw and standby battery requirements. Use Table 3-1 if installing IDP SLC Devices or use Table 3-2 if installing SD SLC Devices. For the IFP-2000, the worst case current draw is listed for the panel, addressable devices, and all SBUS expanders. Fill in the number of addressable devices and expanders that will be used in the system and compute the current draw requirements for alarm and standby. Record this information in the current draw worksheet on Line A.
2. Add up the current draw for all auxiliary devices and record in the table on Line B.
3. Add up the current draw for all notification appliance loads and record in the table on Line C.
4. For notification appliances and auxiliary devices not mentioned in the manual, refer to the device manual for the current ratings.
5. Make sure that the total alarm current you calculated, including current for the panel itself, does not exceed 9.0 A. This is the maximum alarm current for the IFP-2000 control panel. If the current is above 9.0 A you will need to use a notification power expander(s) such as the Silent Knight 5496 or the RPS-1000 intelligent power expander, to distribute the power loads so that the IFP-2000 or the power expanders do not exceed their power ratings. Refer to the current draw worksheets provided with the 5496 or the RPS-1000 manuals so you do not exceed their power ratings.
6. Alternatively, you may network additional IFP-2000s or RPS-2000s to get additional power.
7. Complete the remaining instructions in the appropriate current draw worksheet for determining battery size requirements.

3.6.2 Current Draw Worksheet for IDP SLC Devices

Use Table 3-1 to determine current requirements during alarm/battery standby operation when IDP SLC devices are installed. You can install up to 159 IDP sensors per loop (636 points max per panel) *and* 159 IDP modules per loop (636 points max per panel). Copy this section if additional space is required.

Table 3-1: Current Draw Worksheet for IDP SLC Devices

Device	# of Devices	Current per Device	Standby Current	Alarm Current
For each device use this formula: This column X This column = Current per number of devices.				
Fire Panel (Battery current draw)	1	Standby:	290 mA	
		Alarm:	570 mA	570 mA

Table 3-1: Current Draw Worksheet for IDP SLC Devices

Device	# of Devices	Current per Device	Standby Current	Alarm Current	
Addressable SLC Devices					
IDP-Photo	(159 max/loop & 636 max/ panel) ¹	Standby: .30 mA ⁸	mA	mA	
IDP-Photo-T			mA	mA	
IDP-PhotoR			mA	mA	
IDP-Ion			mA	mA	
IDP-Heat			mA	mA	
IDP-Heat-HT			mA	mA	
IDP-Acclimate			mA	mA	
IDP-Heat-ROR			mA	mA	
IDP-Beam (without integral test)		SLC	Standby/Alarm: 2 mA	mA	mA
		Aux. Pwr	Standby: 2 mA	mA	
IDP-Beam-T ⁵ (with integral test)			Alarm: 8.5 mA		mA
		SLC	Standby/Alarm: 2 mA	mA	mA
DNR (non-relay)		Aux. Pwr	Standby: 2 mA	mA	
			Alarm: 8.5 mA		mA
DNR (with relay)		None, included with IDP-PhotoR ⁶			
IDP-CO-Fire	None, included with IDP-PhotoR & IDP-Relay ⁷				
IDP-Monitor	SLC	Standby: .30 mA	mA		
		Alarm: 7.2 mA		mA	
IDP-Minimon	Standby/Alarm .375mA		mA	mA	
			mA	mA	
IDP-Pull-SA/IDP-Pull-DA			mA	mA	
IDP-Monitor-2	Standby/Alarm: .75 mA		mA	mA	
IDP-Monitor-10	Standby/Alarm: 3.5 mA		mA	mA	
IDP-Control	SLC	Standby .375mA	mA		
		Alarm: .375mA		mA	
IDP-Control-6	Aux Pwr	Standby 1.7mA	mA		
		Alarm: 7mA		mA	
IDP-Relay	SLC	Standby 2.25 mA	mA		
		Alarm: 2.25 mA		mA	
IDP-Relay-6	Aux Pwr	Standby 8 mA	mA		
		Alarm: 20 mA		mA	
IDP-RelayMon-2	Standby/Alarm: .255 mA		mA	mA	
IDP-RelayMon-2	Standby/Alarm: 1.45 mA		mA	mA	
	Standby: 1.3 mA		mA		
IDP-RelayMon-2	Alarm: 24 mA			mA	
	Aux Pwr	Standby 12 mA	mA		
IDP-RelayMon-2		Alarm: 90 mA		mA	
	SLC	Standby/Alarm .27 mA	mA	mA	
IDP-RelayMon-2	Aux Pwr	Standby 50 mA	mA		
		Alarm: 70 mA		mA	
IDP-RelayMon-2	SLC	Standby/Alarm 2 mA	mA	mA	

Table 3-1: Current Draw Worksheet for IDP SLC Devices

Device	# of Devices	Current per Device		Standby Current	Alarm Current	
SLC Accessories						
B200SR Sounder Base	(159 max/loop & 636 max/ panel)	Aux Pwr	Standby:	.5 mA	mA	
			Alarm:	35 mA		mA
B200S Intelligent Sounder Base		Aux Pwr	Standby:	.5 mA	mA	
			Alarm: (high vol)	35 mA		mA
B200SR-LF Low Frequency Sounder Base		Aux Pwr	Standby:	1 mA	mA	
			Alarm:	125 mA		mA
B200S-LF Low Frequency Sounder Base		Aux Pwr	Standby	.55 mA	mA	
			Alarm (high vol)	140 mA		mA
B224RB Relay Base		SLC	Standby	.30 mA	mA	
			Standby/Alarm:	.5 mA	mA	mA
RT151/151 KEY		Alarm:	7.5 mA		mA	
RA100Z		Alarm:	10 mA		mA	
SLC Isolator Devices						
IDP-ISO (Isolator Module)	(318 max/loop & 636 max/ panel)	Standby/Alarm:	.45 mA	mA	mA	
ISO-6 (6 Fault Isolator Module)		Standby: (per circuit)	.45 mA	mA		
		Alarm: (per circuit)	17 mA		mA	
B224BI Isolator Base	Standby/Alarm:	0.5 mA	mA	mA		
Accessories Modules						
5815XL SLC Expander	(63 max) ⁴	Standby:	55 mA	mA		
		Alarm:	125mA		mA	
RA-2000 Remote Fire Alarm Annunciator	(63 max) ⁴	Standby:	25 mA	mA		
		Alarm:	50 mA		mA	
5824 Serial/Parallel Module	(2 max.)	Standby/Alarm:	45 mA	mA	mA	
5496 Intelligent Power Module	(63 max) ⁴	Standby/Alarm:	10 mA	mA	mA	
RPS-1000 IntelliKnight Power Module	(63 max) ⁴	Standby/Alarm:	10 mA	mA	mA	
5865-4 LED Annunciator (with reset and silence switches)	(63 max) ⁴	Standby:	35 mA	mA		
		Alarm:	145 mA		mA	
5865-3 LED Annunciator	(63 max) ⁴	Standby:	35 mA	mA		
		Alarm:	145 mA		mA	
5880 I/O Module	(63 max) ⁴	Standby:	35 mA	mA		
		Alarm:	200 mA		mA	
5883 Relay Interface	(63 max) ⁴	Standby:	0 mA	mA		
		Alarm: (22 mA/relay)	220 mA		mA	
ECS-VCM Voice Control Module	(1 max.)	Standby:	70 mA	mA		
		Alarm:	100 mA		mA	
ECS-SW24 Switch Expander	(32 max.)	Standby:	10 mA	mA		
		Alarm:	25 mA		mA	
VIP-50 or VIP-125 Audio Amplifier with/without VIP-CE4	(16 max.)	Standby:	10 mA	mA		
		Alarm:	10 mA		mA	

Table 3-1: Current Draw Worksheet for IDP SLC Devices

Device	# of Devices	Current per Device	Standby Current	Alarm Current
ECS-RVM Remote Voice Module	(15 max.)	Standby: 70 mA	mA	
		Alarm: 100 mA		mA
ESC-50W or ECS-125W Audio Amplifier with/without ECS-CE4	(16 max.)	Standby 10 mA	mA	
		Alarm 10 mA		mA
ECS-INT-50W Internal Amplifier	(16 max.)	Standby: 52 mA	mA	
		Alarm @ 25V: 275 mA		mA
		Alarm @ 70V: 310 mA		mA
Notification Devices	Refer to devices manual for number of devices and current rating.			
IFP-RPT-FO Network Repeater IFP-RPT-UTP Network Repeater	(1 max.)	Standby: 24 mA	mA	
		Alarm: 24 mA		mA
ECS-DUAL50W Dual Audio Amp	(16 max.)	Standby/Alarm: 10 mA	mA	mA
ECS-50WBU Back-Up Amplifier	(16 max.)	Standby/Alarm: 10 mA	mA	mA
A Total System Current				
Auxiliary Devices ²	Refer to devices manual for current rating.			
		Alarm/Standby: mA	mA	mA
		Alarm/Standby: mA	mA	mA
		Alarm/Standby: mA	mA	mA
B Auxiliary Devices Current				
Notification Appliance Circuits	Refer to device manual for current rating.			
		Alarm: mA		mA
		Alarm: mA		mA
		Alarm: mA		mA
		Alarm: mA		mA
C Notification Appliances Current				mA
D Total current ratings of all devices in system (line A + line B + C)			mA	mA
E Total current ratings converted to amperes (line D x .001):			A	A
F Number of standby hours			H	
G Multiply lines E and F.	Total standby AH		AH	
H Alarm sounding period in hours. (For example, 5 minutes = .0833 hours)				H
I Multiply lines E and H.	Total alarm AH			AH
J Add lines G and I. ³	Total ampere hours required		AH	

1. Total does not include isolator devices or accessory bases.
2. If using door holders, you do not need to consider door holder current for alarm/battery standby, because power is removed during that time. However, during normal operation, door holders draw current and must be included in the 9.0A total current that can be drawn from the panel.
3. Use next size battery with capacity greater than required.
4. Maximum SBUS address capacity is 63 SBUS modules. The practical limit is determined by the amount of SBUS bandwidth consumed by each SBUS module. See section 4.10.2.
5. The IDP-Beam-T draws a maximum of 500mA from auxiliary power when the test feature is used. This should be considered when determining auxiliary power capacity but not calculated into current requirements for day to day operation.
6. The IDP-PhotoR is sold separately from the DNR. Current draw for the DNR + IDP-PhotoR is calculated by increasing the "Number of Devices" column for each IDP-PhotoR used with a DNR.
7. The DNR housing does not include a Relay circuit board. If a relay is needed, be sure to add one to the IDP-Relay & IDP-PhotoR "Number of Devices" column for each DNR used for correct current calculations.

8. The FACP can only support 5 devices w/LED's on. The current draw has been added to the panels alarm current.

3.6.3 Current Draw Worksheet for SD SLC Devices

Use Table 3-2 to determine current requirements during alarm/battery standby operation when SD SLC devices are installed. You can install up to 127 SD devices per loop (636 max per panel). Copy this section if additional space is required.

Table 3-2: Current Draw Worksheet for SD SLC Devices

Device	# of Devices	Current per Device		Standby Current	Alarm Current	
For each device use this formula: This column X This column = Current per number of devices.						
Fire Panel (Battery current draw)	1	Standby:	290 mA	290 mA		
		Alarm:	570 mA		570 mA	
SD500-AIM	(636 max.) ¹	Standby/Alarm:	.55 mA ⁶	mA	mA	
SD500-MIM				mA	mA	
SD500-PS				mA	mA	
SD500-ARM				mA	mA	
SD505-AHS				mA	mA	
SD505-AIS				mA	mA	
SD505-APS				mA	mA	
SD500-ANM	(636 max.) ¹	Aux. Pwr	Standby:	8 mA	mA	
			Alarm:	60 mA		mA
		SLC	Standby/Alarm:	.55 mA	mA	mA
SD500-SDM	(636 max.) ¹	SLC	Standby/Alarm:	.55 mA	mA	
		Aux. Pwr	Standby:	20 mA	mA	
			Alarm:	106 mA		mA
SD500-LED	(100 max.) ¹	Aux. Pwr	Standby:	10 mA	mA	
			Alarm:	220 mA		mA
			LED:	10 mA	mA	mA
		SLC	Standby/Alarm:	.55 mA	mA	mA
SLC Accessory Base						
SD505-6RB	(636 max.)	Standby/Alarm:	.082 mA	mA	mA	
SD505-6SB	(636 max.)	Aux. Pwr	Standby:	1 mA	mA	
			Alarm:	32 mA		mA
		SLC	Standby/Alarm:	.082 mA	mA	mA
SD505-DUCTR	(636 max.)	Aux. Pwr	Standby:	20 mA ²	mA	
			Alarm:	62 mA ²		mA
		SLC	Standby/Alarm:	.5 mA	mA	mA
SD505-DTS-K	(636 max.)		None, included with SD505-DUCTR worst case.			
SD505-DUCT	(636 max.)	SLC	Standby/Alarm	.5 mA	mA	

Table 3-2: Current Draw Worksheet for SD SLC Devices

Device	# of Devices	Current per Device	Standby Current	Alarm Current
SLC Isolator Devices				
SD505-LIM	(1272 max.)	Standby/Alarm .092 mA	mA	mA
SD505-6IB	(636 max.)			
Accessories Modules				
5815XL SLC Expander	(63 max.) ⁵	Standby/Alarm: 55 mA	mA	mA
RA-2000 Remote Fire Alarm Annunciator	(63 max.) ⁵	Standby: 25 mA	mA	
		Alarm: 50 mA		mA
5824 Serial/Parallel Printer Interface Module	(2 max.)	Standby/Alarm: 45 mA	mA	mA
5496 Intelligent Power Module	(63 max.) ⁵	Standby/Alarm: 10 mA	mA	mA
RPS-1000 IntelliKnight Power Expander	(63 max.) ⁵	Standby/Alarm: 10 mA	mA	mA
5865-4 LED Annunciator (with reset and silence switches)	(63 max.) ⁵	Standby: 35 mA	mA	
		Alarm: 145 mA		mA
5865-3 LED Annunciator	(63 max.) ⁵	Standby: 35 mA	mA	
		Alarm: 145 mA		mA
5880 LED I/O Module	(63 max.) ⁵	Standby: 35 mA	mA	
		Alarm: 200 mA		mA
5883 Relay Interface	(63 max.) ⁵	Standby: 0 mA	mA	
		Alarm: 220 mA (22 mA per relay)		mA
VIP-50 Audio Amplifier with/without VIP-CE4	(16 max.)	Standby: 10 mA	mA	
		Alarm: 10 mA		mA
ECS-VCM Voice Control Module	(1 max.)	Standby: 70 mA	mA	
		Alarm: 100 mA		mA
ECS-SW24 Switch Expander	(32 max.)	Standby: 10 mA	mA	
		Alarm: 25 mA		mA
ECS-50W or ECS-125W Audio Amplifier with/without ECS-CE4	(16 max.)	Standby: 10 mA	mA	
		Alarm: 10 mA		mA
ECS-INT-50W Internal Amplifier	(16 max.)	Standby: 52 mA	mA	
		Alarm @ 25V: 275 mA		mA
		Alarm @ 70V: 310 mA		mA
Notification Devices Refer to devices manual for number of devices and current rating.				
ECS-RVM Remote Microphone	(15 max.)	Standby: 70 mA	mA	
		Alarm: 100 mA		mA
ECS-DUAL50W	(16 max.)	Standby/Alarm: 10 mA	mA	mA
ECS-50WBU	(16 max.)	Standby/Alarm: 10 mA	mA	mA
IFP-RPT-FO	(1 max.)	Standby: 24 mA	mA	
IFP-RPT-UTP	(1 max.)	Alarm: 24 mA		mA
A Total System Current				
Auxiliary Devices ³		Refer to devices manual for current rating.		
		Alarm/Standby:	mA	mA

Table 3-2: Current Draw Worksheet for SD SLC Devices

	Device	# of Devices	Current per Device	Standby Current	Alarm Current
			Alarm/Standby: mA	mA	mA
			Alarm/Standby: mA	mA	mA
			Alarm/Standby: mA	mA	mA
B	Auxiliary Devices Current				
			Alarm: mA		mA
			Alarm: mA		mA
			Alarm: mA		mA
			Alarm: mA		mA
C	Notification Appliances Current				mA
D	Total current ratings of all devices in system (line A + line B + C)			mA	mA
E	Total current ratings converted to amperes (line D x .001):			A	A
F	Number of standby hours			H	
G	Multiply lines E and F.		Total standby AH	AH	
H	Alarm sounding period in hours. (For example, 5 minutes = .0833 hours)				H
I	Multiply lines E and H.		Total alarm AH		AH
J	Add lines G and I. ⁴		Total ampere hours required	AH	

1. Total does not include isolator devices or accessory bases.
2. If using 24 VDC aux power only. No standby or alarm current for battery calculation if using 24 VAC, 120 VAC or 240 VAC.
3. If using door holders, you do not need to consider door holder current for alarm/battery standby, because power is removed during that time. However, during normal operation, door holders draw current and must be included in the 9.0A total current that can be drawn from the panel.
4. Use next size battery with capacity greater than required.
5. Maximum SBUS address capacity is 63 SBUS modules. The practical limit is determined by the amount of SBUS bandwidth consumed by each SBUS module. See section 4.10.2.
6. The FACP can only support 2 devices w/LED's on. The current draw has been added to the panels alarm current.

3.6.4 Maximum Battery Standby Load

Table 3-3 and Table 3-4 show the standby load calculations for the IFP-2000 based on 24 and 90 hours of standby. The standby load calculations of line D in the Current Draw Calculation Worksheet (Table 3-1 for IDP devices and Table 3-2 for SD devices) must be less than the number shown in Table 3-3 and Table 3-4 for the selected battery size, standby hour and alarm time. The numbers below have a built in 20% derating factor for the battery amp-hour capacity

Table 3-3: Maximum Battery Standby Loads for 24 Hour Standby

Rechargeable Battery Size	24 hr Standby, 5 mins. Alarm	24 hr Standby, 15 min alarm	24 hr Standby, 20 min alarm
17AH	535 mA	473mA	442mA
18AH	569mA	506mA	475mA
24AH	769 mA	706mA	675mA
33AH	1.07A	1.01A	975mA
35AH	1.14A	1.07A	1.04A
40AH	1.30A	1.24A	1.21A
55AH	1.80A	1.74A	1.71A

Table 3-4: Maximum Battery Standby Loads for 90 Hour Standby*

Rechargeable Battery Size	90 hr Standby, 5 min alarm	90 hr Standby, 15 min alarm	90 hr Standby, 20 min alarm
33 AH	N/A	N/A	N/A
40 AH	347mA	331mA	322mA
55 AH	480mA	464mA	456mA

Warning!

Silent Knight does not support the use of batteries smaller than those listed in Table 3-3 and Table 3-4. If you use a battery too small for the installation, the system could overload the battery resulting in the installation having less than the required 24 hours standby power. Use Table 3-3 and Table 3-4 to calculate the correct battery amp hour rating needed for your installation. It is recommended that you replace batteries every five years.

*For FM Installation only

3.7 Installation Task Overview

This section provides a chart listing tasks that need to be performed when installing the IFP-2000/ECS system. The chart is intended to be another way for you to make sure you have completed all necessary tasks. Unless noted, these tasks do not have to be performed in the order they are listed here.

Important: Connect and address SLC devices before running JumpStart AutoProgramming.

Task	See Section (for more info.)
Main Panel Hardware Installation	
Mount the control panel cabinet.	4.1
Connect AC.	4.2
Connect phone lines.	4.11

Task	See Section (for more info.)
Install 5815XL SLC expander modules.	4.6
Install RA-2000 Remote Fire Alarm Annunciator modules.	4.5
Install 5865 or LED Annunciator modules.	4.9
Install 5880 LED I/O modules.	4.8
Install notification appliances.	4.12.1
Install auxiliary power devices.	4.12.5
Install 5824 Serial/Parallel Printer Interface Module.	4.7
Connect batteries (typically last step).	4.3
SLC Device Hardware Installation Perform these steps before running JumpStart AutoProgramming.	
Connect device bases to the loop.	IDP 7.5 SD 7.7
Set device addresses.	IDP 7.6 SD 7.8
Physically connect detectors to their bases. Connect relay and contact monitor modules.	7.4 & see device install instructions
JumpStart AutoProgramming	
JumpStart AutoProgramming searches for expanders and SLC devices connected to the panel but not programmed into the system. JumpStart AutoProgramming automatically selects some options for SLC devices. See "Input Point (SLC Device) Configuration" section of this chart for other options. JumpStart AutoProgramming makes selections for the following options. You can customize options, if necessary.	8.2 & 9.7
Device type (detector or switch) configured by JumpStart AutoProgramming.	To change, see 9.7
Program type of detector (heat, photoelectric, or ionization) selected by JumpStart AutoProgramming.	To change, see 9.7
System Software Configuration	
Select low AC hours report time (3 hours by default).	9.6.5.3
Enable/disable automatic DST adjustment feature (enabled by default).	9.6.7.1
Change clock display format (12-hour with AM/PM by default).	9.6.5.5
Enable/disable day/night sensitivity (disabled by default).	9.6.3
Select holiday schedule (up to 18 days) if installation is using day/night sensitivity.	9.6.4
Select options for phone lines.	9.6.2
Customize banner message (message that displays on LCD in normal mode) if desired.	9.6.8
Input Point (SLC Device) Configuration	
JumpStart AutoProgramming automatically selects some options for SLC devices (see "JumpStart AutoProgramming" section of this chart). You can change options selected by JumpStart AutoProgramming, if necessary and further customize input point options.	
Select device family (IDP or SD). Only one device family can be used per control panel.	9.6.9
Program type of switch (manual pull, fire drill, and so on), if necessary. (JumpStart AutoProgramming assigns all switches as Manual Pull type.)	9.5
If the installation includes duct detectors, program detector type. (JumpStart AutoProgramming does not distinguish duct detectors from ordinary smoke detectors.)	9.5

Task	See Section (for more info.)
Assign input points to zones, if necessary. (JumpStart AutoProgramming assigns all input points to Zone 1.)	9.5
Zone Configuration	
Select alarm delay options (detection characteristics) for zone.	9.3.1.2
Select heat detector trip temperature and/or smoke sensitivity level for photoelectric smoke detectors.	9.3.1.2
Output Point Configuration	
Conventional notification circuits (circuits 1-8):	
Enable circuits used for notification appliances through programming, (if necessary).	9.5
Conventional relay circuits (circuits 9-10):	
Select options for relay circuits, if desired. Note: Relay circuits will always output continuously (constant pattern), even if assigned to an Output Group that uses a different output pattern.	9.5
Auxiliary power circuits (circuits 1-8):	
Enable any circuit used for auxiliary power devices through programming.	9.5
Select type of power (door holder, constant, or resettable)	9.5
Addressable relay modules	
Assign addressable relay modules to output groups through programming. (JumpStart AutoProgramming assigns all relay modules to Group 1.)	9.5
LED output points (from the 5880 LED I/O module or 5865 LED Annunciator)	
Assign LED modules to output groups through programming.	9.5.3
All output circuits (1-8):	
Disable (set to UNUSED) any unused circuits. If you do not disable unused output circuits, they will cause a trouble condition (unless an EOL resistor is used).	9.5
Select a name for the point.	9.5.2
Output Group Configuration	
Add a group to the system if it does not already exist.	9.4.2
Assign output points to a group.	9.5
Assign a name (or description) for a group.	9.4.1.1
Select "group properties" (see below).	
Select options for activation with system switches.	9.4.1.2
Emergency Communication System	
Edit Lockout and Relinquish Timers.	6.5.1
Edit Auto Reset for ECS events.	6.5.1.2
Edit Voice Commands for events.	6.5.2
Edit VCM/RVM properties, including name, switch expanders, associating keypads, and priorities. Creating an LOC.	11.2
Edit amp properties, including name, voltage, and circuit expander.	11.5.2

Section 4

Control Panel Installation

Caution!

To avoid the risk of electrical shock and damage to the unit, power should be OFF to the control panel while installing or servicing.

4.1 Mounting the Control Panel Cabinet

Read the environmental specifications in Section 3.2 before mounting the control panel cabinet. This will ensure that you select a suitable location.

The panel should be accessible to main drop wiring runs. It should be mounted as close to the center of the building as possible and located within a secured area, but should be accessible for testing and servicing.

Mount the control panel cabinet so it is firmly secured to the wall surface. When mounting on concrete, especially when moisture is expected, attach a piece of 3/4 inch plywood to the concrete surface and then attach the cabinet to the plywood. Also mount any other modules to the plywood.

The IFP-2000 cabinet can be surface or flush mounted. Cabinet dimensions are 26.4"H x 16" W x 4.65"D. If you flush mount the cabinet, the hole for the enclosure should be 15" W x 25" H. There should be 1.5" to 1.75" of cabinet extruding from the wall, this should be measured from either the top edge or bottom edge to the exterior side of the sheet rock. Do NOT flush mount in a wall designated as a fire break.

The IFP-2000ECS cabinet can be surface or flush mounted. Cabinet dimensions are 27"H x 20.362"W x 5.054"D. If you flush mount the cabinet, the hole for the enclosure should be 20¼" W x 26½" H. There should be 1.5" to 1.75" of cabinet extruding from the wall, this should be measured from either the top edge or bottom edge to the exterior side of the sheet rock. Do NOT flush mount in a wall designated as a fire break.

4.1.1 Preventing Water Damage

Water damage to the fire system can be caused by moisture entering the cabinet through the conduits. Conduits that are installed to enter the top of the cabinet are most likely to cause water problems. Installers should take reasonable precautions to prevent water from entering the cabinet. Water damage is not covered under warranty.

4.1.2 Removing the IFP-2000 Assembly from the Housing

Should it ever be necessary to remove the control panel assembly from the cabinet for repair, do so by unscrewing the nuts that connect the control panel assembly to the cabinet. Do not attempt to disassemble the circuit boards. See Section 3.5 for location of the nuts.

4.1.3 Ethernet Connection

Ethernet connection is not used at this time. For port location see Figure 3-2.

4.2 AC Connection

At installation, connect the AC terminals to the power source as shown in Figure 4-1 or Figure 4-2. It may be necessary for a professional electrician to make this connection.

The AC terminals are rated at 120 VAC, 50 or 60 Hz, 5A (for the IFP-2000) or 240 VAC 50 or 60 Hz, 2.5A (for the IFP-2000HV).

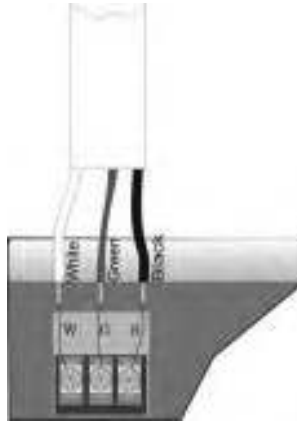


Figure 4-1 120 VAC Power Connection for the IFP-2000

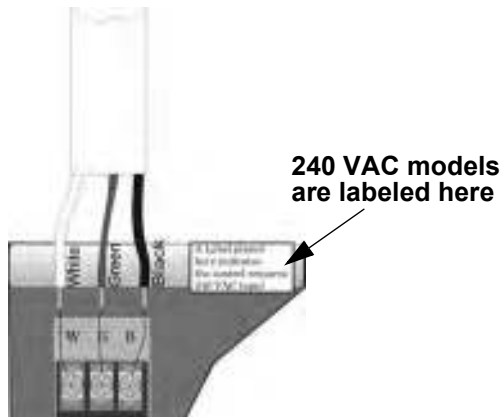


Figure 4-2 240 VAC Power Connection for the IFP-2000/ECSHV

4.3 Battery Connection

The control panel battery charge capacity is 17 to 55 AH. Use 12V batteries of the same AH rating. Determine the correct AH rating as per your standby load calculation (see Section 3.6).

Wire batteries in series to produce a 24-volt equivalent. Do not parallel batteries to increase the AH rating. It is recommended that you replace batteries every five years.

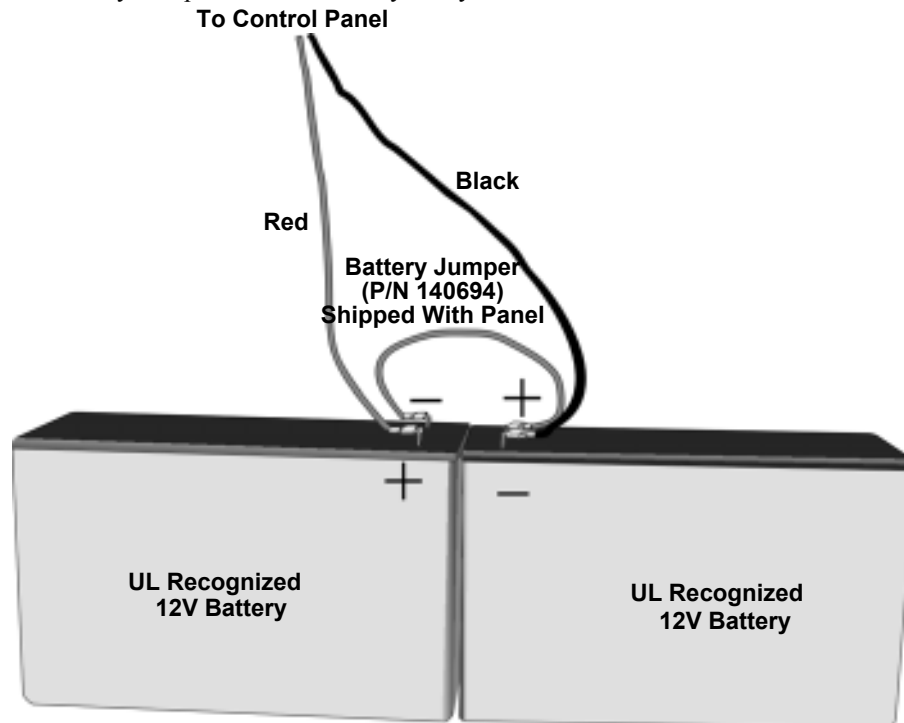


Figure 4-3 Battery Connection

4.3.1 Battery Accessory Cabinets

The Model RBB or AB-55 Accessory cabinets can be used when you are required to use backup batteries that are too large to fit into the main control panel cabinet.

The RBB cabinet holds batteries up to the 35 AH size. The RBB dimensions are 16" W x 10" H x 6" D (40.64 cm W x 25.4 cm H x 15.24 cm D).

The AB-55 Accessory cabinet holds batteries up to the 55AH size. The AB-55 dimensions are 20" W x 11.5" H x 7.5" D (50.8 cm W x 30.48 cm H x 19.05 cm D).

4.3.1.1 Installing the RBB or AB-55 Accessory Cabinet and Batteries

To properly install the accessory cabinet and backup batteries, follow these steps:

1. Mount the accessory cabinet. See Figure 4-4 for the four cabinet mounting holes.
 - If mounting onto drywall the accessory cabinet must be mounted onto 3/4-inch plywood. This is necessary because the weight of the batteries inside the accessory cabinet could cause the cabinet to pull away from the drywall.
 - When mounting on concrete, especially when moisture is expected, attach a piece of 3/4-inch plywood to the concrete surface and then attach the RBB or AB-55 cabinet to the plywood.

- If using the battery cable extenders provided (P/N 140643), mount the RBB or AB-55 cabinet no more than 18" away from the main control panel cabinet. This will ensure that the battery cables reach the battery terminals.

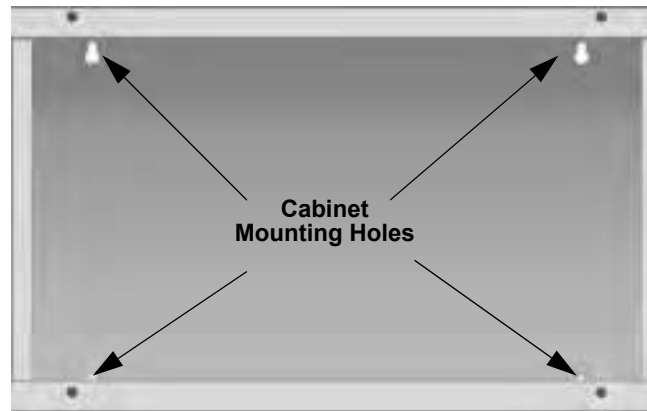


Figure 4-4 RBB or AB-55 Cabinet Mounting Holes

2. Connect the main control panel battery cables to the battery cable extenders as shown in Figure 4-5.

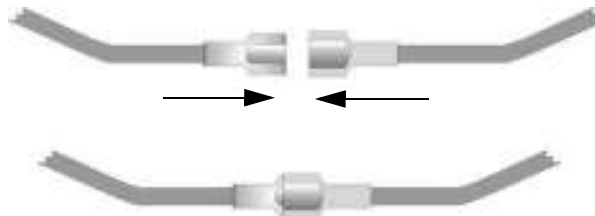


Figure 4-5 Splicing Control panel Battery Cable to RBB or AB-55 Battery Cable Extenders

3. Run extended battery cable from control panel cabinet through conduit to RBB or AB-55 cabinet. See Figure 4-6.

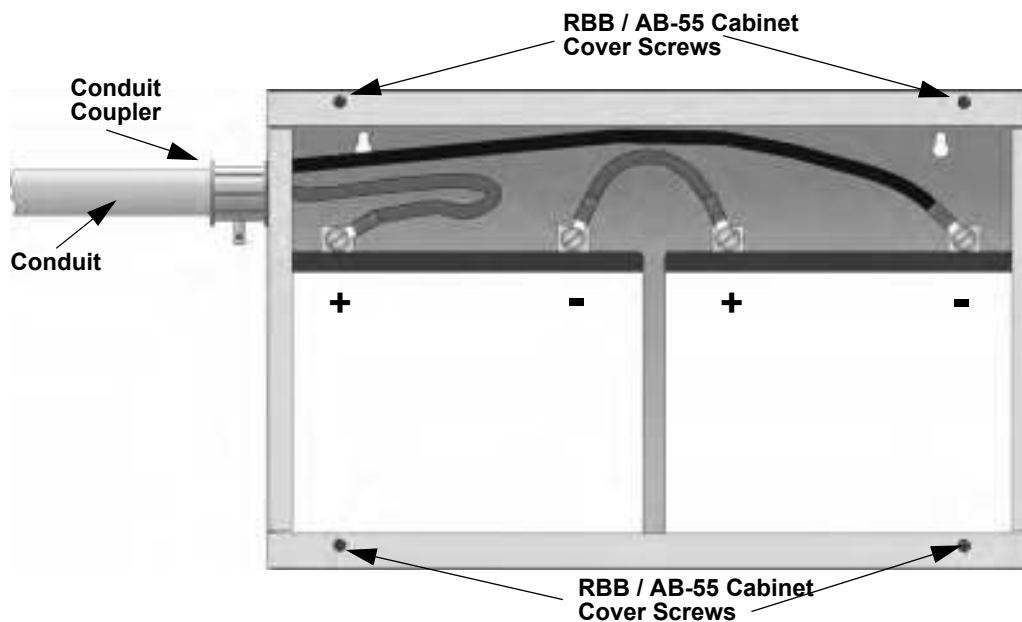


Figure 4-6 Battery Connections in the RBB or AB-55 Cabinet

Note: Figure 4-6 is an example of how the wire connections can be routed. However, any other cabinet knock-outs (on either the main control panel or the RBB/AB-55 cabinet), that are not previously being used may be utilized to connect conduit between the two cabinets.

4. Connect battery leads to the backup battery terminals. See Figure 4-6.
 - Observe the proper polarity to prevent damage to the batteries or the control panel.
5. Insert the RBB or AB-55 cover screws into the cover mounting holes. See Figure 4-6.
 - Screw the cover screw $\frac{3}{4}$ of the way into the cover mounting hole.
6. Align the cover plate mounting keyhole over the cover mounting screws. See Figure 4-7.

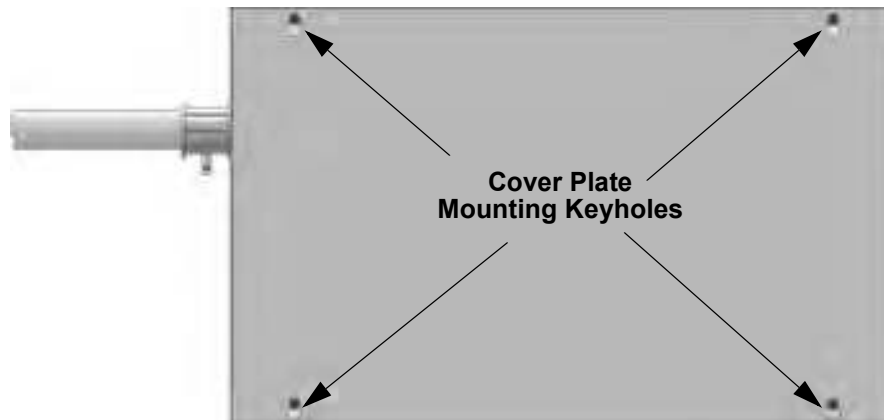


Figure 4-7 Cover Plate Mounting Keyholes and Cover Mounting Screws Alignment

7. Slide the cover into place and tighten the cover mounting screws. See Figure 4-7.

4.4 SBUS Wiring

This section contains information on calculating SBUS wire distances and the types of wiring configurations (Class A and B).

4.4.1 Calculating Wiring Distance for SBUS Modules

The IFP-2000 panel has two SBUS circuits which can support up to 1.0A of module load per SBUS circuit. When determining the type of wire and the maximum wiring distance that can be used, you will need to calculate loads for each SBUS to ensure that each SBUS does not exceed 1.0A.

To calculate the wire gauge that must be used to connect SBUS modules to the control panel, it is necessary to calculate the total worst case current draw for all modules on a single SBUS circuit. The total worst case current draw is calculated by adding the individual worst case currents for each module. The individual worst case values are shown in the table below.

Note: Total worst case current draw on a single SBUS cannot exceed 1 amp. If a large number of accessory modules are required, and the worst case current draw will exceed the 2 amps total, then the current draw must be distributed using RPS-1000 Power Expanders. Each RPS-1000 Power Expander provides an additional SBUS, with an additional 1 amp of SBUS current. Wiring distance calculations are done separately for each RPS-1000, and separately for each control panel SBUS.

Model Number	Worst Case Current Draw
RA-2000 Fire Annunciator	.120 amps
5815XL	.150 amps
5824 Serial/Parallel Printer Interface Module	.040 amps
5880 LED I/O Module	.250 amps
5865 LED Annunciator	.200 amps
RPS-1000 Intelligent Power Supply	.010 amps
5496 Intelligent Power Supply	.010 amps
ECS-50W	.010 amps
ECS-125W	.010 amps
ECS-VCM / ECS-VCM with ECS-SW24*	.115 amps / .185 amps
ECS-RCU2000 / ECS-RCU2000 with ECS-SW24*	.210 amps / .325 amps
ECS-DUAL50W	.010 amps
ECS-DUAL50W WITH ECS-50WBU	.010 amps

Note: Refer to Table 3-2 if using SD SLC devices and Table 3-1 if using IDP SLC devices for maximum number of each type of device that can be used per system.

* All devices must use the same SBUS and VBUS.

After calculating the total worst case current draw, refer to Table 4-1 for the maximum distance the modules can be located from the panel on a single wire run. The table ensures 6.0 volts of line drop maximum. In general, the wire length is limited by resistance, but for heavier wire gauges, capacitance is the limiting factor.

These cases are marked in the chart with an asterisk (*). Maximum length can never be more than 6,000 feet, regardless of gauge used. The formula used to generate this chart is shown in the note below.

Table 4-1: Wire Distances Per Wire Gauge Using Copper Wire

Wiring Distance: SBUS Modules to Panel				
Total Worst Case Current Draw (amps)	22 Gauge	18 Gauge	16 Gauge	14 Gauge
0.100	1852 ft.	4688 ft.	* 6000 ft.	* 6000 ft.
0.200	926 ft.	2344 ft.	3731 ft.	5906 ft.
0.300	617 ft.	1563 ft.	2488 ft.	3937 ft.
0.400	463 ft.	1172 ft.	1866 ft.	2953 ft.
0.500	370 ft.	938 ft.	1493 ft.	2362 ft.
0.600	309 ft.	781 ft.	1244 ft.	1969 ft.
0.700	265 ft.	670 ft.	1066 ft.	1687 ft.
0.800	231 ft.	586 ft.	933 ft.	1476 ft.
0.900	206 ft.	521 ft.	829 ft.	1312 ft.
1.000 (Max)	185 ft.	469 ft.	746 ft.	1181 ft.

Note: The following formulas were used to generate the wire distance chart:

$$\text{Maximum Resistance (Ohms)} = \frac{6.0 \text{ Volts}}{\text{Total Worst Case Current Draw (amps)}}$$

$$\text{Maximum Wire Length (Feet)} = \frac{\text{Maximum Resistance (Ohms)}}{\text{Rpu}} * 500$$

(6000 feet maximum)

where: Rpu = Ohms per 1000 feet for various wire gauges (see table below)

Table 4-2: Typical Wire Resistance Per 1000 ft. Using Copper Wire

Wire Gauge	Ohms per 1000 feet (Rpu)
22	16.2
18	6.4
16	4.02
14	2.54

Wiring Distance calculation example:

Suppose a system is configured with the following SBUS modules:

- 2 - Module RA-2000 Fire Annunciator
- 1 - RPS-1000 Intelligent Power Expander
- 1 - 5865 LED Annunciator
- 1 - 5824 Serial/Parallel Interface Module

The total worst case current is calculated as follows:

RA-2000 Current Draw	= 2 x .120 amps	= .240 amps
RPS-1000 Current Draw	= 1 x .010 amps	= .010 amps
5865 Current Draw	= 1 x .200 amps	= .200 amps
5824 Current Draw	= 1 x .040 amps	= .040 amps
<hr/>		
Total Worst Case Current Draw		= .490 amps

Using this value, and referring to the Wiring Distance table, it can be found that the available options are:

- 370 feet maximum using 22 Gauge wire
- 938 feet maximum using 18 Gauge wire
- 1493 feet maximum using 16 Gauge wire
- 2362 feet maximum using 14 Gauge wire

4.4.2 Wiring Configurations

Figure 4-8 illustrates SBUS 1, Class A wiring configuration and Figure 4-9 illustrates SBUS1 Class B configuration. SBUS 2 wiring configurations are the same as SBUS1.

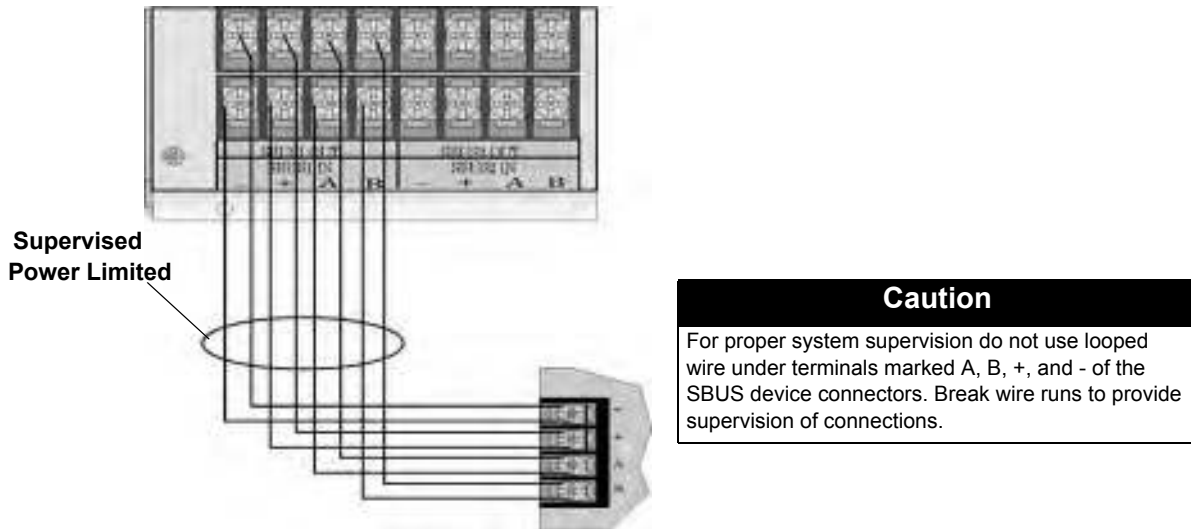


Figure 4-8 SBUS Class A Wiring

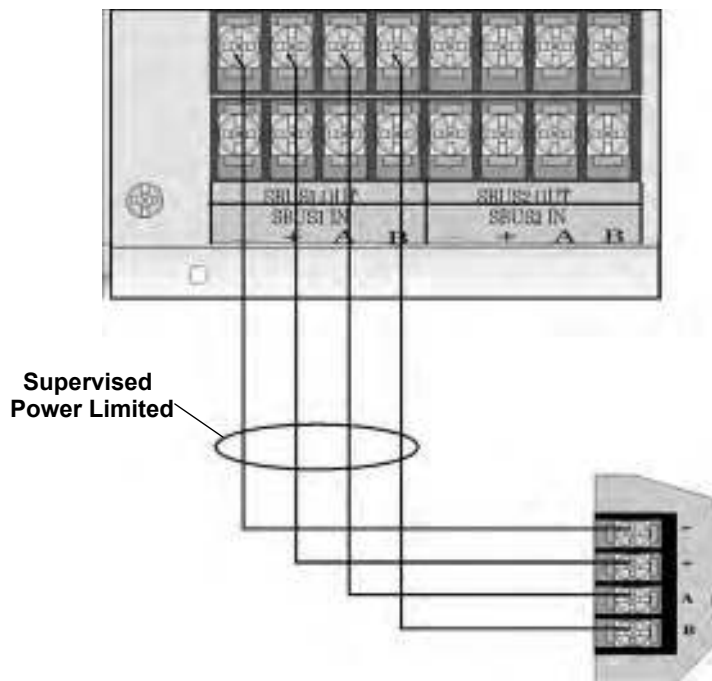


Figure 4-9 SBUS Class B Wiring

4.5 RA-2000 Remote Annunciator Installation

The optional Model RA-2000 Remote Annunciator, shown in Figure 4-10, performs the same functions as the on-board annunciator. The RA-2000 can be surface or flush mounted. It is also available in gray color as RA-2000GRAY.

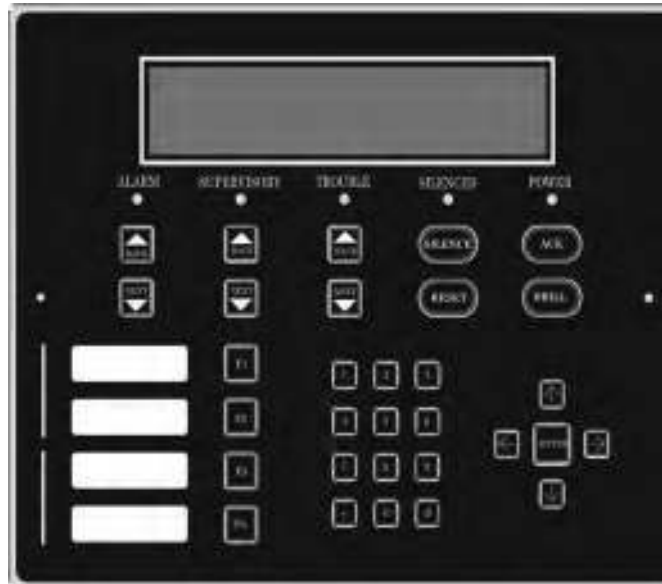


Figure 4-10 Model RA-2000 Remote Annunciator, Front View

RA-2000 installation involves the following steps:

1. Make sure power is off at the panel.
2. Mount the RA-2000 in the desired location (see Section 4.5.1).
3. Connect the RA-2000 to the panel (see Section 4.5.2).
4. Use the DIP switches on the back of the RA-2000 to assign an SBUS ID# to the RA-2000 (see Section 4.10.1).
5. The RA-2000 module must be added to the system through programming. JumpStart AutoProgramming will add the module automatically (see Section 8.2.3). You can also add it manually (see Section 9.2.2). Select a name, if desired (see Section 9.2.1.2).

4.5.1 Mounting the RA-2000

This section of the manual describes mounting the remote annunciator. The annunciator can be flush or surface mounted.

4.5.1.1 Flush Mounting

This section of the manual describes flush mounting.

Follow these steps to flush mount the RA-2000

1. The back box dimensions are 9 9/32" W x 8 3/8" H. The minimum depth required is 2". The back box can be mounted prior to the complete installation of the RA-2000 using any of the mounting holes shown in Figure 4-11.

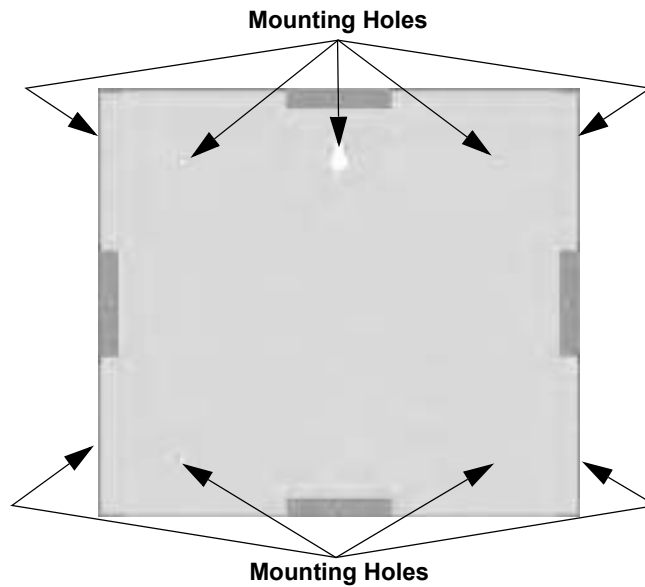


Figure 4-11 Back Box Mounting Holes

2. Remove knockout holes as needed for wires. See Figure 4-12 for backbox knockout locations.

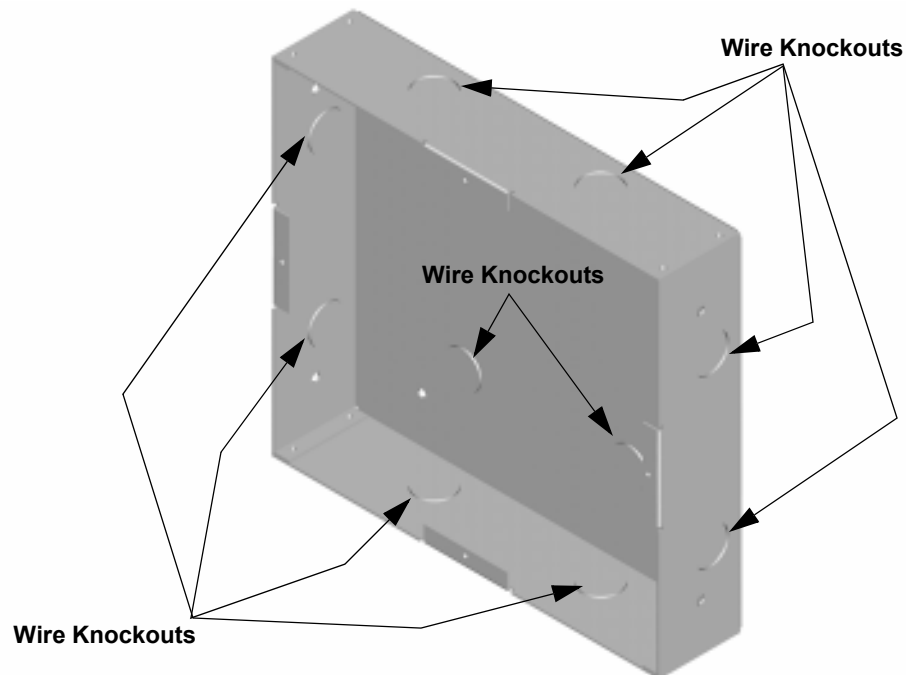


Figure 4-12 Back Box Knockout Locations

3. Wire the annunciator board to the main control panel. As described in Section 4.5.2.

4. Attach the annunciator and door assembly to back box as shown in Figure 4-13 using the supplied screws.

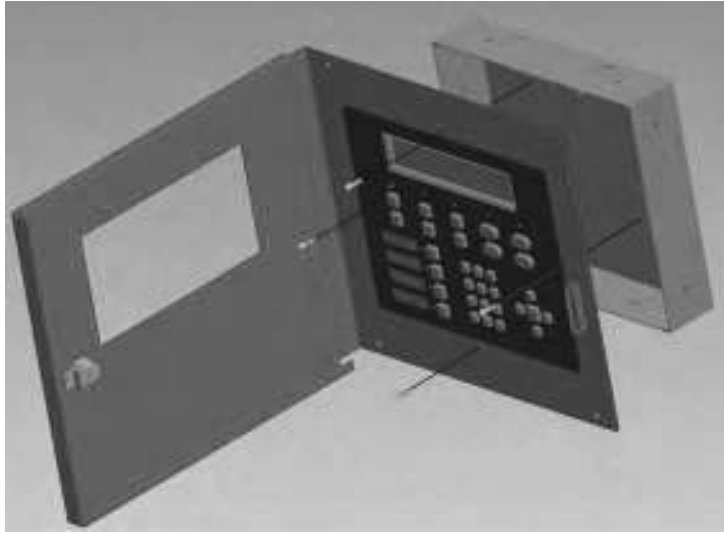


Figure 4-13 Attaching Annunciator / Door Assembly to Backbox

4.5.1.2 Surface Mounting

The Model RA-100TR red trim ring and RA-2000GRAYTR gray trim ring kits are available for use when surface mounting the RA-2000.

1. Remove the desired knock out. See Figure 4-12.
2. To properly mount the back box, insert a single screw into the key shaped mounting hole. Do not tighten all the way. See Figure 4-14.

Place a level on top of the back box, with the back box level insert the rest of the mounting screws.

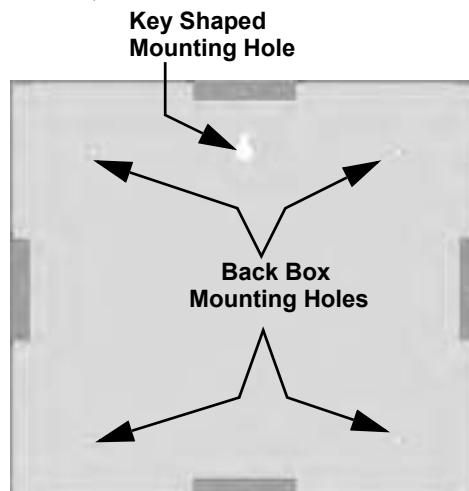


Figure 4-14 Back Box Surface Mount Holes

3. Run wires to the control panel.

4. Place the trim ring over the back box as shown in Figure 4-15.

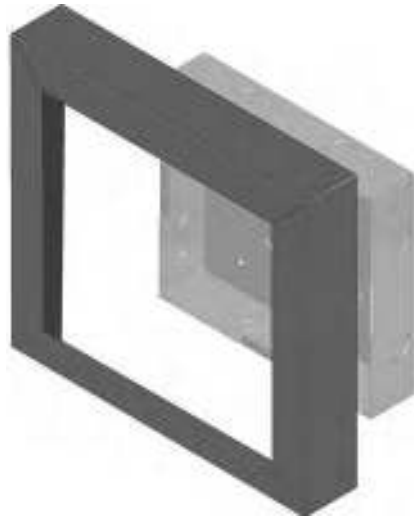


Figure 4-15 Installing Trim Ring

5. Attach the door assembly to the back box using screws provided.
6. After the SBUS wiring to the annunciator is complete (described in Section 4.5.2), replace the electronic assembly in the back box. Place the bezel over the back box and tighten the set screws on the bezel.

4.5.2 RA-2000 Connection to the Panel

Connect the RA-2000 to the panel as shown in Figure 4-16.

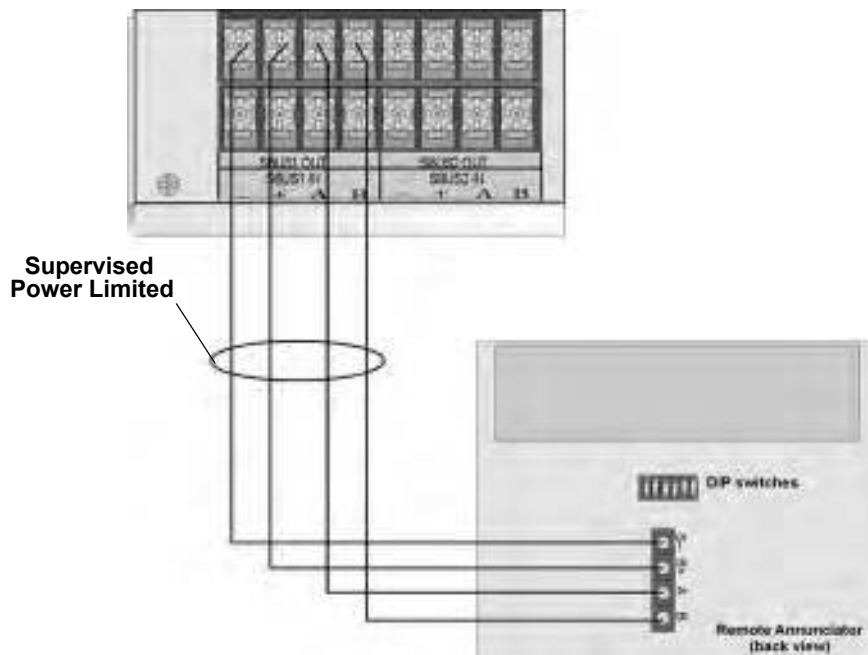


Figure 4-16 Model RA-2000 Connection to the Panel

4.5.3 Temporary Programming Display

When an RPS-2000 is being initially setup, place an RA-2000 on the panel at address 63 and power up the panel. This will initiate the Temporary Programming Display feature. This allows the RA-2000 to act as the main annunciator for the RPS-2000 panel and allows access to the idle screen and menu system for programming. While in this mode, a trouble will be annunciated through the system to indicate the feature is being utilized. This is only available when no other annunciators are programmed into the system. When running JumpStart Auto-programming, the system will ask if the intention is to keep the display or remove it after programming.

When using the Temporary Display is no longer necessary; power the panel off, remove the display, and re-power the panel.

4.6 5815XL Installation

The 5815XL SLC expander lets you add additional addressable devices. The maximum number of SLC devices per panel is 636. The number of 5815XL's is limited by the maximum number of SBUS devices.

To install the 5815XL:

1. Make sure power is off at the panel.
2. Mount the 5815XL in the IFP-2000 cabinet, the RPS-1000 cabinet, or the 5815RMK remote mounting kit. Use the standoffs located under the control panel board assembly and secure with screws provided with the 5815XL. For additional information see Model RPS-1000 Installation Instructions (P/N 151153) or 5815RMK Remote Mounting Kit Installation Instructions (P/N 151391).
3. Connect the 5815XL to the control panel. (See Section 4.6.1.)
4. Use on-board DIP switches to select an SBUS ID#. (See Section 4.10.1.)
5. Add the 5815XL module to the system through programming. JumpStart will add the module automatically (see Section 8.2). You can also add it manually (see Section 9.2.2). Select a name, if desired (see Section 9.2.1.2).

You are now ready to connect SLC devices to the 5815XL (see Section 7.4).

Figure 4-17 is a drawing of the 5815XL board, showing the location of terminals and DIP switches.

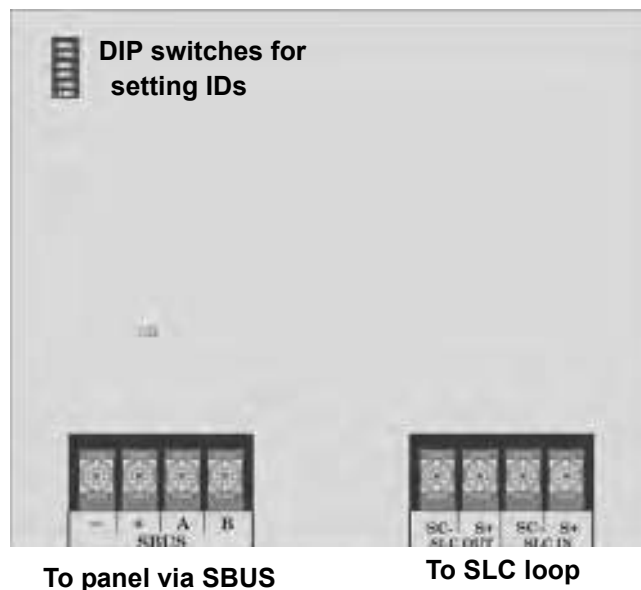


Figure 4-17 5815XL Board

4.6.1 5815XL Connection to the Panel

Connect the 5815XL to the control panel as shown in Figure 4-18. After the 5815XL is connected to the panel, it must be added to the system. This programming steps are described in Section 9.2.2.

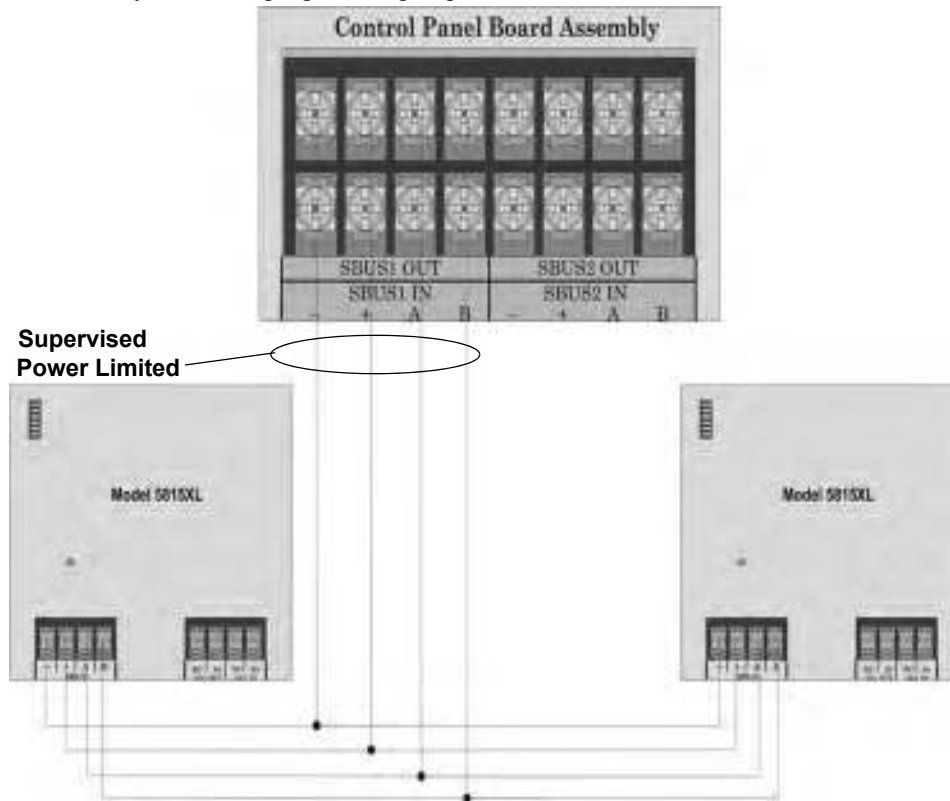


Figure 4-18 5815XL Connection to Main Panel Assembly

4.7 5824 Serial/Parallel Interface Module Installation

The 5824 serial/parallel interface module allows you to connect a printer to the panel, so you can print a real-time log of system events. Instructions for installing the 5824 appear below. The 5824 is for ancillary use only.

5824 installation involves the following steps:

1. Make sure power is off at the panel.
2. Connect the 5824 to the panel as shown in Figure 4-19.

Note: Two 5824s per panel maximum.

3. Use the DIP switches on the 5824 board to assign an SBUS ID# to the 5824 (see Section 4.10.1).
4. Configure the 5824 device through programming. See Section 4.7.1.

- 5. Connect a printer to the 5824 as shown in Figure 4-20.

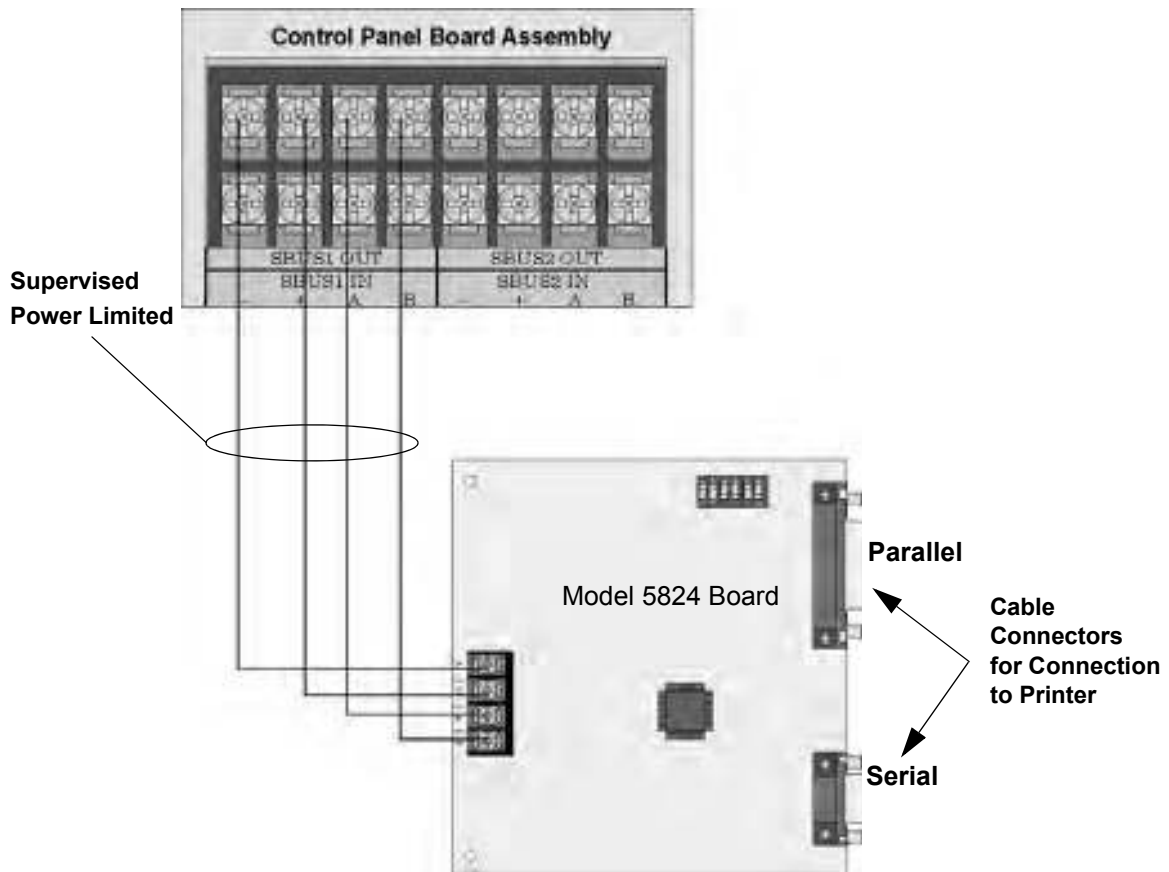


Figure 4-19 5824 Connection to the Panel

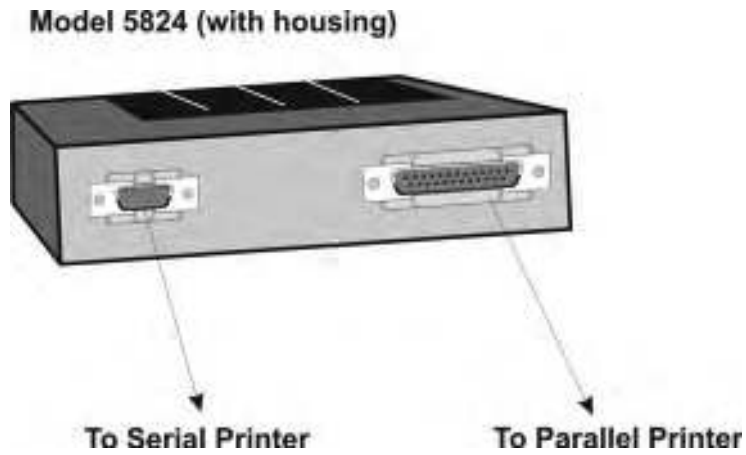


Figure 4-20 Printer Connection

4.7.1 Selecting 5824 Options

Configuring the 5824 includes the following steps:

- Add the module to the system. JumpStart will add the module automatically (see Section 8.2). You can also add it manually (see Section 9.2.2).
- Select a name, if desired (see Section 9.2.1.2).
- Select options for the printer and the output port. See below.

Printer and Output Port Options

1. From the Main Menu, select 7 for Panel Programming.
2. Select 1 for Module.
3. Select 1 for Edit Module.
4. From the list that displays, select the 5824 module you want to configure.
5. Press the right arrow twice to skip over the Enter Module ID and Enter Module Name options. A screen similar to the one shown in Figure 4-21 will display.

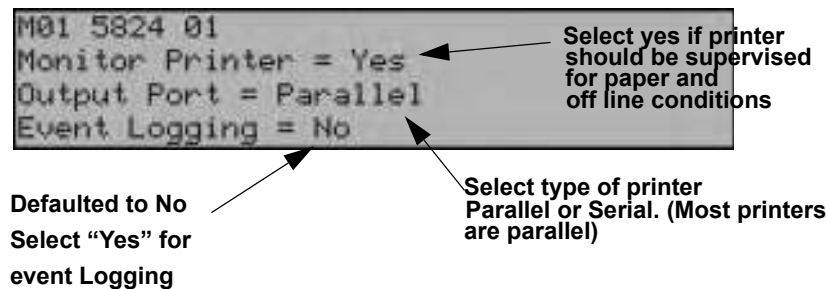


Figure 4-21 Selecting Printer and Output Port Options

6. Select options for the printer as needed for your installation. Most printers are parallel.

Note: When setting Monitor Printer to "Yes" the system defaults to printing only for the connected panels site. Use SKSS-2 to configure the 5824 to print for multiple sites.

7. If you are using a serial printer, use the next screen to select serial port options as required for your printer. Refer to your printer manual if you need more information.

Option	Choices
Baud Rate:	75 - 19200
Data Bits:	5 - 8
Stop Bits:	.5, 1, 2
Parity:	None, Even, Odd

4.8 5880 LED I/O Module

The 5880 is an LED driver board that can be used in a wide variety of applications, including as an interface with most customized floor plan annunciator boards. The 5880 can drive up to 40 LEDs and has one PZT controller. The 5880 also has eight inputs for dry contact monitoring. The following sub-sections describe hardware installation. Refer to Section 9 for programming information.

4.8.1 5880 Board Layout

Figure 4-22 shows the locations of screw terminals for connection to the panel and contact monitor wiring, pin connectors for connecting LEDs and the DIP switch for selecting an SBUS ID number for the 5880.

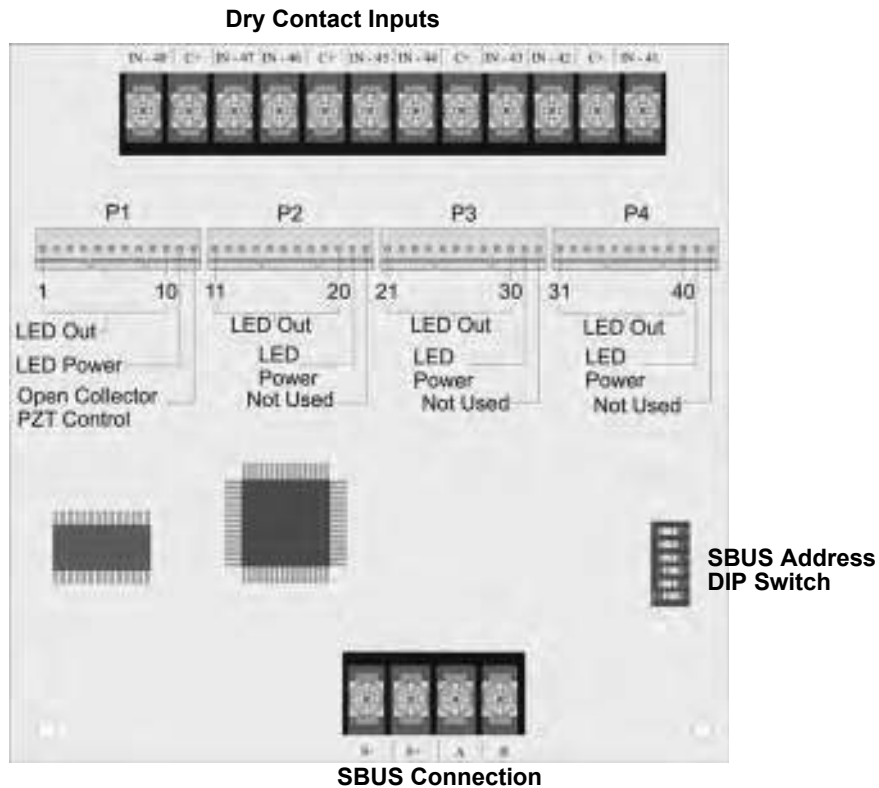


Figure 4-22 5880 Board Layout

4.8.2 FACP Connection

The 5880 connects to the panel via the SBUS. Make connections as shown in Figure 4-23. After the 5880 is connected to the panel, it must be added to the system. This programming step is described in Section 9.2.2.

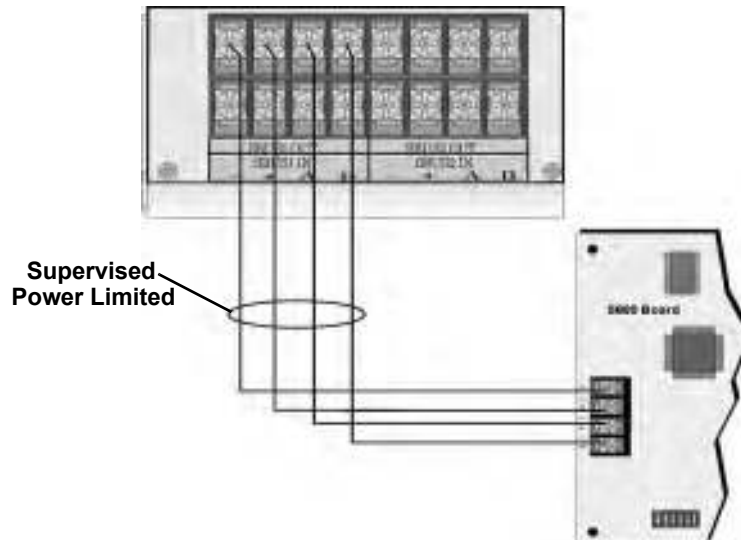


Figure 4-23 5880 Connection to Main Control Panel Assembly

4.8.3 LED Wiring


There are four 12-pin connectors on the 5880 board for connecting LEDs. Each LED gets its power from Pin 11. Internal resistors are sized so that there is approximately 10 mA of current for each LED; no series resistors are required. LED outputs can be mapped to output circuits. See Section 9.5.3 for programming details.

Wire the LEDs as shown in Figure 4-24.

On connector P1, Pin 12 is an open collector output for controlling a PZT. If used, the 5880 PZT will match the PZT pattern of the on-board (or RA-2000) annunciator.

Note: The circuit connected to "Open Collector Output" (last pin on P1) must be current limited so that no more

than 100 mA of current is allowed to flow into the open collector transistor.

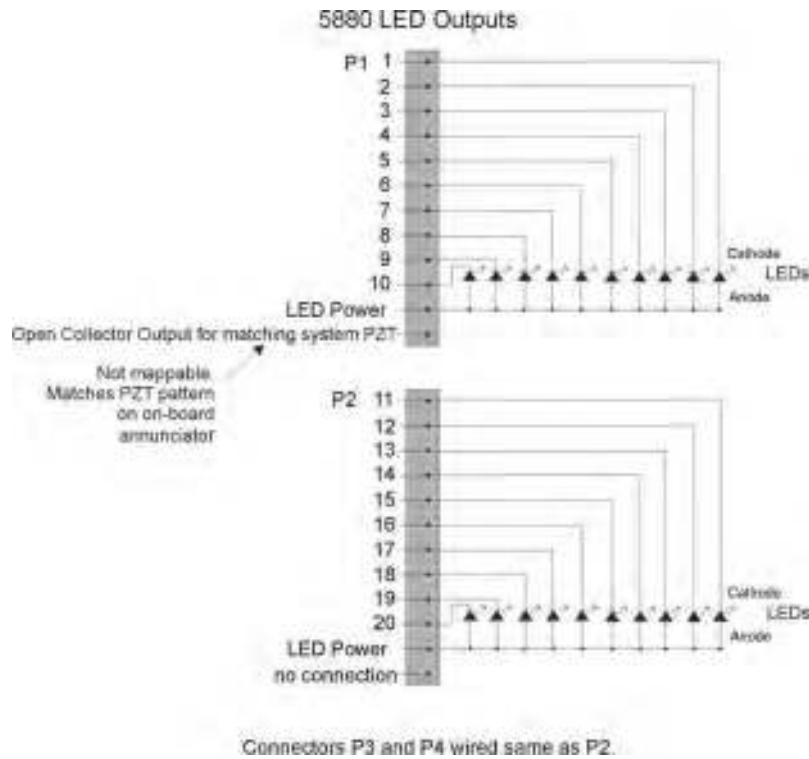

Connectors P3 and P4 wired same as P2.
Figure 4-24 5880 Board Layout

4.8.4 Dry Contact Wiring

The 8 input circuits on the 5880 board are for monitoring switch inputs. Any type of switch supported by the control panel can be used with the 5880. For example, you can use a 5880 to monitor pull stations, water flow, tamper, reset, or silence switches.

Wire dry contacts as shown in Figure 4-25. Notice grouping of terminals; power terminals are shared by two inputs.

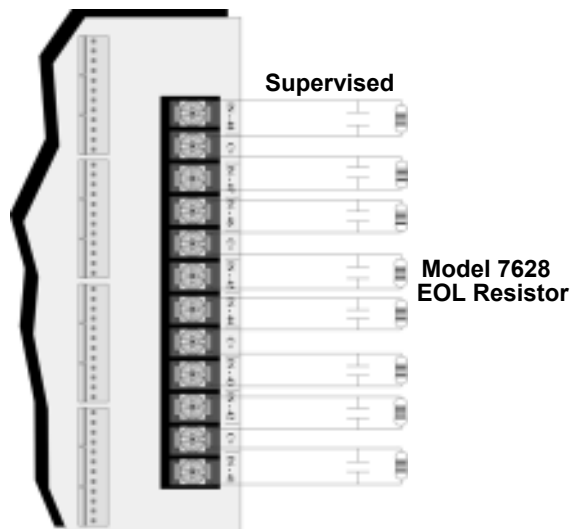


Figure 4-25 Dry Contact Wiring

4.9 5865-3 / 5865-4 LED Annunciator Installation

The 5865-3 and 5865-4 are LED annunciators. The 5865-4 has 30 mappable LEDs, remote fire system silence and fire system reset key switches, and a general system trouble LED. The 5865-3 has 30 mappable LEDs only. These are arranged as 15 pairs of red (typically used for alarm) and yellow (typically used for trouble) LEDs.

Installation of the 5865-3 and 5865-4 is identical. The key switches and the trouble LED follow the behavior of other system annunciators and do not require any installation steps. The following sub-sections describe how to install the 5865-3 and 5865-4 hardware. Refer to Section 9 for programming information.

Note: This manual uses "5865" when referring to aspects of the 5865-3 and 5865-4 that are common to both models.

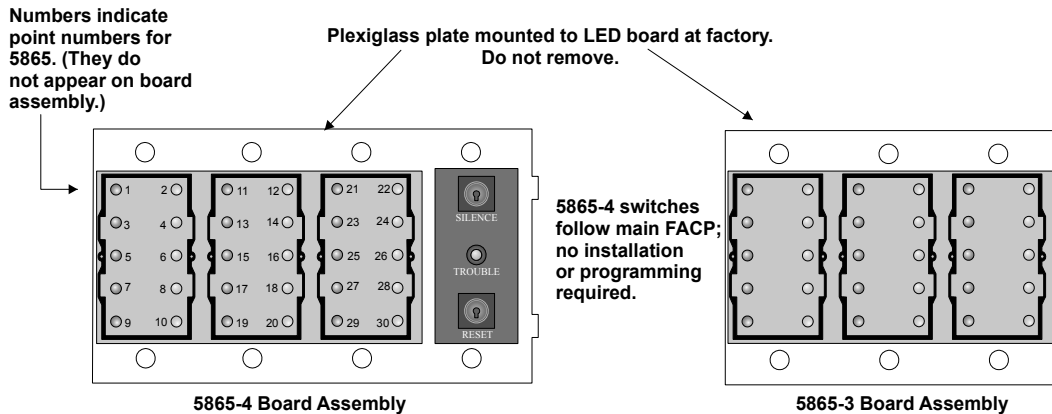


Figure 4-26 5865-3 and 5865-4 Assembly (front view)

4.9.1 FACP Connection

The 5865 connects to the panel via the SBUS. Make connections as shown in Figure 4-27. After the 5865 is connected to the panel, it must be added to the system. This programming step is described in Section 9.2.2.

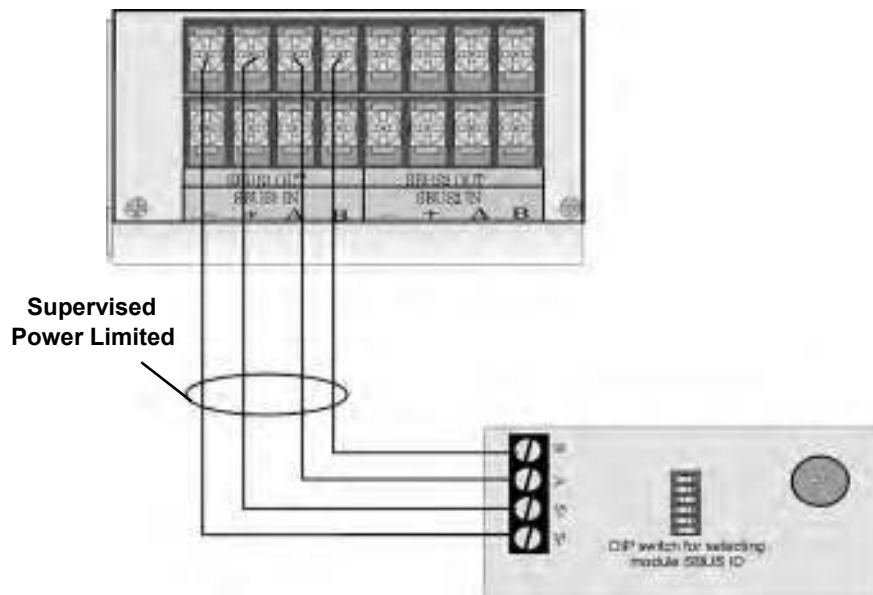


Figure 4-27 5865 Connection to the FACP

4.9.2 5865 Mounting

Mount the 5865-4 to a standard 4-gang electrical box. Mount the 5865-3 to a standard 3-gang electrical box. In Figure 4-28, the 5865-4 attached to a 4-gang box is used as an example.

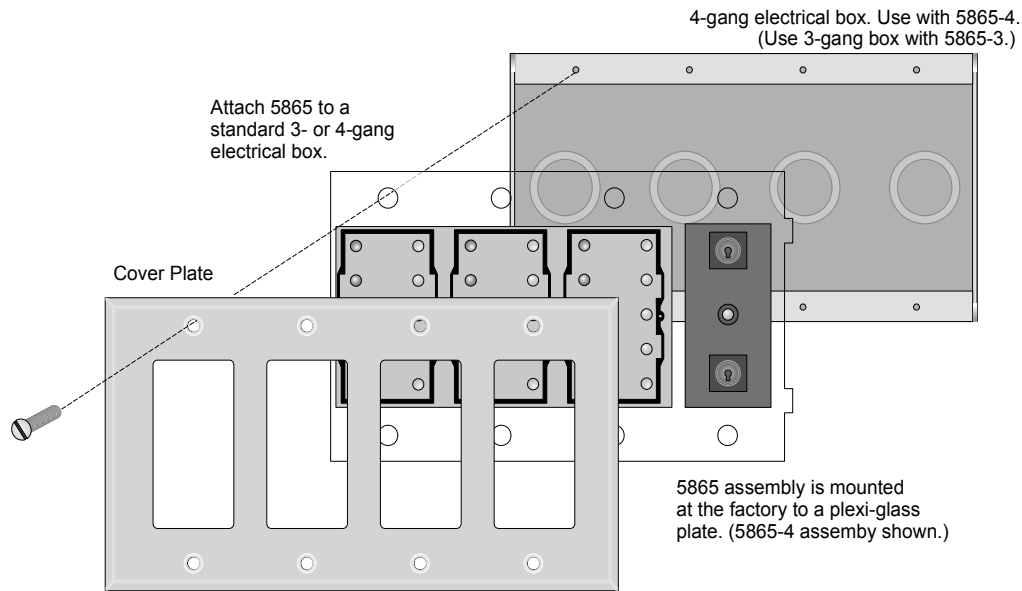


Figure 4-28 5865 Mounting Example

The 5865 ships with a set of zone description labels that can be inserted into the 5865 board assembly. These labels can be used in a typewriter or can be written on by hand. Slide the labels under the plexiglass as shown in Figure 4-29. The LEDs will show through the label when illuminated.

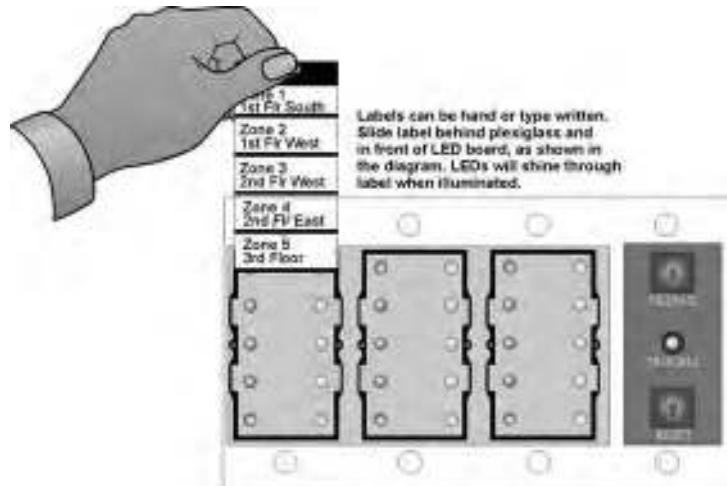


Figure 4-29 Inserting Zone Description Labels

4.10 Configuring SBUS Modules

This section describes how to configure any system hardware modules that have been added to the system.

4.10.1 Assigning SBUS Module IDs

SBUS devices on a panel are addressed from 1 to 63 and are connected to either SBUS 1 or SBUS 2. Although the addressing scheme allows 63 SBUS devices to be connected to a panel, the actual number is limited by current draw and SBUS bandwidth usage as discussed below. When installing a hardware module (such as 5815XL, 5824, RA-2000, 5496, RPS-1000, 5865-3 or 5865-4), you must use the DIP switches on the module to assign an ID# to the module. Address zero is an invalid address and is not allowed.

Figure 4-30 shows all possible DIP switch positions and their correlation to a numerical ID. For example, to select ID 2, place DIP switch 2 in the up or on position.

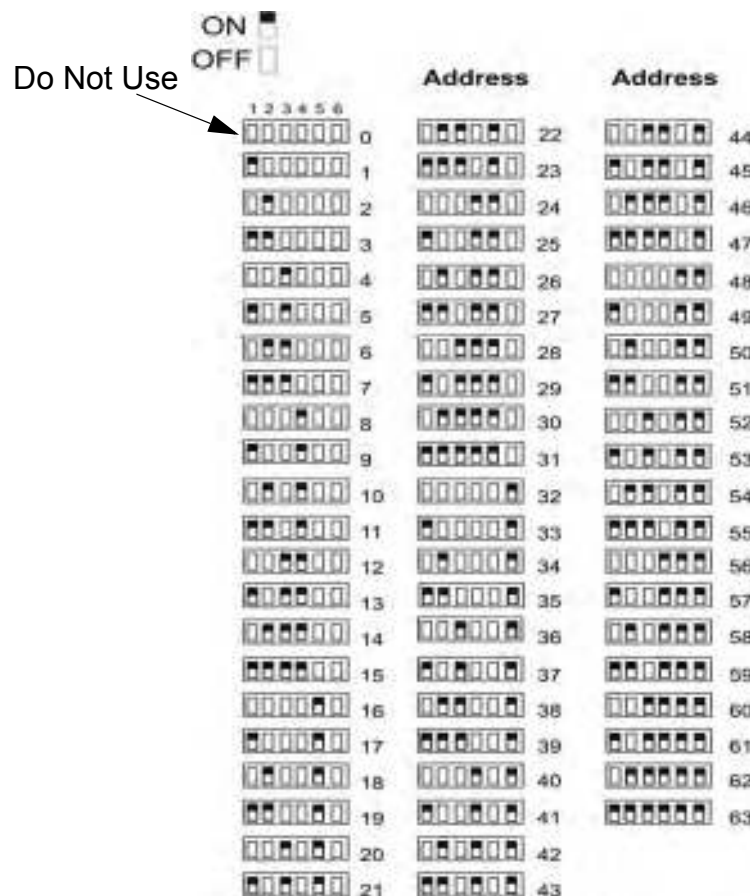


Figure 4-30 Possible SBUS module addresses

Refer to Section 9.2 to edit, add, delete, and view module list.

4.10.2 SBUS Bandwidth Considerations

Each SBUS device generates a certain amount of traffic on the SBUS. Generally, the amount of traffic generated depends on the type of SBUS device. To help you figure out the SBUS bandwidth usage of a given collection of devices, a tool is available on the Farenhyt website (www.farenhyt.com). The tool will serve as a guide to help determine how heavily loaded an SBUS is with respect to bandwidth. We recommend you use this tool if you

plan to have more than eight SBUS devices per SBUS. Remember to include devices that are on RPS-1000 SBUS repeaters in your list of devices for SBUS bandwidth calculations.

4.11 Telephone Connection

Connect the telephone lines as shown in Figure 4-31. The Model 7860 phone cord is available from Silent Knight for this purpose.

If you do not use the model 7860 to connect to the phone lines, the wire used for the connection must be 26 AWG or larger diameter wire.

A number of programmable options are available for customizing telephone lines. These options are described in Section 9.6.2.

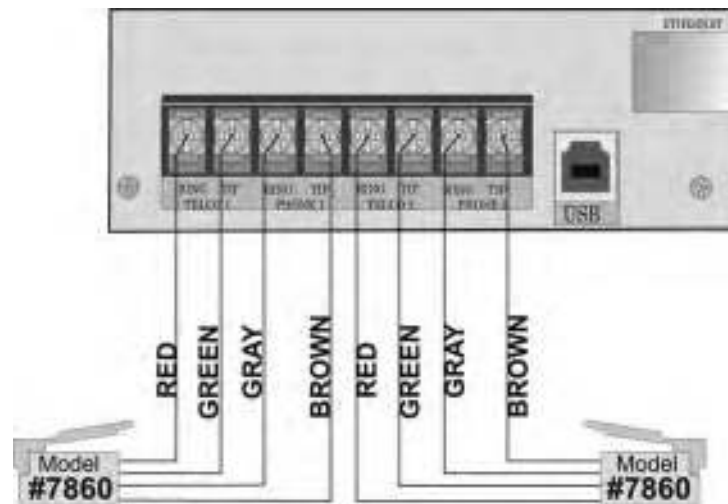


Figure 4-31 Connection of Telephone Lines

4.12 Flexputs™ I/O Circuits

The eight Flexput™ circuits are an innovative and versatile feature of the control panel. They can be used as: Class A or B notification circuits, Class A or B initiation circuits (either 2 or 4 wire detectors), or as auxiliary power (resettable, continuous, or door holder).

The polarity of the Flexput terminals differs depending on whether the circuit is programmed as an input or an output circuit. If the circuit is programmed as an input circuit (for a detector or normally open contact) the X terminal is negative and O terminal is positive. If the circuit is programmed as an output circuit (Aux power or NAC) then the X terminal is positive and the O terminal is negative.

4.12.1 Conventional Notification Appliance

This sub-section of the manual explains how to install conventional notification appliances for Class A (Style Z) and Class B (Style Y) configurations.

4.12.1.1 Class B Notification Wiring

You must use an appliance from the list of compatible appliances in the Appendix A at the back of this manual. To install a circuit:

1. Wire Class B Notification appliances as shown in Figure 4-32.

- Configure the circuit through programming (see Section 9.5)

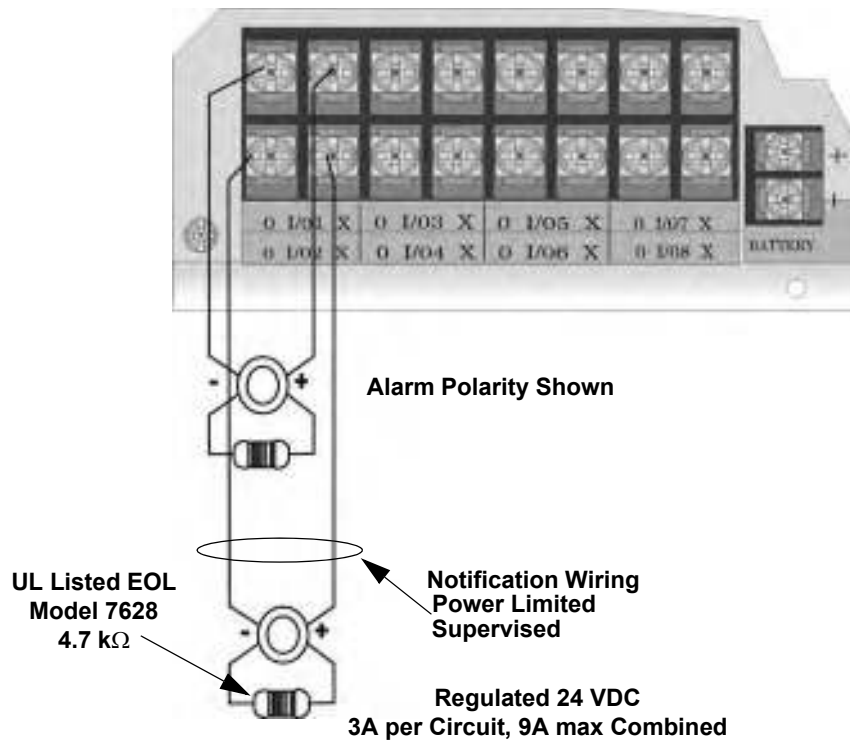


Figure 4-32 Class B Notification Appliance Circuit Wiring

Maximum voltage drop is 3V per Class B notification. See Table 4-3.

Table 4-3: Maximum Impedance Class B

Current	Maximum Impedance
1.0A	3Ω
1.5A	2Ω
2.0A	1.5Ω
2.5A	1.2Ω
3.0A	1.0Ω

4.12.1.2 Class A Notification Wiring

You must use an appliance from the list of compatible appliances in Appendix A at the back of this manual.

To install a Class A notification appliance circuit:

- Wire the Class A notification appliances as shown in Figure 4-33.

Caution

For proper system supervision do not use looped wire under terminals marked O and X of the Flexput connectors. Break wire runs to provide supervision of connections.

- Configure the circuit for Class A in programming (see Section 9.5).

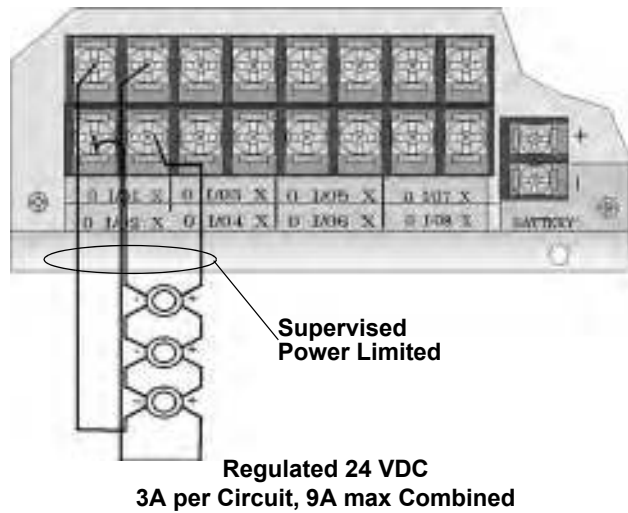


Figure 4-33 Class A Notification Appliance Circuit Configuration

Note: In programming any point that uses multiple Flexput circuits, the lowest Flexput circuit number is used to refer to the circuit pair. For example, Figure 4-33 uses both Flexput circuit 1 and 2, so in programming it would be referred to as point 1.

Maximum voltage drop is 3V per Class A circuit. See Table 4-4.

Table 4-4: Maximum Impedance Class A

Current	Maximum Impedance
1.0A	3Ω
1.5A	2Ω
2.0A	1.5Ω
2.5A	1.2Ω
3.0A	1.0Ω

4.12.2 Conventional Input Switch Circuits

This section of the manual explains how to install conventional initiating devices for Class A (Style D) or Class B (Style B) configurations.

4.12.2.1 Class B Inputs

You can connect conventional Class B switches, such as waterflow switches and pull stations, directly to the Flexput circuits of the control panel.

To install a Class B switch:

- Wire the Class B switch as shown in Figure 4-34.

- Configure the circuit through programming (see Section 9.5).

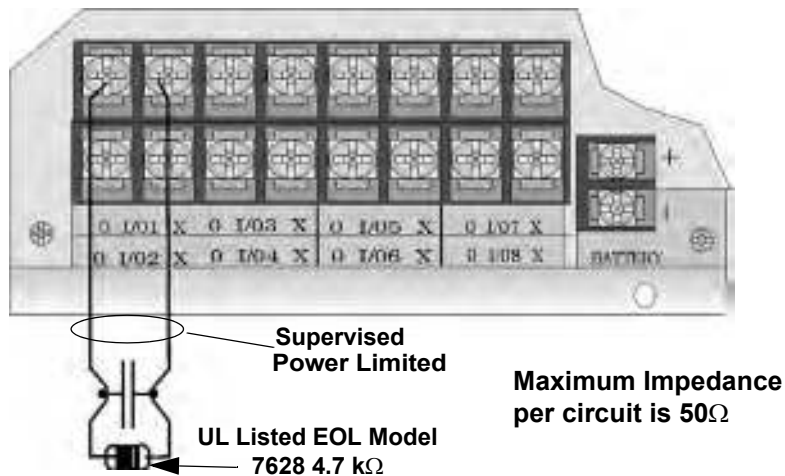


Figure 4-34 Class B Input Switches

4.12.2.2 Class A Inputs

You can connect conventional Class A switches, such as waterflow switches and pull stations, directly to the Flexput circuits of the control panel.

To install a Class A switch:

- Wire the Class A switch as shown in Figure 4-35.
- Configure the circuit through programming (see Section 9.5).

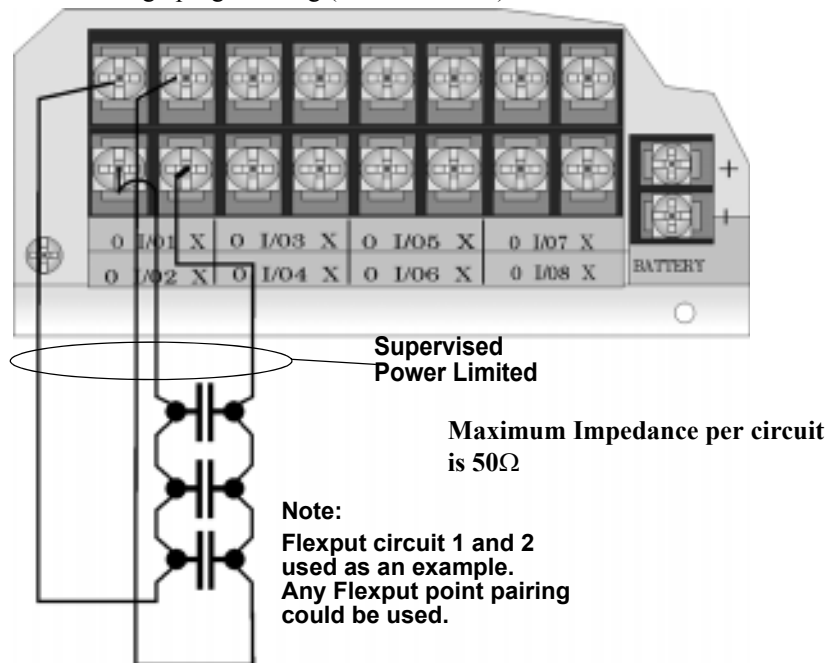


Figure 4-35 Class A initiating Switches

Note: In programming any point that uses multiple Flexput circuits, the lowest Flexput circuit number is used to refer to the circuit pair. For example, Figure 4-35 uses both Flexput circuit 1 and 2, so in programming it would be referred to as point 1.

4.12.3 Installing 2-Wire Smoke Detectors

Any compatible UL listed two-wire smoke detector can be used with the control panel (see Appendix A for list of compatible smoke detectors). Figure 4-36 and Figure 4-37 illustrate how to connect a UL listed 2-wire detector to the control panel.

4.12.3.1 Installing 2-Wire Class B Smoke Detectors

To install a Class B two-wire smoke detector, wire as shown in Figure 4-36.

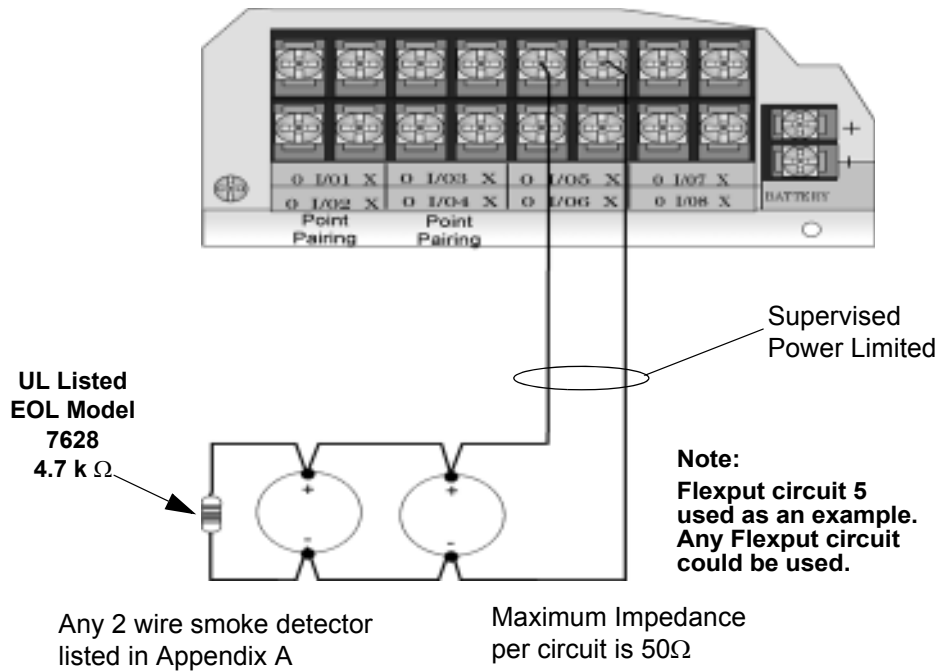


Figure 4-36 Two-Wire Class B Smoke Detector

4.12.3.2 Installing 2-Wire Class A Smoke Detectors

To install a Class A two-wire smoke detector, wire as shown in Figure 4-37.

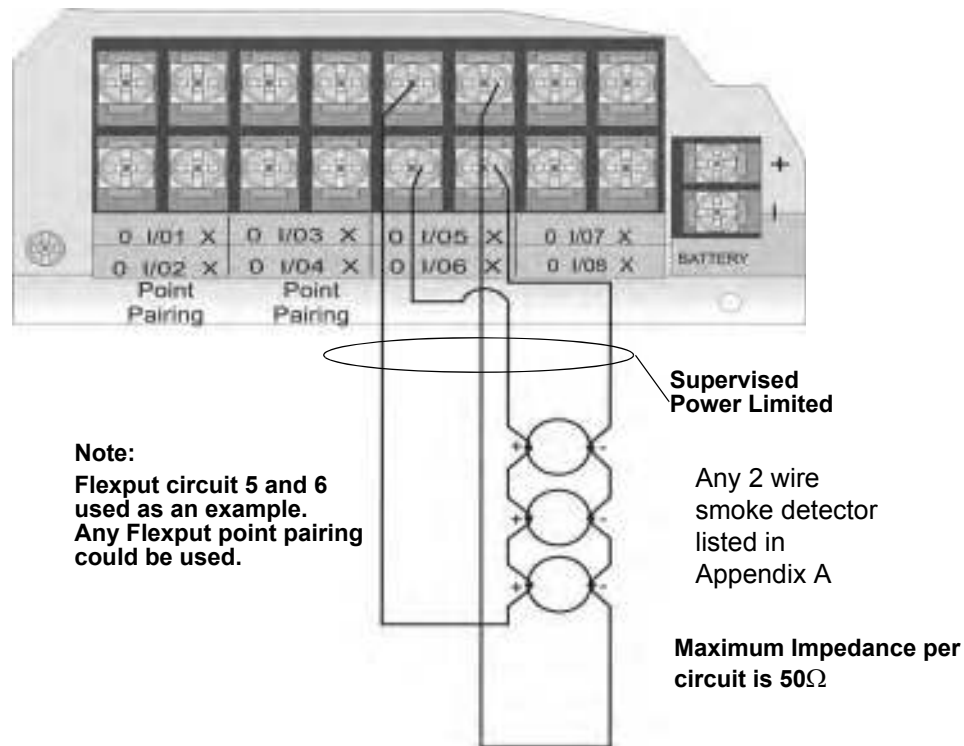


Figure 4-37 Two-Wire Class A Smoke Detector Connections

Note: In programming any point that uses multiple Flexput circuits, the lowest Flexput circuit number is used to refer to the circuit pair. For example, Figure 4-37 uses both Flexput circuit 5 and 6, so in programming it would be referred to as point 5.

4.12.4 Installing 4-Wire Smoke Detectors

Any compatible UL listed four-wire smoke detector can be used with the control panel (see Appendix A for list of compatible smoke detectors). Figure 4-38 and Figure 4-39 illustrate how to connect a UL listed four-wire detector to the control panel.

4.12.4.1 Installing a Class B 4-Wire Smoke Detectors

Figure 4-38 illustrates how to install a 4-wire Class B smoke detector.

Conventions used for wiring 4-wire Class B loops:

1. Up to four Class B 4-wire smoke detector loops can be connected to the control panel at once.
2. Each Class B loop input is paired with a unique power source as shown in Figure 4-38.

- Each loop gets smoke power from the even numbered Flexput circuit and the contact input is connected to the odd numbered Flexput circuit.

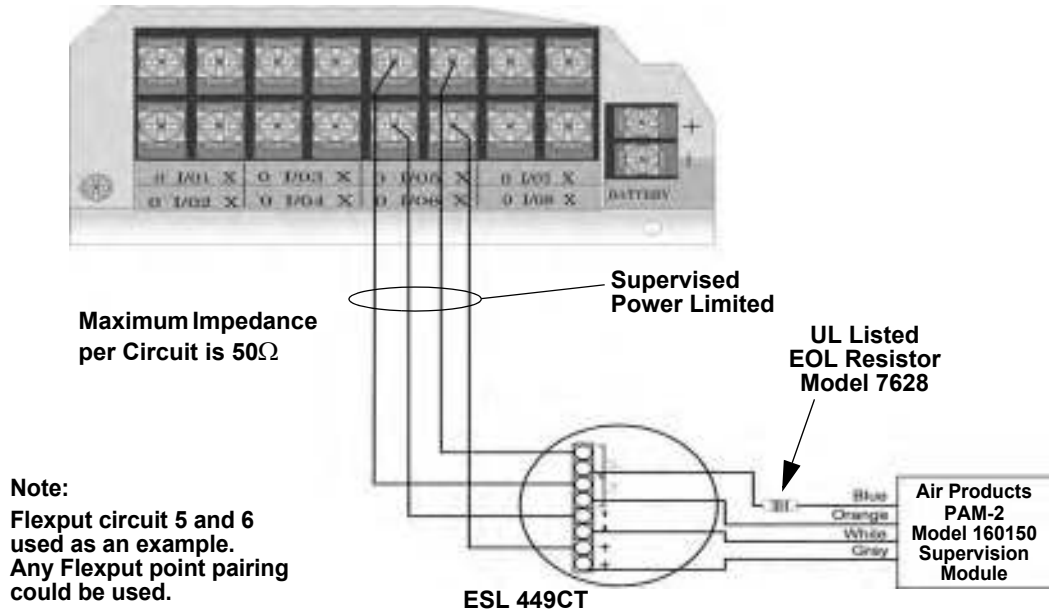


Figure 4-38 Class B 4-Wire Smoke Detector Connections

Note: In programming any point that uses multiple Flexput circuits, the lowest Flexput circuit number is used to refer to the circuit pair. For example, Figure 4-38 uses both Flexput circuit 5 and 6, so in programming it would be referred to as point 5.

4.12.4.2 Installing 4-Wire Class A Smoke Detectors

Figure 4-39 illustrates how to install 4-wire Class A detectors.

Conventions used for wiring 4-wire Class A loops:

- Up to two Class A 4-wire loops can be connected to the control panel at once.

- Smoke power is supplied to each Class A loop as shown in Figure 4-39.

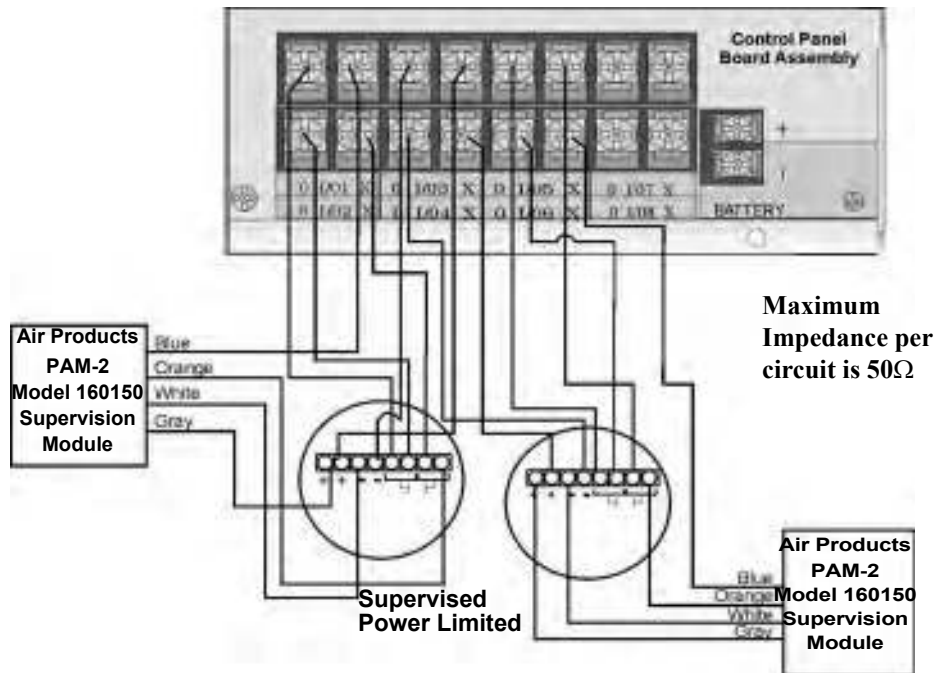


Figure 4-39 Class A 4-Wire Smoke Detector Connections

Note: In programming any point that uses multiple Flexput circuits are always referred to as the lowest Flexput circuit number used. For example, Figure 4-39 uses Flexput circuits 1, 2, 3 together and 4, 5, 6 together. In programming (1, 2, 3) would be referred to as point 1, and (4, 5, 6) would be referred to as point 4.

4.12.5 Auxiliary Power Installation

Flexput Circuits 1-8 on the control panel can be used as auxiliary power circuits. The three types of auxiliary power available are:


- Door Holder Power (see Section 4.12.5.1)
- Constant Power (see Section 4.12.5.2)
- Resettable Power (see Section 4.12.5.3)
- Sounder Sync Power (see Section 4.12.5.4)

Auxiliary power circuits are power limited. Each circuit can source up to 3A (total current for all Flexput circuits must not exceed 9.0 A in alarm, and 6A when used as constant auxiliary power in normal standby).

To install an auxiliary power circuit:

1. Wire the Flexput circuit(s) that will be used for auxiliary power. See Figure 4-40 for location of Flexput circuits.

2. Configure the auxiliary power output through programming (see Section 9.5).

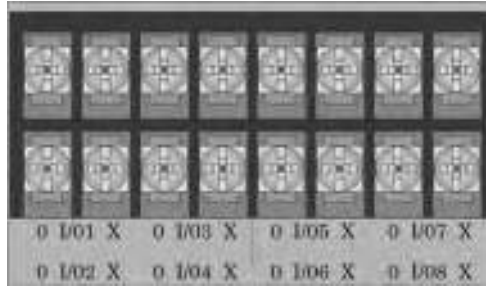

When used as auxiliary power, terminals labeled “O” are negative, terminals labeled “X” are positive

Figure 4-40 Flexput Circuit Location

4.12.5.1 Door Holder Power

Door holder power is intended for fire door applications. When there are no fire system alarms in the system and the panel has AC power, door holder circuits have 24 volt power present at their terminals. Any fire system alarm will cause power to disconnect. Power will be re-applied when the fire system is reset. If AC power is not present, the auxiliary door holder power will be disconnected to conserve the battery backup. When AC power is restored, power is immediately restored to the door holder circuits.

Use a UL listed door holder such as ESL DHX-1224, for this application. See Table A-5 for compatible door holder list.

4.12.5.2 Constant Power

Use constant power for applications that require a constant auxiliary power source. Power is always present at constant circuits.

4.12.5.3 Resettable Power

Resettable power is typically used to power beam detectors, flame detectors and conventional 4-wire smoke detectors. For circuits selected as Resettable, 24 volt power is always present at the terminals unless a fire system reset occurs. If a fire system reset occurs, power is disconnected from the terminals for 30 seconds, then re-applied. See Table A-4 for compatible four wire smoke detectors.

4.12.5.4 Sounder Sync Power

Sounder Sync Power continuously outputs the System Sensor synchronization pattern and is intended for use with B200S sounder bases.

4.13 On-Board Relays (Conventional)

The control panel has two built-in programmable relays and a built-in trouble relay. All relays are Form C rated at 2.5 A @ 24VDC.

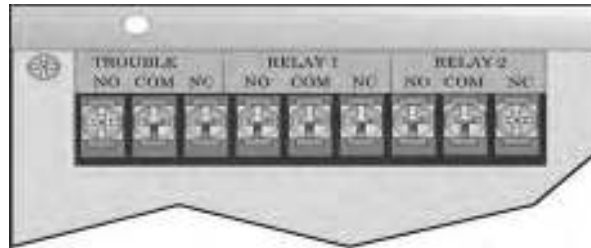


Figure 4-41 Location of Conventional Relay Circuits

4.13.1 Trouble Relay

The control panel has a dedicated Form C trouble relay built in. The relay provides a normally open and a normally closed contact. The trouble relay will deactivate under any trouble condition.

Note: The NC contact is the relay contact that is closed when the panel has power and there are no trouble conditions.

4.13.2 Programmable Relays

The control panel has two Form C programmable relays built in. Each relay provides a normally open and a normally closed contact.

To install one or two programmable relays, follow these steps.

1. Wire Relay 1 and/or Relay 2 as needed for your application. See Figure 4-41 for the location of the relay terminals.
2. Configure the relay through programming (see Section 9.5).

4.14 Remote Station Applications

4.14.1 Keltron Model 3158 Installation

The control panel is compatible with Keltron Model 3158, used for direct connection to a Keltron receiver. The 3158 reports alarms, supervisories, and troubles.

The steps for connecting the 3158 to the control panel. Refer to the 3158 installation instructions for complete information.

1. Wire the 3158 to the control panel as shown in the connection list and Figure 4-42.
2. Wire the 3158 within 20 feet of the control panel. Wiring must be enclosed in conduit.
3. Program control panel Relay 1 for alarm.
4. Program Flexput circuit 5 for alarm.
5. Program Flexput circuit 6 for supervisory non latching.

Table 4-5: Keltron 3158 to Control Panel Connections

Terminal #	Connects To
3158 Term. 1	To Keltron receiving equipment
3158 Term. 2	To Keltron receiving equipment
3158 Term. 3	Earth ground
3158 Term. 4	Not used; no connection.
3158 Term. 5	Control panel SBUS OUT +
3158 Term. 6	Control panel SBUS OUT -
3158 Term. 7	Control panel I/O5 O

Terminal #	Connects To
3158 Term. 8	Control panel Relay 1 COM
3158 Term. 9	Control panel I/O6 O
3158 Term. 10	Control panel I/O6 X
Control panel I/O5 X	Control panel Relay 1 NO
Control panel Relay 1 COM	Control panel Trouble COM
Control panel Relay 1 NO	Control panel Trouble NC

Not suitable for remote station protected premise service where separate transmission circuits are required for fire supervisory (if applicable), and trouble signals.

Intended for connection to a polarity reversal circuit of a remote station receiving unit having compatible ratings.

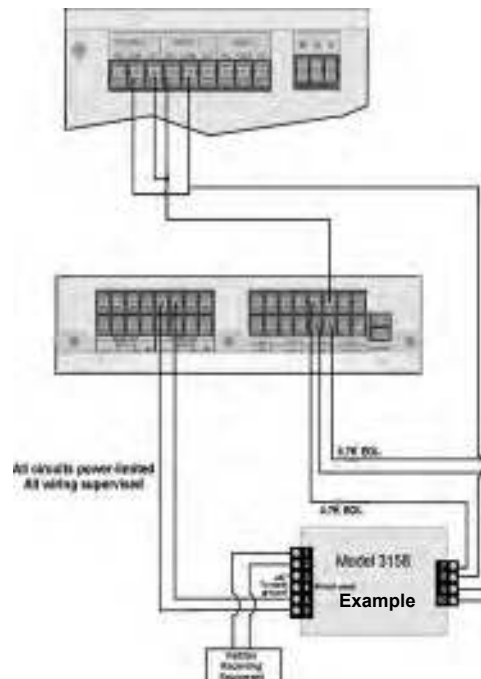


Figure 4-42 Keltron 3158 Connection to Control Panel

4.14.2 City Box Connection Using the 5220 Module

This section describes how to connect the control panel to a local energy municipal fire alarm box or “city box” as required by NFPA 72 Auxiliary Protected Fire Alarm systems for fire alarm service. The city (master) box is an enclosure that contains a manually operated transmitter used to send an alarm to the municipal communication center which houses the central operating part of the fire alarm system.

City Box Standby Current: 0 (Notification supervision current accounted for in control panel draw.)

Alarm Current: 1 Amp for 1 second 27.2 VDC max. The maximum coil and wire resistance (combined) must not exceed 30 ohms.

To install the 5220 for city box connection:

1. Use one of the knockouts on the right side of the control panel to connect the 5220 using a short piece of conduit (must not exceed 20 feet in length).
2. Wire the 5220 to the control panel as shown in Figure 4-43. This drawing also shows how to connect the city box coil to terminals 3 and 4 on the 5220. Do not install an EOL resistor in the terminals of the Flexput circuit used for this application.
3. Connect earth ground wire to the 5220 chassis with mounting screw.
4. Program the Flexput circuit as a notification circuit, Refer to Section 9.5.2. Assign this Flexput to an output group that is mapped to activate with non silenceable constant output in response to a system general alarm condition.

It is not possible to reset the remote indication until you clear the condition and reset the control panel.

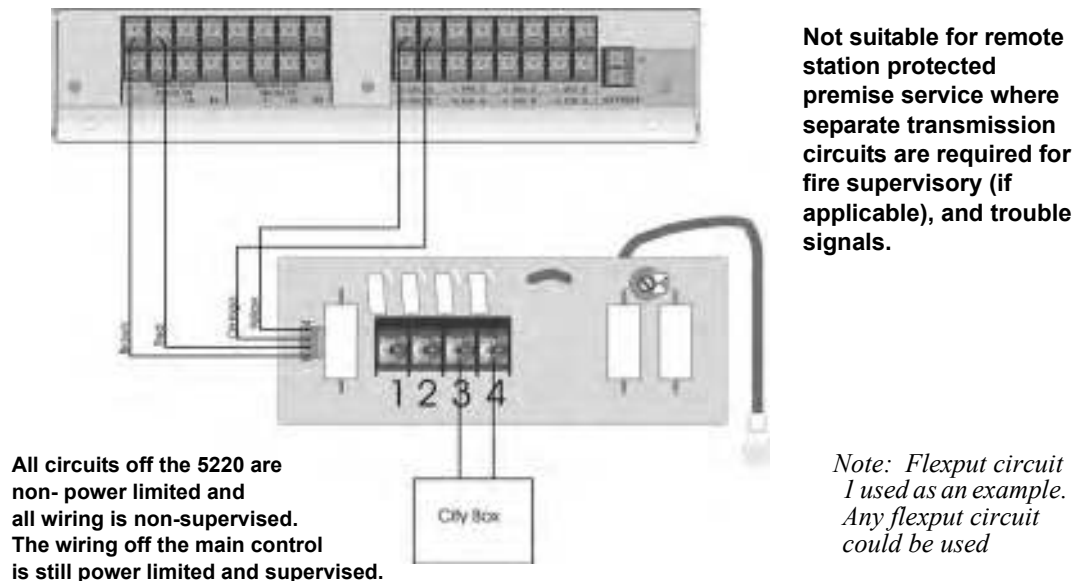


Figure 4-43 City Box Connection

4.14.3 Using the IDP-Relay Addressable Relay Module for City Box Connection

Wire the IDP-Relay as shown in Figure 4-44.

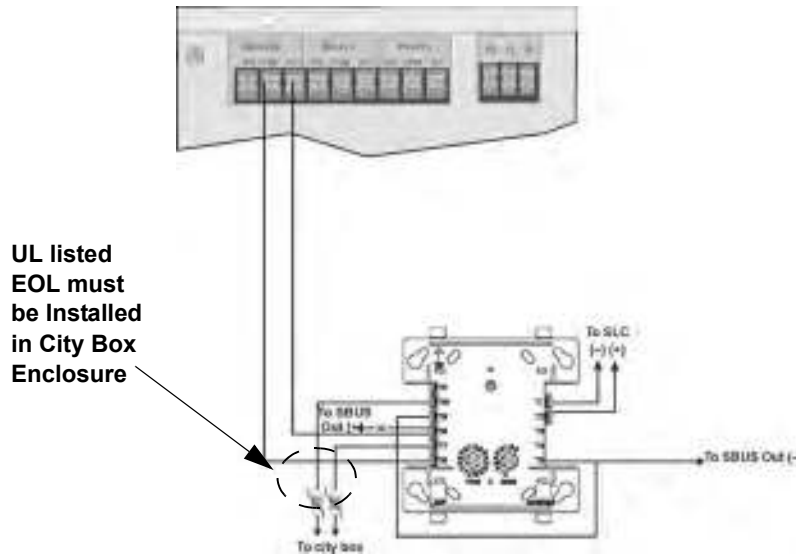


Figure 4-44 IDP-Relay Module for City Box Connection

4.14.4 NFPA 72 Polarity Reversal

Note: Intended for connection to a polarity reversal circuit of a control unit at the protected premises having compatible rating.

4.14.4.1 Using the 5220 Module

When the 5220 is wired and programmed for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

If an alarm condition occurs, the alarm relay will close, overriding the trouble condition.

Standby Current: 100 mA, 24 VDC

Alarm: 100 mA, 24 VDC

To install the 5220 for polarity reversal, follow the steps below:

1. Locate the knockout on the right side of the control panel cabinet to connect the 5220 using a short piece of conduit (must not exceed 20 feet in length).
2. Wire the 5220 to the control panel using the four-wire pigtail provided as shown in Figure 4-45. This diagram also shows how to connect the 5220 to the remote indicator. Do not install an EOL resistor in the terminals of the Flexput circuit used for this application.
3. Connect earth ground wire to the 5220 chassis with mounting screw.
4. Program the Flexput circuit as a notification circuit, refer to Section 9.5.2. Assign this Flexput to an output group that is mapped to activate with non silenceable constant output in response to a system general alarm condition.

- If necessary, adjust loop current using the potentiometer (R10) on the 5220 board. Normal loop current is 2-to-8 mA with a 1k ohm remote station receiving unit. Maximum loop resistance is 3k ohm.

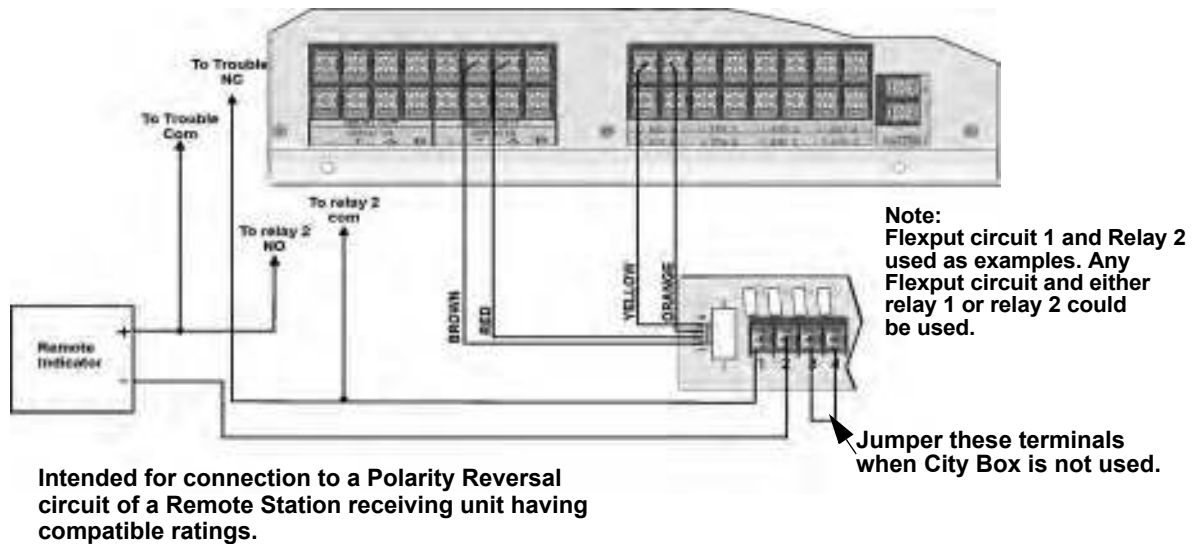


Figure 4-45 Polarity Reversal Connection Using the 5220 Module

4.14.4.2 Using the 7644-L8* Module

When the 7644-L8 is used for polarity reversal, it allows alarm and trouble events to be reported to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the control panel is reset.

To install the 7644-L8* for polarity reversal:

- Wired the 7644-L8 to the control panel as shown in Figure 4-46. Do not install an EOL resistor on the terminals of the Flexput circuit used.
Note: Use only Flexput circuits on the control panel for reverse polarity.
- Program the Flexput circuit as a notification circuit. See Section 9.5.2.
- Map the group to activate non silenceable, constant on in response to a system general alarm, and to disconnect in response to a system trouble.

*Note: *When ordering, use PN 7644-L8*

4. Intended for connection to a polarity reversal circuit of a remote station receiving unit having compatible rating.

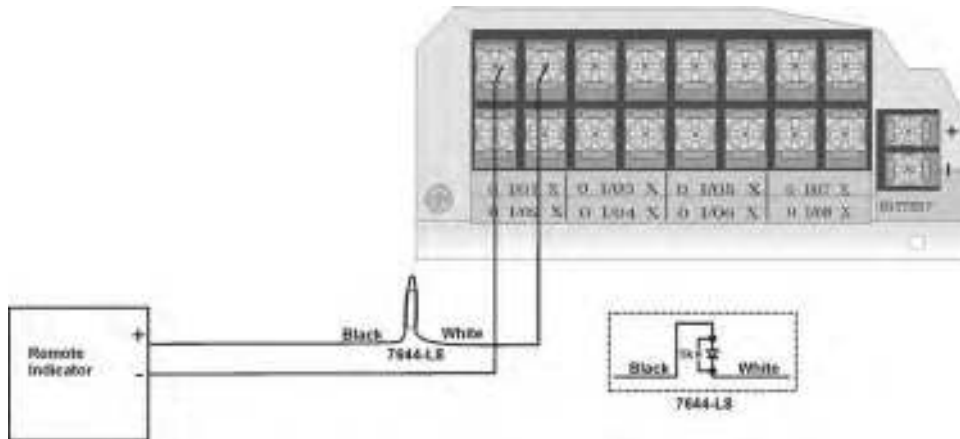


Figure 4-46 Polarity Reversal Connection Using the 7644

4.14.5 Transmitter Activated by Dry Contacts

This section describes the connection of a UL 864 listed remote station transmitter to the IFP-2000 dry relay contacts. The IFP-2000 FACP contacts must be supervised by the remote station transmitter module using end-of-line resistors (ELRs) with a value determined by the transmitter manufacturer. Power is also provided by the remote station transmitter manufacturer. Refer to the remote station transmitter manufacturer's manual for details.

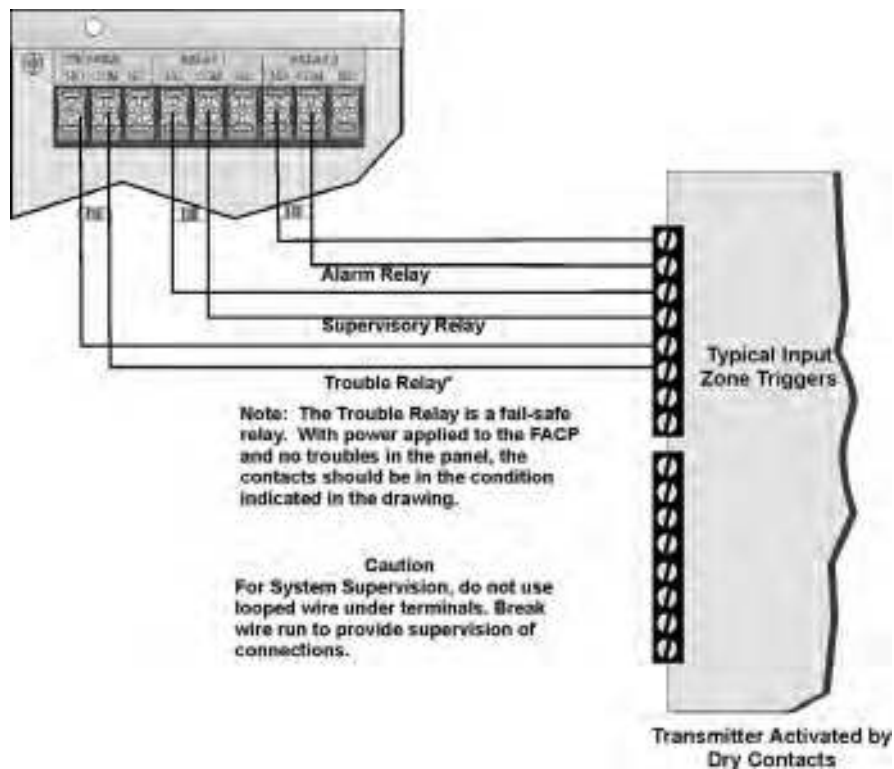


Figure 4-47 Transmitter Activated by Dry Contacts

Section 5

Networking

5.1 Network System Hardware Features

IFP-2000 panels can be networked to create a virtual system that is larger than 636 addressable points. Each additional IFP-2000/RPS-2000 provides another 636 addressable points to the network total. For example, a network of eight panels provides a maximum addressable point capacity of 5,088 points ($636 \times 8 = 5,088$).

5.1.1 Networked Sites

A networked site is a logical group of IFP-2000 and/or RPS-2000 panels that behave as though the logical group is one large control panel. Each building is referred to as a “site.” All panels in a site operate as a single panel. The control functions like reset, silence and alarm activation operate across the entire site. There can be one or more logical sites within a networked system. Taken to the extreme, the maximum number of sites within a network system is limited to the number of panels in the network with each site comprised of only one panel.

5.1.2 Wiring Options to Connect Networked Panels

1. Direct Connect - Panels can be connected cost effectively via shielded twisted pair copper wire within conduit when the panels are located no more than 20 feet apart and in the same room.
2. Repeater Connection - Panels separated by more than 20 feet or located in multiple buildings, must use the IFP-RPT network repeater hardware to provide up to 3000 feet of separation with twisted pair copper wire or up to 8dB loss of signal separation for fiber optic cable.

All methods of panel connectivity can be used within the same networked system. The network architecture provides true peer to peer capability allowing network survivability for all hardware that remains operational in the event of partial system failure.

5.2 Model RPS-2000

The model RPS-2000 provides the same power and point capacity of an IFP-2000 panel, but does not include any user interface. It is used in networked systems where added power and/or point capacity is required but where additional user interface is not needed.

5.3 Direct Connect Wiring Option

When networking a group of IFP-2000s and/or RPS-2000s within a 20 foot radius of each other, you may use the direct connect method to link the panels together in the site. The cable used must be shielded twisted pair communication grade cable. See Figure 5-1 on page 2, direct connect wiring option. The direct connect wiring option uses a BUS configuration. There are no T-taps or class A wiring options.

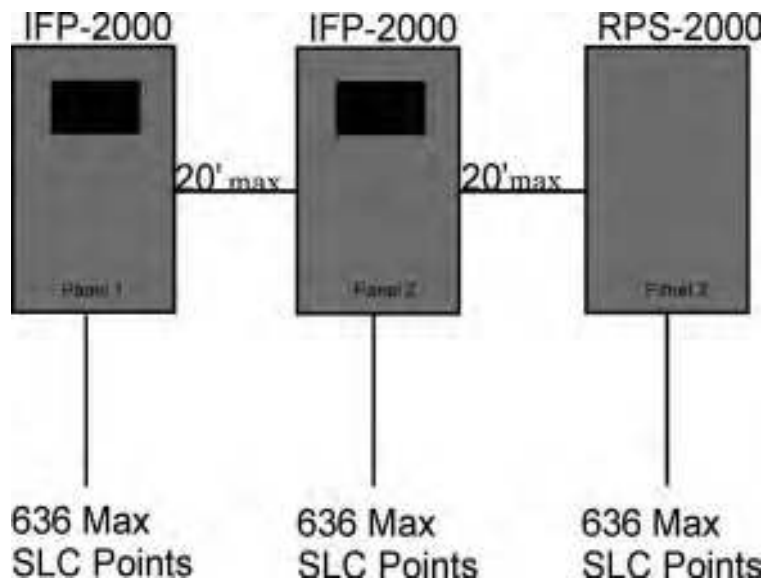


Figure 5-1 Direct Connect Wiring Option

5.3.1 Installing using Direct Connection within a Site:

1. Mount the IFP-2000 and/or RPS-2000 panels within 20 feet of conduit run distance from each other. Place the conduit for routing the direct connect networking cable between panels in a bus configuration as shown above in Figure 5-1 on page 2.
2. Make the network wiring connections. The cable used must be shielded twisted pair 18 gauge or larger wire. See Figure 5-2 on page 2 for the DIP switch termination settings for Direct Connect wire option. Run one of the twisted pair wires from the NETWORK A terminal on one panel to the NETWORK A terminal on the next panel. Use the other wire of the twisted pair to connect the NETWORK B terminals together. Run the network ground connection using the twisted pair shield between the NETWORK GND terminal on both panels. Repeat this for each additional panel until all A, B and GND terminals are wired together as a BUS.
3. Configure the network terminators. The panels at both ends of the network bus must have DIP switches 8, 9, and 10 set to the "ON" position. All panels that are not at the BUS ends must have the terminators set to the OFF position. See Figure 5-2 on page 2.
4. T-Tapping is not allowed; wire must be run in a BUS configuration.

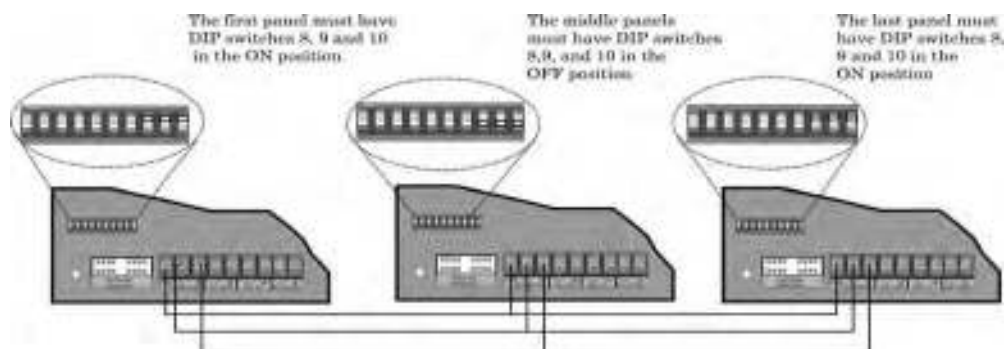


Figure 5-2 DIP Switch Terminations Settings for Direct Connect Wiring Option

5.4 Repeater Wiring Options

Networking a group of IFP-2000 and/or RPS-2000 at a distance greater than 20 feet requires the use of a network repeater with each panel. Repeaters are used to travel long distances and/or between buildings. Figure on page 3 Figure 5-3 on page 3 shows the repeater wiring connection for style 4, class B as a solid line. For style 7, class A the dotted line would be used in addition to the solid lines.

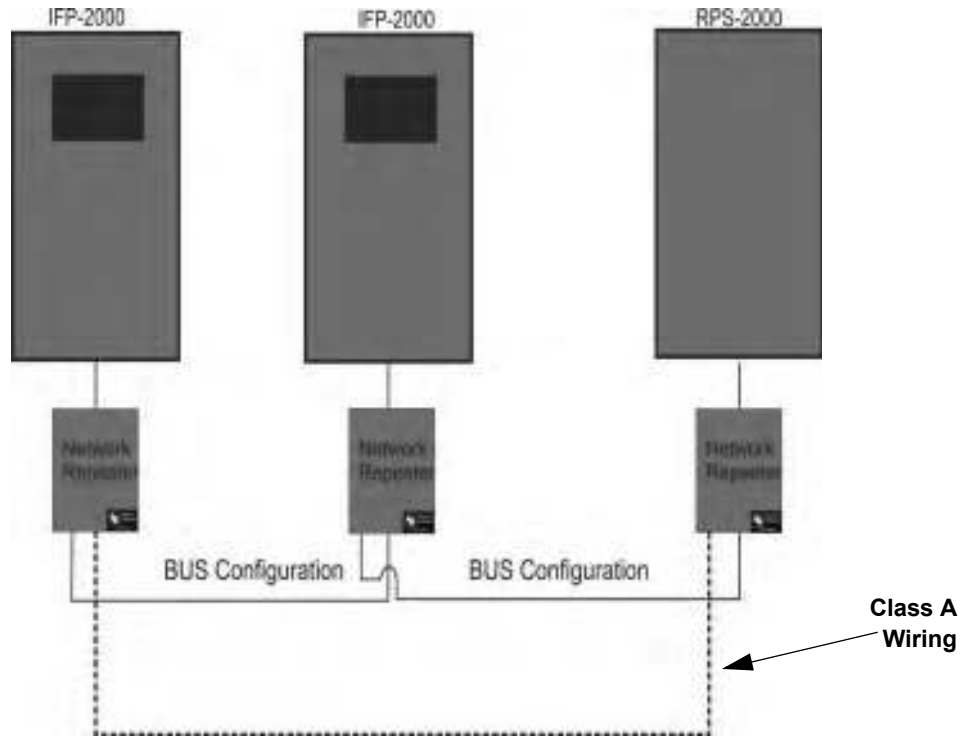


Figure 5-3 Repeater Networking Connections

5.4.1 Network Repeater Types

Network repeaters are available in two configurations. See Figure 5-4 on page 3.

1. P/N IFP-RPT-UTP is used for twisted pair copper wiring up to 3000 ft. between panels.
2. P/N IFP-RPT-FO is used for fiber optic cable or twisted pair wiring between panels.

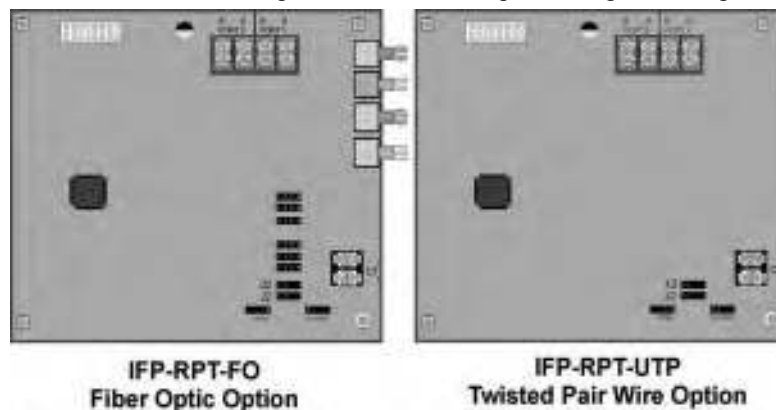


Figure 5-4 Types of Network Repeaters

The IFP-RPT-UTP repeater is used for connecting panels via unshielded twisted pair wiring up to a maximum wiring distance of 3000 feet. The IFP-RPT-FO repeater is used for connecting panels via fiber optic cable up to a maximum signal loss of 8dB. The IFP-RPT-FO repeater also has connections for unshielded twisted pair wiring so that either fiber optic cable or unshielded twisted pair wiring can be used for connecting panels.

5.4.1.1 Accessory Mounting Kits

Repeaters can be mounted within the IFP-2000 cabinet or in an accessory cabinet. Accessory kits are available that include a small cabinet with door, key, mounting hardware, 5 foot ribbon cable to connect the repeater to the control panel and the repeater printed circuit board. The accessory kits are available if you want to install the repeater outside of the IFP-2000 cabinet.

The accessory kit part numbers are:

1. IFP-RPT-UTP-KIT which includes the IFP-RPT-UTP repeater card and SK2190 enclosure.
2. IFP-RPT-FO-KIT which includes the IFP-RPT-FO repeater card and SK2190 enclosure.

5.4.2 Network Repeater Installation

The network repeater is designed to mount on one of the 5815XL standoff sets.

Use the following steps to properly mount the network repeater to the IFP-2000.

1. Place the network repeater on one of the 5815XL standoff sets. Use the standoff extenders provided for better access to the fiber optic cables if there is a clearance issue.
2. Use the 20" ribbon cable to connect the IFP-2000 to the repeater board. Run an insulated wire from the screw terminal labeled G (TB2) on the repeater to an earth screw terminal on the control panel.

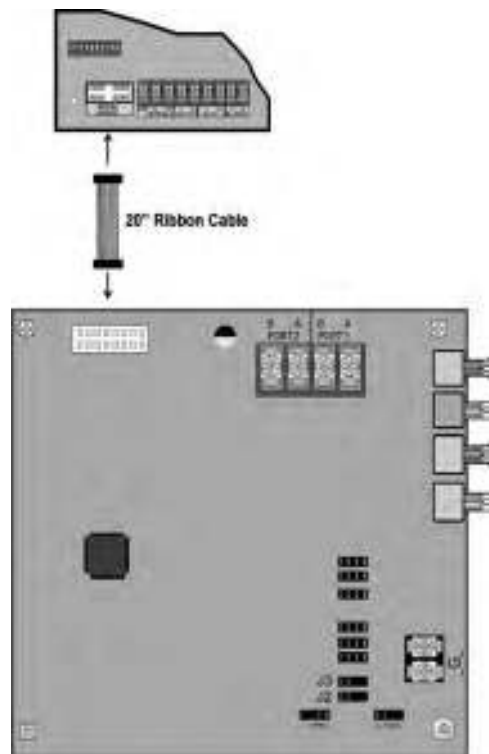


Figure 5-5 Panel to Networked repeater connection

3. Place Jumpers J2 and J3 in the CLOSED position when there is a twisted pair cable connected to port 1 of terminal block TB1. Each repeater has the ability to monitor for earth ground faults on the twisted pairs connected to port 1 of its terminal block TB1. Earth fault detection for any wiring at Port 2 of TB1 is done at the next/previous repeater due to these wiring connections being connected to Port 1 of TB1 at the next/previous repeater. When no twisted pair wiring is made to Port 1 of TB1 jumpers J2 and J3 must be left OPEN at the repeater. This would be the case when using fiber optic cable or when Port 2 of TB1 is only being used.
4. On fiber optic repeaters, jumpers J4 through J9 are normally left OPEN. See IFP-RPT installation instruction (PN 9001-0061) for determining when to use J4 through J9. Fiber optic ports that are not used must have their dust caps placed on the port.
5. Based on the type of network repeater board chosen, run the twisted pair wiring /fiber optic cable to the next network repeater using a BUS or style 7 (class A) wiring method. A combination of both repeater types can be used. See Figure 5-6 on page 5, Figure 5-7 on page 6, Figure 5-8 on page 7, and Figure 5-9 on page 8 for repeater wiring examples.

5.4.2.1 Network Repeater Cable Requirements

Cable requirements for wire runs between repeaters.

1. All fiber cable must be multimode 62.5/125 micron cable with ST type connectors. It is important that the cable be verified to contain no more than 8dB of loss including the connectors.
2. Twisted pair wiring must be UNSHIELDED twisted pair conductor cable. The wire gauge must be 18 AWG or larger. The maximum wire length is 3000 ft. between repeaters.

5.4.2.2 Unshielded Twisted Pair Wiring between Multiple Panels

Unshielded twisted pair wiring between multiple panels is shown in Figure 5-6. Class A wiring is shown with a dotted line.

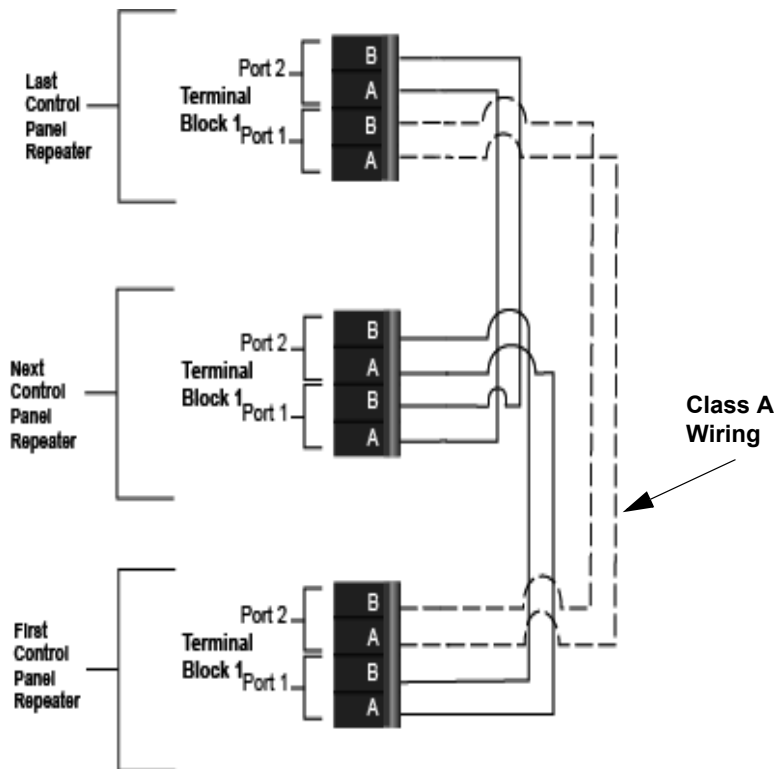


Figure 5-6 Twisted Pair Wiring Configuration

5.4.2.3 Fiber Optic Repeater Wiring between Multiple Panels

Fiber optic cable between multiple panels is shown in Figure 5-7 on page 6. Class A is shown with a dotted line.

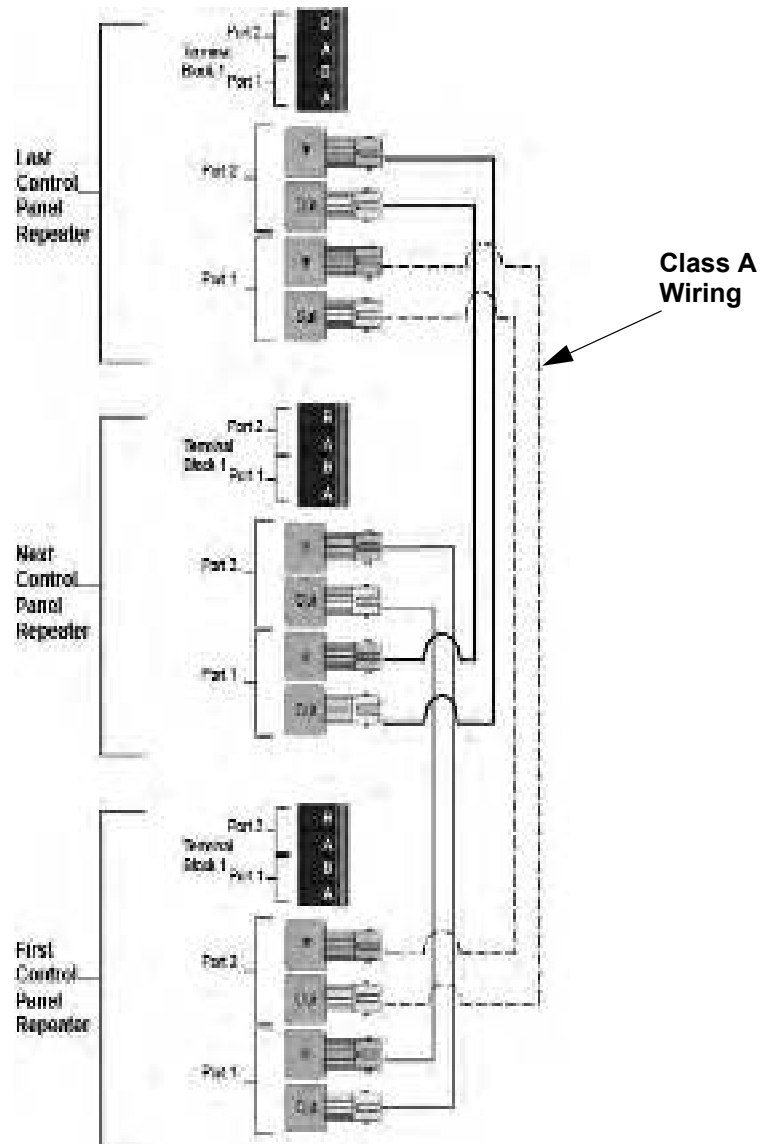


Figure 5-7 Fiber Optic Wiring Example

5.4.2.4 Fiber Optic and Twisted Pair Repeater Wiring between Multiple Panels

A mixture of fiber optic cable and twisted pair wiring between multiple panels is shown in Figure 5-8 on page 7.

Class A cabling is shown with dotted line.

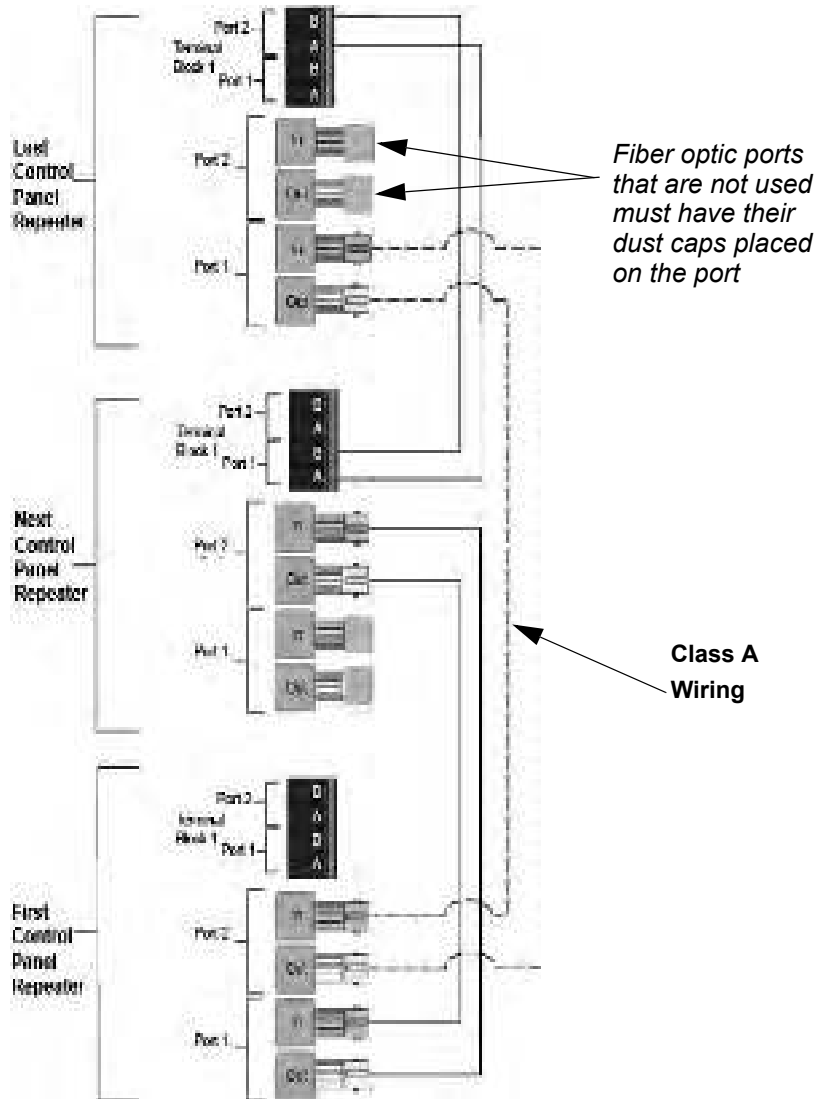


Figure 5-8 Twisted Pair and Fiber Optic Combination Wiring Example

5.5 Using Both Repeaters and Direct Connect Wiring on a Networked System

Figure 5-9 on page 8 below shows a network wiring example using both repeaters and direct connect wiring. All repeaters in the system must be placed only on panels that are at the ends of a direct connect BUS or connected to panels with no direct connect network wiring.

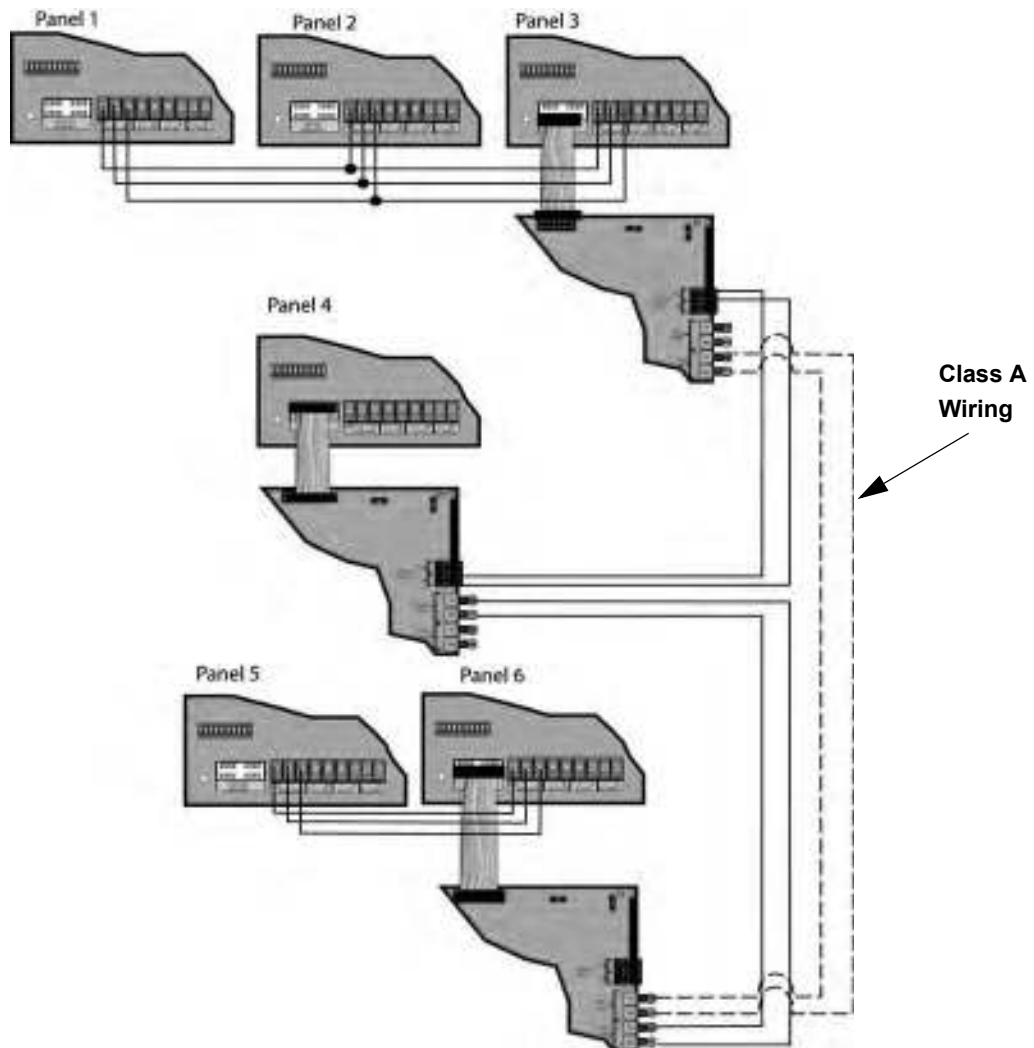


Figure 5-9 Network Wiring Example Using Both Repeaters and Direct Connect Wiring

5.5.1 Setting the Network Terminators at Panel DIP Switches and Repeater Jumpers

Use the following steps for determining DIP switch and jumper settings.

1. DIP switch positions 8 through 10 on the control panel are used for direct connect network BUS termination. When a panel is located at the end of a direct connect BUS and it does NOT have a repeater connected, DIP switches 8, 9 and 10 must be ON. When a panel is not direct connected to other panels, but a repeater is used

to network the panel, its DIP switches 8, 9, and 10 must be ON. Otherwise, DIP switches 8, 9 and 10 are always OFF.

2. Jumper J1 on the network repeater is always CLOSED. Newer designs have this jumper permanently CLOSED. On older designs you had to physically install the jumper CLOSED.
3. Jumpers J2 and J3 for the network repeater should be present (jumper is CLOSED) only when a twisted pair is connected to Port 1 of terminal block TB1. Jumpers J2 and J3 are used to enable earth ground fault monitoring at Port 1 of terminal block TB1.
4. It is a requirement that an insulated wire be run between the network repeater terminal G (TB2) and an earth grounding screw at the control panel for all network repeater installations.

The following text details how the panel and repeater terminators must be set for the network example in Figure 5-9 on page 8.

Panel 1 is at the end of a direct connect BUS and it does not have a repeater, so its DIP switches 8, 9 and 10 must be ON to provide direct connect BUS termination.

Panel 2 is NOT at the end of a direct connect BUS so its DIP switches 8, 9 and 10 must be OFF.

Note: A repeater would not be allowed to be connected to panel 2 in this example because it is not at the end of a direct connect BUS.

Panel 3 looks like it is at the end of a direct connect BUS, but because it has a repeater connected to it, DIP switches 8, 9 and 10 at panel 3 must be OFF. The direct connect BUS termination is provided by the repeater through jumper J1. Recall that jumper J1 must be placed (CLOSED) as this is the rule for ALL repeaters. Jumpers J2 and J3 on the repeater of panel 3 must be OPEN because no wires are connected to the repeater twisted pair terminals 1 and 2 of TB1.

Panel 4 is not directly connected to other panels but it is effectively direct connected to its repeater which electrically behaves the same as a direct connected BUS between panels. Because panel 4 is connected only to its repeater its DIP switches 8, 9 and 10 at panel 4 must be ON to provide direct connect BUS termination. Jumper J1 of the repeater must also be placed (CLOSED) to provide the other direct connect BUS termination and because the rule for repeaters is that Jumper J1 must always be placed (CLOSED). Repeater jumpers J2 and J3 must be placed (CLOSED) because a wired twisted pair is connected to terminals 1 and 2 of TB1. Connecting these jumpers enables earth ground fault monitoring of the twisted pair wire between the repeater of panel 4 and panel 3.

Panel 5 is at the end of a direct connect BUS so its DIP switches 8, 9 and 10 must be ON to provide the direct connect BUS termination.

Panel 6 looks like it is at the end of a direct connect BUS, but because it is also using a repeater its DIP switches 8, 9 and 10 must be OFF. In this example, panel 6 is actually in the middle of a direct connect BUS between panel 5 and the repeater of panel 6. Jumper J1 of the repeater is placed (CLOSED) and provides the termination. Jumpers J2 and J3 for the repeater must be OPEN because no wires are connected to the twisted pair Port 1 of TB1.

5.6 Setting the Network ID for each Panel

Note: It is important that much thought is given when choosing the network IDs for each panel. It is difficult to change the IDs once panel programming has begun.

The network ID for each panel is set using DIP switch positions 1 through 7. See Figure 5-10 on page 10 below for possible DIP switch settings.

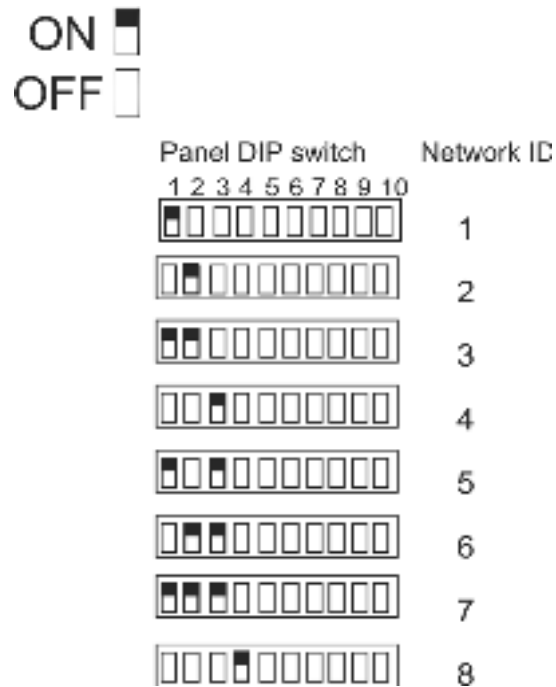


Figure 5-10 Network ID Settings



Section 6

Network Management

6.1 Network Diagnostics

6.1.1 Ping Panel

The Ping Panel menu allows you to continually ping any panel programmed into the network. As the selected panel is being pinged, the Ping Panel screen will display the reply time, minimum and maximum reply times, and sent and received counters.

1. Enter the Installer Code. The panel will automatically go to the main menu.
2. Select 5 for Network Diagnostics.
3. Press 1 to enter the Ping Panel Menu.
4. Press the  or  arrow to select Network Panel ID. Press ENTER to Ping panel.


6.1.2 Network Status

The Network Status screen will display statistics that are indicators of Network performance.

1. Enter the Installer Code. The panel will automatically go to the main menu.
2. Select 5 for Network Diagnostics.
3. Press 2 to enter the Network Status menu.

6.1.3 Repeater Power

1. Enter the Installer Code. The panel will automatically go to the main menu.
2. Select 5 for Network Diagnostics.
3. Press 3 to enter the Repeater Power menu. The following message will appear:

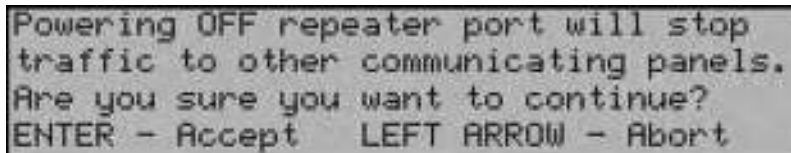

```
Powering OFF repeater port will stop
traffic to other communicating panels.
Are you sure you want to continue?
ENTER - Accept  LEFT ARROW - Abort
```

6.2 Network Programming

This section of the manual describes how to program network options using the built-in annunciator. All options described in this section can be programmed using the Silent Knight Software Suite (SKSS-2). To edit site assignments, SKSS-2 must be utilized.

6.2.1 Learn Network

The Learn Network menu shows you all of the panels connected to the network. Any panel that has been

programmed into the network will appear as a “member.” Any panel that is connected to the network but not programmed into the network will appear as a “guest.” You can add guest panels to the network by changing their status to member in this menu. Panels showing OK are currently responding on the network. Panels not showing OK have either been removed or are not responding due to networking problems. See Section Figure 6.1 on page 1 for Network Diagnostics.

1. Enter the Installer Code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming.
3. Press 1 to enter the Learn Network menu.
4. Press ENTER to add or remove panels connected to the network as member or guest.

Note: If adding panels to network, the system will automatically run the Sync Network Options. you will be required to select which panel to distribute network options from. See Section 6.6.

6.2.2 Edit Network Names

The Edit Network menu allows you to edit the panel name and edit the panels site name.

To Edit Panel Names:

1. Enter the Installer Code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming.
3. Press 2 to enter the Edit Network Names menu.
4. Press 1 to Edit Panel Name. Choose Panel to edit. See Figure 6-1.

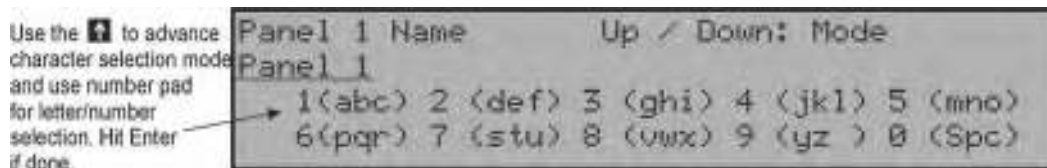


Figure 6-1 Edit Panel Name

To Edit Site Names:

5. Press 2 to Edit Site Name. Choose Site to edit. See Figure 6-2.

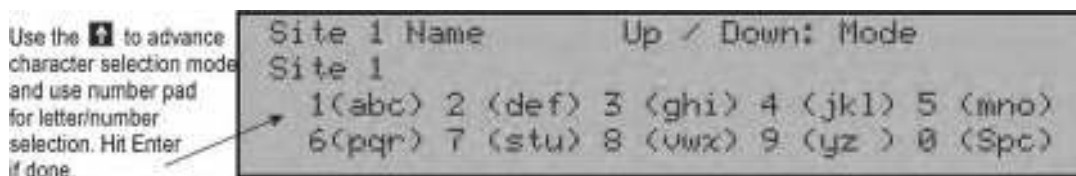


Figure 6-2 Edit Site Name

See Appendix B for a list of available characters and their numeric designators.

6.2.3 Edit Panel ID

This menu option allows you to change the current Network Panel ID. It is best to carefully consider the network ID setting for each panel. Take into account any future panels that will be added to the network (future wiring of two buildings together). The Network Panel ID setting has to be unique for each panel on the network.

This menu will allow you to change the currently assigned Network Panel ID to the current Network ID dip

switch setting. The system will be down as the panel needs to reboot in order to complete the transition.

When using the PC configuration software to program the panels, the Network Panel ID will be locked from future editing. The only way to change it will be to restore defaults and use this menu again.

To Edit the Network Panel ID:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming.
3. Press 3 to enter the Edit Panel ID menu.
4. If the Network Panel ID is changed and valid, the system will ask you to confirm the change. If it is not correct, you can change the dip switches at this time.
5. Press up to select YES and press ENTER to confirm.

6.2.4 Computer Access

An installer at the panel site can initiate communications between the panel and a computer running the SKSS-2 (see also Section 10.4.14). In order for this communication to function properly, both the computer (running the software) and the control panel must have matching computer access numbers and computer codes.

Before you program in this location you should know how your control panel will communicate with the downloading computer, either through direct connect USB or via the phone lines (Internal Modem).

If the panel initiates the call to a downloading computer, a computer phone number must be programmed in the computer access area. If the computer initiates the call, answering machine bypass may need to be selected (see Section 9.6.2.7).

To program computer access information:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming.
3. Press 4 to enter the Computer Access menu.
4. Enter the computer access number (up to 6-digits), then press ENTER.
5. Enter the computer code, then press ENTER.
6. Enter the computer phone number, the panel will dial to connect to a downloading computer (up to 40-digits), then press ENTER.

6.3 Access Codes

Access codes provide the user access to the control panel functions. Each access code can be customized for each user. This allows some users the ability to access programming and other higher level panel functions, while other users may only need access to lower level functions such as performing fire drills, or acknowledging trouble conditions.

Profile 1 is the profile that dictates what functions the Fire Fighter Key has access to. Because this is the profile for a key, the user name and the access code can not be edited for this profile.

Profile 2 is the profile for the installer and is referred to as the “Installer Code”. This profile’s user name and panel functions can not be edited. Table 7-9 lists the panel functions that can be selected for each user profile.

Table 6-1: User Profile Selectable Panel Functions

Type of Function	Selectable Functions
Panel Operations	System Reset
	System Silence
	System Ack
	Fire Drill Key
	Multi-site
	F1 Function Key
	F2 Function Key
	F3 Function Key
	F4 Function Key
	ECS Control Request Function
	ECS Super User Function



Table 6-1: User Profile Selectable Panel Functions

Type of Function	Selectable Functions
Panel Menus	System Tests
	Fire Drill Menu
	Indicator Test
	Walk Test-No Report
	Walk Test -With Report
	Dialer Test
	Clear History Buffer
	Point Functions
	Disable/Enable Point
	Point Status
	Set SLC Device Address
	SLC Single Device Locator
	SLC Multiple Device Locator
	I/O Point Control
	Event History
	Set Time & Date
	System Information
	Upload/Download
	Network Diagnostics
	Network Programming
Panel Programming	

To change an access code:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming Menu.
3. Select 5 for Access Codes.

Display reads: *Select Profile 01*
Fire Fighter's Key

4. Select the access code you wish to edit by pressing the  or  arrow.
5. Then press ENTER.

Profile Edit Menu

From the Profile Edit Menu you can change the users name, access code, and the panel functions that the user will have access to with their code.

Note: Profile 1 (Fire Fighter's Key) the user name and access code can not be edited. Profile 2 (Installer) the user name and panel functions can not be edited. Profile 3 (Multi-Site Installer) is defaulted with the Multi-Site access option, but the entire profile can be edited.





6.3.1 Edit Name

6. See Appendix B for a list of available characters and their numeric designators.
7. Then press ENTER to finish.

6.3.2 Edit Access Code

8. Enter new access code (minimum of 4 digits, maximum of 7 digit).
9. Press ENTER.
10. Enter code again. Press ENTER.

6.3.3 Panel Functions

11. Press the  or  arrow to move through the list of available functions.
12. Then press the right arrow to move to Y (yes) or N (no) selection column.
13. Press the  or  arrow to select Y or N.
14. Press ENTER.
15. Repeat steps 12 through 15 until user profile is complete.

6.4 Dialer

Dialer Options

To edit Dialer Options, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
Note: See Section 12 for reporting events.
2. Select 6 for Network Programming.
3. Press 6 for Dialer.

6.4.1 Dialer Assignments

Each panel on the IFP-2000 network specifies which network dialer is used for reporting. The network dialer capability of the IFP-2000 system allows all panels to use the same dialer providing an economical solution for reducing the number of phone lines required for reporting purposes. A dialer is specified by panel number. The network dialers will be used to report events according to the dialer report table.

6.4.2 Dialer Miscellaneous

When using the SIA reporting format, the dialer sends modifier information according to the SIA Modifier option. The selections for this option are enable pi SIA Modifier, Yes or No. The default selection is Yes. If set to "No", the panel ID will be included as part of the SIA event string.

6.4.3 Receiver Configuration

The IFP-2000 network can report events to as many as four receivers. Each receiver is assigned a phone number and reporting format. Phone numbers can be up to forty digits long. Format choices are SIA, Contact ID, or

Unused.

6.4.4 Dialer Report Table

The Dialer Report Table specifies event reporting for each panel on the network. Each row in the table specifies a panel, event types to report, primary and backup reporting channel, and report by point or zone. Associated with the receivers are account number and daily test option. The table can have up to 99 rows.

6.5 Voice Options

6.5.1 Edit Timers

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming.
3. Select 7 for Voice Options.
4. Choose Site.
5. Select 1 for Edit Timers

6.5.1.1 Control Lockout

The Control Lockout countdown timer is set to the programmed value when an LOC gains ECS Control. The timer starts over upon any key press at the ECS Control LOC. While the Control Lockout timer is active, an LOC of equal priority must request ECS control. The Control Lockout timer is cleared when ECS Control is relinquished. The Control Lockout timer does not apply to ECS Super User control.

Select Immediate/Timer/Never

Range 0-720 min/0-59 sec

6.5.1.2 Auto Reset ECS Custom Event/Auto Reset ECS Event

If the Timer is selected, the event will automatically reset after being active for the programmed time. If Event Disabled is selected, the event will not be allowed to be activate from an LOC Station. Selecting Never will require an emergency system reset to be performed to reset the event.

Select Never/Timer/Event Disabled, Range from 1-240 min

Table 6-2 Auto Reset ECS Custom Event ECS Timer Menu

ECS Timer	Option
Control Lockout	Immediate/Timer/Never
Auto Reset ECS Custom Event	Never/Timer/Event Disabled
Auto Reset ECS Event 1	Never/Timer/Event Disabled
Auto Reset ECS Event 2	Never/Timer/Event Disabled
Auto Reset ECS Event 3	Never/Timer/Event Disabled
Auto Reset ECS Event 4	Never/Timer/Event Disabled
Auto Reset ECS Event 5	Never/Timer/Event Disabled
Auto Reset ECS Event 6	Never/Timer/Event Disabled
Auto Reset ECS Event 7	Never/Timer/Event Disabled
Auto Reset ECS Event 8	Never/Timer/Event Disabled

6.5.2 Edit Voice Commands

When a voice output group is selected to be activated by a zone, the cadence pattern choice does not apply. For voice output groups, one of six system wide voice commands will activate instead of the cadence pattern.

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming Menu.
3. Select 7 for Voice Options.
4. Choose Site.
5. Select 2 for Edit Voice Commands.
6. Select the command you wish to edit:

Table 6-3 Voice Command Mapping

System Event	System Event
Fire Alarm	Emergency Communication 7
Fire System Aux 1	Emergency Communication 8
Fire System Aux 2	Fire Supervisory
Fire Zone Aux 1	System Alert 1-5
Fire Zone Aux 2	Trouble
Fire Pre Alarm	Fire Interlock Release
Emergency Communication 1	Fire Interlock Alert
Emergency Communication 2	Custom Emergency Comm
Emergency Communication 3	Emergency Supervisory
Emergency Communication 4	CO Alarm
Emergency Communication 5	CO Supervisory
Emergency Communication 6	

7. Select whether a Message or Tone Only should be played. If Message is selected, choose the desired message for the command.
8. Select the tone to be played between messages. (High-Lo, ANSI Whoop, Cont. Whoop, ANSI, March Code, California, Steady, Alert Tone, or No Tones).

Note: 520Hz tones are available when using ECS-VCM, ECS-INT50W or ECS-Dual50W AMP's. These include ANSI 520, Temp 4 520, Steady 520. See Table A-7 for a list of compatible speakers.

9. Select how many times you wish the message to repeat. (None, 1 - 14, or Continuous).
10. Select the initial delay time (0 to 28 seconds, in 4 second increments).
11. Select the inter message delay time (4 to 32 seconds, in 4 second increments).
12. Select Y or N to allow message to continue to play after Mic release.
13. Select Y or N to allow message to restart on a new activation.

6.6 Sync Network Options

If after making changes to network programming, the distribution of network options fail, the system will report a trouble of network options out of sync. Use this menu to redistribute changed options to the rest of the network. The user will be required to choose a panel to source the options from. Scroll down through the informational message and press ENTER to view the Select Source screen.

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 6 for Network Programming Menu.
3. Select 8 for Sync Network Options.
4. Select which panel to source the options from.

Last time the date & time were updated on panel.

Select Source	Last Modified	Chk sum
01 = Panel 1	04/12/13 12:20	0F8B
02 = Panel 2	04/15/13 09:45	0F8A
03 = Panel 3	04/15/13 09:46	0F8A

If 2 panels have the same chk sum, network options are in sync.

6.7 Network Management Quick Reference

	Menu	Options/Defaults			Comments	
Network Programing	Learn Network	Guest or member	Add or remove panels into the network		See Section 6.2.1	
	Edit Network Names	Panel Names	Network Panel ID	Edit Panel Names	See Section 6.2.2	
		Site Names	Edit Site Member	Edit Site Names		
	Edit Panel ID	Change current panel ID			See Section Figure 6.2.3 on page 2	
	Computer Access	Computer Access Number	*123456		See Section 6.2.4	
		Computer Code	*0			
		Computer Phone Number	Up to 40 digits			
	Access Codes	Select Profile (01 - 20)	Panel Functions	Edit Name		Profile 1 is the profile that dictates what functions the Firefighter Key has access to. Because this is the profile for a keys, the user name and the access code can not be edited for this profile.
				Edit Access Code		
				System Reset		Profile 2 is the profile for the installer and is referred to as the "Installer Code". This profile's user name and panel functions can not be edited. See Section 6.3.
				System Silence		
				System ACK		
				Fire Drill Key		
				System Tests		
				Fire Drill Menu		
				Indicator Test		
				Walk Test-No Report		
Walk Test-With Report						
Dialer Test						
Clear History Buffer						
Point Functions						
Disable/Enable Buffer						
Point Status						
Set SLC Device Address						
SLC Single Device Locator						
SLC Multi-Device Locator						
I/O Point Control						
Event History						
Set Time & Date						
Network Diagnostics						

	Menu	Options/Defaults			Comments	
Network Programming (cont.)	Access Codes	Select Profile (01 - 20)	Panel Functions	Network Programming	Profile 1 is the profile that dictates what functions the Firefighter Key has access to. Because this is the profile for a keys, the user name and the access code can not be edited for this profile. Profile 2 is the profile for the installer and is referred to as the "Installer Code". This profile's user name and panel functions can not be edited. See Section 6.3.	
				Panel Programming		
				System Information		
				Upload/Download		
				Multi-Site		
				Upload/Download		
				F1 Function Key		
				F2 Function Key		
				F3 Function Key		
				F4 Function Key		
				ECS Control Request Function		
				ECS Super User Function		
	Dialer	Dialer Assignments	Select Panel	Primary	0= unused	See Section 6.4.1
				Enable pi SIA Modifier	Yes	See Section 6.4.2
		Dialer Miscellaneous	No			
			Receiver Configuration	Select Receiver	Receiver Number (1-4)	See Section 6.4.3
		Receiver Format			Contact ID	
				SIA500		
				SIA8		
				SIA20		
UNUSED						
PHONE Number						
Dialer Report Table			Panel	See Section 6.4.4		
			Report Alarms			
			Report Supervisory			
			Report Troubles			
			Report Events by Point			
			Primary Receiver			
			Primary Account			
			Test Primary Account			
			Secondary Receiver			
			Secondary Account			
Test Secondary Account						

	Menu	Options/Defaults		Comments		
Network Programming (cont.)	Voice Options	Choose Site	Edit Timers	Control Lockout	Immediate/Timer/Never	See Section 6.5.1
				Auto Reset ECS Event 1-8	Never/Timer/Event Disabled	
				Auto Reset ECS Custom Event		
			Edit Voice Commands	Fire Alarm	See Section 6.5.2	
				Fire System Aux 1		
				Fire System Aux 2		
				Fire Zone Aux 1		
				Fire Zone Aux 2		
				Fire Supervisory		
				Fire Pre Alarm		
				Custom Emergency Comm		
				Emergency Communication 1-8		
				System Alert 1-5		
				Trouble		
	Fire Interlock Release					
Fire Interlock Alert						
Emergency Supervisory						
CO Alarm						
CO Supervisory						
Sync Network Options				See Section 6.6		

Section 7

IDP and SD SLC Device Installation

Caution!

To avoid the risk of electrical shock and damage to the unit, power should be OFF at the control panel while installing or servicing.

7.1 List of IDP SLC Devices

The following IDP SLC devices can be used with the control panel. See the device installation instructions (packaged with the device) for more information.

Note: The control panel supports the use of either IDP SLC devices or SD SLC devices. You cannot install both SLC device types on the control panel.

Part Numbers	Model Name/Description	Installation Sheet PN
IDP-Photo	Photoelectric smoke detector	156-3611-000
IDP-Photo-T	Photoelectric smoke detector with thermal (135°F)	
IDP-Acclimate	Multi-criteria photoelectric smoke detector with thermal (135°F)	
IDP-PhotoR	Photoelectric replacement smoke detector with remote test capability in DNR	156-3569-000
IDP-Beam	Reflected beam smoke detector without test feature	156-2735-00
IDP-Beam-T	Reflected beam smoke detector with test feature	
IDP-ION	Ionization smoke detector	156-3607-00
DNR/DNRW	Duct smoke detector housing. Non-relay (photo sold separately)	156-3051-000
IDP-Heat	Fixed temperature thermal detector (135°F)	156-3608-000
IDP-Heat-ROR	Rate-of-rise thermal detector with 135° fixed temperature	
IDP-Heat-HT	Fixed high temperature thermal detector (190°F)	
IDP-Pull-SA	Addressable single action pull station	156-3606-000
IDP-Pull-DA	Addressable dual action pull station	156-3605-000
IDP-ISO	Fault isolator module	156-2729-000
ISO-6	Six Fault isolator module	156-4096-000
IDP-Monitor	Monitor module	156-3603-000
IDP-Minimon	Mini monitor module	156-2726-002
IDP-Monitor-2	Dual input monitor module	156-2730-000
IDP-Monitor-10	10 input monitor module	156-2731-000
IDP-Relay	Relay module	156-2729-000
IDP-Relay-6	Six circuit relay module	156-2729-000
IDP-RelayMon-2	Multi module with 2 relay outputs & 2 monitor inputs	156-3734-000
IDP-Zone	Zone interface module	156-3602-000
IDP-Zone-6	Six zone interface module	156-2733-000
IDP-Control	Supervised control module	156-3600-000
IDP-Control-6	Six circuit supervised control module	156-2734-000
IDP-FIRE-CO	CO Smoke Detector	156-3946-00
B200SR-LF	Low Frequency Sounder Base	156-4152-00

Part Numbers	Model Name/Description	Installation Sheet PN
B200S-LF	Low Frequency Sounder Base	I56-4151-00
B200S	Intelligent sounder base	I56-3387-00
B210LP	6" mounting base	I56-0595-000
B224BI	6" isolator base	I56-0725-000
B224RB	6" relay base	I56-3737-000
B200SR	Sounder base	I56-3392-000
B501	4" mounting base	I56-0357-000

7.2 List of SD SLC Devices

The following SLC devices can be used with the control panel. See the appropriate section number in this manual or the device installation instructions (packaged with the device) for more information.

MODEL NUMBER	MODEL NAME/DESCRIPTION	Installation Sheet PN
SD505-APS	Photoelectric smoke detector	150955
SD505-AIS	Ionization smoke detector	150955
SD505-AHS	Absolute temperature heat detector. Trip point range from 135°F-150°F (0°-30°C)	150955
SD505-6AB	6" base for use with the SD505-AHS, SD505-AIS, and SD505-APS.	150955
SD505-6IB	6" short circuit isolator base for use with the SD505-AHS, SD505-AIS, and SD505-APS	151175
SD505-6RB	6" relay base for use with the SD505-AHS, SD505-AIS, and SD505-APS	151192
SD505-6SB	6" sounder base for use with the SD505-AHS, SD505-AIS, and SD505-APS SLC devices	151191
SD505-DUCT	Duct Housing including the SD505-APS Analog Photoelectric Smoke Sensor. Intake tubing for duct available in three lengths: SD505-T2 (2.5 foot); SD505-T5 (5 foot); SD505-T10 (10 foot)	1700-098
SD505-DUCTR	Duct housing with relay base including SD505-APS Analog PhotoElectric Smoke Sensor	
SD500-PS/-PSDA	Single or dual action addressable pull station	151177
SD500-AIM	Addressable input module (switch input), standard size, DIP switch configurable	151071
SD500-MIM	Mini input monitor module (switch input), small size, DIP switch configurable. Fits in single-gang box with manual pull station switch.	151071
SD500-ANM	Addressable notification module	151109
SD500-ARM	Addressable relay module DIP switch configurable.	151091
SD500-SDM	Addressable smoke detector module. Use to assign an address to a loop of conventional devices.	151193
SD500-LIM	Line isolator module. Fits in a double gang box.	151125
SD500-LED	Addressable LED driver module. Capable of driving up to 80 LEDs. Up to 40 SD500-LED Driver Modules can be used per SLC loop.	151232
SD505-DTS-K	Remote test switch & LED indicator for the SD505-DUCTR	1700-09882

7.3 Maximum Number of SLC Devices

The IFP-2000 supports IDP or SD SLC devices. The maximum number of SLC devices per panel is 636. The number of 5815XL is limited only by the SBUS bandwidth, 636 point count, and 1A SBUS current limit. Device support is as follows:

IDP Devices - The IFP-2000 supports a total of 636 IDP points. The SLC points can be all sensors or all modules or any combination of modules and sensors.

or

SD Devices - The IFP-2000 system can support a total of 636 SD SLC detectors and modules, in any combination.

7.4 Wiring Requirements for SLC Devices

The following information applies to all SLC devices. Refer to the section that describes the type of device you are installing for details.

7.4.1 Wiring 5815XL in Style 4 (Class B) Configuration

No special wire is required for addressable loops. The wire can be untwisted, unshielded, solid or stranded as long as it meets the National Electric Code 760-51 requirements for power limited fire protective signaling cables. Wire distances are computed using copper wire.

Maximum wiring resistance is 40 ohms for IDP devices and 50 ohms for SD devices.

Maximum loop length depends on the wire gauge. See Table 7-1 for IDP and Table 7-2 for SD.

Table 7-1 Maximum wiring distance for IDP modules

Wire Gauge	Max. Distance for IDP
22 AWG	1200 feet
18 AWG	3100 feet
16 AWG	4900 feet
14 AWG	7900 feet
12 AWG	10,000 feet

Table 7-2 Maximum wiring distance for SD devices

Wire Gauge	Max. Distance for SD
22 AWG	1500 feet
18 AWG	3900 feet
16 AWG	6200 feet
14 AWG	10,000 feet

Figure 7-1 and Figure 7-2 show how wire length is determined for out-and-back tap and T-tap style wiring.

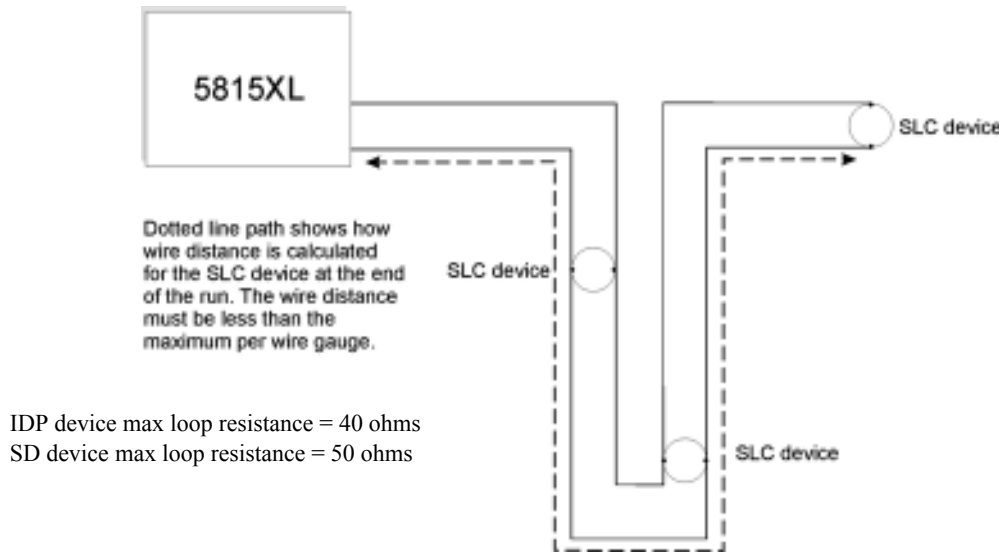


Figure 7-1 Calculating wire run length for a simple out and back tap

When using T-taps, the total length of all taps and the main bus must not exceed 40,000 feet. This requirement must be met in addition to the maximum distance requirements for the various wire gauges.

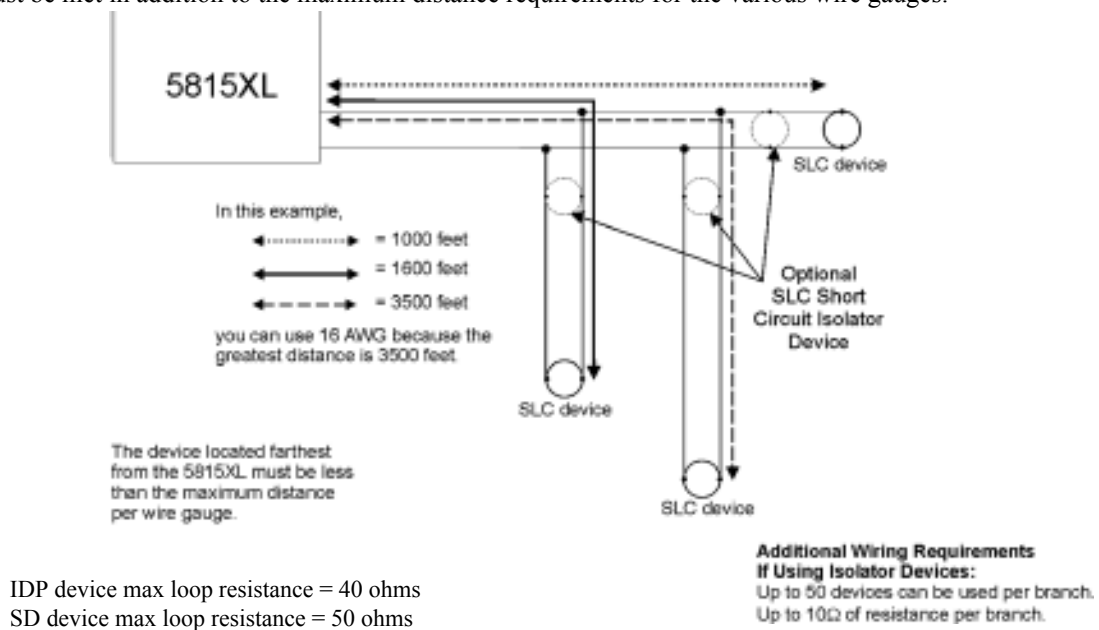


Figure 7-2 Calculating Wire Run Length for a T-tap

7.4.2 Wiring 5815XL in Style 6 & 7 (Class A) Configuration

Figure 7-3 on page 5 illustrates how to wire the SLC loop for Style 6 or Style 7 Class A installations.

Note: Style 6 does not use short circuit isolator devices

Note: Style 7 requires an isolator module as the first device on the in and the out loops.

Note: No t-taps allowed on Class A SLC loops

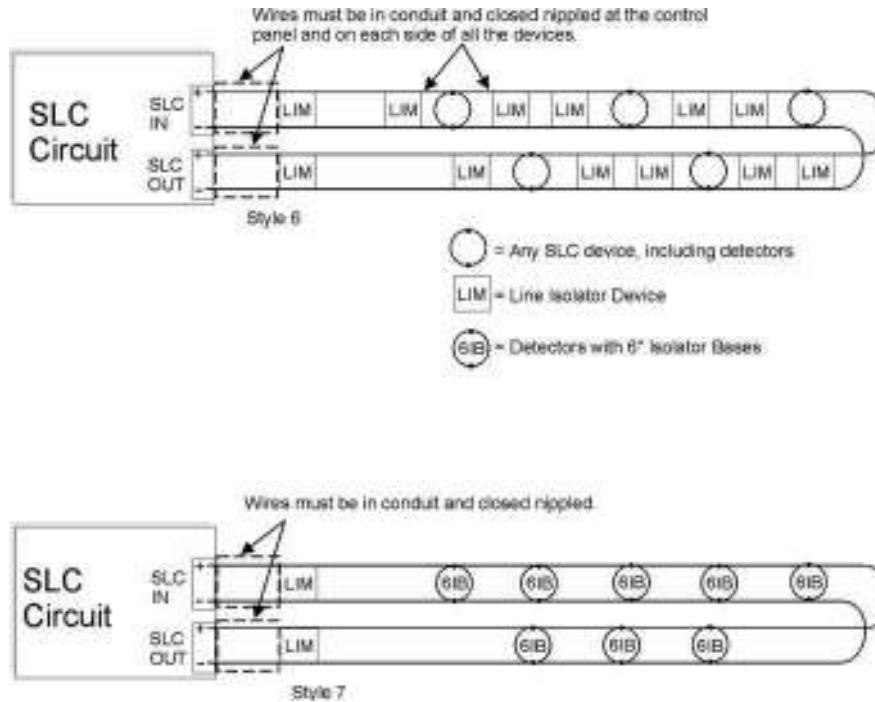


Figure 7-3 Class A SLC Configuration

Caution

For proper system supervision do not use looped wire under terminals marked SLC + and – of the SLC device connectors. Break wire runs to provide supervision of connections.

7.5 Wiring IDP SLC Detectors

This section describes how to install IDP heat and smoke detectors. All detectors ship with installation instructions. Refer to each detector's installation instructions for more detailed information.

This information applies to the following IDP models:

IDP-Photo Photoelectric Smoke Detector

IDP-Photo-T Photoelectric Smoke Detector with Thermal

IDP-Acclimate Multi-criteria Photoelectric Smoke Detector with Thermal

IDP-Heat Fixed Thermal Detector (135° F)

IDP-Heat-HT High Temperature Thermal Detector (190° F)

IDP-Heat-ROR Rate-of-Rise Thermal Detector

IDP-Ion Ionization Smoke Detector

IDP-Fire-CO CO Detector

To wire IDP detectors:

1. Wire device bases as shown in Figure 7-4.
2. Set the address for each device as described in Section 7.6.

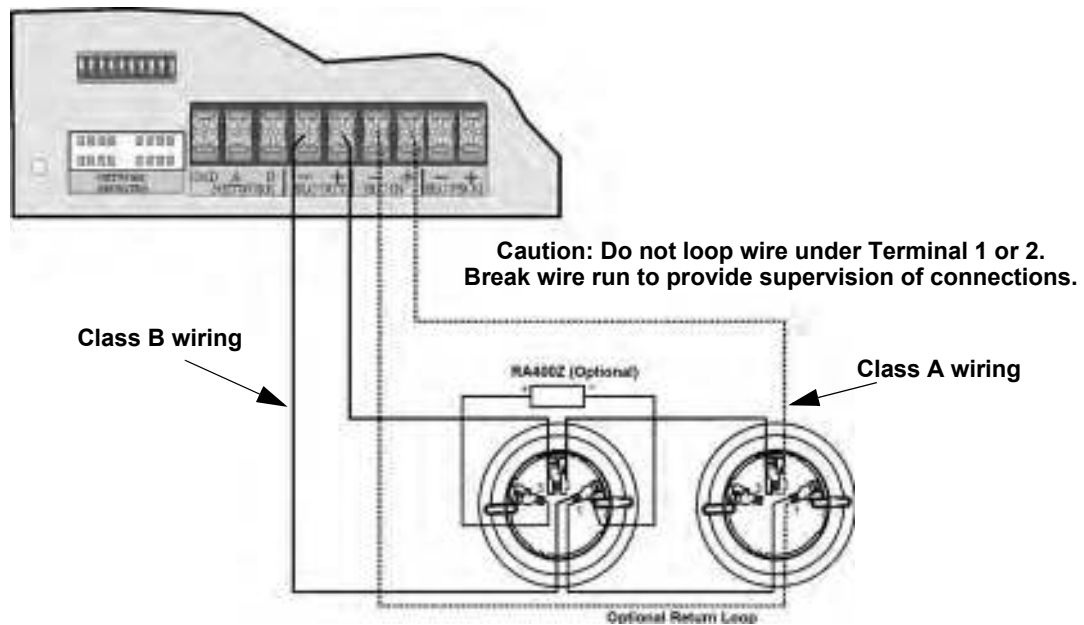


Figure 7-4 Heat and Smoke Detector Connection to the Panel.

7.6 Addressing IDP SLC Devices

All IDP devices are addressed using the two rotary dials that appear on the device board. Use the *ONES* rotary dial to set the ones place in a one or two digit number, and use the *TENS* rotary dial to set the tens place in a two or three digit number.

The control panel recognizes when an IDP detector or IDP module is installed. For this reason, IDP detectors can be assigned any unique address from 1 to 159, and IDP modules can be assigned any unique address from 1 to 159. There can be an IDP detector using address 1 and an IDP module using address 1.

0 is an invalid address. In order to set the sensor above address 99, carefully remove the stop on the upper rotary switch with thumb as shown in Example 2.

Example 1: To select device address 35, turn the *ONES* rotary dial to **5** and the *TENS* rotary dial to **3** as shown in Figure 7-5.

Example 2: To select device address 105, turn the *ONES* rotary dial to **5** and the *TENS* rotary dial to **10** as show in Figure 7-5.

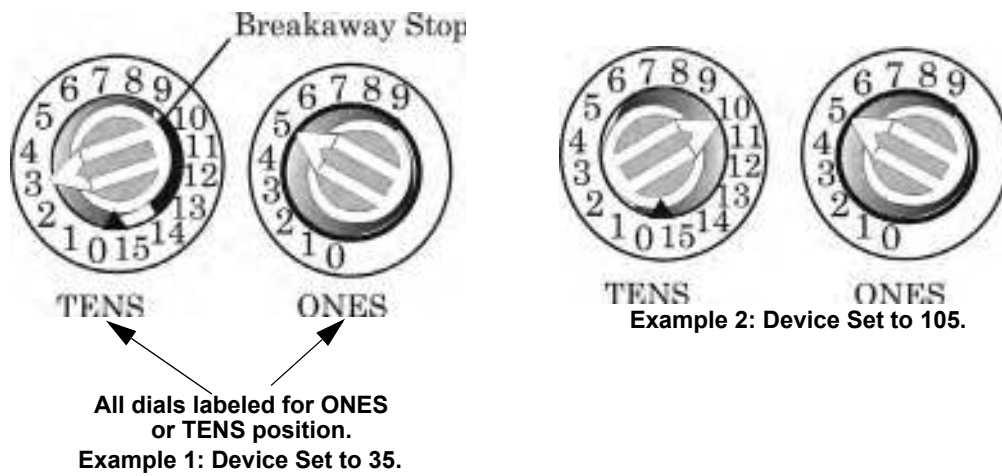


Figure 7-5 IDP SLC Device Addressing Using Rotary Dials

7.7 Wiring SD Detectors

This section describes how to install SD heat and smoke detectors. All detectors ship with installation instructions. Refer to each detectors' installation instructions for more detailed information.

This information applies to the following SD models:

SD505-AHS Heat Detector

SD505-AIS Ionization Smoke Detector

SD505-APS Photoelectric Smoke Detector

To wire SD505-APS, SD505-AHS, or SD505-AIS detectors:

1. Wire device bases as shown in Figure 7-6.
2. Set the address for each device as described in Section 7.8.

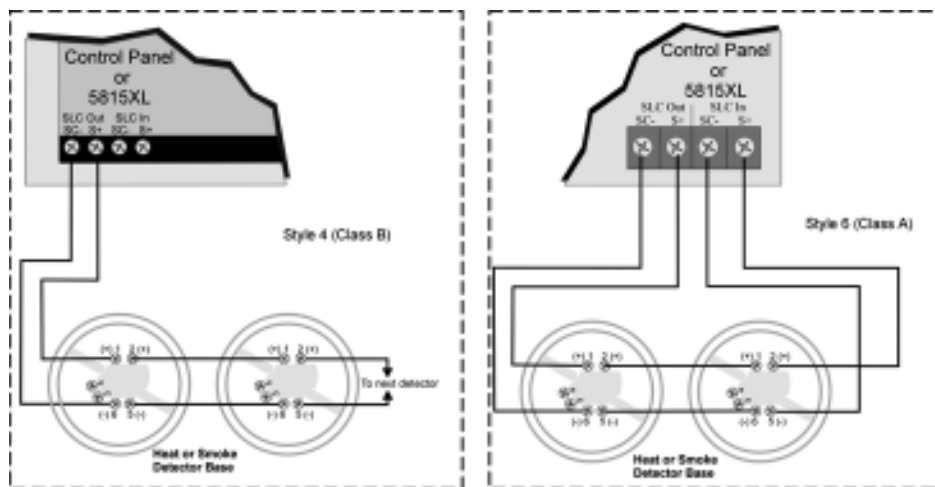


Figure 7-6 Heat or Smoke Detector Connection to the FACP

7.8 Addressing SD Devices

This section explains how to address SD detectors and modules.

7.8.1 SD505-APS, SD505-AHS, & SD505-AIS

The SD505-APS photoelectric smoke detector, SD505-AHS heat detector, and SD505-AIS ionization smoke detector are easily addressed at the FACP. An access code with the option to set SLC Device Address enabled is required to perform this task.

To address a SD505-APS, SD505-AHS, or SD505-AIS:

1. Connect a detector base temporarily to the programming terminals as shown in Figure 7-7. (You can use the same base for each detector.)

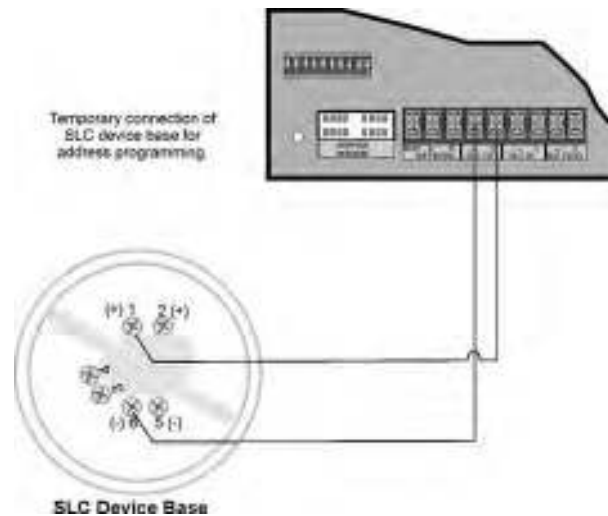


Figure 7-7 Temporary Connection of Detector Base to Panel for Addressing

2. Enter the Installer Code. The panel will automatically go to the main menu.
3. Select 2 for Point Functions.
4. Select 3 for Set SLC Dev Addr.
5. Select “Yes” by pressing the up arrow, then press ENTER. (The panel will go into trouble at this point. You can use the SILENCE key to stop the PZT. The trouble will clear automatically when the panel re-initializes when you finish programming.)
6. When the wait message clears, the following options display:
 - 1 for Read Address. Use to read (or check) a single detector’s address.
 - 2 for Write Address. Use to program a single detector’s address.
 - 3 for Seq. Programming. Use to program more than one detector in sequential order.
7. If you are changing addresses, write the programmed address on the back of the device.
8. To exit press left arrow until fully exited.

Section 8

Programming Overview

This section of the manual is intended to give you an overview of the programming process. Please read this section of the manual carefully, especially if you are programming the control panel for the first time.

The JumpStart AutoProgramming feature automates many programming tasks and selects default options for the system. You should run JumpStart at least once when you are installing the system. See 8.2 for details. After you run JumpStart, you may need to do some additional programming depending on your installation. Section 9 of this manual covers manual programmable options in detail.

Programming the panel can be thought of as a four part process. You must program:

- Network options. These affect how all panels in the network work together. (see Section 6 Network Management for details).
- System options. These are options that affect general operation of the panel. (see Section 9.6 for details).
- Options for input points and zones. These are primarily options that control the detection behavior of devices. (see Section 9.3 and Section 9.5 for details).
- Options for output points and groups. This includes selecting characteristics for output groups and mapping output circuits to output groups. (see Section 9.4 for details).

8.1 Security and Data Protection

Communication Security - Level 1

Stored Data Security - Level 0

Physical Security - Level 1

Access Control Security - Level 1

8.2 JumpStart AutoProgramming

The JumpStart AutoProgramming feature allows for faster system setup. When you run JumpStart AutoProgramming, the panel searches for expanders and SLC devices not currently in the system. The new devices are added in their default configuration. At the end of the JumpStart AutoProgramming you can choose to not accept the new devices and go back to the configuration you had before. JumpStart AutoProgramming saves the installer from having to program options for each device. Depending on the application, the installer may need to make some changes after JumpStart AutoProgramming completes.

See Section 8.2.3 for complete details about running JumpStart AutoProgramming.

8.2.1 Input Points

The first JumpStart AutoProgramming on the panel in default configuration will determine the number and type of input points (detectors or contact monitor modules) on each SLC loop. JumpStart AutoProgramming assigns the correct detector type (heat, ionization or photoelectric), so the installer does not need to edit the device type for detectors. Any contact monitor modules on the system will be assigned type "Manual Pull." The installer will need to manually change the switch type if manual pull is not correct.

The first JumpStart AutoProgramming creates one zone (Zone 1) and assigns all input points to Zone 1. Zone 1 is mapped to Output Group 1.

8.2.2 Output Points

The first JumpStart AutoProgramming on a panel in default configuration creates three output groups and assigns output circuits as follows:

Internal Power Supply Circuits 1-8:
Configured as Notification and assigned to Group 1.

Internal Power Supply Circuit 9 (Relay 1):
Assigned to Group 998.

Internal Power Supply Circuit 10 (Relay 2):
Assigned to Group 999.

Addressable output points (Relay modules):
All addressable relay devices will be configured as “Output Pt” (general purpose output point) and assigned to Group 1.

Note: Relay output is constant even if the zone activating the relay is programmed with an output pattern.

8.2.3 Running JumpStart AutoProgramming




Run JumpStart AutoProgramming immediately after you have addressed and connected all input devices (detectors, pull stations, and so on) and output devices (notification appliances, relays, and so on).

Note: If you need to install a few devices after you have run JumpStart AutoProgramming, you can install them manually or run JumpStart again at a later time. JumpStart will keep user options, such as names, for devices already installed. Follow instructions in Section 8 for configuration.

To run JumpStart AutoProgramming, follow these steps.

1. Press ENTER to view Main Menu.
2. Select 7 for Panel Programming. Enter Access Code.
3. Select 6 for JumpStart AutoProgramming.
4. The message “System will be shut down during JumpStart.” Press ENTER to accept.
5. When the “SLC Family” message appears, two options are presented; either IDP or SD. Select the appropriate option based on the type of SLC devices the panel is using and press ENTER to accept.
6. A series of messages displays as JumpStart scans the system for expander modules and SLC loops for point devices. This can take several minutes, depending on the number of devices attached.
7. If a Temp Programming Display is being used to initially setup an RPS-2000, a menu will appear for selecting to install the display or not. If the display is to stay in the system for normal annunciation, select “Yes, Configure display for system.” Otherwise select “No, Display will be removed.” See Section 4.5.3.
8. When the message “Configuring System Done” displays, press any key to continue.

9. Select one of the following options from the menu that displays.

1 - Review System	Press 1 if you need to review the JumpStart configuration. The Review System menu will appear. Press 1 to review Entire System or Press 2 for Changes Only.
2 - Repeat JumpStart	Press 2 if you need to rerun JumpStart for any reason.
3 - Accept Changes	<p>If you are ready to make the JumpStart configuration permanent, select 3.</p> <p>The system will ask you if the installation contains any addressable duct detectors. If there are none, select 2 for No and skip to Step 8. If the system contains duct detectors, select 1 for Yes and continue with Step 3.</p> <p>From the list that displays, select the SLC that contains the duct detectors.</p> <p>The first photoelectric or ionization detector on the system will display. Select 1 for DUCT and 2 for NonDUCT.</p> <p>Press  to select the next detector. Select 1 for DUCT and 2 for NonDUCT. Continue until all duct detectors have been selected. (Note: You can move backwards through the list with ).</p> <p>When you reach the last detector on this device, press .</p> <p>The system will ask you if there are more duct detectors in the system. If there are, select 1 for Yes and repeat from Step 3. If there are no more duct detectors, select 2 for No and continue with Step 8.</p> <p>The system will restart in 10 seconds. You can press 1 to restart immediately.</p> <p>After the system resets, it will use the new JumpStart configuration.</p>
4 - Discard Changes	If you want to discard the changes, and keep the configuration you had before running this JumpStart press 4.

8.3 Mapping Overview

This section of the manual is a high level overview of mapping.

Mapping is an important concept with the control panel. In general terms, mapping is assigning or linking events to outputs that should activate when events occur. You do this by assigning input points to input zones, output points to output groups and then linking or mapping zones and output groups.

Figure 8-1 is a brief overview of the concept of mapping. The next several pages of the manual show these subjects in detail.

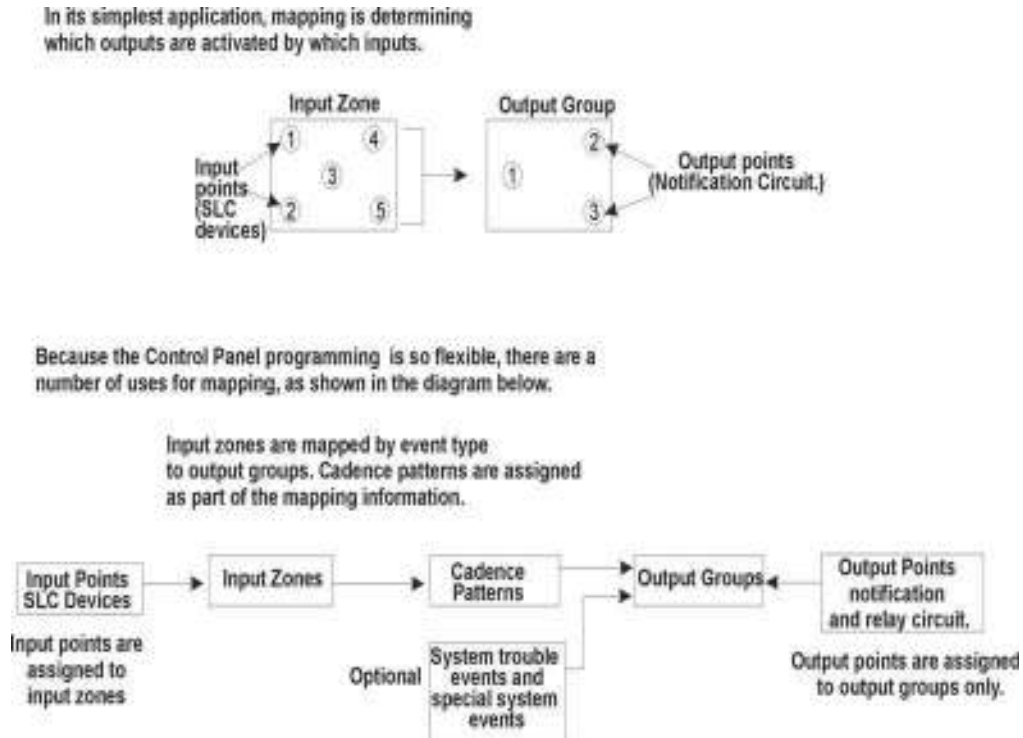


Figure 8-1 Mapping Overview

8.3.1 Input Point Mapping

Input points are assigned to input zones, as the example in Figure 8-2 shows. Any input point can be assigned to any input zone. (Input points can be assigned to one zone only. An input point can be designated as “Unused,” which means it has not been assigned to a zone).

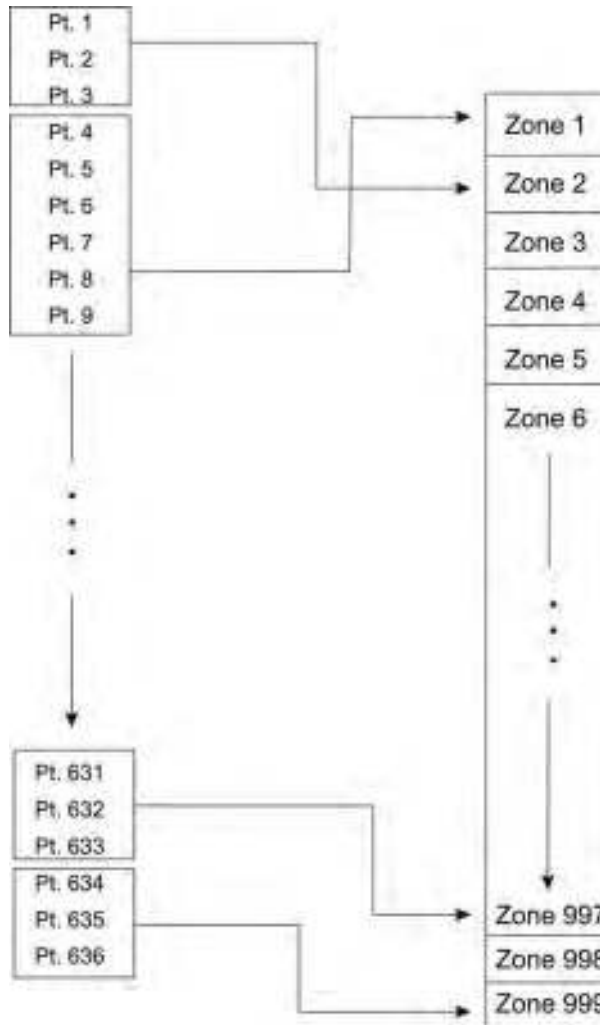


Figure 8-2 Example of Input Point Assignment

8.3.2 Output Circuit Mapping

Figure 8-3 is a simple example showing how to assign notification and relay output circuits to groups.

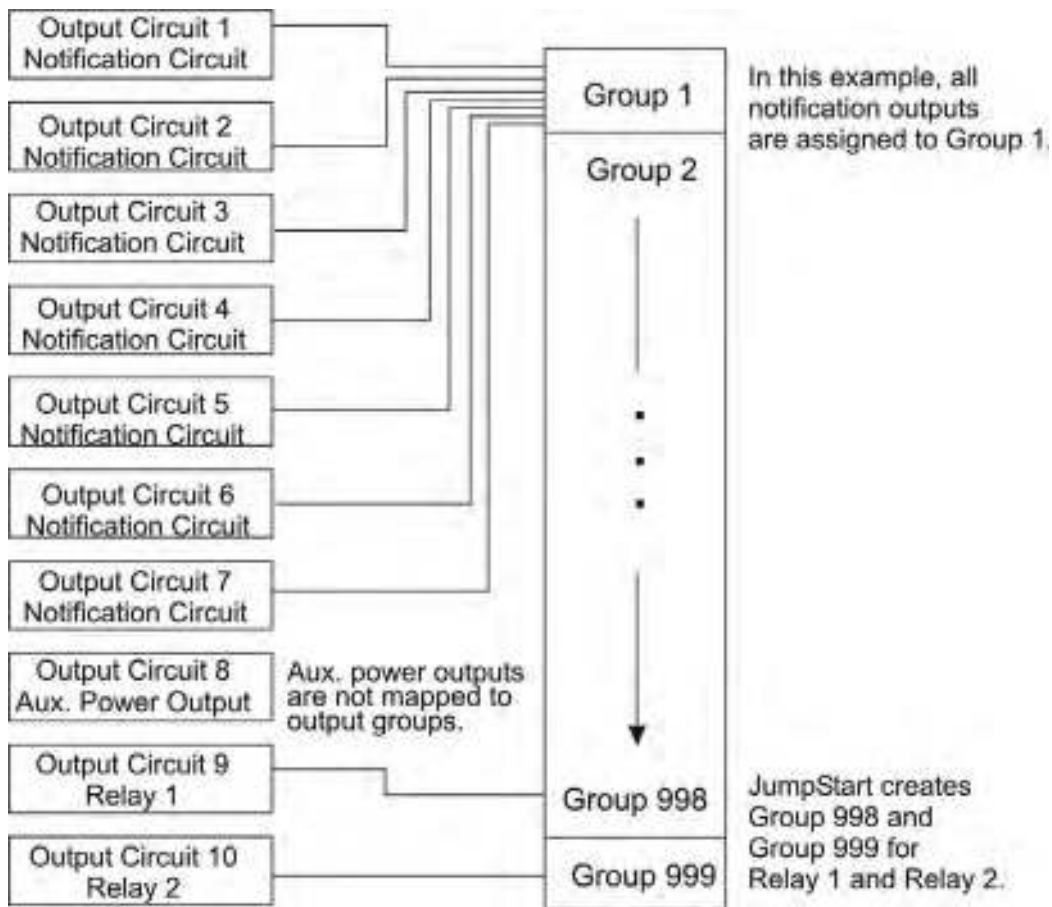


Figure 8-3 Example of Assigning Output Circuits to Groups

8.3.3 Event Mapping

There are 11 types of Zone events, 14 types of Panel events, and 40 types of Site events that can be mapped (see Table 8-1). For each event type, you can activate the output groups with specific output patterns. Mapping examples are shown in Figure 8-4, Figure 8-5, & Figure 8-6.

Table 8-1: Event Types

System	Zone	Panel	Site
Fire	Manual Pull Alarm	System Aux 1 Alarm	Fire Drill
	Water Flow Alarm	System Aux 2 Alarm	General Fire Alarm
	Detector Alarm (heat or smoke detectors)		General Fire Supervisory
	Zone Aux 1 Alarm		General Fire Pre-Alarm
	Zone Aux 2 Alarm		
	Interlock Alert		
	Interlock Release		
	Pre-Alarm		
	Fire Supervisory		
	Status Point		
	CO Alarm		
	CO Supervisory		
Emergency			LOC ECS 1-8 Alarm
			General ECS Alarm
			General ECS Supervisory
			Point ECS 1-8 Alarm
Advisory	Trouble	SBUS Expander Trouble	General Trouble
	Status Point Active	SBUS Class A Trouble	Site Silenced
		SLC Loop Trouble	Voice Aux In 1-8 Alarm
		AC Loss Trouble	F1 Key Active
		Battery Trouble	F2 Key Active
		Ground Fault Trouble	F3 Key Active
		Phone Line Trouble	F4 Key Active
		Reporting Account Trouble	Voice Aux in 1-2
		Printer Trouble	System Mic Active
		Aux Power Trouble	Background Music
		System Switch Trouble	F1 Key Active
	Output Group Trouble		

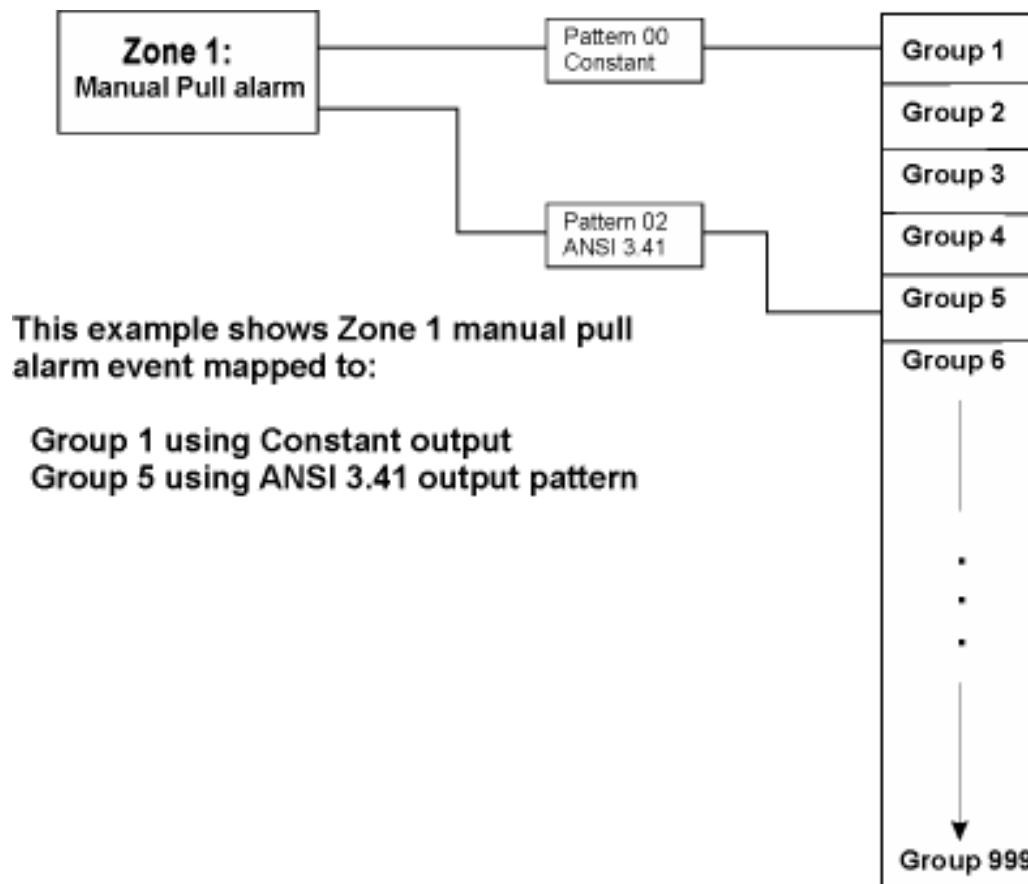


Figure 8-4 Example of Zone Events Mapped to output Groups and Patterns

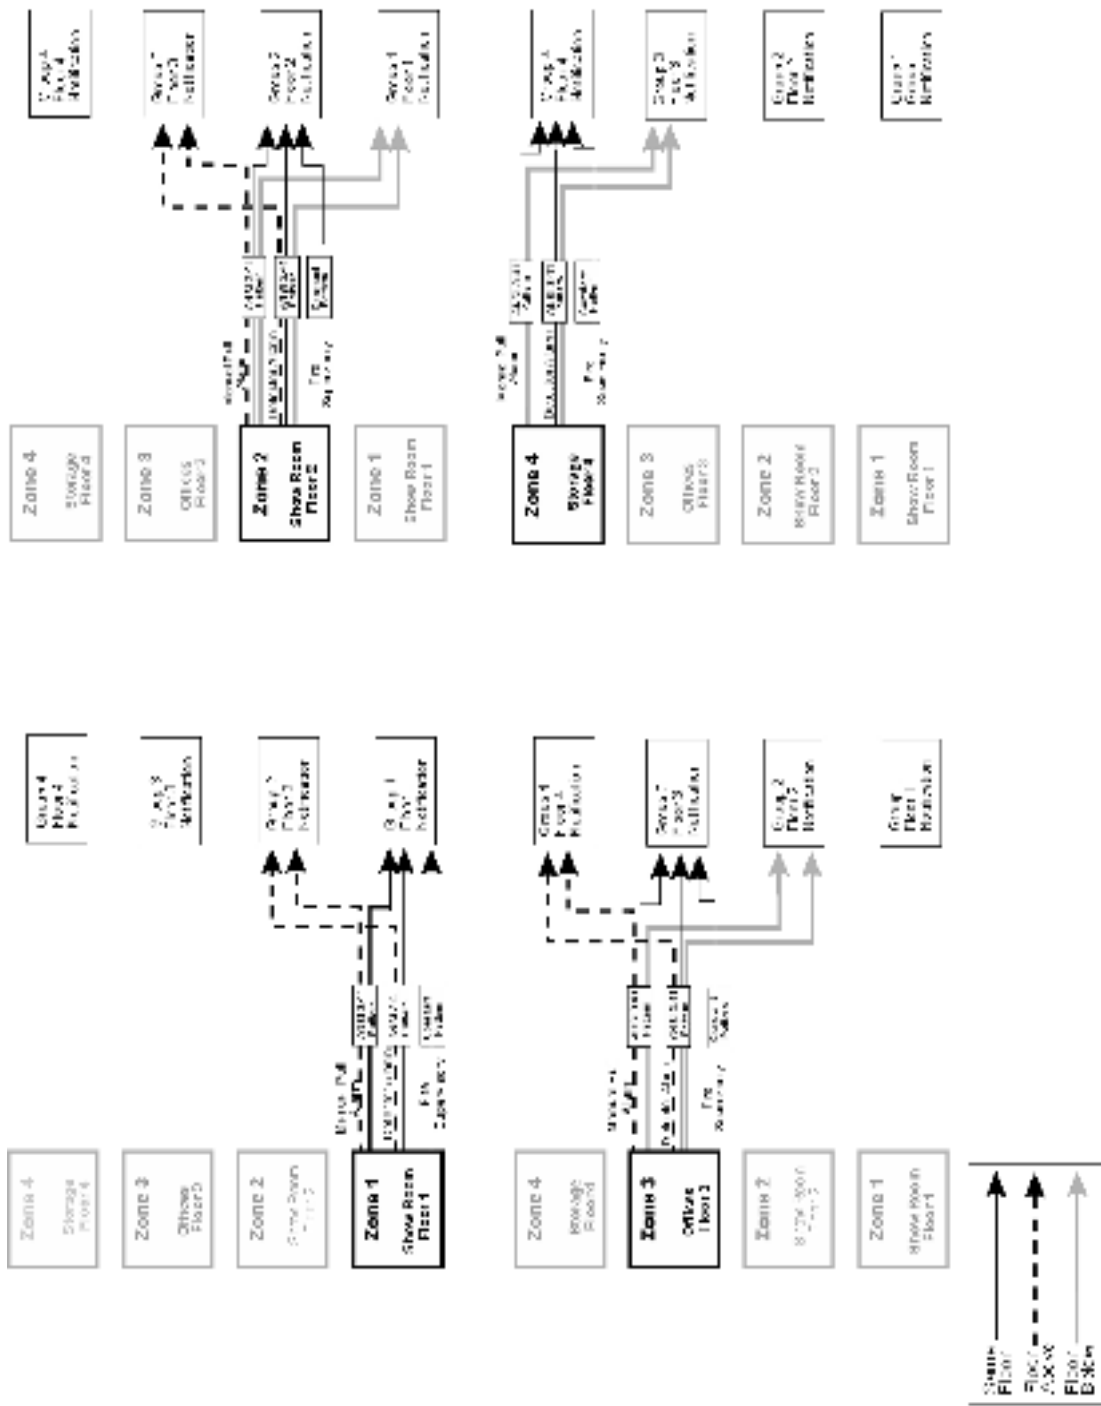


Figure 8-5 Example of Zone Events Mapped to Output Groups and Patterns on a Single Panel

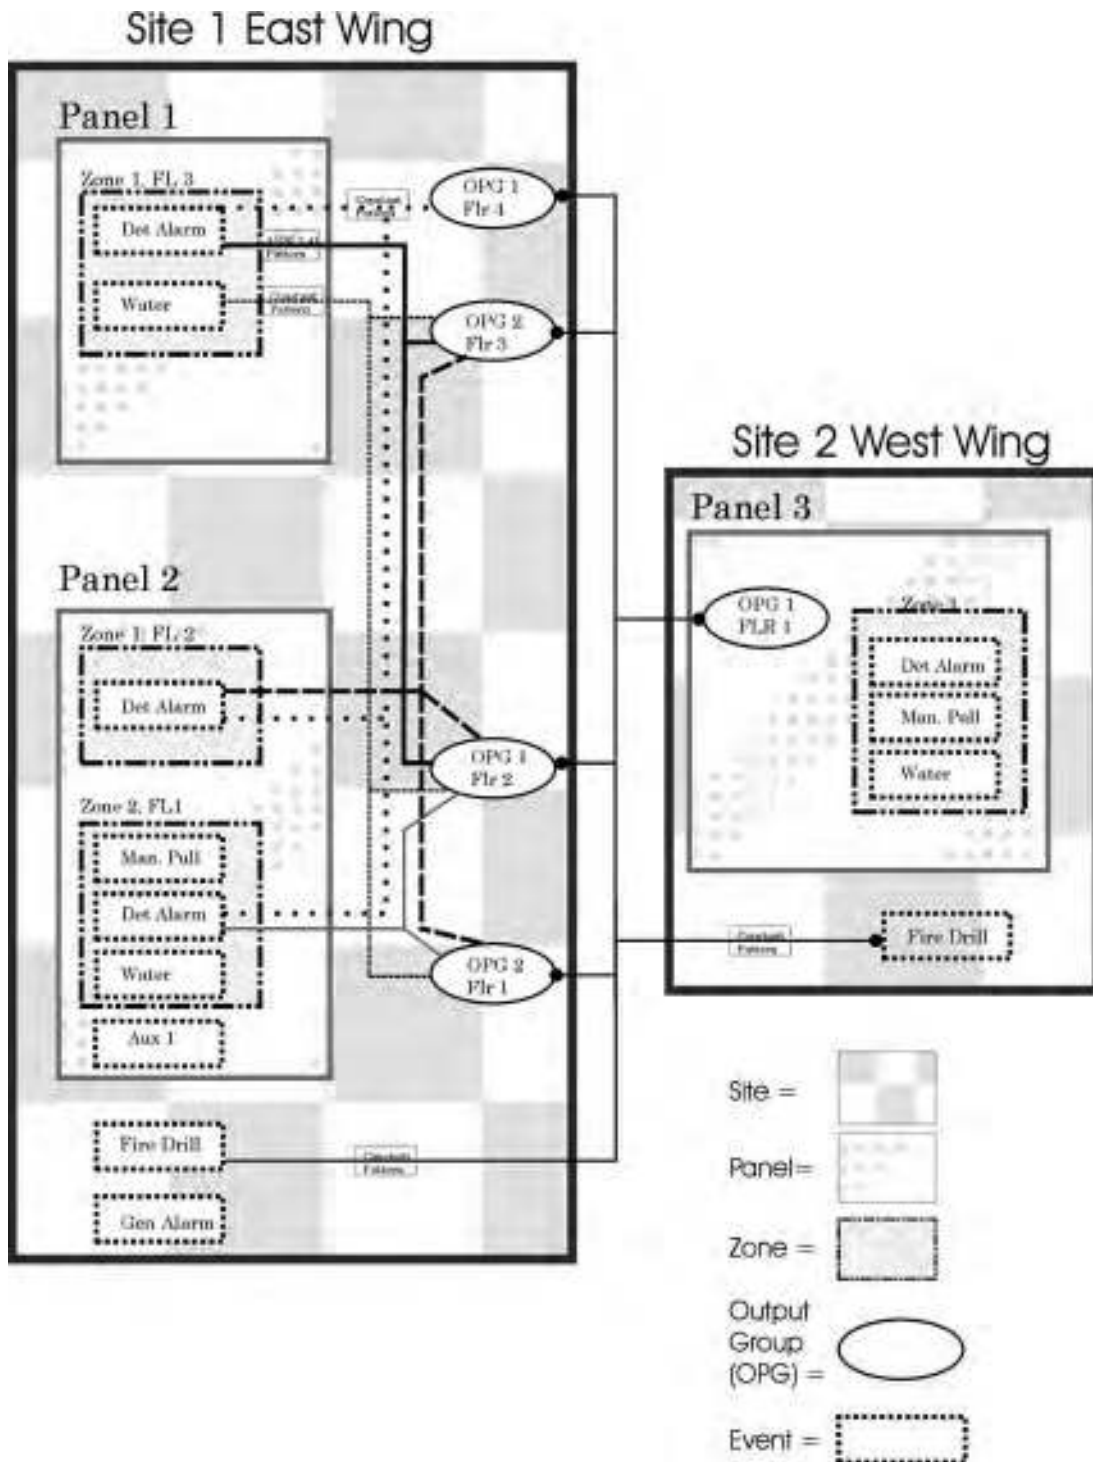


Figure 8-6 Example of Events Mapped to Output Groups and Patterns within a Networked Site

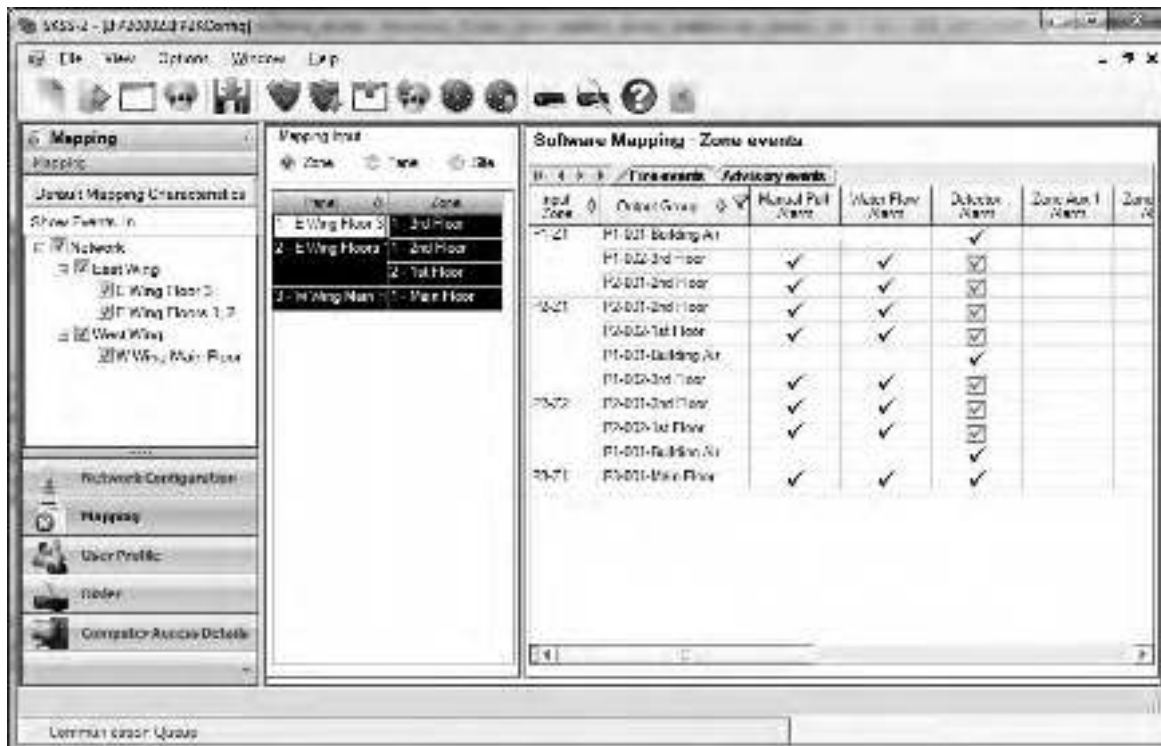


Figure 8-7 Example of SKSS-2 Software Mapping - Zone Events

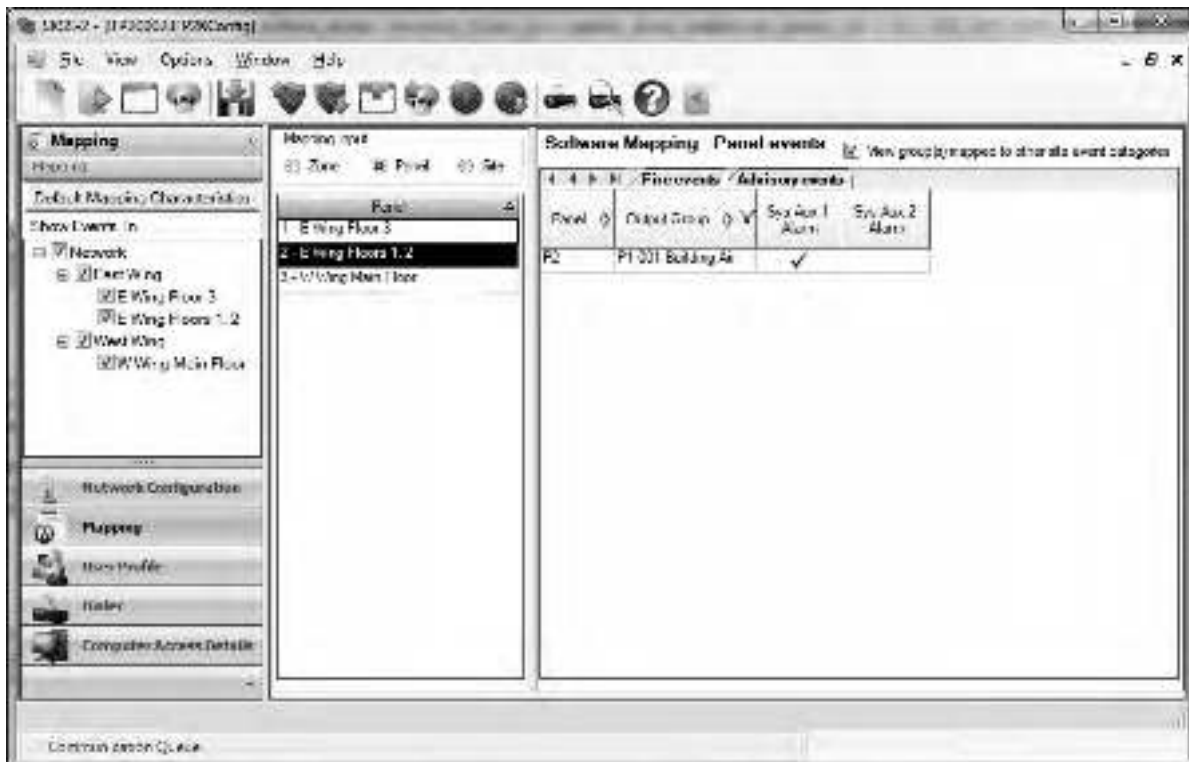


Figure 8-8 Example of SKSS-2 Software Mapping - Panel events

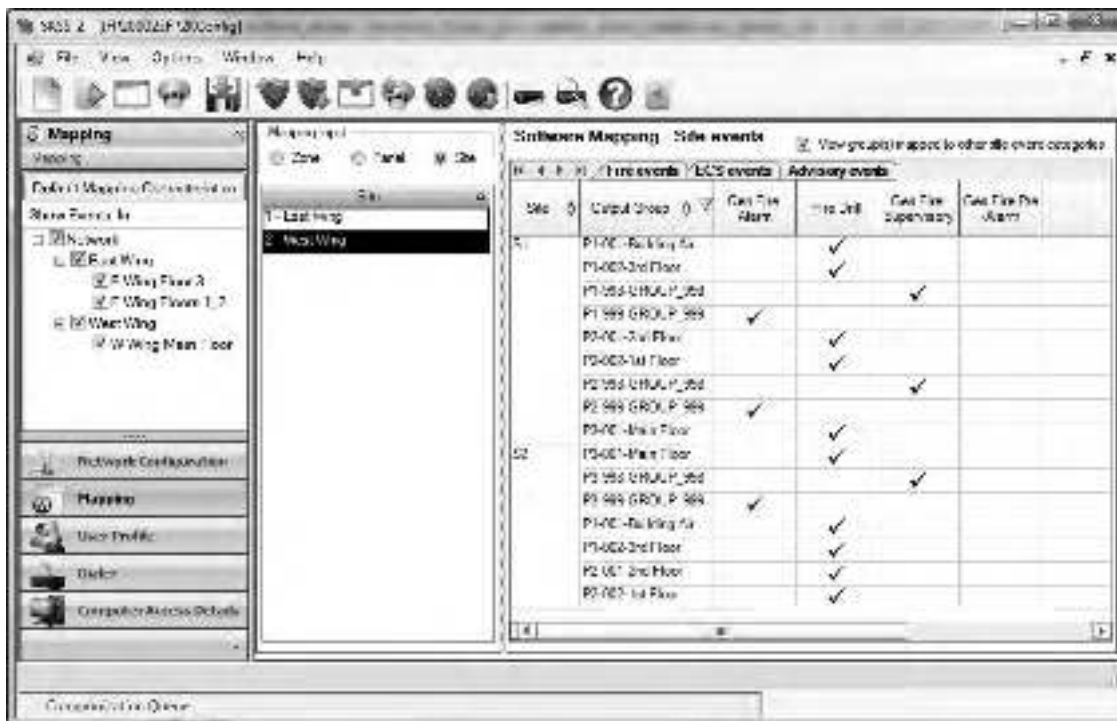


Figure 8-9 Example of SKSS-2 Software Mapping - Site Events

8.3.4 Mapping LED Points

Figure 8-10 is a simple example showing how LED points are mapped to zones and output groups. Typically you would create two output groups for each zone, one for alarms and one for troubles. (LED points are available when models 5865-3/4 and/or 5880 are used with the system).

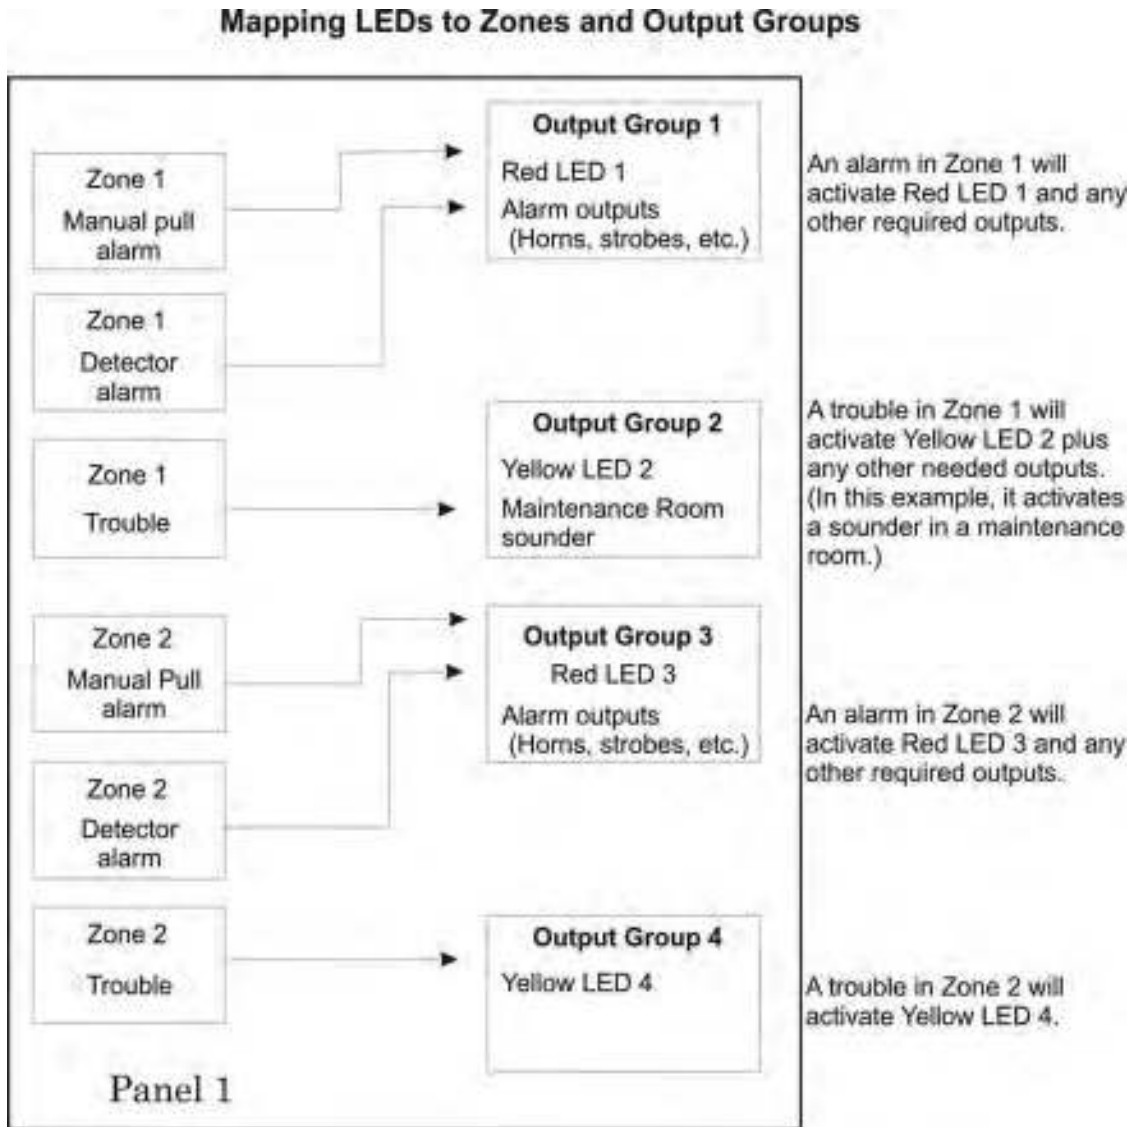


Figure 8-10 Example of LED Points Mapped to Output Groups (Applies to Models 5865-3/4 and 5880)

8.3.5 Mapping LED Points for a Networked System

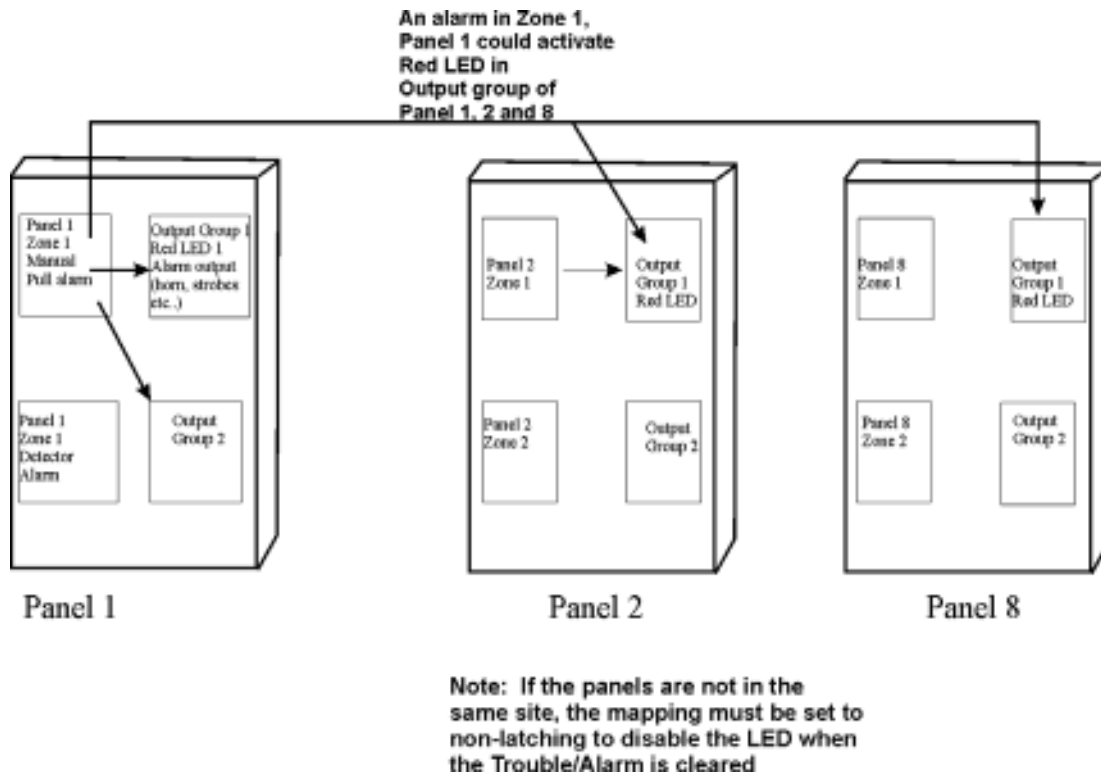


Figure 8-11 Example of Expanding Mapping of LED Points Across Panels

8.4 Programming Using the 5655 Silent Knight PC Configuration Software

You can use the 5655 Silent Knight PC configuration software to program the control panel onsite or remotely (personnel will need to be onsite during the upload or download process). SKSS-2 is a software package that lets you easily program the control panel using a Windows-based computer and a modem*. SKSS-2 is needed for Mapping. When using SKSS-2, you can set up the programming options for the panel, save the options in a file, then download the file to the panel. You can connect to the control panel directly using the onboard USB or remotely using a modem.

*Modems not sold by Silent Knight. See Table 1-2 for a list of modems that have been tested for compatibility with the control panel and SKSS-2.

8.5 Programming Using an Annunciator

Many of the IFP-2000 features can be programmed through the system annunciator, using either the control panel's on-board annunciator or a RA-2000 remote annunciator.

The following subsections describe programming basics, including a description of editing keys available for programming and how to move through programming menus. Section 9 contains specific information about individual programming options.

8.5.1 Entering & Exiting Panel Programming

To enter Program Mode:

1. Enter the Installer Code (factory programmed default code is 123456).
2. Then press 7. The programming menu option displays. See Section 9 for detailed menu information and Section 8.6 for a quick reference listing all programmable options and JumpStart defaults.

To exit Program Mode:

When you have completed working with the menus, press left arrow several times until you are exited from programming mode. Two prompts will display. The first prompt is to make sure you intended to leave the panel programming (select Yes or No as appropriate). The second prompt is for accepting all changes. If you select No, any changes you have made since you entered panel programming will have no effect.

8.5.1.1 Moving through the Menus

Figure 8-12 shows how to move through the menu screens, using the main menu screen as an example.

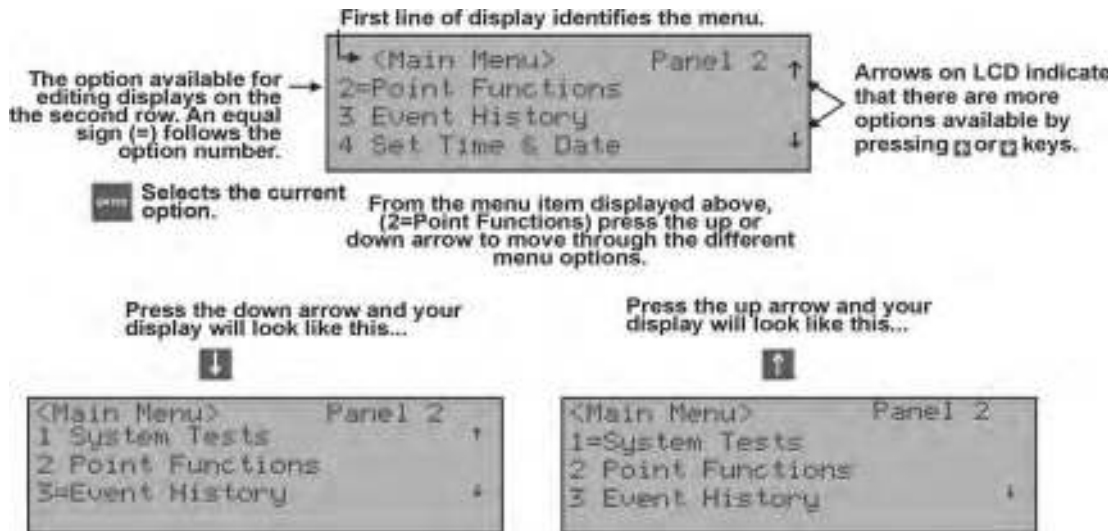


Figure 8-12 Moving through Main Menu (Main Menu used as an Example)

8.5.1.2 Selecting Options and Entering Data

There are several ways to make programming selections using the control panel depending on which screen you are currently viewing. The chart below is a generic explanation.

To	Press
Select from a menu.	The corresponding number on the annunciator.
Enter numeric data.	The appropriate number on the annunciator.
Enter text (alphanumeric data).	See Figure B on page 1 for complete list of characters.
Select from a scrolling list.	The up arrow or down arrow to move through the list of available options. When the option you want to select is displayed, press ENTER.

8.5.1.3 Editing Keys

The keys shown in Figure 8-13 are available for use when you are in the Panel Programming menu.

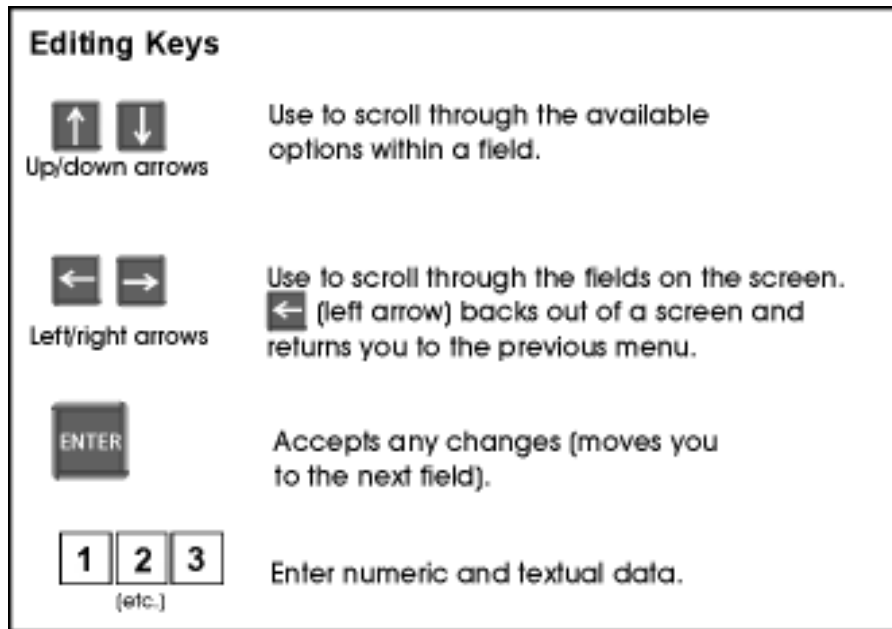


Figure 8-13 Editing Keys Available from the Panel Programming Menu

8.6 Programming Menu Quick Reference

This section of the manual lists all Panel Programming options in the order they appear on the sub-menus. Default settings are indicated in text or marked with an asterisk (*). The comments column provide quick information and a reference to a section (if applicable) which has more detailed information.

Menu		Options/Defaults			Comments	
Module	Edit Module	Select Module	Edit Module ID		Section 9.2.1	
			Enter Module Name			
			Edit Module specific options			
	Add Module	Select Module	5824-Serial/Parallel/IO	Sect		ion 9.2.2
			RA-2000 LCD Annunciator			
			5815XL-SLC Loop Expander			
			RPS-1000 Power Supply			
			5496 Nac Expander			
			5880-LED/IO Module			
			5865-LED Annunc. Module			
			ECS-50W -Voice Amplifier			
			ECS-125W-Voice Amplifier			
			ECS-INT50W Internal Amplifier			
			ECS-DUAL50W -Voice Amplifier			
			ECS-VCM -Voice Control Module			
ECS-RVM - Remote Voice Module						
VIP-VCM-Voice Control Module						
VIP-RM Remote Voice Module						
Delete Module	Select Module			Section 9.2.3		
View Module List	Select Module			Section 9.2.4		
Zone	Edit Zone	Select Zone	Edit Zone Name		Section 9.3.1.1	
			Zone Properties	Verification Type	*1-Count	Section 9.3.1.2
					2-Count	
					Alarm Ver.	
					PAS	
					SNGL ILOCK	
			Zone Properties	Heat Temp Set	135° to 150°F	SD devices Section 9.3.1.2
					135° to 190°F	IDP devices Section 9.3.1.2
			Zone Properties	Smoke Sensitivity	Low	Section 9.3.1.2
					Medium	
High						

Menu		Options/Defaults				Comments		
Zone	Edit Zone	Select Zone	Zone Accessory Opt	Single/Multi-station Cadence	00-23	Section 9.3.1.3		
				CO Single/Multi station Cadence	00-23			
				Local Zone	Yes No			
	View Zone Points	Select Zone				Section 9.3.2		
Group ¹	Edit Group	Select Group	Group Name			Section 9.4.1.1		
			Group Properties	Voice Group	Y or N	Section 9.4.1.2		
				Switch 1-	64			
				Template Override	Y or N			
				Allow Sys Override	Y or N			
Dynamic Act/Template Override Cadence	00-23 (See Appendix C)							
	View Group Points	Select Group				Section 9.4.2		
	Edit OPG Template	Select template	Modify name and which OPGs are in template			Section 9.4.3		
Point	SD and IDP Devices on Internal and External 5815XL	Enter Pt	Select Module	UNUSED			Section 9.5	
				SWITCH	MANUAL PULL			
					WATER FLOW	*LATCH		NON-LATCH
						NON-LATCH		
					FIRE SUPERVSY	*LATCH		NON-LATCH
						NON-LATCH		
					FIRE DRILL			
					SILENCE			
					RESET			
					P.A.S. ACK			
					ZONE AUX1	*LATCH		NON-LATCH
						NON-LATCH		
					ZONE AUX2	LATCH		NON-LATCH
						NON-LATCH		
SYSTEM AUX1	LATCH	NON-LATCH						
	NON-LATCH							
SYSTEM AUX2	LATCH	NON-LATCH						
	NON-LATCH							
DETECTOR								

Menu		Options/Defaults				Comments		
Point (cont.)	SD and IDP Devices on Internal and External 5815XL (cont.)	Enter Pt	Select Module	SWITCH	FIRE TAMPER	LATCH NON- LATCH	Section 9.5	
					MANUAL RELEASE			
					INTERLOCK			
					STATUS POINT			
					CO DETECTOR SWITCH			
					ECS INPUT	LATCH NON- LATCH		
					ECS TAMPER	LATCH NON- LATCH		
					ECS SUPER- VISORY	LATCH NON- LATCH		
					NOTIF	OUTPUT PT		Select Group
						AUX CONST		
				AUX RESET				
				AUX DOOR				
					OUTPUT PT	Select Group		
				RELAY	AUX RESET			
				AUX DOOR				
			DETECTOR	2-WIRE SMOKE	Select Zone			
			Select Sensor (IDP ONLY)	DETECTOR	UNUSED			
					PHOTO	No Accessory		
						SDR BAS		
						RLY BAS		
					ION	No Accessory		
						SDR BAS		
						RLY BAS		
					HEAT	No Accessory		
						SDR BAS		
						RLY BAS		
					PHOTO DUCT	No Accessory		
						DCT RLY		
ACCLI-MATE	No Accessory							
	SDR BAS							
	RLY BAS							

Menu		Options/Defaults					Comments	
Point (cont.)	SD and IDP Devices on Internal and External 5815XL (cont.)	Enter Pt	Select Sensor (IDP ONLY)	DETECTOR	HEAT HT	No Accessory	Section 9.5	
						SDR base		
						RLY base		
					PHOT-HEAT	No Accessory		
						SDR BAS		
						RLY BAS		
					BEAM			
					SUP DET	Same function as DETECTOR		LATCH
								NON- LATCH
				CO FIRE	CO ALARM/ FIRE ALARM	No Accessory	Single station or Multi station Silence or Non-Silence	
						SDR BAS		
						RLY BAS		
						I-SdrBA (Intelligent Sounder Base)		Latch or non- latch Single station or Multi station Silence or Non-Silence
						No Accessory		Single station or Multi station Silence or Non-Silence
						SDR BAS		
					RLY BAS			
					I-SdrBA (Intelligent Sounder Base)	Latch or non- latch Single station or Multi station Silence or Non-Silence		
					CO SUPR/ FIRE ALARM	No Accessory	Single station or Multi station Silence or Non-Silence	
						SDR BAS		
						RLY BAS		
I-SdrBA (Intelligent Sounder Base)	Latch or non- latch Single station or Multi station Silence or Non-Silence							

Menu		Options/Defaults					Comments	
Point (cont.)	SD and IDP Devices on Internal and External 5815XL (cont.)	Enter Pt	Select Sensor (IDP ONLY) (cont.)	CO FIRE	CO SUPR/ FIRE SUPR	No Accessory SDR BAS RLY BAS	Single station or Multi station	
						I-SdrBA (Intelligent Sounder Base)	Latch or non- latch. Single station or Multi station. Silence or Non-Silence	
Point (cont.)	Internal Power and External Power	Enter Pt /Select Function		SLC LED (SD only)	LED Output	LED Function		
				UNUSED				
				B NOTIF	NOTIF OUTPUT	CONTROL CIRCUIT	Select Group	Super- vised Yes or No
					CONTROL CIRCUIT		Super- vised Yes or No	
				A NOTIF	NOTIF OUTPUT	CONTROL CIRCUIT	Select Group	Super- vised Yes or No
					CONTROL CIRCUIT		Super- vised Yes or No	
				AUX PWR	CON-STANT			
					AUX RESET			
					AUX DOOR			
					AUX POWER SYNC*			
	B SWITCH	MANUAL PULL		Latch and Non-Latch feature only appear for WATERFLOW,FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2., ECS INPUT, ECS TAMPER, and ECS SUPERVISORY.				
		WATER- FLOW						
		FIRE SUPER- VISORY						
		FIRE TAMPER						
		FIRE DRILL						
		SILENCE						
		RESET						
		P.A.S. ACK						
	ZONE AUX 1							
*Aux Power Sync setting is only applicable for the B200S Sounder Base.								

Menu		Options/Defaults			Comments	
Point (cont.)	Internal Power and External Power (cont.)	Enter Pt /Select Function (cont.)	B SWITCH	ZONE AUX2	Latch and Non-Latch feature only appear for WATERFLOW,FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2., ECS INPUT, ECS TAMPER, and ECS SUPERVISORY.	
				SYSTEM AUX1		
				SYSTEM AUX2		
				MANUAL RELEASE		
				INTER-LOCK		
				ECS INPUT		If ECS INPUT is selected choose associated EVENT
				ECS TAMPER		Latch and Non-Latch feature only appear for WATERFLOW,FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2., ECS INPUT, ECS TAMPER, and ECS SUPERVISORY
				ECS SUPERVISORY		
			STATUS POINT			
			A SWITCH	Same as B SWITCH		
	B DETECT	2-WIRE SMOKE				
		4-WIRE SMOKE				
		CO 4 WIRE DET				
	A DETECT	2-WIRE SMOKE				
		4-WIRE SMOKE				
CO 4 WIRE DET						
Select Group or Zone Number				Group or Zone selection will appear depending on the function selected		
Edit Name		Enter Name				
5880/5865/ECS-Series Amplifiers	Enter Point #		UNUSED		Section 9.5.3	
			NOTIF			
	Select Group					
	Edit Name		Enter Name			

Menu		Options/Defaults			Comments	
System Options	Auto Time Test		Set the Hour	*02:00AM	Section 9.6.1	
			Set the Minutes			
			Select AM/PM			
	Phone Lines	Select Phone Line	For each phone line (1 & 2) select:			
			Dialing Prefix	Up to 9 digits	*none	Section 9.6.1
			# of Answer Rings	Range: 00-15	*06	Number of rings before panel answers a call from a computer Section 9.6.2.2
			Select Dialing Option	TT	*TT	Touch Tone
				TT/PL		TouchTone alternating with pulse see Section 9.6.2.3
				PULSE		Pulse dialing
			Rotary Pulse Format	U = 60/40 E = 66/34	*U	Section 9.6.2.4
			Dial Tone Disabled	Y or N	*N	
			Monitor Line	Y or N	*N	Section 9.6.2.6
			Answering Machine Bypass	Y or N	*N	Section 9.6.2.7
	Phone Line Unused	Y or N	*N	Section Figure 9.6.2.8 on page 22		
	Daytime/Nighttime Sensitivity	Enable/Disable	Yes	*No	Section 9.6.3	
			No			
		Day Start	Enter time	*6:00AM		
		Night Start	Enter time	*6:00PM		
		Days of the Week	Select days	*-MTWTF-		
	Holiday Days	Holidays 1 to 18	Enter dates	*01/01, 07/04, 12/24, 12/25	Section 9.6.4	
	Time Options	Water Flow Delay	0 - 90 Seconds	*1 sec	Water Flow delay is the number of seconds before a water flow alarm is generated. Section 9.6.5.1	
		Alarm Verification Time	1 to 250 seconds	*60 sec	Alarm Verification time section 9.6.5.2	
		Low AC Report Time	0 - 30 hours	*3 hrs	Low AC Report Delay. Section 9.6.5.3	

Menu		Options/Defaults			Comments	
System Options (cont.)	Time Options (cont.)	AC Freq:	50 Hz	*60Hz	Section 9.6.5.4	
			60 Hz			
			Neither			
	Clock Display Format	AM/PM	*AM/PM	System Clock Format (AM/PM or military). Section 9.6.5.5		
		MIL				
	Miscellaneous Options	SYNC Strokes when Silenced	Y	*N	Section 9.6.6.1	
			N			
		Auto Display Events	Y	*N	Section 9.6.6.2	
			N			
		IFP-RPT Installed	Y	Section 9.6.6.3		
			N			
	IFP-RPT Both Ports Used	Y	Section 9.6.6.4			
		N				
	Daylight Saving Options	Auto Daylight Saving Time	Y	*Y	Section 9.6.7.1	
			N			
		DST Start	Select week: 1st, 2nd, 3rd, 4th or Last	Select month	Section 9.6.7.2	
	DST End					
	Edit Banner	Refer to Appendix B	Section 9.6.8			
	SLC Family	IDP	Section 9.6.9			
		SD				
Edit Ethernet	IP Address	Section 9.79.6.10				
	Subnet Mask					
	Default Gateway					
	DCHP Enable	Y	*N			
N						
Jump Start AutoPrg	Y (Yes) N (No)	See Section 9.7				
Restore Defaults	Y (Yes) N (No)	See Section 9.8				
Voice Options	ECS-VCM Maintenance	PC Connection	Section 9.6.9			
		Local Recording				
	Edit Voice Settings	Enable Dual Channel System				

1. Use of multiple notification groups may not synchronize with each other.

Section 9 Programming

This section of the manual describes how to manually program the control panel from the built-in annunciator. Each subsection discusses these menu options in detail. All options described in this section can be performed using Silent Knight Software Suite (SKSS-2).

Before any customized programming is done, JumpStart AutoProgramming should be run first. After JumpStart is run, thoroughly test the system. The reason the system should be tested after JumpStart AutoProgramming is because Jumpstart AutoProgramming automatically programs the system, searching for and configuring all SLC and SBUS devices it finds. JumpStart allows you to confirm the integrity of the installation prior to performing any custom programming. After determining that the hardware is properly installed, custom programming can be performed. Refer to Section 8.

9.1 UL 864 / UL 2572 Programming Requirements

NOTICE TO USERS, INSTALLERS, AUTHORITIES HAVING JURISDICTION, AND OTHER INVOLVED PARTIES: This product incorporates field programmable software. In order for the product to comply with the requirements in the Standard for Control Units and Accessories for Fire Alarm Systems, UL 864, and Stand for Mass Notifications Systems, UL 2572, certain programming features or options must be limited to specific values or not used at all as indicated below.

Programming Option	Menu Item	Permitted in UL 864 (Y/N)	Permitted in UL 2572 (Y/N)	Possible Settings	Settings Permitted in UL 864	Settings Permitted in UL 2572
Time Options	Low AC Report Delay	Yes	Yes	0-30 hours	1-3	1-3
Display Oldest Event	Y (Enabled)	Yes	Yes	Yes & No	Yes	Yes
	N (Disabled)	No	No	Yes & No	No	No
Initial Delay	0-28	Yes	Yes	0-28	3-10	4-28
Inter Message Delay	4-32	Yes	Yes	4-32	4-32	4-28
Alarm Verification	Alarm Verification	Yes	Yes	1-250	1-60	1-60
Auto Reset ECS Custom Event	Auto Reset ECS Custom Event	Yes	Yes	Never Timer Event Disabled	Never Timer Event Disabled	Never Timer Event Disabled
ECS Input	ECS Input	Yes	Yes	Latching Non-Latching	Latching	Latching
Event Priority	CO Alarm	No	No	Yes & No	No	No

9.2 Modules

This section lists the options available under the module option in the Panel Programming. The following modules are available for the control panel: 5824 serial/parallel/IO printer interface module, RA-2000 remote fire alarm annunciator, 5815XL SLC expander, RPS-1000 intelligent power module, 5496 intelligent power

module, 5880 LED I/O module, 5865 LED annunciator, ECS-50W or ECS-125W watt audio amplifier, ECS-AMP audio/voice amplifier, ECS-VCM voice control module, ECS-INT50W 50 watt internal amplifier, ECS-RVM remote voice module, and ECS-DUAL50W dual channel amplifier.



9.2.1 Edit Modules

The features that can be edited when this option is selected are module ID, module name, or features that are specific to the module to be edited.



To edit an existing module:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.

Note: If you are working on a networked system you will need to select which panel you want to program

3. Press 1 to enter module menu.
4. Press 1 to edit a module.
5. Use the  or  arrow to select the module you wish to edit.
6. Press the right arrow or ENTER to move to next selection.

9.2.1.1 Editing Module ID

7. Press  or  arrow to modify the module ID.

Note: Internal devices are not able to have their module ID edited.

9.2.1.2 Naming Modules

You can assign an English name to a system hardware module to make it easier to recognize on a display.

8. If you wish to edit the module's name, press ENTER on the module's name. Then, press the number keys corresponding to the character for the module's name (or press the right arrow to bypass editing the name).

Note: See Appendix B for editing names.

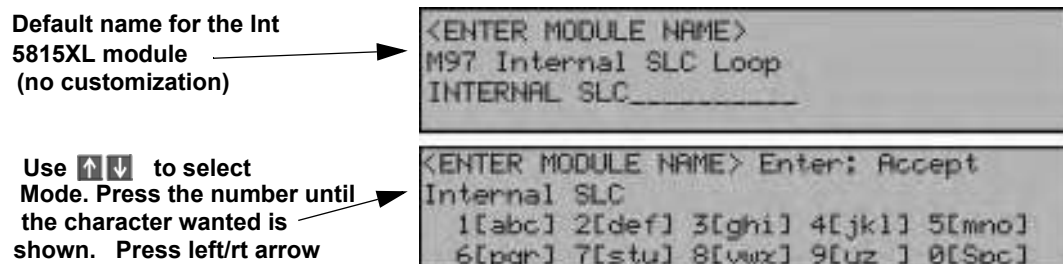




Figure 9-1 Edit module Name Programming Screen Example

9.2.1.3 Changing Module Options

Each module has a unique set of options that specifically applies to the functionality of the module being edited.

9. Use the left and right arrow keys to move between available options.
10. Option settings are edited by pressing the  or  arrow or using the keypad for numerical entry.

9.2.2 Adding a Module

To add a new hardware module to the system, follow these steps:

You must be in the Main Menu to perform this task. If necessary, enter the Installer Code.

1. Select 7 for Panel Programming.
2. Press 1 to enter module menu.
3. Press 2 to add a module.
4. From the next screen, select the number that corresponds to the type of module you are adding from the <New Module Type> screen.

The screen will display “Adding module [#]...” for a few moments. You will be returned to the <New Module Type> screen where you can add additional modules if desired.

You must save changes when you exit the Panel Programming or the new module will not be added.

Note: If you Add a Module that has not been physically connected, the panel will go into trouble after it reinitializes (when you exit the Panel Programming). When the new module is attached, the trouble will correct itself automatically the next time you power up the system.

9.2.3 Deleting a Module

To delete a module, follow these steps:



You must be in the Main Menu to perform this task. If necessary, enter the Installer Code.

1. Select 7 for Panel Programming.
2. Press 1 to enter module menu.
3. Press 3 to delete a module.
4. Select the module to be deleted.
5. A warning screen will display. If you want to proceed with deleting the module, select Yes. To cancel, select No.

9.2.4 View Module List

To view a list of all modules, follow these steps:

You must be in the Main Menu to perform this task. If necessary, enter the Installer Code.

1. Select 7 for Panel Programming.
2. Press 1 to enter module menu.
3. Press 4 to view list. Use  or  to scroll though list.

9.3 Zone

Through the zone option in Panel Programming you can edit, add, delete, and view zone points. Selections made here affect all detectors and switches in the zone. Up to 999 zones can be used in each panel.

Note: Adding a Zone or Deleting a Zone can only be done using SKSS-2 (Silent Knight Software Suite PN 5655).

9.3.1 Edit Zone

Features that can be edited through the edit zone option are, edit zone name, zone properties (which includes zone type and detector sensitivity), and zone accessory options.

To edit a zone, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 2 to enter zone menu.
4. Press 1 to edit a zone.
5. Enter the zone number, then press ENTER.

9.3.1.1 Edit Zone Name

6. Press 1 to edit the selected zone name.


You can use words to display a descriptive name for a zone.

Note: See Appendix B for editing names.

9.3.1.2 Edit Zone Properties

Zone properties consist of alarm delay characteristics, heat detector sensitivity, and smoke detector sensitivity.

1. Do steps 1 through 5 of Section 9.3.1.
2. Press 2 to edit the properties of the selected zone.

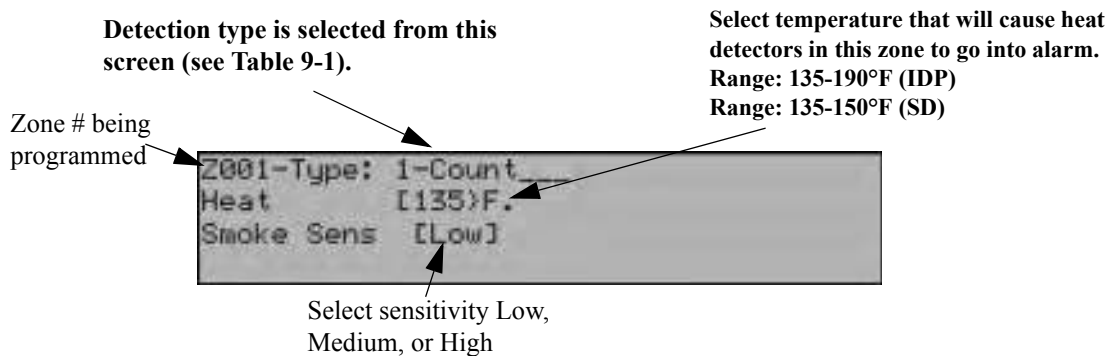

Alarm Delay Characteristics

The programmed zone type is provided for user reference only. To modify the zone type use the SKSS-2 Silent Knight Software Suite

Table 9-1 list the detector characteristics and a description of each.



Table 9-1: Detector Characteristics

Type of Delay	Description
1-Count	One Count (No Delay). When this option is enabled, an alarm occurs immediately when a single device of any of the following types goes into alarm: detector, manual pull, water flow, Zone Aux1 or Zone Aux2. This is considered the most typical operation and is the default for all zones.
2-Count	When this type of alarm delay is used, two or more detectors within the zone must go into alarm in order for the zone to report an alarm. Switches of type manual pull, water flow, Zone Aux1 and Zone Aux2 are an exception; they will cause an alarm when only one switch is in alarm. When a single detector is in alarm in a 2-Count zone, the system enters a prealarm condition. In a prealarm condition, the touchpad PZT beeps and the annunciator display indicates that a prealarm has occurred. If the zone has been mapped to an output group for the prealarm event, the output group will activate. The prealarm will not be reported to the central station. When two count is used detector spacing shall be cut in half, you shall not use the alarm verification feature, and no delay shall be used. IDP-Fire-CO detectors can be installed in a 1 or 2 count zone but will operate as a 1-count point in that zone.
Alarm Verification	Alarm verification is an optional false alarm prevention feature that verifies an alarm condition by resetting the smoke detector. If the alarm condition still exists by the time the reset cycle has completed, the detector will go into alarm. If the detector is no longer in alarm, no report will go to the central station. The alarm verification sequence is ignored if the zone is already in alarm.
P.A.S.- Positive Alarm Sequence	This option is intended to be used with an acknowledge switch. An alarm is delayed for 15 seconds, giving on-site personnel a chance to investigate the alarm. If the acknowledge switch is not activated within 15 seconds, an alarm occurs automatically. If this option is enabled for a zone, the zone will respond to an alarm condition as follows: <ul style="list-style-type: none"> • The zone will not go into alarm for 15 seconds to allow an on-site operator to activate the acknowledge switch. • If the operator does not press the acknowledge switch within 15 seconds, the zone will go into alarm. • If the operator presses the acknowledge switch within 15 seconds, a 180-second time-frame will begin counting down. This time-frame allows the operator to investigate the cause of the alarm. If the operator performs a reset within 180 seconds, the alarm will not occur. If the operator does not perform a reset within 180 seconds, an alarm will occur automatically. <ul style="list-style-type: none"> • The P.A.S. feature will be overridden if another alarm occurs.
Single Interlock	See Section 10.7.1 for single interlock releasing operation.
Double Interlock	See Section 10.7.2 for double interlock releasing operation.

Heat Detector Sensitivity

Use this feature to set the temperature at which high temperature detectors will respond. All detectors in the zone will respond in the same way. The range for IDP-Heat-HT heat detector is from 135°F to 190°F.

The high temperature IDP heat detectors are absolute temperature devices. This means that they respond to an alarm immediately if the temperature in the zone goes above the programmed temperature.

3. Enter the temperature at which the heat detector will respond, or use the  or  keys to scroll through the range, or enter directly from the number keys on the annunciator, then press ENTER.

Smoke Detector Sensitivity



Drift compensation is automatic for all smoke detectors (photoelectric and ionization). The feature is always in effect, no programming is required. See Section 10.4.10 for information about how to check if a detector is in UL compliance.

All detectors in the zone will respond as programmed in this menu location.

Table 9-2: IDP and SD Sensitivity Choices*

Detector Protocol	Type of Smoke Detector	Choices	Comments
IDP	IDP-Photo, IDP-Acclimate, & IDP-Photo-T	Low (3.5% obscurity)	If the day/night sensitivity option is selected, you can have different sensitivity settings during the day and at night. You can program the days of the week that Day/Night Sensitivity will automatically adjust. You can also designate specific days as holidays. Holiday and weekend days use night sensitivity for the entire day.
		Medium (2.5% obscurity)	
		High (1.5% obscurity)	
	IDP-Ion	Low (55 pA)	
		Medium (68 pA)	
		High (80 pA)	
	DNR with IDP-PhotoR or Photo	Low (2.5% obscurity)	
		Medium (2.0% obscurity)	
		High (1.5% obscurity)	
SD	SD505-APS	Low	If the day/night sensitivity option is selected, you can have different sensitivity settings during the day and at night. You can program the days of the week that Day/night sensitivity will automatically adjust. You can also designate specific days as holidays. Holiday and weekend days use night sensitivity for the entire day.
		Medium	
		High	
	SD505-AIS	Fixed	
SD505-DUCT with SD505-DUCTR	Fixed	Low, Medium and High settings have no effect for photoelectric duct detectors. Photoelectric duct detector sensitivity is always 1.1% per foot. Day and night settings also have no effect on these detectors.	
SD505-DUCT with SD505-DUCTR	Fixed	Low, Medium, or High settings have no effect for ionization duct detectors. Ionization duct detector sensitivity is always 75 MIC (0.8%) regardless of Low, Medium or High setting. Day and night settings also have no effect on these detectors.	

* Automatic drift compensation is always in effect for all detectors. Detectors are sampled every 3 hours. See Section 10.4.10 for information about how to check if a detector is in compliance.

- Use the  or  keys to scroll through the range or enter directly from the number keys on the annunciator, then press ENTER.

9.3.1.3 Zone Accessory Options

- Do steps 1 through 5 of Section 9.3.1.
- Press 3 to edit the Zone's Accessory options.
Single or Multi-Station cadence pattern (choose from Patterns 00 to 23).
See Appendix C.
Fire Cadence and CO Cadence pattern (choose from Cadence Patterns 00 to 23).

Note: The B200S Sounder base is intended to be used along with the CO cadence setting.

Local Zone (choose Y or N, for Yes or No).

9.3.2 View Zone Points

To view the points in a zone, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 2 to enter zone menu.
4. Press 2 to view zone points.
5. Enter the number of the zone you wish to view, then press ENTER.

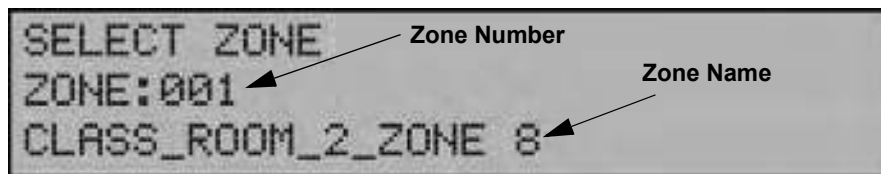


Figure 9-2 View Zone Points Screen

9.4 Group

An output group is made up of output points that have been programmed to respond in the same way. Output groups simplify programming because you only have to program the output characteristics that are common to all of the group points once, instead of programming each individual point. Once you have defined the characteristics of output groups, you can assign each point to the appropriate group. All valid output points are assigned to only one output group. Unused points are not assigned to any output group. Up to 999 output groups can be defined per panel.

Each output group is defined as either a voice output group or a non-voice output group. Output points that are audio circuits (all circuits on the ECS-50W, ECS-125W, ECS-INT50W, ECS-DUAL50W, and ECS-CE4) can only be assigned to voice output groups. Output points that are non-voice circuits (all other points and circuits that are on all modules except the ECS-50W, ECS-125W, ECS-INT50W, ECS-DUAL50W, and ECS-CE4) are assigned to non-voice output groups.

Note: Adding a Group or Deleting a Group can only be done using **SKSS-2**. (Silent Knight Software Suite PN 5655).

9.4.1 Edit Group

In the edit group option you can program the name of an output group (Section 9.4.1.1) and change the properties (Section 9.4.1.2) of that group.

To edit a group, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 3 to enter group menu.
4. Press 1 to edit group.

5. Enter the number of the group you wish to edit, then press ENTER.

9.4.1.1 Edit Group Name

6. To edit the group name, press 1.

You can use words to display a descriptive name for a group.

Note: See Appendix B for editing names.

9.4.1.2 Edit Group Properties

7. To edit the group properties, Press 2 from the edit group menu.

The Edit Group Menu allows you to select options for each group for the following items:

- Define output group type as voice or non-voice group. Select Y for voice group and N for non-voice group.
- Select / Dynamic Activation switch number: used when the group is defined as a voice group; or as a non-voice group where Dynamic Activation is used.
- Template Override: Y or N.
- Allow Sys Override: Y or N.
- Dynamic Activation / Template Override Cadence. (This is shown when the Template override is set to Yes).

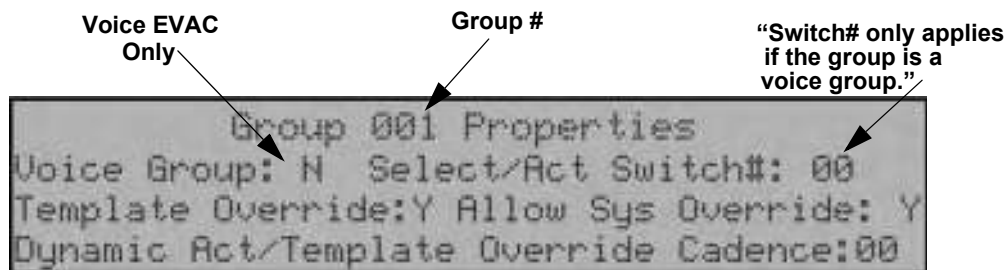


Figure 9-3 Group Properties Screen Programming Options

Defining Output Group Type

Each output group is defined as either a voice output group or a non-voice output group. Output points that are audio circuits (all circuits on the ECS-50W, ECS-125W, ECS-INT50W, ECS-DUAL50W and ECS-CE4) can only be assigned to voice output groups. Output points that are non-voice circuits (all other points and circuits that are on all modules except the ECS-DUAL50W, ECS-50W, ECS-125W, ECS-INT50W and ECS-CE4) are assigned to non-voice output groups.

Each of the output groups defined as voice can be mapped to a particular switch and LED on the ECS-VCM, ECS-RVM or ECS-SW24. This allows the user to see the state of the voice groups assigned to the switches. This also lets the user individually select which areas they want to do a live page.

Output groups not defined as voice groups can also be assigned to these switches as long as there is a voice group already assigned to the switch. This allows for dynamically activating both voice and strobes/other outputs in an

area with a single button press.


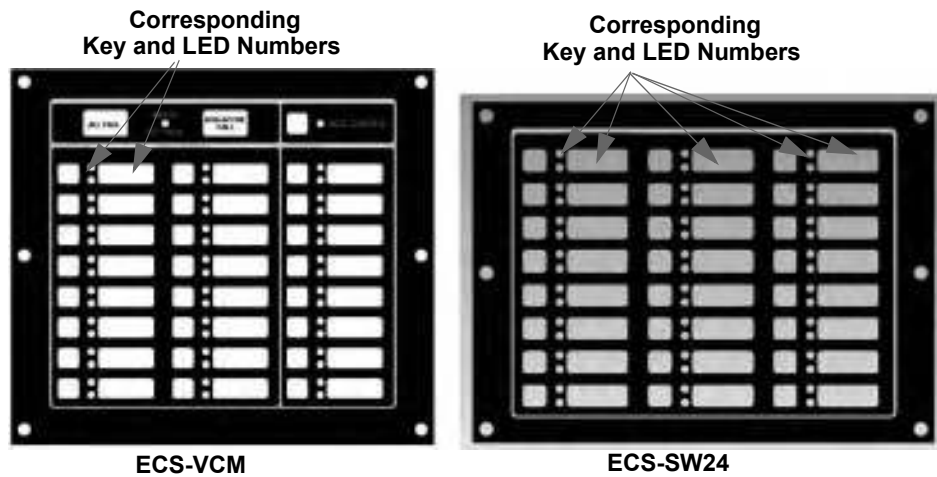


Figure 9-4 Corresponding Key and LED for Mapping Output Groups

9.4.2 View Group Points

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 3 to enter group menu.
4. Press 2 to view group points.
5. Enter the group number, then press ENTER.

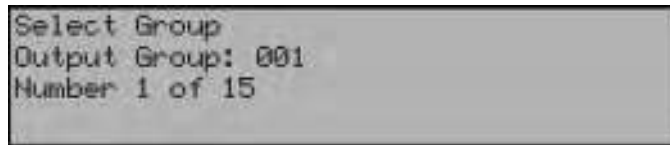

9.4.3 Edit OPG Template

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 3 to enter group menu.
4. Press 3 to edit OPG Template.
5. Enter the Template number, then press ENTER
6. Press ENTER on the template name to edit the name.

You can use words to display a descriptive name for a group.

Note: See Appendix B for editing names.

7. Right arrow to the OPG and select YES or NO to select which output groups to include in the template.

9.5 Point

You may need to change characteristics of individual input points (detectors and switches) even after using JumpStart AutoProgramming. This section explains how to change options for: type of input point; latching/non-latching status (switches); and name and zone/group assignment of a point.

9.5.1 Point Programming For 5815XL Module

To program for points on an 5815XL module, follow these steps:





1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter point menu.
4. Press the  or  arrows to select the desired module. Refer to Section 8.6 Quick Reference Table for available choices. Then press ENTER.
5. Select S for sensor or M for module. (IDP Only)
6. Enter the number of the point you wish to edit, then press ENTER.
7. Select the type of device by pressing  or  arrows. Refer to Table 9-3 under the column heading “Type Selection” for a list of choices.

Table 9-3: Programming Options for 5815XL Modules

Type Selection	Function	Latching Option	Comments
UNUSED			Select for SLC points that are unused.
DETECTOR	PHOTO		Spot photoelectric detectors.
	ION		Spot ionization detector.
	HEAT		Spot heat detector.
	PHOTO DUCT		Duct photoelectric detector.
	ION DUCT		Duct Ion detector.
	ACCLIMATE		Acclimate photoelectric detector.
	HEAT HT		High temperature heat detector.
	PHOTO-HEAT		Photoelectric detector with heat sensor.
	BEAM		Beam smoke detector.
2-WIRE SMOKE		2-wire smoke detector.	
SUP DET	PHOTO	Latching Non Latching	Use this option when you want a detector to indicate a supervisory alarm.
	ION		
	HEAT		
	PHOTO DUCT		
	ION DUCT		
	ACCLIMATE		
	HEAT HT		
	PHOTO-HEAT		
	BEAM		
CO SMOKE DETECTOR	CO ALRM / FIRE ALRM		
	CO ALRM / FIRE SUPR		
	CO SUPR / FIRE ALRM		
	CO SUPR / FIRE SUPR	Latching Non Latching	Supervisory switches can be latching or non-latching.

Table 9-3: Programming Options for 5815XL Modules

Type Selection	Function	Latching Option	Comments
SWITCH Switch (cont.)	MANUAL PULL		Use this switch type for manual pull stations. This input is always latched. The switch can clear only when an alarm is reset. This switch type has the highest fire priority; it overrides any other type of fire alarm.
	WATERFLOW	Latching (default)	Use this switch type for monitoring water flow in a sprinkler system. Switch closure will cause a sprinkler alarm. Water flow switches can be programmed as latching or non-latching. You can program a delay of up to 90 seconds to be used with a water flow switch. The delay allows for normal, brief changes in sprinkler system water pressure. The water flow alarm will not activate unless the switch is active for the programmed delay time. If a delay is used, the system begins counting down when the switch closes. If the switch opens (restores) before the timer expires, a water flow alarm is not generated. If the water flow switch remains closed after the timer expires, a water flow alarm will be generated.
		Non Latching	
	FIRE SUPERVISORY	Latching	Use this switch type for tamper monitoring of sprinklers and other fire protection devices. If a contact closes, a sprinkler supervisory event will be generated. Supervisory switches can be latching or non-latching.
		Non Latching	
	FIREDRILL		System-level, non latching switch. This switch is an alternative way of causing a fire drill. It has the same operation as the fire drill option available from the annunciator. When the switch is activated, a fire drill begins; when the switch is de-activated, the fire drill ends.
	SILENCE		This system-level switch is an alternative way to silence the fire system. It has the same effect as pressing the SILENCE key.
	RESET		This system-level switch is an alternative way to reset the fire system. It has the same effect as pressing the RESET key.
	P.A.S. ACK		Positive acknowledge switch. This switch must be used in zones programmed as Positive Alarm Sequence (see 9.3.1.2). If an acknowledge switch closes when an alarm or trouble condition is not already in progress, a trouble will occur. You must use a UL listed normally open, momentary switch type. The switch must be rated at 5V, 100 mA (minimum) and be used with an EOL resistor for supervision.
	ZONE AUX1	Latching	Use these switch types if you want to monitor special zone-level conditions (such as dry contact from a remote power supply).
		Non Latching	
	ZONE AUX2	Latching	
		Non Latching	
	SYSTEM AUX1	Latching	Use these switch types if you want to monitor special system-wide conditions (such as dry contact from a remote power supply).
		Non Latching	
	SYSTEM AUX2	Latching	
		Non Latching	
DETECTOR		Used to monitor conventional 4-wire detectors, a contact closure will generate a detector alarm event.	
FIRE TAMPER	Latching	Performs identically to a supervisory switch, but will be indicated as a tamper switch on the LCD annunciator.	
	Non Latching		
MANUAL RELEASE		Manual release switch	
INTERLOCK		Interlock release switch input.	

Table 9-3: Programming Options for 5815XL Modules

Type Selection	Function	Latching Option	Comments
SWITCH (cont.)	STATUS POINT		
	ECS INPUT	Latching	User also has ECS Event Number 1-8 option for ECS INPUT.
		Non Latching	Only available when an ECS-VCM is installed in the system.
	ECS TAMPER	Latching	
		Non Latching	
	ECS SUPER-VISORY	Latching	
Non Latching			
CO DETECT SW		CO Detector Switch	
NOTIF	OUTPUT PT	Select Group	Output point, a general use notification type. Use for driving standard notification appliances.
	AUX CONST		Use constant power for applications that require a constant auxiliary power source. Power is always present at constant circuits.
	AUX RESET		Use for auxiliary power, resettable applications. See Section 4.12.5.3 for a description of how this option operates.
	AUX DOOR		Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See Section 4.12.5.1 for a description of how this option operates.
RELAY	OUTPUT PT	Select Group	Output point, a general use relay type. Use for applications requiring a relay, such as fan shutdown, elevator recall, and so on.
	AUX RESET		Use for auxiliary power, resettable applications. See Section 4.12.5.3 for a description of how this option operates.
	AUX DOOR		Use for auxiliary power, door holder applications. For example, if you were using an auxiliary power supply for door holders, you would use this option. See Section 4.12.5.1 for a description of how this option operates.
SLC LED	LED NUMBER	01-80	For use with SD devices only. 80 sub addresses on LED.
	LED FUNCTION	Unused	
		NOTIF	Notification can have group number.
2-WIRE DETECTOR MODULE			For use with conventional 2-wire detectors.

9.5.2 Point Programming For Internal or External Power Module (RPS-1000)

To program for an internal or external power module points:















1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter point menu.
4. Press the  or  arrows to select the desired module. Refer to Section 8.6 for available choices, then press ENTER.
5. Enter the number of the circuit or point you wish to edit, then press ENTER.
6. Select the type by pressing the  or  arrows, then press ENTER.
7. Select the function by pressing the  or  arrows, then press ENTER.
8. If the point supports latching press the  or  arrows to select latching or non-latching, then press ENTER.
9. Select the zone or group by pressing the  or  arrows, then press ENTER.
10. If the point supports not being supervised, press the  or  arrows to select supervised or non-supervised, then press ENTER.
11. Press ENTER to edit point name. See Appendix B.
Or
Press the right arrow to skip point name edit.
12. Repeat Steps 1 through 16 for all circuits.

Table 9-4: Menu choices for Internal/External Power Module

Choices	Type Selections	Function Selections for each Type	Comments
Enter Point			
Select Type	UNUSED		
	B NOTIF	NOTIF OUTPUT	User also has Supervised/ Unsupervised option
		CONTROL CIRCUIT	
	A NOTIF	Same as B NOTIF	
	AUX_PWR	CONSTANT	Constant auxiliary power.
		AUX RESET	Resettable auxiliary power.
		AUX DOOR	Door holder auxiliary power.
	B SWITCH	MANUAL PULL	Refer to comments column of Table 9-3 for description of these options. Latch or Non-latching feature only appears for WATERFLOW, FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2, ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. User also has ECS Event Number 1-8 option for ECS INPUT. Only available when an ECS-VCM is installed in the system.
		WATERFLOW	
		FIRE SUPERVISORY	
		FIRE TAMPER	
		FIREDRILL	
		SILENCE	
		RESET	
		P.A.S. ACK	
		ZONE AUX1	
		ZONE AUX2	
		SYSTEM AUX1	
		SYSTEM AUX2	
		MANUAL RELEASE	
		INTERLOCK	
	STATUS POINT		
	ECS INPUT		
ECS TAMPER			
ECS SUPERVISORY			
A SWITCH	Same as B SWITCH		
B DETECT	2-WIRE SMOKE	Used for Class B, 2-wire detectors.	
	4-WIRE SMOKE	Used for Class B, 4-wire detectors.	
	4-WIRE CO SMK	Used for Class B, 4-wire CO detectors.	
A DETECT	2-WIRE SMOKE	Used for Class A, 2-wire detectors.	
	4-WIRE SMOKE	Used for Class A, 4-wire detectors.	
	CO 4-WIRE DET	Used for Class A, 4-wire CO detectors.	
Select Zone/Group			Group or Zone selection will appear depending on the type selected.
Edit Name			See Appendix B.

9.5.3 Point Programming For 5880/5865 Modules

To program the 5880/5865 module output points:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter point menu.
4. Press the  or  arrows to select the desired module. Refer to Section 8.6 for available choices. Then press ENTER.

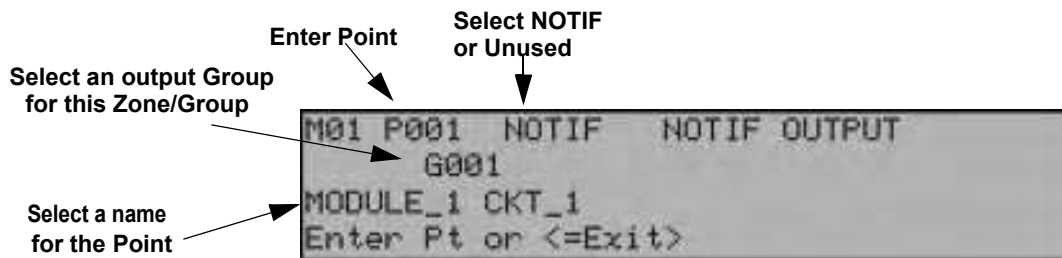


Figure 9-5 Programming Points as Outputs for the 5880 Module

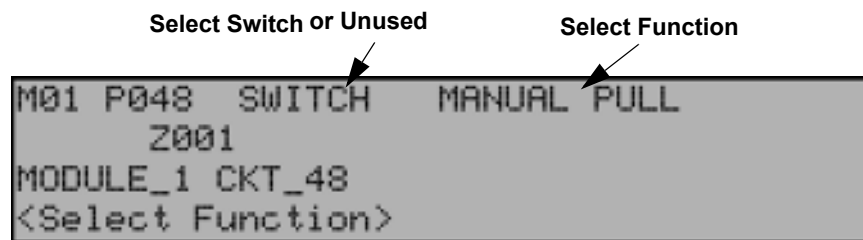
















Figure 9-6 Programming Points as Inputs for the 5880 Module

5. Enter the point number, then press ENTER.
6. Press the  or  arrows to select the type (notification or unused), then press ENTER.
7. Press the  or  arrows to select the desired group., then press ENTER.
8. Press ENTER to edit point name. See Appendix B.
Or
Press the right arrow to skip point name edit.
9. Repeat Steps 1 through 8 for all output points.
10. To use 5880 as Input point, Enter point number 41 - 48. (See Figure 9-6 on page 16). Then press ENTER.
11. Press the  or  arrows to select type (switch or unused), then press ENTER.
12. Press the  or  arrows to select the desired function. (See Figure 9-5 on page 19), then press ENTER.
13. If the point supports latching press the  or  arrows to select latching or non-latching, then press ENTER.
14. Press the  or  arrows to select the desired group/zone, then press ENTER.
15. Edit point name Or Press the right arrow to skip module name edit.
16. Repeat steps 10 through 15 for all input points.

9.5.4 Point Programming for 5496

To program module points:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter point menu.
4. Press the  or  arrows to select the desired module. Refer to Section 8.6 for available choices, then press ENTER.

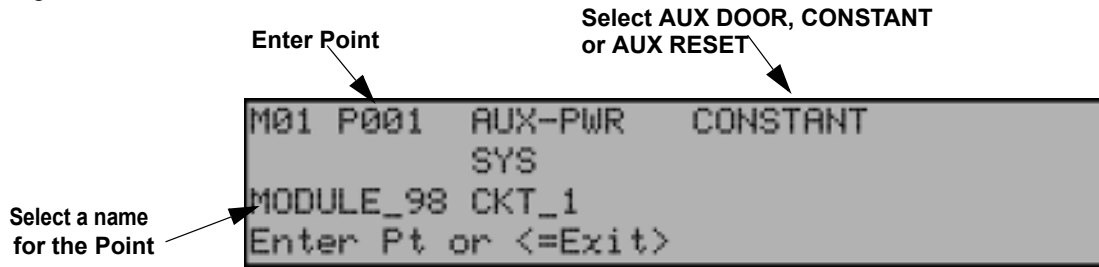






Figure 9-7 Programming Points Screen for the 5880 Module

5. Enter the point number, then press ENTER.
6. Press the  or  arrows to select the type (See Figure 9-5 on page 19). Then press ENTER.
7. Press ENTER to edit point name. See Appendix B. Or Press the right arrow to skip point name edit.
8. Repeat Steps 1 through 7 for all points.

9.5.5 Point Programming for ECS-AMP's

To program module points:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter point menu.
4. Press the  or  arrows to select the desired module. Refer to Section 8.6 for available choices. Then press ENTER.

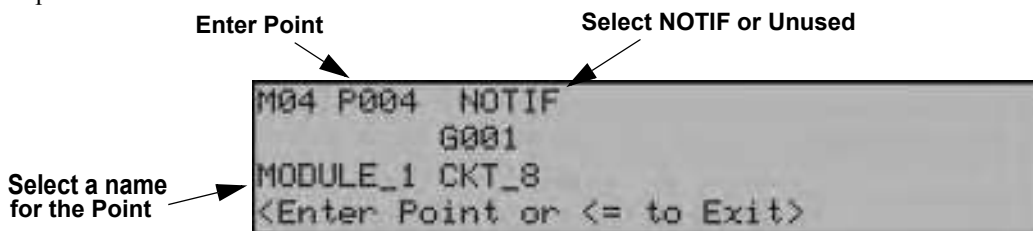






Figure 9-8 Programming Points Screen for the ECS-AMP Module

5. Enter the point number, then press ENTER. Points 5-8 on ECS-50W or ECS-125W will not be available unless the ECS-CE4 is installed.
6. Press the  or  arrows to select the type (notification or unused), then press ENTER.

7. Press ENTER to edit point name. See Appendix B. Or Press the right arrow to skip point name edit.
8. Repeat Steps 1 through 7 for all points.

9.5.6 Point Programming for ECS-VCM or ECS-RVM

To program module points:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Press 4 to enter point menu.
4. Press the  or  arrows to select the desired module. Refer to Section 8.6 for available choices. Then press ENTER.

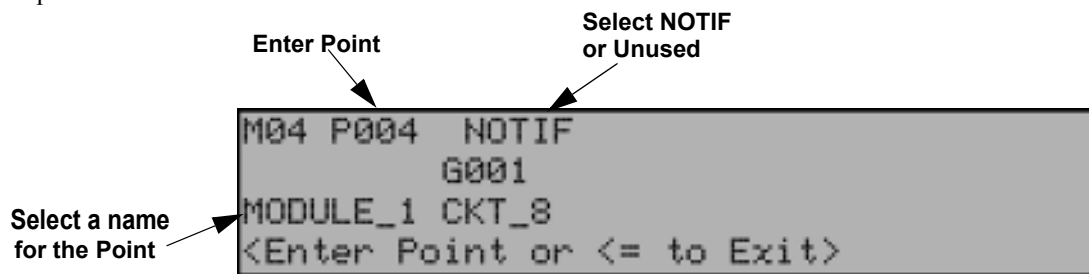


Figure 9-9 Programming Points Screen for the ECS-VCM or ECS-RVM Modules





5. Enter the point number. Press ENTER.
6. Press the  or  arrows to select the type (switch or unused). Press ENTER.
7. Press the  or  arrows to select the desired Function (See Table 9-5). Press ENTER.
8. Press ENTER to edit point name. See Appendix B. Or Press the right arrow to skip point name edit.
9. Repeat Steps 1 through 8 for all points.

Table 9-5 Choices for Point Programming Modules

Choices	Type Selections	Function Selections for each Type	Comments
5880 (output)	UNUSED		
	NOTIF (outputs pt 1-40)	NOTIF OUTPUT CONTROL CIRCUIT	
5880 (input 41-48)	SWITCH	MANUAL PULL	Refer to comments column of Table 9-3 for description of these options. Latch or Non-latching feature only appears for WATERFLOW, FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2, ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. User also has ECS Event Number 1-8 option for ECS INPUT. Only available when an ECS-VCM is installed in the system.
		WATERFLOW	
		FIRE SUPERVISORY	
		FIRE TAMPER	
		FIREDRILL	
		SILENCE	
		RESET	
		P.A.S. ACK	
		ZONE AUX1	
		ZONE AUX2	
		SYSTEM AUX1	
		SYSTEM AUX2	
		MANUAL RELEASE	
		INTERLOCK	
STATUS POINT			
ECS INPUT			
ECS TAMPER			
ECS SUPERVISORY			
5496	UNUSED		
	B NOTIF	NOTIF OUTPUT CONTROL CIRCUIT	
		A NOTIF	NOTIF OUTPUT CONTROL CIRCUIT
	AUX_PWR		CONSTANT
		AUX RESET	
		AUX DOOR	
5865	UNUSED		
	NOTIF	NOTIF OUTPUT CONTROL CIRCUIT	
ECS-AMP	UNUSED		
	NOTIF		

Table 9-5 Choices for Point Programming Modules







Choices	Type Selections	Function Selections for each Type	Comments
ECS-VCM/ECS-RVM	UNUSED		
	SWITCH	MANUAL PULL	Refer to comments column of Table 9-3 for description of these options. Latch or Non-latching feature only appears for WATERFLOW, FIRE SUPERVISORY, FIRE TAMPER, ZONE AUX1, ZONE AUX2, SYSTEM AUX1, SYSTEM AUX2, ECS INPUT, ECS TAMPER, and ECS SUPERVISORY. User also has ECS Event Number 1-8 option for ECS INPUT.
		WATERFLOW	
		FIRE SUPERVISORY	
		FIRE TAMPER	
		FIREDRILL	
		SILENCE	
		RESET	
		P.A.S. ACK	
		ZONE AUX1	
		ZONE AUX2	
		SYSTEM AUX1	
		SYSTEM AUX2	
		MANUAL RELEASE	
		INTERLOCK	
		STATUS POINT	
		ECS INPUT	
		ECS TAMPER	
ECS SUPERVISORY			
VOICE AUX STATUS 1-2			
VOICE AUX ECS 1-4			

9.6 System Options

This section of the manual explains how to customize software options that affect general operation of the system. This includes such items as: AC loss reporting delay, system clock options, holiday schedule, telephone and reporting account options. Refer to each individual subsection for complete instructions.

9.6.1 Auto Test Time

To access the Auto Test Time screen:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. From the next menu, select 0 for Auto Test Time.
5. Enter the hour you desire the control panel to send an automatic test report (or press the  or  arrow), then press ENTER.
6. Enter the minutes (or press the  or  arrow), then press ENTER.
7. Select AM or PM by pressing the  or  arrow, then press ENTER.

- Select Report Time Interval by pressing the **↑** or **↓** arrow, then press ENTER. Time Interval selections are 24hr, 12hr, 6hr and 4 hr.

9.6.2 Phone Lines

To access the phone lines screen:

- Enter the installer code. The panel will automatically go to the main menu.
- Select 7 for Panel Programming.
- Select 5 for System Options.
- Select 1 for the phone Lines.
- Select Phone Line to be edited (1 or 2) by pressing the **↑** or **↓** arrow, then press ENTER.

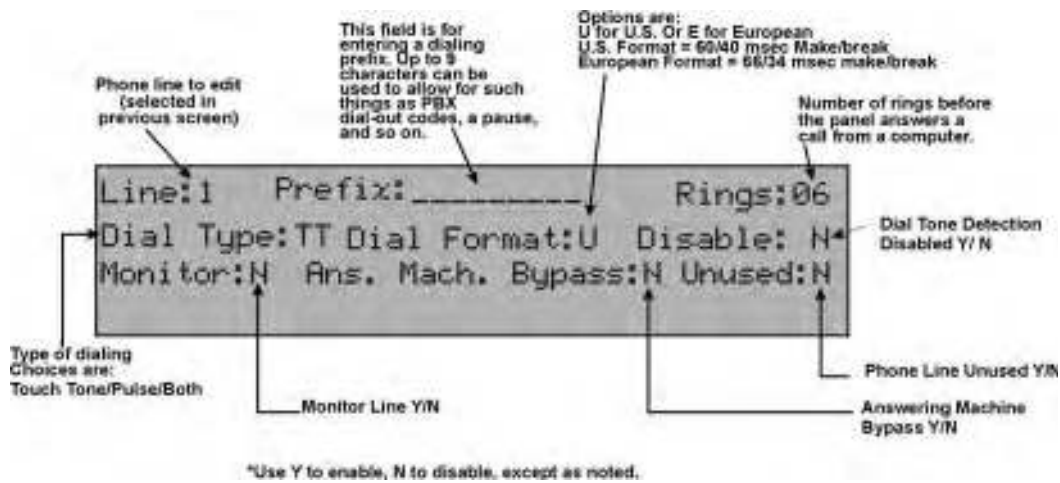


Figure 9-10 Phone Lines Editing Screen

9.6.2.1 Dialing Prefix

Enter up to 9 characters to be used for such things as PBX dial-out codes, a pause, and so on. The following special characters are available:

#	Pound (or number) key on the telephone
*	Star key on the telephone
,	Comma (character for 2-second pause)

Use the number buttons on the annunciator or the up- and down-arrow keys to select special characters. Special characters begin displaying after “9”.

- Enter a dialing prefix (if needed), then press ENTER. Or Press the right arrow to bypass the dialing prefix option.

9.6.2.2 Number of Answer Rings



This option is used in conjunction with SKSS-2. Use this option to determine the number of rings before the panel answers a call from the computer. Range is 00-15 rings. This option is factory-programmed as 06 rings,

which should be compatible for most installations where the answering machine bypass feature is used. You may need to adjust it depending on the installation's telephone system.

The selection made here must match the programming for this option in the Communication Configuration dialog box of SKSS-2.



- Enter the desired number of answer rings, then press ENTER.

9.6.2.3 Dial Option (TouchTone or Pulse, or TT/PL)

- Press the  or  arrow to select the dial option, then press ENTER.

Dial Option	Description
PULSE	If this option is selected, only pulse dialing will be used for this phone line.
TT	TouchTone dialing. If this option is selected, only TouchTone dialing will be used for this phone line.
TT/PL	TouchTone alternating with pulse. If this option is selected, the dialer will first attempt to use TouchTone. It will switch to pulse if TouchTone is not successful on the first attempt. It will continue to alternate between TT and pulse for additional attempts.



9.6.2.4 Rotary Format

- Press the  or  arrow to select the pulse ratio for rotary dialing option, then press ENTER.

Options are:



U	U.S. standard format. Uses the 60 msec / 40 msec make/break ratio.
E	European format. Uses the 66 msec / 34 msec make/break ratio.

9.6.2.5 Dial Tone Detection Disabled

- Select Y (do disable) or N (don't disable) by pressing the  or  arrow, then press ENTER.

9.6.2.6 Line Monitor

Enable the line monitor for each phone line that will be used. See Figure 9-10 for location of this field on the phone lines screen. When the phone line monitor has been enabled for a phone line, a trouble condition will occur if the line is not connected. If a phone line will not be used, it must be disabled.



- Select Y (monitor line) or N (don't monitor line) by pressing the  or  arrow, then press ENTER.

9.6.2.7 Answering Machine Bypass

This option is used in conjunction with SKSS-2. This feature ensures that an answering machine will not interfere with communication between the panel and the computer. If an answering machine is used at the panel site, enable this feature; if an answering machine is not used, disable the feature.

This option is factory-programmed as No (disabled).

The selection made here must match the programming for this option in the Communication Configuration dialog box of SKSS-2. See the SKSS-2 manual for more information.

- Select Y (answering machine bypass enabled) or N (answering machine bypass disabled) by pressing the  or  arrow, then press ENTER.

9.6.2.8 Phone Line Unused

This option is used so that you can set unused phones lines to "Yes", so no autotest will be sent through that line.

This option is factory programmed as No.

13. Select Y or N by pressing the  or  arrow, then press ENTER.

9.6.3 Daytime/Nighttime Sensitivity

If you need to change the time that sensitivity levels take effect (that is, the time that “Day” and “Night” begin), follow these steps.

1. Enter the installer code. The panel will automatically go to the main menu.
1. Select 7 for Panel Programming.
2. Select 5 for System Options.
3. From System Options, select 2 for Daytime/Nighttime Sensitivity.

A screen similar to the one shown in Figure 9-11 will display.



Figure 9-11 Changing Day/Night Sensitivity Time

9.6.4 Holiday Days

Up to 18 dates can be designated as holidays. When day/night sensitivity is enabled, all photoelectric smoke detectors in the system will use night sensitivity for the entire day on days designated as holidays.

To add or change a holiday, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. Select 3 for Holiday Days. A screen similar to that shown in Figure 9-12 will display.
5. Edit the holiday schedules you wish to change or add holidays as needed in the programmable holiday locations.

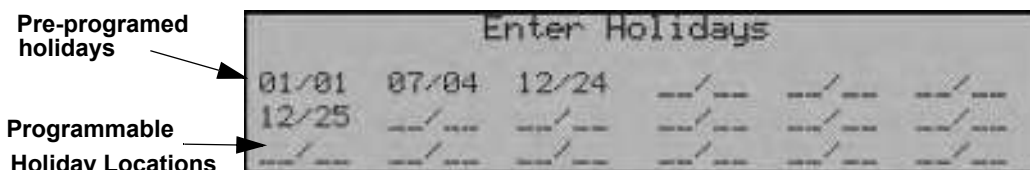


Figure 9-12 Edit Holidays Screen

6. Enter the month of the holiday, then press ENTER.

7. Enter the day of the month for the holiday, then press ENTER.
8. Repeat steps 6 and 7 for any remaining holidays you wish to program.

9.6.5 Time Options

Through this programming option you can set the water flow delay time, alarm verification time, low AC report delay, AC line frequency, and clock format.

9.6.5.1 Water Flow Delay

You can program a delay of 0-90 seconds (zero means no delay) to be used in conjunction with a water flow switch. The delay is system-wide. All water flow switches on the system will use the same delay period.

To access the screen for programming water flow delay, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. Select 4 for Time Options.

A screen similar to the one shown in Figure 9-13 will display.

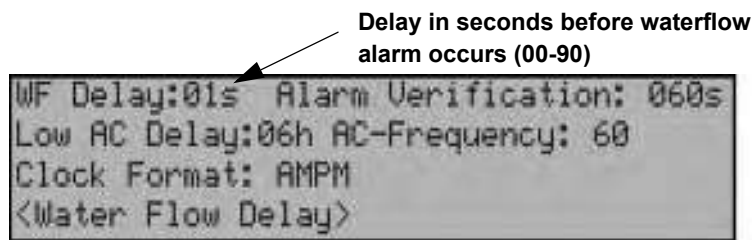


Figure 9-13 Water Flow Delay Programming Screen

5. Enter the number of seconds (0 to 90) to delay a water flow switch alarm, then press ENTER.

9.6.5.2 Alarm Verification Time

You can set the alarm verification time from 1 to 250 seconds (default is 60 seconds).

To set the alarm verification:

6. Enter the desired number of seconds for the alarm verification time.
7. Press the right arrow or ENTER to make your selection and move to the next programming option.

9.6.5.3 Low AC Report Delay

Note: You must select 1-3 hours in UL central station installations and UL remote signaling installations.

You can adjust the number of hours before a low AC report will be sent to the central station.

To program low AC report delay, follow these steps:

Note: Steps continued from step 7 of Section 9.6.5.2.

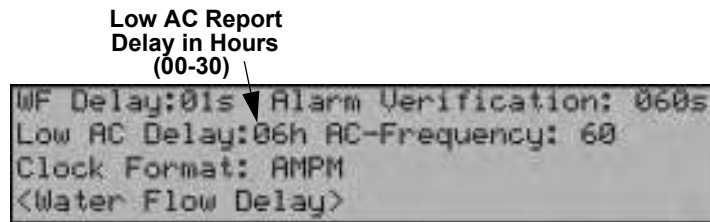




Figure 9-14 Low AC Report Delay Programming Screen

8. Enter the number of hours before a low AC report will be sent to the central station, then press ENTER. Refer to Figure 9-14.

9.6.5.4 Change AC Line Frequency



The panel's AC line frequency is selectable for 50, 60 Hz, or Neither. AC Frequency feature dictates how the control panel will calculate time based on the AC line frequency used in the installation site. The "Neither" option can be used in areas where the AC line frequency is not dependable and you want the panel to calculate time from the internal crystal. The internal crystal is not as accurate as the AC power source and either 60 Hz or 50 Hz should normally be selected. The panel defaults to the 60 Hz selection.

To change the AC line frequency:

9. Select 50Hz, 60Hz or Neither, by pressing the  or  arrow, then press ENTER.

9.6.5.5 Clock Display Format (AM/PM or Military)

To change the system clock display format:

10. Select AMPM (for AM/PM display format) or MIL (for military or 24 hr display format) by pressing the  or  arrow, then press ENTER.

9.6.6 Miscellaneous Options

Through this programming option you can do strobe synchronization during silence, auto display event, repeater installed, and ports of repeater used.



To edit Miscellaneous options:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. Select 5 for Miscellaneous Options.

9.6.6.1 Strobes Active when Silenced



When "SYNC Strobe:" is selected as Y (Yes), the strobes will continue to flash when the system is silenced and will stop flashing when the system is reset.

Note: The "SYNC Strobe:" only functions with outputs that use a synchronized output pattern.

5. Press the  or  arrow to toggle this selection between Y (Yes) or N (No).
6. Press the right arrow or ENTER to make your selection and move to the next programming option.



9.6.6.2 Auto Display Events

When this feature is programmed Y (Yes), the highest priority event of the system in control will automatically display on the control panel and remote annunciators after there has been no activity on any system touch pad for two minutes.

7. Press the  or  arrow to toggle this selection between Y (Yes) or N (No).
8. Press the right arrow or ENTER to make your selection and move to the next programming option.



9.6.6.3 IFP-RPT Repeater Installed

When the “Repeater Installed” option is programmed Y (Yes), the panel will supervise the IFP-RPT Repeater. Set N (No) when an IFP-RPT Repeater is not installed.

9. Press the  or  arrow to toggle this selection between Y (Yes) or N (No).
10. Then press the right arrow or ENTER.

9.6.6.4 Both Ports Used

When the Both Ports Used option is set to Y (Yes), the IFP-RPT Repeater will supervise the network wiring on both repeater ports.

11. Press the  or  arrow to toggle this selection between Y (Yes) or N (No).
12. Then press the right arrow or ENTER to make your selection and move to the next programming option.

9.6.7 Daylight Saving Options

To edit Daylight Saving Time:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. Select 6 for Daylight Saving Option.

9.6.7.1 Automatic Daylight Saving Adjustment

The control panel has an automatic DST (Daylight Saving Time) adjustment feature. Before January 2007, if this feature is enabled (set to *Yes*), the system clock will switch to DST on the first Sunday in April at 2:00 a.m. and revert to standard time on the last Sunday in October at 2:00 a.m. After January 2007, if this feature is enabled, the system clock will start and end DST according to the settings of Daylight Saving Start and Daylight Saving End (see Section Figure 9.6.7.2 on page 26). If this feature is not enabled (set to *No*), the Daylight Saving Time change is not made to the system clock.

To enable or disable DST adjustment continue programming:

5. Select Y (enabled) or N (disabled) by pressing the  or  arrow, then press ENTER.









9.6.7.2 Daylight Saving Time Start and End

This option lets you to adjust the week and month Daylight Saving Time (DST) starts and ends. For this feature to work, you must enable (set to *Yes*) the Automatic Daylight Savings Adjustment option under Daylight Savings Options (see Section Figure 9.6.7.1 on page 26). The default values for the DST Start and End options reflect the August 8, 2005 DST law that went into effect in 2007:

DST Start: The second Sunday in March

DST End: The first Sunday in November

To set the start and end for Daylight Saving Time:

6. Press the  or  arrow to select the week (1st, 2nd, etc.) Daylight Saving Time starts, then press ENTER to make your selection and move to the month setting.
7. Press the  or  arrow to select the month (January – December) Daylight Saving Time starts, then press ENTER to make your selection and move to the DST End option.
8. Press the  or  arrow to select the week (1st, 2nd, etc.) Daylight Saving Time ends, then press ENTER to make your selection and move to the month setting.
9. Press the  or  arrow to select the month (January – December) Daylight Saving Time ends, then press ENTER.

9.6.8 Edit Banner



The banner is the message that displays on the panel LCD when the system is normal; that is, when no alarms or troubles exist and the system menus are not in use. A custom banner of up to 40 characters can be created. This will automatically be centered when shown.

If a custom message is not created, the system will use the internal banner. You cannot change the internal banner.

To customize the banner display message:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. Select 7 for Edit Banner.

Note: See Appendix B for instructions on how to edit the banner.

5. Select each letter by pressing the  or  arrow to change modes and using the number keys to select characters, then press the right arrow to move to the next character.
6. When done, press ENTER to save the custom banner.

9.6.9 Edit SLC Family

The IFP-2000 supports SD series SLC devices or IDP (Intelligent Device Protocol) series SLC devices. You must configure the IFP-2000 to accept the family of the devices you are installing. You cannot mix SD series and IDP series SLC devices on the same panel.

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Program Menu.
3. Select 5 for System Options.
4. Press 8 for SLC Family.
5. Press UP arrow to select the desired SLC family.
6. Press ENTER to accept the displayed SLC family.

9.6.10 Edit Ethernet

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 5 for System Options.
4. Select 9 for Edit Ethernet.

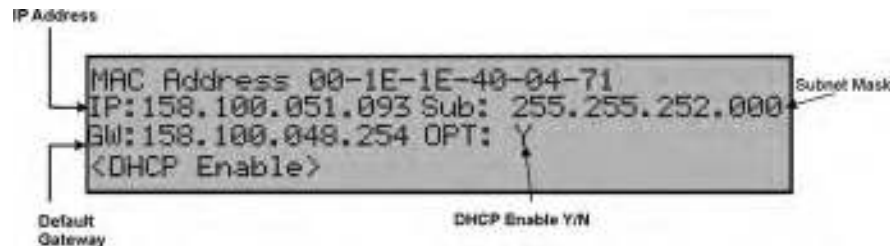


Figure 9-15 Edit Ethernet Message

9.7 JumpStart AutoProgramming



JumpStart AutoProgramming is used to auto learn the system hardware after devices have been added or removed from the system. Hardware devices which remain the same between repeat JumpStarts will retain any customized text or options associated with the device. It is best to carefully consider the network ID setting for each panel before the first JumpStart is performed. Once this is done the panel must be defaulted back to factory defaults if the network ID settings need to change.

To run JumpStart AutoProgramming:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 6 for JumpStart AutoProgramming.
4. Press ENTER to accept the warning screen.
5. Follow the remaining on screen instructions.
6. Press ENTER to confirm. See Section 8.2.3.

9.8 Restore Defaults

This option allows you to restore the panel back to factory defaults. All programming will be lost.

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming.
3. Select 7 for Restore Defaults.
4. Press the  or  arrow to select YES or NO from the warning screen. Then press ENTER.

9.9 Voice Options

Through this programming menu you can modify the messages programmed into an ECS-VCM. You can also

modify other voice settings.

9.9.1 ECS-VCM Maintenance

The ECS-VCM Maintenance menu is used to program custom messages into the ECS-VCM. Messages can be recorded from audio coming from a computer or locally using the microphone.



1. Select 7 for Panel Programming.
2. Select 8 for Voice Options.
3. Select 1 for ECS-VCM Maintenance.

9.9.2 Edit Voice Settings

1. Select 7 for Panel Programming.
2. Select 8 for Voice Options.
3. Select 2 for Edit Voice Settings.

9.9.2.1 Enable Dual Channel System

This option allows you to select whether dual channel is enabled in the system. For dual channel capabilities the system must only contain dual channel voice hardware.

4. Press the  or  arrow to select YES or NO for enabling the system as dual channel. Then press ENTER.

Section 10

System Operation

Operation of the control panel is user friendly. Menu guide you step-by-step through operations. This section of the manual is an overview of the operation menus. Please read this entire section carefully before operating the panel.

Note: See Section 6.3 for information on how to modify user access code profiles.

10.1 User and Installer Default Codes

Installer Code (factory-programmed as 123456).

Multi-site Installer Code (factory-programmed as 654321).

10.2 Annunciator Description

Figure 10-1 shows the annunciator that is part of the control panel board assembly.

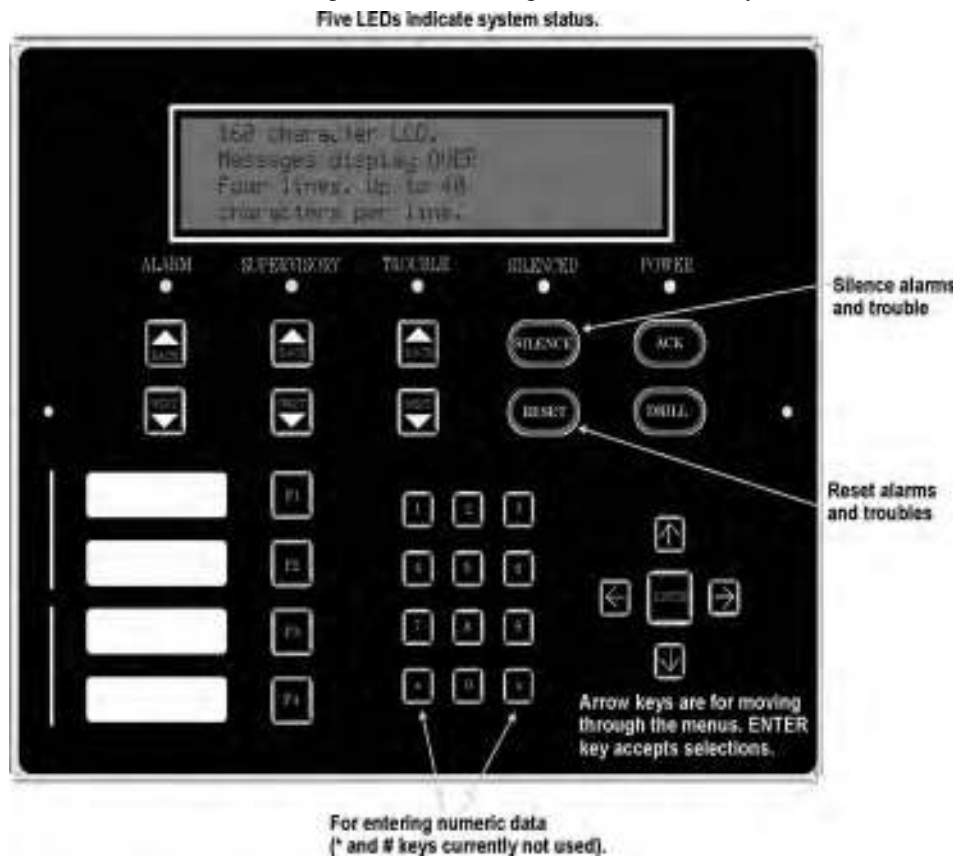


Figure 10-1 Control Panel Annunciator

10.2.1 LCD Display

The control panel LCD displays system messages, annunciates alarms, supervisories and troubles, provides status information, and prompts for input. These messages can be up to 160 characters, displaying over four lines

of 40 characters each. Annunciator keys beep when they are pressed.

10.2.2 Banner

The banner is the message that displays on the control panel when the system is in normal mode (no alarm or trouble condition exists and menus are not in use). A customize message can be created that will display instead of the internal (default) message. See Section 9.6.8 for information on editing the banner.

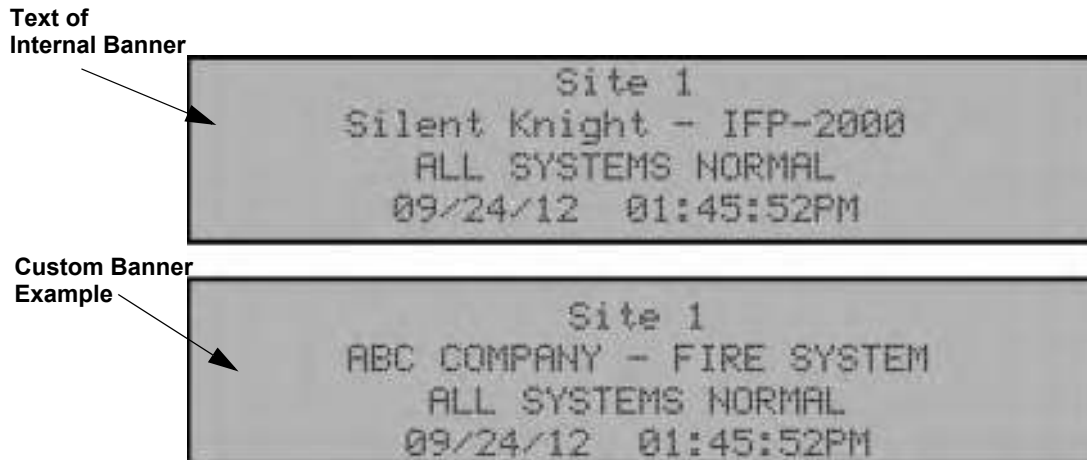



Figure 10-2 Banner Display Examples

10.3 Menu System

The control panel is easy to operate from the Main Menu. To view the Main Menu press the ENTER or  button on the control panel or remote annunciator. The Main Menu will appear as shown in Section 10.3.1. Select the desired option. You will be prompted for an access code if required.




The control panel supports up to 20 access codes. The profile for each access code (or user) can be modified through the network programming option (see Section 6.3 for access code programming).

10.3.1 Main Menu Overview

The chart below is a brief overview of the Main Menu. These options are described in greater detail throughout this section of the manual.



Main Menu Options	Description
1- System Tests	Access to Fire Drill, Indicator Test, Walk Tests, Dialer Test, Clear History Buffer, and Manual Dialer Reset.
2- Point Functions	Enable/disable points, Point Status, Set SLC Address, Device Locator, and I/O Point Control.
3- Event History	Display event history on the LCD. See Section 10.4.3 for more information.
4- Set Time & Date	Set time and date for the system.
5- Network Diagnostics	Ping Panel, Network Status, and Repeater Power.
6- Network Programming	Access Learn Network, Edit Network Names, Edit Panel ID, Computer Access, Access Codes, Dialer, and Voice Options.
7- Panel Programming	Brings up a set of menus for programming the panel. These options are described in detail in Section 9.
8- System Information	Menus to view information about the panel such as model, ID, serial number, revision, send or receive application updates and feature registration activation.
9- Upload/Download	Initiate communication from between the panel and a computer running the SKSS-2 Software Suite.

10.3.2 Using the Menus

To move through the menus:	Use  or  arrow to move through the options in a menu.
To select an option:	Enter the number of the option. -OR- Press ENTER if the option has the = symbol next to it.
Exit Menu	 (left arrow)

10.4 Basic Operation



10.4.1 Setting Time and Date

1. From the Main Menu, select 4 for Set Date & Time.
2. Make changes in the fields on the screen. Use right arrow to move through the fields. Use the  or  arrow to select options in the fields.
3. When the date and time are correct, press ENTER.



10.4.2 Disable / Enable a Point

1. From the Main Menu, select 2 for Point Functions.
2. Select 1 for Disable/Enable Point.



10.4.2.1 Disable / Enable NACs by Template

1. Press 1 for Disable NACs by Template, press 2 to Enable NACs by Template.
2. Use the  or  arrow to move through the list of templates. Press ENTER to select the current template.



10.4.2.2 Disable / Enable NACs by Group

1. Press 3 to Disable NACs by Group, press 4 to Enable NACs by Group.
2. Use the  or  arrow to move through the list of groups. Press ENTER to select the group highlighted.

10.4.2.3 Disable / Enable Zone Points



1. Press 5 to Disable Zone Points, press 6 to Enable Zone Points.
2. Use the  or  arrow to move through the list of zones. Press ENTER to select the zone highlighted.

10.4.2.4 Disable / Enable Point

1. From the Main Menu, select 2 for Point Functions.
2. Press 7 to Disable /Enable Point.
3. Choose Module.
4. Use the  or  arrow to choose point and press ENTER.
5. Press the right arrow to disable or enable point.

10.4.2.5 Inhibit Output Group

Inhibiting an output group prevents the group from being utilized by system mapping. While inhibited no event in the system can activate the output group.

1. From the Main Menu, select 2 for Point Functions.
2. Press 8 to inhibit output group.
3. Use the  or  arrow to select the group to be inhibited.
4. Press the right arrow to inhibit the group.
5. Press the right arrow again to enable the group.

10.4.3 View Event History

Use the View Event History feature to display events on LCD. From the Main Menu, press 3 to select Event History. Events will begin displaying with most recent events first.

The panel can store up to 1000 events. When it reaches its 1000-event capacity, it will delete the oldest events to make room for the new events as they occur. In networked setups, each panel stores up to 1000 of its own events. When viewing Event History in the panel, the newest 500 events from every panel in the site will be displayed. When using SKSS-2, all 1000 events from every panel in the network will be uploaded.

On multi-site displays, pressing ENTER or the right arrow brings you directly into View Event History and allows you to view the Event History from every panel in each of the sites that the multi-site display is assigned to.

10.4.3.1 To clear the event history

From the Installer menu select 1 for System Tests. From the test menu select 6 Clear History Buffer. In network systems, this clears the History Buffer of all panels in the site.

10.4.4 Conduct a Fire Drill

1. From the Main Menu, press 1 for System Tests.
2. Press 1 for Fire Drill. You will be prompted to press ENTER.
3. The drill will begin immediately after you press ENTER.
4. Press any key to end the drill. (If you do not press any key to end the fire drill manually, it will time out automatically after ten minutes.)

If a fire drill switch has been installed, activating the switch will begin the drill; deactivating the switch will end the drill.

10.4.5 Conduct an Indicator Test

The indicator test checks the annunciator LEDs, PZT, and LCD display.

1. From the Main Menu, press 1 for System Tests.
2. Press 2 for Indicator Test. The system turns on each LED several times, beeping the PZT as it does so. At the same time it scrolls each available character across the LCD. A problem is indicated if any of the following occurs:
 - An LED does not turn on.
 - You do not hear a beep.
 - All four lines of the LCD are not full.

This test takes approximately 15 seconds to complete. You can press any key to end manually while the test is

still in progress. When the test ends, you will be returned to the <Test Menu>.

10.4.6 Conduct a Walk Test

1. From the Main Menu, press 1 for System Tests.

If any alarm verification zones are being used, the user will be asked if they wish to disable alarm verification during walk test. This occurs for either walk test option.

2. Select 3 for Walk Test-No Report. The LCD will display “WALK TEST STOPPED” on Line 1 and “ENTER = start test” on Line 3. Enter the time period you wish the NAC circuit to be active for each alarm (06 to 180 second), if you select this option, central station reporting will be disabled while the test is in progress.

Or

Select 4 for Walk Test-with Report. The LCD will display “WALK TEST STOPPED” on Line 1 and “ENTER = start test” on Line 3. Enter the time period you wish the NAC circuit to be active for each alarm (06 to 180 seconds) If you select this option, central station reporting will occur as normal during the walk test.

The panel generates a TEST report to the central station when the walk test begins. During a walk test, the panel’s normal fire alarm function is completely disabled, placing the panel in a local trouble condition. All zones respond as 1-Count zones (respond when a single detector is in alarm) during a walk test. Each alarm initiated during the walk test will be reported and stored in the event history buffer.

3. Press ENTER to end the walk test. The system will reset. The panel will send a “TEST RESTORE” report to the central station.

If you do not end the walk test manually within four hours, it will end automatically.

If an alarm or pre-alarm condition is occurring in the system, you will not be able to enter the walk test.

Note: The panel does not do a full 30 second reset on resettable power outputs. As soon as the device is back to normal, the panel is ready to go to the next device.

10.4.7 Conduct a Dialer Test

1. From the Main Menu, press 1 for System Tests.
2. Select 5 for Dialer Test. The screen will display “Manual dialer test started”. When the test is completed, you will be returned to the <Test Menu>. A manual dialer test requires that at least one daily test in the network be enabled in dialer programming.

10.4.8 Silence Alarms or Troubles

Press SILENCE to turn off silenceable outputs and annunciator PZTs. If an external silence switch has been installed, activating the switch will silence fire alarms or troubles. If you are already using system menus when you press SILENCE, you will not need to enter your code.

Note: Alarm and trouble signals that have been silenced, but the detector remains un-restored, will un-silence every 24 hours until the detector is restored.

Note: Multi-Site displays do not allow for silencing multiple sites. Pressing SILENCE will only locally silence the PZT built into the annunciator. To silence a site, enter a multi-site access password, select a site, and then press SILENCE.

Note: For ECS systems, pressing silence at an LOC will only silence the System in Control. See Section 10.5.1.

10.4.9 Reset Alarms

Press RESET to perform a control panel reset. If an external reset switch has been installed, activating the switch will reset fire alarms.

Note: Multi-Site displays do not allow for resetting multiple sites. To reset a site, enter a multi-site access password, select

a site, and then press RESET.

Note: For ECS systems, pressing reset at an LOC will prompt the user for which system they desire to reset. See Section 10.5.1.

10.4.10 Check Detector Sensitivity Through Point Status

The control panel constantly monitors smoke detectors to ensure that sensitivity levels are in compliance with NFPA 72. Detectors are sampled every three hours.

If sensitivity for a detector is not in compliance, the panel goes into trouble, generating a Calibration Trouble condition. A detector enters a Calibration Maintenance state to indicate that it is approaching an out of compliance condition (but is currently still in compliance).

When a Calibration Trouble condition occurs, the central station receives a detector trouble report (“373” + Zone # for Contact ID format; “FT” + Zone # in SIA format).

To check sensitivity for an individual detector, follow the steps below.

1. From the Main Menu, press 2 for Point Functions.
2. Press 2 for Point Status.
3. Select the module where the point you want to check is located.
4. Enter the number of the point you want to check and press ENTER.
5. A screen similar to those shown in Figure 10-3 will display.

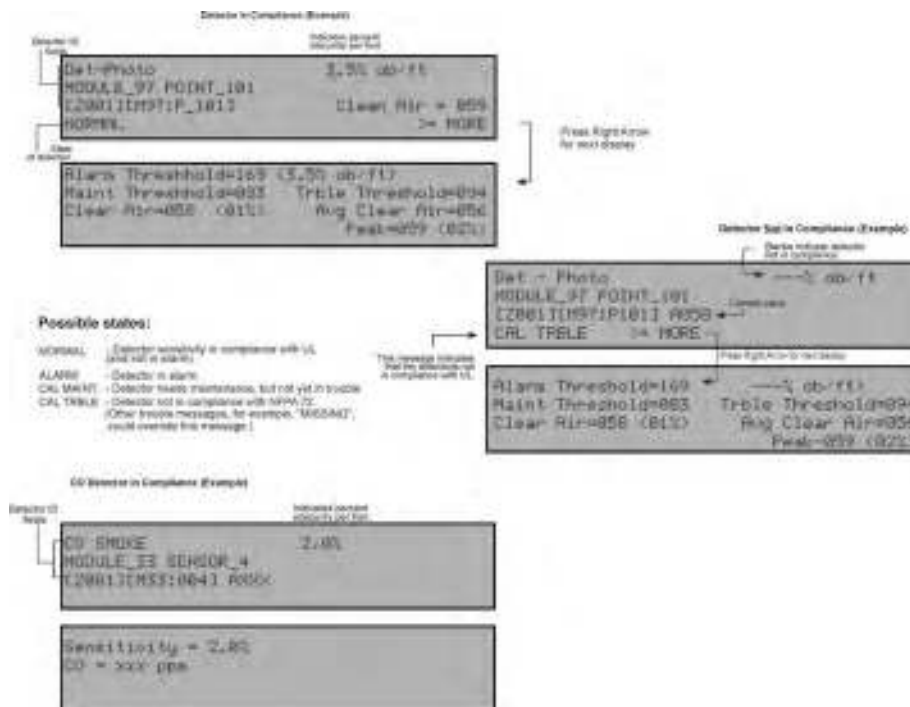


Figure 10-3 Checking Detector Sensitivity Compliance

You can print detector status by uploading the detector status to and printing from SKSS-2.

10.4.11 View Status of a Point

1. From the Main Menu, press 2 for Point Functions.
2. Press 2 for Point Status.

- From the list that displays, press ENTER to select the module where this point is located. The screen that displays will show you if the point has a trouble and will provide sensitivity compliance information. (See Section 10.4.10 for complete information about detector sensitivity compliance.)

10.4.12 View Alarms or Troubles

When the system is in alarm or trouble, you can press DOWN arrow to view the location of an alarm or trouble.

10.4.13 System Information



Press 8 from the Main Menu to access the System Information menu.

About Panel

Press 1 to access About Panel to view the panel model, serial number and system version number and date.

Send/Receive Update

The IFP-2000/RPS-2000 has the ability to be updated in the field. The latest IFP-2000 Firmware Update Utility can be downloaded from the Farenhyt Web Site. Once a panel has been updated using the Firmware Update Utility, you can use Send/Receive Update to propagate the firmware to the other panels in the network.

- Press 1 for Send Update or 2 for Receive Update from the System Information menu. Available panels are listed in the menu. Note: this feature requires a multi-site installer access code.
- Use  or  arrow to select a panel to send/receive an update to/from. Press ENTER to start the update process.

Feature Activation

This menu is used to activate/register additional features.

- Press 4 from the System Information menu. This will bring up the Feature Activation menu.
- Press 1 to enter a six digit activation code or press 2 to review features already activated in this panel.

10.4.14 Communicating with a Remote Computer

An installer at the panel site can initiate communications between the panel and a computer running SKSS-2. You can use this feature to upload a panel configuration. For example, if you have made programming changes to an installation on site using an annunciator, you can send your changes to the computer, so that the central station will have the latest data about the installation. See the software manual for more information.

To initiate communication:

- From the Main Menu, select 9 for Upload/Download.
- From the next screen that displays, select the communication device. Options are:

1 = Internal Modem	If you select this option, you will use the panel's built-in modem to call the panel.
2 = Direct Connection	If you select this option, the panel and a computer are both on-site connected via a USB cable.
- If you are using the panel's internal modem to communicate, you will be prompted to enter a phone number. If you are communicating via the USB connection, a phone number is not needed and this step will be skipped.

If the phone number you will be calling is already displayed, press ENTER. Continue with step 4.

If the phone number you will be calling is not already displayed, enter the number and press ENTER.

A phone number can be up to 40 digits long and can contain the following special characters.

#	Pound (or number) key on the telephone
*	Star key on the telephone
,	Comma (character for 2-second pause)

Use the number buttons on the annunciator or the up- and down-arrow keys to select special characters. Special characters begin displaying after “9”.

4. You will be prompted to enter an account number. If the account number you want to use is already displayed, just press ENTER to begin communication.

If the account number displayed is not the correct one, enter the account number and press ENTER to begin communication.

5. The panel will attempt to communicate with the computer. If communication was established, the upload task you created will be placed in the SKSS-2 job queue, awaiting processing. When processing is completed, an “Unsolicited Upload” task will appear in the queue.

10.5 Event Priority

This section goes over how event activations are handled by the control panel with regards to priority.

10.5.1 System Control

The IFP-2000ECS control panel integrates both a fire and emergency system into one. When events are active from both systems the control panel makes intelligent decisions to determine which system should be controlling outputs. This is called System Control. This manual will refer to the fire or emergency systems having System Control, this means that the system has an active alarm or supervisory event that has a higher event priority than an active alarm or supervisory event from the other system. For this consideration, the control panel looks at the highest priority event active on each system. When both systems are active, the system with control will activate System Override. System Override is activated on the lower priority, non-System Control panel system (fire or emergency system.)

10.5.2 System Override

System Override temporarily disengages output group activations from the system being overridden. This is done to not provide conflicting messages and signaling and help with reducing confusion of the building occupants.

When output groups are supposed to be active but are not because System Control has activated System Override, they are re-activated every 30 seconds for 2-3 seconds to indicate to the building occupants that there is still an event active. This will only occur when the system with System Control is not using the output group. The System Override option is programmable for non-voice output groups on a per output group basis through the panel output group programming menus and in SKSS-2. In these places the option is called Allow System Override and defaults to YES. It is also possible to not reactivate the output groups every 30 seconds when System Override is active on a per system basis. This option is programmable in SKSS-2.

There are times when you would not want to allow System Override for an output group. For example: fire is programmed to an elevator relay to bring the elevator to the bottom floor for fire only. If fire and ECS are active with ECS being the higher priority event, you still need the elevator to move to the bottom floor and only audible and visual notification appliances must be overridden. In this case, the output group assigned to the relay would be set to NO on the Allow System Override setting. See Section 9.4.1.2 to edit group properties.

10.5.3 Event Priority

Each event type (see Table 10-1) has a priority level assigned to it. When more than one event type is active, the

panel uses the Event Priority Table to determine which event mapping to use to control output groups. The Event Priority Table can be modified using SKSS-2. It is strongly recommended that before each installation a risk analysis is done by the stake holders (property owners, AHJ, occupants, etc...) to determine which events take precedence over others.

The Event Priority Table contains the following events for modification:

Table 10-1: Event Priority Table

Fire System	Emergency System
Fire Manual Pull Alarm	Emergency LOC Alarm
Fire Detector Alarm	Emergency 1 Point Alarm
Fire Water Flow Alarm	Emergency 2 Point Alarm
Fire Interlock Release Alarm	Emergency 3 Point Alarm
Fire Zone Aux 1 Alarm	Emergency 4 Point Alarm
Fire Zone Aux 2 Alarm	Emergency 5 Point Alarm
Fire System Aux 1 Alarm	Emergency 6 Point Alarm
Fire System Aux 2 Alarm	Emergency 7 Point Alarm
	Emergency 8 Point Alarm
	Emergency Voice Aux 1 Alarm
	Emergency Voice Aux 2 Alarm
	Emergency Voice Aux 3 Alarm
	Emergency Voice Aux 4 Alarm
CO Alarm	
Fire Pre-Alarm	
Fire Interlock Alert	
	Emergency Supervisory
Fire Supervisory	
CO Supervisory	
Trouble	
Site F Key Status	
System Status	

Note: Status Points, Status Voice Aux 1, Status Voice Aux 2, and Background Music are contained within the System Status event priority.

Note: All fire, emergency and system troubles are prioritized into the Trouble event priority.

10.5.4 Priority Rules

1. Event priorities can be changed only within, not between, priority levels (defined by bold lines in Table 10-1).
2. Emergency LOC Alarm must always higher than Emergency 1-8 Point Alarm and Emergency Voice Aux 1-4 Alarm.
3. ECS events do not need to be in order by ECS number.
 - There will be at least 15 messages selectable for each standard event.

10.5.5 Other Priority Considerations

There are other considerations to take into account when the same event is acting on the same output group (an event being mapped to an output group.) These are prioritized in order of appearance:

- For voice system utilizing dual channel, normal mapping takes priority over alert mapping. Example: Zone 1

Manual Pull is mapped to Voice Group 1 as an Alert 1 mapping and Zone 2 Manual Pull is mapped to Voice Group 1 as a normal mapping. If Zone 1 and Zone 2 Manual Pull events are active, Voice Group 1 will announce the Fire Alarm message defined in the Voice Settings for the panel's assigned site.

- Event priority is considered here based on the Event Priority Table.
- If an output group is mapped both directly and through an output group template to an event, the direct map gets priority. Example: Template 1 Contains Group 1. Zone 1 Manual Pull is mapped to Template 1 and Group 1 using constant and ANSI patterns respectively. If Zone 1 Manual Pull is active, Group 1 will output ANSI.
- When an event is mapped to an output group from multiple zones, the lower numbered zone gets priority. Example: Zone 1 Manual Pull and Zone 2 Manual Pull are mapped to Group 1 using constant and ANSI patterns respectively. If Zone 1 and Zone 2 Manual Pull events are active, Group 1 will output constant.

10.6 Operation Mode Behavior

The control panel can be in one or more of seven conditions at any given moment: Normal, Alarm, Prealarm, Supervisory, Trouble, Silenced, and Reset. Table 10-2 describes the behavior of the panel in each of these modes.

When looking at the LCD, the screen will display FS for the “Fire System”, CO for the “CO System” and ECS for “Emergency Communication System”. The highest priority event will display first and include the event count (see Figure 10-4).

Press the down arrow to view the location and type of alarm supervisory or trouble. If the panel is programmed to Auto Display Event, information describing the highest priority active event will display on the first two lines. The 3 and 4th line will show the status of which event types are active for each system (fire, CO and emergency systems). Auto Display Event activates after two minutes of annunciator inactivity. (See Figure 10-5).

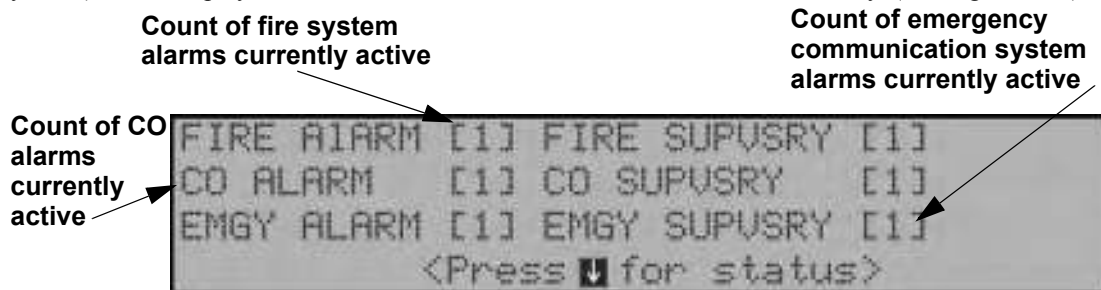


Figure 10-4 Highest Priority Event Display

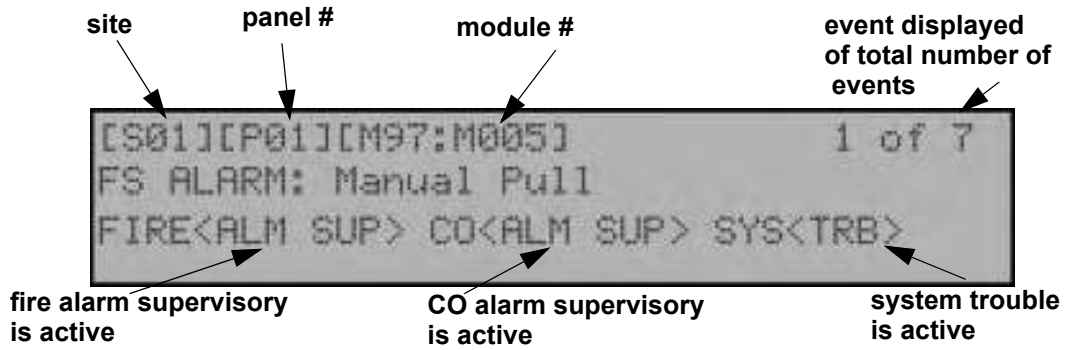


Figure 10-5 Event Display after Two Minutes Sitting idle


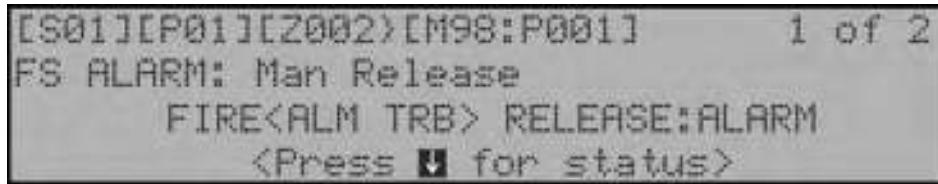


Figure 10-6 Interlock Release in Alarm after Two Minutes Sitting Idle

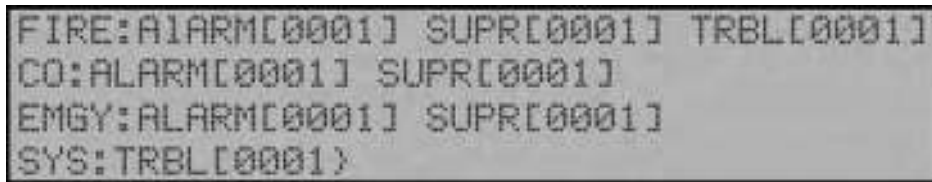

This screen will display when more than 3 event types are active

Table 10-2: Operations Mode Behavior

Operation Mode	Occurs When	System Behavior	In This Mode You Can
Normal	No alarm or trouble condition exists and menus are not in use.	SYSTEM POWER LED is on. The All Systems Normal display indicates that the system is in normal mode. The current date and time display on the last line of the LCD.	Enter the appropriate code to activate the User or Installer Menu.

Table 10-2: Operations Mode Behavior

 


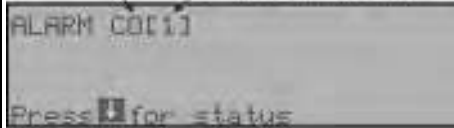
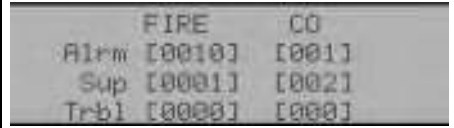
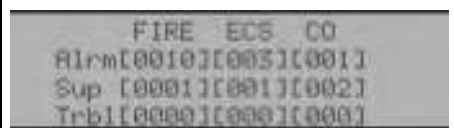
Operation Mode	Occurs When	System Behavior	In This Mode You Can
<p>Alarm</p>	<p>A smoke detector goes into alarm or a pull station is activated.</p>	<p>The dialer seizes control of the phone line and calls the central station.</p> <p>The on-board annunciator will sound loud, steady beeps to distinguish Alarm signals. For Fire Alarm, the sequence is a loud steady beep. (Any notification devices attached to the system will also sound). For ECS Alarm, the sequence is four seconds on, one second off. GENERAL ALARM LED is on.</p> <p>The LCD displays a screen similar to this one.</p> <p>Count of alarms. In this example, there are 5 in fire and 1 in ECS.</p>  <p>Press the down arrow to view the type and location of alarm (Message alternates with the date/time display).</p>	<p>Press the down arrow to view the alarm. A screen similar to this one displays.</p>  <p>Press SILENCE to silence the annunciator (and any notification devices attached to the system). When the alarm condition clears, press RESET to restore the panel to normal.</p>  <p>Note: Alarm and Prealarm are combined into single alarm count</p>
	<p>CO Detector goes into Alarm</p> <p>If more than 3 categories are active at a single time and ECS is enabled, top screen will display. If ECS is not enabled, it will look like bottom screen.</p>	<p>CO = CO Detector</p> <p>Count of CO Detectors in alarm on the system. In this example there is 1.</p>  <p>Press the down arrow to view the type and location of alarm. (Message alternates with the date/time display):</p>  	

Table 10-2: Operations Mode Behavior


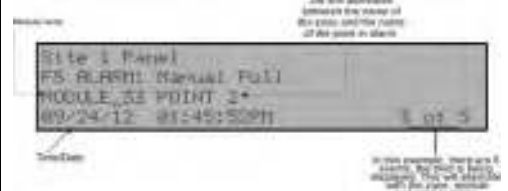


Operation Mode	Occurs When	System Behavior	In This Mode You Can
Supervisory	The system detects a supervisory condition.	<p>The dialer seizes control of the phone line and calls the central station.</p> <p>The on-board annunciator sounds a loud, pulsing beep to distinguish supervisory signals. For Fire Supervisory the sequence is two seconds on, two seconds off. For ECS Supervisory, the sequence is two seconds on, three seconds off.</p> <p>SUPERVISORY LED is on.</p> <p>The LCD displays a screen similar to this one.</p> 	<p>Press down arrow to view the fire supervisory condition. A screen similar to this one displays.</p>  <p>Press SILENCE to silence the annunciator.</p> <p>After sitting idle, events will display in a screen similar to this:</p>
	A Supervisory condition with a CO detector	<p>Press the down arrow to view the type and location of fire supervisory. (Message alternates with the date/time display.)</p>  <p>Press the down arrow to view the type and location of alarm. (Message alternates with the date/time display.)</p>	

 Table 10-2: Operations Mode Behavior





 
 

Operation Mode	Occurs When	System Behavior	In This Mode You Can
<p>Trouble</p>	<p>A system trouble condition occurs.</p> <p>A trouble condition with a CO detector</p>	<p>The dialer seizes control of the phone line and calls the central station.</p> <p>The on-board annunciator sounds a loud, pulsing beep in the sequence ¾ of second on, eight seconds off.</p> <p>SYSTEM TROUBLE LED is on.</p> <p>The LCD displays a screen similar to this one.</p>  <p>Count of fire troubles in the system In this example there are 3.</p> <p>Press the down arrow to view the type and location of fire trouble condition. (This message alternates with the date / time display.)</p>  <p>CO = CO Detector</p> <p>Count of CO detectors in trouble on the system In this example there is 1.</p> <p>Press the down arrow to view the type and location of trouble condition. (This message alternates with the date / time display.)</p>	<p>Press down arrow to view the fire trouble. A screen similar to this one displays.</p>  <p>2nd line alternates between the name of the zone and the name of point in trouble</p> <p>Device type</p> <p>4th line alternates between type of supervisory and date/time</p> <p>Press SILENCE to silence the annunciator.</p> <p>Once the trouble condition has been fixed, the system will restore itself automatically.</p> <p>After sitting idle, events will display in a screen similar to this:</p>  <p>Flashes between line/date & Mod/Armp</p>
<p>Prealarm</p>	<p>A single detector trips in a 2-Count zone. (2-Count means two detectors must trip before an alarm is reported.)</p>	<p>Touchpad PZT beeps.</p> <p>The LCD displays a screen similar to this one.</p>  <p>Count of fire prealts in the system In this example there is 1.</p> <p>Press the down arrow to view the type and location of prealarm. (Message alternates with the date/time display.)</p>	<p>Press down arrow to view the prealarm. A screen similar to this one.</p>  <p>Module and Point name</p> <p>4th line alternates between type of PreAlarm and date/time</p> <p>All system operations are available in this mode.</p> <p>After sitting idle, events will display on a screen similar to this:</p>  <p>Device type</p> <p>2nd line flashes between time/date & Mod/Armp</p> <p>Note: Alarm and Prealarm are combined into a single alarm count.</p>

Table 10-2: Operations Mode Behavior

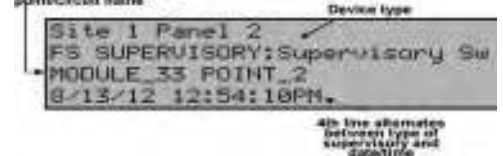Operation Mode	Occurs When	System Behavior	In This Mode You Can
Reset	The RESET button is pressed followed by a valid code, if necessary.	All LEDs are on briefly then the LCD displays "RESET IN PROGRESS". If the reset process completes normally, the date and time normal mode screen displays.	Menus are not available during the reset process.
Silenced	An alarm or trouble condition has been silenced but still exists. To silence alarms and troubles, press SILENCE followed by the Installer or User Code, if necessary.	SYSTEM SILENCE LED is on. SYSTEM TROUBLE, SUPERVISORY and/or GENERAL ALARM LED (depending on condition) is on. The annunciator (and any notification devices attached to the system) will be silenced.	Press down arrow to view the location of the alarm, supervisory or trouble. When the condition no longer exists, the SYSTEM SILENCED and SYSTEM TROUBLE LED, SUPERVISORY and/or GENERAL ALARM LEDs turn off.

10.7 Multi-Site Annunciator and Multi-Site User Access

Multi-site Annunciators are unique as they can display the status and event history of all sites they are assigned to. These displays can be especially useful in guard shacks or security centers. A multi-site display is indicated by the words "Multi-Site Display" at the top of the idle screen.

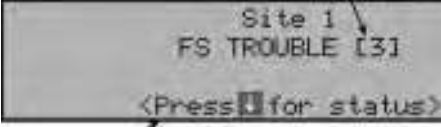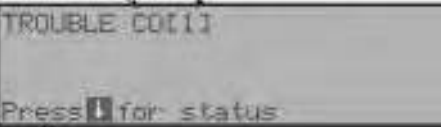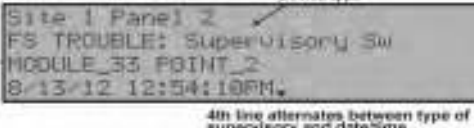1. The ACK, DRILL, RESET and F-Macro keys are disabled until a multi-site user access code has been entered and a specific site has been selected.
2. Multi-site Annunciator silencing rules:
 - If any of the assigned sites are silenced, the Silenced LED will be lit.
 - Silence key will only silence the sound from the multi-site annunciator on which the silence key was pressed. This is called being Locally Silenced. If Locally Silenced is enabled on a multi-site annunciator, it will be indicated by a blinking Silenced LED.
 - If any new troubles, supervisory, pre-alarms, or alarms are triggered in any assigned sites, Locally Silenced will become disabled.
 - If a multi-site annunciator is locally silenced for 24 hours, the locally silenced feature will be disabled.
3. The IFP-2000 menu system is disabled on a multi-site annunciator. Pressing the Right or Enter keys will bring you straight into event history for assigned sites. To get into the menu system, a multi-site user password must be entered and then a site must be selected from the site selection menu. Once this is done you will have access to the idle screen of that site and the annunciator will temporarily act like a single site annunciator.
4. A multi-site annunciator will sound the highest priority tone from the sites it is assigned to.

Note: A multi-site display is created in Module programming in the edit properties menu for an RA-2000. See section 9.2.1.

Note: An RA-2000 cannot be programmed as a multi-site display when it is associated with an ECS-RVM in a ECS system.

10.7 Releasing Operations

The control panel supports two types of releasing: Double Interlock Zone, and Single Interlock Zone. The Double Interlock Zone operation requires an interlock switch input in the system, and the Single Interlock Zone does not. An interlock switch is typically a dry-contact pressure switch.

When Single or Double Interlock Zone releasing is selected using SKSS-2 software, the software suite will

automatically default the following system parameters:

Note: The defaults created can be modified through programming if desired.

- Output Group 2 is created. Output Group 2 will be defaulted as a “Detector Alarm” output group for all releasing zones. NAC [98:001] is assigned to Output Group 2.
- Output Group 3 is created. Output Group 3 will be defaulted as a “Interlock Release Alert” output group for all releasing zones. NAC [98:002] is assigned to Output Group 3.
- Output Group 4 is created. Output Group 4 will be defaulted as “Interlock Release Alarm” output group for all releasing zones. NAC circuit [98:003] is assigned to Output Group 4.

Note: The installer must define which input points will be used for detectors, manual release switches, or interlock/pressure switches.

Note: For manual release operation, Installer must use an FM approved/ UL listed releasing manual station.

Table 10-3: Approved Releasing Solenoids

Manufacturer	Part Number	Rating	Current	Freq
Asco	T8210A107	24 VDC	3A max	0 Hz
	8210G207	24 VDC	3A max	0 Hz

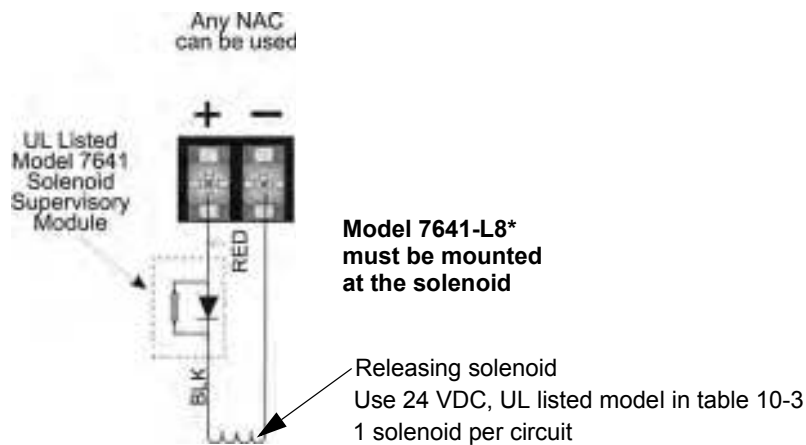


Figure 10-7 Wiring Configuration for Solenoid

*When ordering, order as P/N 7641-L8

10.7.1 Single Interlock Zone Releasing

A single interlock zone utilizes a minimum of two addressable detectors and a designated manual release switch.

Important!
Only addressable detectors can be used. No conventional detectors can be used.
Each Single Interlock Zone input requires at least one manual release switch.

Conditions Required for an Interlock Release Alert Output Activation

If any single addressable detector is activated, the “Interlock Release Alert” output will activate. This alerts the user that the initial stages required for a release condition are present. (Also refer to Table 10-4).

Conditions required for a Detector Alarm and Interlock Release Alarm Output Activation

If two or more addressable detectors, or a manual release switch activate, the “Detector Alarm” and “Interlock Release Alarm” outputs will activate. (Also refer to Table 10-4).

Table 10-4: Single Interlock Zone Operation

Inputs	Output Results							
1st Addressable Detector		X		X		X		X
2nd Addressable Detector			X	X			X	X
Manual Release Station					X	X	X	X
	Normal	Interlock Release Alert	Interlock Release Alert	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm

10.7.2 Double Interlock Zone Releasing

A Double Interlock Zone uses a minimum of two addressable detectors, a designated manual release switch, and an interlock switch input. An interlock switch is typically a dry-contact pressure switch and will be referred to as an interlock/pressure switch in this document.

Important!
Only addressable detectors can be used. No conventional detectors can be used.
Each Double Interlock Zone input requires at least one Interlock/pressure switch and at least one manual release switch.

Conditions Required for a Interlock Release Alert Output Activation

If any single addressable detector is activated, the “Interlock Release Alert” output will activate. This alerts the user that the initial stages required for a release condition are present. (Also refer to Table 10-5).

Conditions Required for a Detector Alarm Output Activation

If two addressable detectors, a manual release switch is activated, or an interlock switch is active, the “Interlock Release Alert”, and “Detector Alarm” outputs will activate.

Conditions Required for a Interlock Release Alarm Output Activation

Any release requires the activation of an interlock switch, and either a manual release switch or 2 activated addressable detectors. When these conditions are met, the “Interlock Release Alarm” and “Detector Alarm” outputs will activate, and the “Interlock Release Alert” outputs will deactivate.

Table 10-5 Double Interlock Zone Operation

Inputs	Output Results															
1st Addressable Detector	X		X		X		X		X		X		X		X	
2nd Addressable Detector		X	X			X	X			X	X			X	X	
Manual Release Station				X	X	X	X					X	X	X	X	
Interlock/Pressure Switch								X	X	X	X	X	X	X	X	X
Normal	Interlock Release Alert	Interlock Release Alert	Interlock Release Alert and Detector Alarm	Interlock Release Alert and Detector Alarm	Interlock Release Alert and Detector Alarm	Interlock Release Alert and Detector Alarm	Interlock Release Alert and Detector Alarm	Interlock Release Alert and Detector Alarm	Interlock Release Alert and Detector Alarm	Interlock Release Alert and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm	Interlock Release Alarm and Detector Alarm

10.8 Smoke Alarm Verification

Figure 10-8 illustrates how the Smoke Alarm Verification cycle operates.

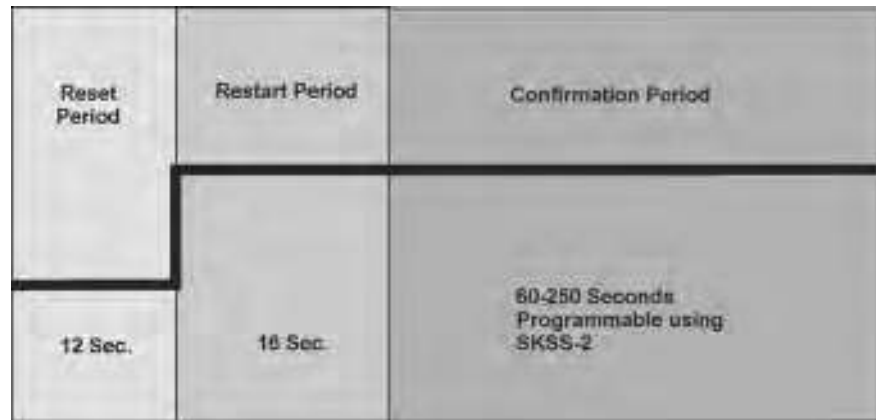


Figure 10-8 Smoke Verification Cycle

During the Confirmation Period if there is no alarm indication then the system will return to normal operation.

10.9 Function Keys

The function keys on the IFP-2000 have multiple features. Their macro key functionality can simplify the disabling, activating, or inhibiting points or groups respectively. They can also be used as a status type activation event and for activating Map Inhibit. Each F-Key macro can hold 50 events.

To access the F-Key Recording menu:

1. From the idle screen, press and hold the F-Key for 5 seconds.
2. Enter a PIN with F-Key macro recording privileges, if prompted.

10.9.1 Recording an F-Key Macro

1. Access the F-Key Recording menu and select the 'Start FKEY Recording' option.
2. The panel will return to the idle screen. Notice the 4th line on the display now alternates with <F# Key Recording>, where # is the number of the F-Key being recorded.
3. Any Disabling or Activating of points, output groups, or templates from the site at this point will be programmed into the macro. Do this by going to any annunciator within the site and entering Main Menu -> Point Functions and use Disable/Enable Point or use I/O Point Control to: disable output groups or individual points, or activate individual points.
4. Once you are finished with disabling or activating points/output groups, enter the F-Key Recording Menu again and select the 'End FKEY Recording' option.
5. The panel will return to the idle screen.

10.9.2 Aborting an F-Key Macro Recording Session

1. After an F-Key macro recording session has been started, the session can be canceled at any time by accessing the F-Key Recording menu and selecting 'Abort FKEY Recording' option.
2. The panel will return to the idle screen.

10.9.3 Erasing an F-Key Macro

1. If an F-Key macro has already been recorded, you can erase it by accessing the F-Key Recording menu and selecting the 'Erase FKEY Macro' option.
2. The panel will return to the idle screen.

10.9.4 Using a Recorded F-Key Macro

1. From the idle screen on any annunciator in the site, press the F-Key you want to activate.
2. Once finished, to de-activate the macro press the F-Key again.

10.9.5 F-Key Status Event

When an F-Key is enabled, it activates its corresponding F-Key Active event. This is a status type event that can activate outputs without showing any status on annunciator displays. This should be used for ancillary purposes only.

10.9.6 F-Key Map Inhibit

The F-Keys have the ability to disable event - output group mapping for the purpose of simulating that the map doesn't exist. This can be setup to allow for testing purposes where notification of an entire building is not desired during the test. This option is programmable for each output group map through SKSS-2.

When an F-Key is active and a map in the system is set to be disabled by Map Inhibit, the system will show a trouble event indicating it as such.

Section 11

Emergency Communication System Operation

11.1 Overview

The IFP-2000ECS control panel and accessories provides features to meet the requirements for a Mass Notification Systems as described in NFPA 72 and is compliant with the UL 2572 standard. The ECS (Emergency Communication System) is integrated with the fire alarm and voice evacuation functions of the control panel. In a networked panel system, only one panel can be chosen to be the voice evacuation/ECS panel for the site.

There are two ways for activating ECS in the IFP-2000ECS panel:

ECS Point Activations

ECS Point Activation involves using pre-determined ECS Alarm input points to activate ECS Alarm events. These events cause output areas to activate based on mapping that is programmed into the system at installation. This is very similar to the traditional mapping that the fire system has utilized to date.

Manual LOC Activations

Manual LOC Activation involves using the LOC ECS interface to activate ECS Events, choose output areas, and speak through a microphone. These selections are not pre-determined and allow the user to make system functionality decisions when the event is actually happening. This requires the activation of Manual ECS State which bypasses ECS Point Activations. See section 11.2.3.

11.2 LOC Functionality

An LOC (Local Operating Console) consists of either the ECS series panel (ECS-VCM Voice Control Module and the Alarm Control Panel), or the ECS-RCU2000 Remote Command Unit (ECS-RVM Remote Voice Module and its associated RA-2000 keypad.) An LOC is created by adding a VCM or RVM to the system and associating a keypad to it. The LOC provides eight buttons for activating the ECS messages, a button to gain and request ECS Control, and a microphone for live paging. There can be up to 15 LOC devices in the system. In a networked panel system, all of the LOCs must be connected through SBUS to the panel that includes the VCM.

11.2.1 Keys and LEDs

This section outlines the functionality of the keys and LEDs on the ECS-VCM and ECS-RVM expander modules.

11.2.1.1 ECS Control Key

Pressing the ECS Control Key will do one of two things:

1. Enter Message Mode of the LOC ECS interface (including trying to gain ECS Control if the user doesn't have it already).
2. Relinquish ECS Control if pressed while in Message Mode.

11.2.1.2 ECS Control LED

The ECS Control LED is used to indicate the status of ECS Control in the system. When the LED is on solid, the LOC has ECS Control within the system. When the LED is blinking, another LOC has gained ECS Control in the system.

11.2.1.3 ECS Message Keys

ECS Message Keys are used in Message Mode to select which ECS Message is to be played. If pressed when the LOC does not have ECS Control, the system will automatically try to gain ECS Control before allowing the ECS Event to be activated. See section 11.2.2.

11.2.1.4 ECS Message LEDs

The red ECS Message LEDs indicate the active ECS Message and any previously active ECS messages. The green LEDs indicate the ECS Message was selected in message mode and that the LOC has ECS control.

1. For ECS Point Activation, the red ECS Message LEDs will illuminate on each LOC to indicate which ECS messages have been activated in automatic ECS state.
2. In Manual ECS State, the red ECS Message LEDs will indicate which ECS message has been activated at an LOC. See section 11.2.3.
3. The green ECS Message LEDs will activate for the LOC that activated the ECS Message.

11.2.1.5 Select Keys

The Select Keys are used to toggle which output areas are active.

1. If Message Mode is active (see Section 11.2.3), the Select Keys will activate output which areas for the active message to be played in (also activates the red Select Key LED).

Note: For LOC activated emergency alarm events, if an area is programmed through mapping to be active that area is automatically selected and can not be deactivated using the Select Keys.

2. If Microphone Mode is active (see Section 11.2.3), the Select Keys will toggle which areas the microphone audio is distributed to (also toggles the green Select Key LED).

11.2.1.6 Select Key LEDs

The Select Key LEDs are used to indicate which output areas are active for a microphone page (see Section 11.7.4.1) or system events.

1. Green LEDs: active areas for microphone paging.

Note: These are only active when the microphone PTT is engaged.

2. Red LEDs: active areas for system events.

Note: When system is Dual Channel Enabled, blinking indicates the area is active for an alert message.

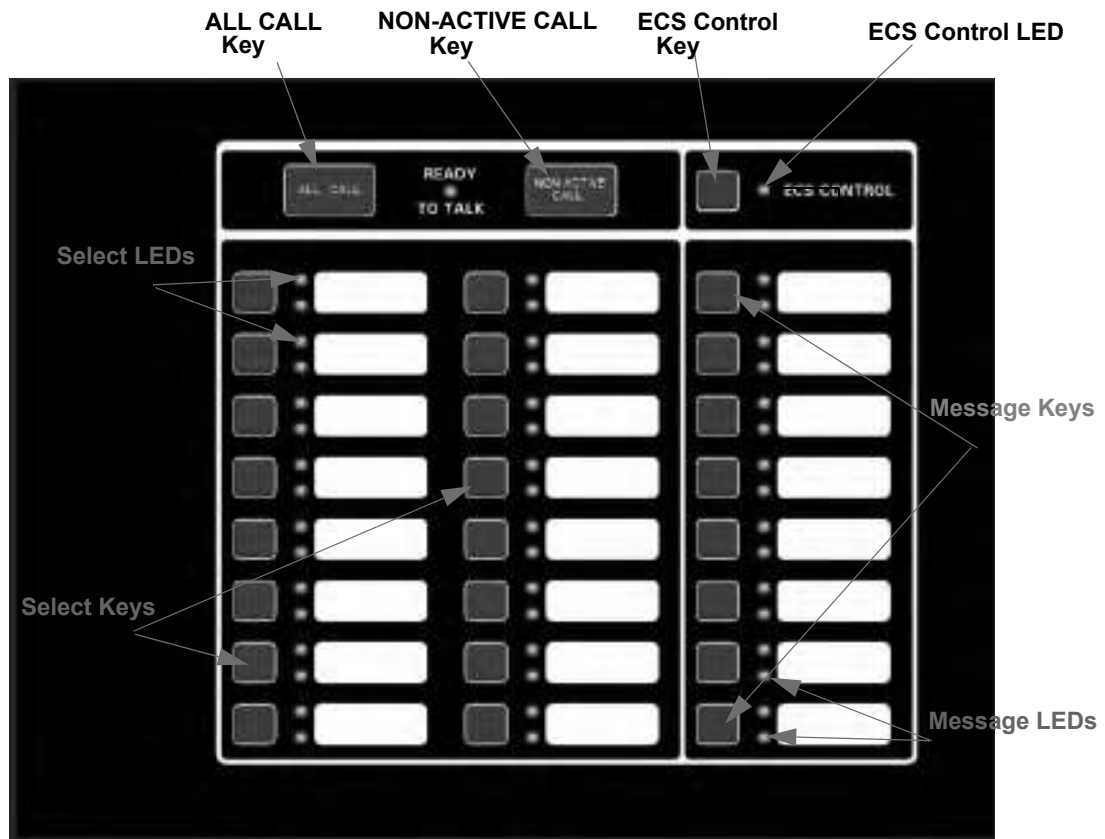


Figure 11-1 ECS-VCM / ECS-RVM Front View

11.2.2 Gaining ECS Control

When attempting to gain ECS Control, there are three things that govern whether or not ECS Control can be obtained:

1. LOC Priority.
2. LOC Lockout.
3. User profile access control.

11.2.2.1 LOC Priority

LOCs are assigned (through panel or SKSS-2 programming of the ECS-VCM or ECS-RVM) an LOC priority of low, normal, or high. LOCs with a higher priority are always able to gain control from a lower priority LOC.

11.2.2.2 LOC Lockout

When LOCs are programmed to the same priority, the setting LOC lockout applies. LOC lockout will not allow an LOC to gain ECS Control from the LOC with ECS Control until one of three things happen:

1. The LOC lockout timer expires. Once the LOC lockout timer expires, an attempt to gain ECS Control can be made again.

Note: The lockout timer must be programmed to expire sometime other than Never.

2. The user at the second LOC requests ECS Control from the LOC with ECS Control and that LOC grants the request. (See Section 11.2.7). If the ECS lockout timer expires while an ECS Control request is in progress, the system will automatically pass ECS Control to the requesting LOC.

3. The user at the second LOC enters an access code with the ECS Super User profile option.

The LOC lockout timer can be set between immediate and 12 hours in increments of 1 second or it can be set to never expire. The default setting is 30 seconds. The LOC lockout timer is restarted upon any key press at the LOC with ECS control. The LOC lockout timer is cleared when ECS Control is relinquished.

11.2.2.3 User Profile Access Control

The user will need to enter an access code containing the ECS Control Request or ECS Super User profile option to gain ECS Control. ECS Control Request and ECS Super User profile options will be mutually exclusive to the system. If the access code has ECS Super User, the ECS Control Request is ignored and activations by that user are always as ECS Super User.

11.2.3 Manual ECS

After gaining ECS Control the system enters the LOC ECS interface which allows you to activate the Emergency System and allows for Emergency Paging. Once an emergency event has been activated the panel enters a Manual ECS State. In this state, all ECS Alarm programmed points that are currently in alarm in the system are changed to an active state. The display status screen reflects this when viewing the system for status. Any outputs that were activated by the ECS Alarm programmed points are deactivated until Manual ECS state is exited. Only an ECS Reset can exit the Manual ECS State. If a user gains ECS Control at an LOC and does not activate an ECS message, the system will automatically generate an ECS Supervisory indicating such. This prevents an LOC from being in an undesired state of ECS Control when an actual event emerges.

There are two modes for interacting with the LOC ECS interface when in Manual ECS State:

1. Message Mode
2. Microphone Mode

These two modes allow you to quickly add areas of output for a desired message and toggle output areas to speak to for microphone ECS Paging.

After gaining ECS Control, the system is in Message Mode of the Manual ECS State.

11.2.3.1 Switching between Microphone Mode and Message Mode

At any time while in ECS Control, you can switch between Microphone Mode and Message Mode. Microphone Mode is entered by simply engaging the microphone.

1. Message Mode: Use the ECS Message keys to select which message/event to output to the system. Use the Select Keys to select output areas to play the current ECS Message in. The Select Key's red LED will activate solid to confirm that the area is now receiving the message. Any non-voice groups assigned to this Select Key will also activate with their Activation Cadence. See Section 11.2.3.2. Message Mode can only be used to activate areas. The only way to remove output areas is to perform an ECS Reset.
2. Microphone Mode: Use the Select Keys while the microphone is active to toggle which areas to do an ECS Microphone Page to. The Select Key's green LED will toggle on/off with the activation/deactivation of the ECS Microphone Page to the area.

11.2.3.2 Activating Output Groups Dynamically

This method allows the system to be setup with minimal or no system mapping. When in Manual ECS State and operating in Message Mode the user can dynamically activate output areas for system notification to take place in. The Select Key red LED will become lit and the circuits in the output group(s) will become active and play the currently active ECS event message. Non-voice output groups can also be assigned to Select Keys and will activate using the activation cadence assigned to it in output group programming. This is available in the panel and in SKSS-2. See Section 9.4.1.2.

11.2.4 Microphone Mode

Microphone Mode allows the user to press the Select Keys to toggle which output areas to speak to over the

microphone. The green LEDs next to the Select Keys will activate or deactivate.

```

MICROPHONE MODE
SELECT KEYS: Toggle Output Areas
Microphone Active
Release Microphone for MESSAGE MODE

```

11.2.5 Message Mode

In Message Mode, the user is able to press the ECS message Keys to choose a message and press the Select Keys to activate or deactivate which output areas the message will be played. This will activate or deactivate the green and red LEDs next to the ECS Message Keys and the red LEDs next to the Select Keys.

```

MESSAGE MODE
ECS MESSAGE KEYS: Choose Message
SELECT KEYS: Activate Output Areas
Engage Microphone for MICROPHONE MODE

```

11.2.6 Custom ECS Event

Custom ECS events allows the user to generate an ECS event and speak a custom message using the microphone. Once the user is done speaking the message, the tone and any associated strobes will continue to be active in the output areas.

To generate a Custom ECS Event:

1. Gain ECS Control using the ECS Control Key when there is not an ECS Event active.
2. Activate the microphone.
3. Choose desired output areas using the Select Keys.
4. Speak custom message into microphone.

11.2.7 Passing ECS Control

Passing of ECS Control is allowed when two LOCs have the same priority. When it is possible to pass control, a prompt (similar to) will display in which the user can: request control from the LOC with ECS Control, enter an access code with the ECS Super User profile option to override the other LOC, or wait for the lockout timer to expire (if applicable).

```

GAIN ECS CONTROL OPTIONS MENU
1=Request ECS Control From LOC
2 Gain ECS Control as ECS Super User
3 Wait for Lockout Timer to Expire 30

```


Figure 11-2 Request ECS Control with Lockout Timer Active

ECS Control lockout is programmable from immediate to 12 hours in increments of one second. You are also able to select never expire.

When passing ECS Control between two ECS Super Users, the user is not shown the prompt screen. Instead, a request for ECS Control is automatically made. Additionally, the lockout timer does not apply for ECS Super User.

When a request for ECS Control is made, the LOC with ECS Control will be shown a screen (similar to Figure

11-3), even when in another menu, except programming menus, indicating that another LOC is requesting ECS Control. The piezo buzzer on the LOC with ECS Control sound when an ECS Control request is active to alert a nearby operator of the request.

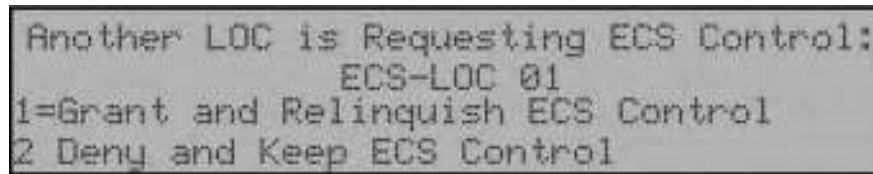

```

Another LOC is Requesting ECS Control:
      ECS-LOC 01
1=Grant and Relinquish ECS Control
2 Deny and Keep ECS Control
  
```

Figure 11-3 ECS Control Request on LOC with ECS Control


Once ECS Control is passed to another LOC, the new user will assume the system AS IS. This means that the event that was set to be playing at the previous LOC and all output areas it was playing in do not change.

11.2.8 Exit ECS Control Menu

The user can exit the LOC ECS interface by pressing the left arrow. The user will be returned to the idle screen which indicates that the LOC still has ECS control.

11.2.9 Relinquish ECS Control

Relinquishing ECS Control is accomplished by pressing the ECS Control Key from within Message Mode or Microphone Mode. A screen will be displayed to ensure the user wants to relinquish ECS Control. ECS Control will be automatically relinquished after a time-out on this screen. When ECS Control is relinquished, the system stays in the Manual ECS State. ECS Control can then be gained by another LOC or again at the same LOC.

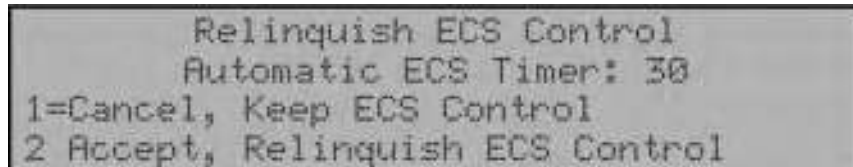

```

Relinquish ECS Control
Automatic ECS Timer: 30
1=Cancel, Keep ECS Control
2 Accept, Relinquish ECS Control
  
```

Figure 11-4 Relinquish ECS Control Screen

11.2.10 ECS Reset

An ECS reset is accomplished by pressing the RESET button from an LOC. The user will be prompted to reset either the fire system or emergency system. After an ECS reset, the LOC will automatically exit the LOC ECS interface.

Note: In order to perform an ECS reset, the display must be associated with the ECS-VCN / ECS-RVM. See Section 11.6.2.2.

11.3 ECS Super User

The ECS Super User access code profile function provides the ability to override all ECS Control rules and gain ECS Control. The ECS Super User is the highest priority user in the system. The ECS Super User has several features that differ from the normal user:

1. Any alarm activated while under ECS Super User Control needs to be reset using an ECS Super User function enabled access code.
2. LOC priority and LOC lockout timer are ignored when passing ECS Control between ECS Super Users at LOCs. If another ECS Super User attempts to gain ECS Control from an LOC, an ECS Control request is presented to the ECS Super User at the LOC that currently has ECS Control.

11.4 ECS Point Functionality

Any input point in the system can be configured as an ECS input. The Point ECS 1-8 Alarm input types can be used to trigger predetermined ECS events for output areas. ECS-VCM points can be programmed to trigger Voice Aux events that can allow external audio to be played through the emergency system.

11.4.1 ECS Point Activations

ECS points can only activate outputs and be placed into an alarm state if the system is not in Manual ECS State. ECS points have no priority and all are allowed to be activated. If the ECS point is a higher priority than the Fire System, then the system will play the highest event message through all ECS mapped outputs.

For example: Emergency 1 Point Alarm is higher priority than Emergency 2 Point Alarm. Emergency 1 Point Alarm has message 1 mapped to through groups 1 and 2. Emergency 2 Point Alarm has message 2 playing through groups 2 and 3. If a point for Emergency 1 Point Alarm and a point for Emergency 2 Point Alarm are both active, the system will play message 1 through groups 1, 2, and 3.

Once Manual ECS State is active, points in Alarm state switch to an Active state. When the points are changed to the Active state, they do not activate any system mapping or turn any outputs on. Any points that are activated while in Manual ECS are also placed into the Active state and are not allowed to activate any mapping. The system idle screen will show an ECS Alarm counter for any points in the Active state, and the detailed description of the point will show the point as Active.

After an ECS Reset, any ECS points that are still active will again be put into Alarm.

11.4.2 ECS-VCM Points

The ECS-VCM module contains two programmable input points. These can be programmed as any conventional switch input type. These also have the ability to be programmed as a trigger for bringing external audio into the system. These special point types are: ECS Voice Aux In 1-4 Alarm, Voice Aux In 1-2 Status, Background Music. When activated if the event has the highest Event Priority of all activated events, it will activate the Aux In input to all outputs defined by the respective event program mapping.

Note: Background Music is only allowed to be mapped to circuit 8 of the ECS-DUAL50W amplifiers to ensure correct active supervision.

11.5 Amplifier Programming

11.5.1 Adding an Amplifier

To add a new AMP to the system, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming menu.
3. Press 1 to enter Module menu.
4. Press 2 to add a module.
5. From the next screen, add an ECS-AMP.



The screen will display “Adding module [#]...” for a few moments. You will be returned to the <New Module Type> screen where you can select another a name for the module(s) if desired.

You must save changes when you exit the Program Menu or the new module will not be added. For more information see section 9.2.2.

If you Add a Module that has not been physically connected, the panel will go into trouble after it re-initializes (when you exit the Program Menu). When the new module is attached, the trouble will restore automatically the next time you power up the

11.5.2 Editing an Amplifier

When editing AMPs, the features that may be edited are: module ID, module name, ECS-CE4 installed (Yes or No), and output voltage. To edit an existing module:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Program Menu.
3. Press 1 to enter module menu.
4. Press 1 to edit a module.
5. Use the  or  arrow to select the module you wish to edit.
6. Press the right arrow or ENTER to move to next selection.

11.6 LOC Programming

LOC Priority is a programmable option for the following ECS devices:

- ECS-VCM
- ECS-RVM

11.6.1 Adding an LOC

To add new LOCs to the system, follow these steps:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Panel Programming menu.
3. Press 1 to enter Module menu.
4. Press 2 to add a module.
5. From the next screen, add either an ECS-VCM* or ECS-RVM**.

* *Only 1 ECS-VCM may be installed per site.*

** *Up to 15 ECS-RVMs may be installed per site.*

The screen will display “Adding module [#]...” for a few moments. You will be returned to the <New Module Type> screen where you can select another a name for the module(s) if desired.

6. Add a RA-2000-LCD Annunciator, if desired, to associate with each ECS-VCM or ECS-RVM.

You must save changes when you exit the Program Menu or the new module will not be added. For more information see section 9.2.2.

If you Add a Module that has not been physically connected, the panel will go into trouble after it re-initializes (when you exit the Program Menu). When the new module is attached, the trouble will restore automatically the next time you power up the system.



11.6.2 Editing an LOC

Settings that are specific to an LOC are modified by editing the ECS-VCM or ECS-RVM expander module of the LOC. These options include: number of switch expanders installed, microphone type, microphone gain, auxiliary gain, tone gain, message gain, keypad priority, and associated keypad.

Note: An LOC specific name can also be editing using SKSS-2.

To edit an existing module:

1. Enter the installer code. The panel will automatically go to the main menu.
2. Select 7 for Program Menu.

3. Press 1 to enter module menu.
4. Press 1 to edit a module.
5. Use the  or  arrow to select the module you wish to edit.
6. Press the right arrow or ENTER to move to next selection.

11.6.2.1 LOC Priority

Each device is assigned a Priority level: Low, Normal, or High. This is modified by editing the LOC's ECS-VCM or ECS-RVM module. By default, the ECS-VCM has a high LOC priority. The ECS-RVM is defaulted to normal LOC priority.

11.6.2.2 LOC Association

In order to create an LOC, an annunciator must be associated to an ECS-VCM or ECS-RVM. This is done by editing the ECS-VCM or ECS-RVM module and selecting the correct annunciator for the associated device. During JumpStart, the ECS-VCM is automatically associated with the internal annunciator. The association for other LOCs in the system must be performed in programming.

11.7 Using the Microphone

11.7.1 Microphone Functionality

Each microphone in the system is capable of providing convenience, fire or emergency paging. A convenience or fire page can be made anytime the emergency system does have System Control (see Section 10.5.1). When the emergency system has been activated and has System Control, the user must gain ECS Control to do an emergency page.

The microphones are housed within the ECS-Series panel enclosure and the ECS-RCU2000/ECS-RPU cabinets. A maximum of 15 microphones can be installed in the system.

11.7.2 Custom ECS Event

This event is activated by gaining ECS Control at a LOC and using the microphone without any ECS event already active in the Manual ECS State. In this case, the Mic Triggered ECS Alarm mapping and Gen ECS Alarm mapping will be activated and stay activated until a different ECS event is activated at the LOC or the user resets the Emergency Communication System.

11.7.3 Fire Page

A fire page can only occur when:

1. Only the fire system is active.
2. Both fire and the emergency systems are active and the highest priority active fire event is programmed to be of higher priority than the highest priority active emergency event.
3. Only the fire alarm is active, the user has gained ECS Control, and custom ECS event is a lower priority than the fire alarm.

Note: If fire and emergency systems are active and emergency system is of a higher priority, a fire page is NOT allowed. An LOC must gain ECS Control in order to do any live voice.

11.7.4 Emergency Page

An emergency page can occur when:

1. Only the emergency system is active and the user has gained ECS Control.

2. Both fire and the emergency systems are active and the highest priority active emergency event is programmed to be of higher priority than the highest priority active fire event and the user has gained ECS Control.
3. Only fire system is active, the Emergency LOC Alarm priority is higher than the active fire system event and the user has gained ECS Control.
 - This will trigger the ECS system and enable mapping for 'Mic Triggered ECS Alarm' and 'General ECS Alarm'.

11.7.4.1 Paging

If there are no active emergency or fire system events, the microphone at an LOC can be used for paging by following these steps:

1. Push the PTT (push to talk) button on the microphone.
2. Use the Select Keys on the LOC to toggle the output areas to page to with the microphone (illuminates the green LEDs).

Note: The Ready to Talk LED will illuminate after an output area has been activated.


3. Speak into the microphone.
4. Release PTT button when finished.



11.8 Recording Custom Messages

The ECS-Series VCM comes with 15 recordable message slots. Message 1-15 can be recorded from: the microphone, Aux Input, or by using the Farenhyt ECS Message Management Software Tool. All messages can be a maximum of one minute.

When in the record mode, the ECS-VCM keys will function as follows:

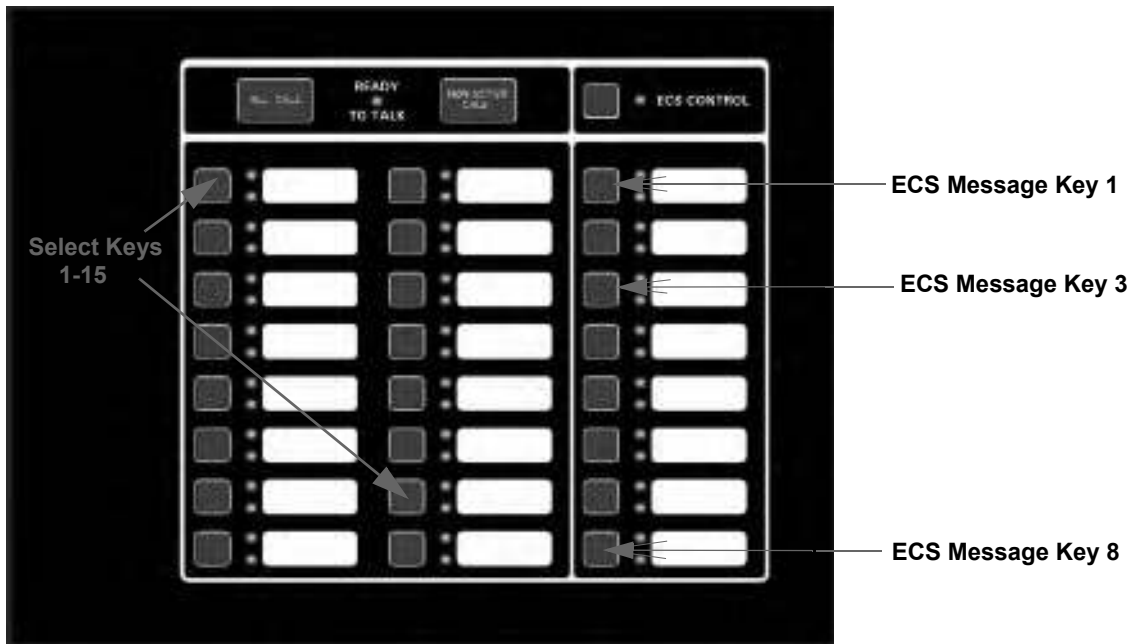

Key	Function
ECS Message Key 1	Select message slot to record to.
ECS Message Key 3	Start and stop recording from Aux. Audio Input
ECS Message Key 8	Erase user message 1-15
Select Keys 1-15	Message slot 1-15

While in the Local Record mode, Select Keys 1-15 will be used to reference message slots 1-15. The associated green Select Key LED will indicate that a message is currently programmed in the corresponding slot. When there is no message recorded (or the message is erased), the associated green Select Key LED will be off. While recording a particular message, the associated red Select Key LED will turn on until recording is completed. The Select Key 1-15 will be used to playback a recorded message or to select the message slot to record to or erase.

When in the Local Record mode, the ECS-VCM LEDs will function as follows:

Table 11-1: LED Functions During Programming

LED	LED State	Meaning
Select Key 1-15 Green LED	On	Message is currently programmed in this slot
Select Key 1-15 Red LED	On	Message recording is in progress
Select Key 1-15 Green/Red LED	Off/Off	Message slot is empty
Select Key 1-15 Red LED	Flashing	Message is being played back or message is selected for recording

11.8.1 Recording Messages 1-15 Using Aux Audio Input

Recording messages from the Aux Audio Input enables you to load customized, pre-recorded messages into an ECS message location.

Follow these steps to record a user message using Aux Audio Input:

Note: Refer to section 9 for detailed programming information.

1. Wire a speaker cable with 1/8" mini plug (Radio Shack Cat. No. 42-2454) to the Aux AUDIO GND and IN terminals. Refer to Figure 11-5 on page 12.

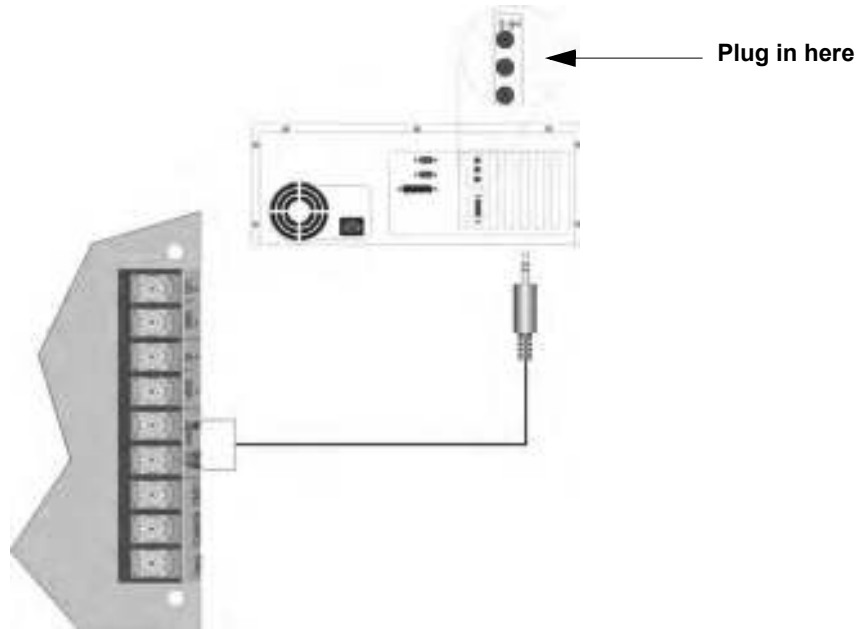


Figure 11-5 Aux Audio Connection for Recording

2. Plug the mini plug into the Line Out/Headphone jack on a PC or laptop. See Figure 11-5 on page 12.
3. Enter programming mode at main control panel.
4. Select 5 for System Options.
5. Select 8 for ECS-VCM Maintenance.
6. Select 2 Local Recording.
7. Select the amplifier and circuit for the audio to play through during programming. A user would generally pick the audio circuit that is in closest proximity to them.

Note: The VCM will light the green Select Key LED for message slots that are occupied. If a message is already stored in the desired slot, then you must erase the message first. (see Section 11.8.3).

8. Press ECS Message Key 1 to enter the message slot selection mode. Then, press the Select Key 1-15 that corresponds to the message slot that you wish to record to. The associated Select Key red LED will begin flashing, indicating that the message slot is ready for recording.
9. Simultaneously press ECS Message Key 3 and start playing the audio source on the PC or laptop.
10. When the audio file from the PC is finished playing, press ECS Message Key 3 again to stop the recording. The Select Key green LED will come on.
11. To playback the recorded message, press the Select Key 1-15 that was just recorded to.

Recording with Aux Audio Input Example:

The user wants to record into memory slot 2 via the Aux Audio Input channel.

Upon entering the Local Recording mode via the keypad menu, the VCM will light the Select Key green LEDs 1-15 for each occupied message slot.

If a message already exists in message slot 2, it must first be erased. Press ECS Message Key 8, then press Select

Key 2, (see Section Figure 11.8.3 on page 15). When the message has been erased Select Key 2's green LED will turn off.

To record a message, press ECS Message Key 1, then press Select Key 2 (this will use message slot 2 for the recording). Select Key 2's red LED will begin flashing.

Press ECS Message Key 3 while simultaneously pressing play on the PC to start recording the Aux Audio Input. When the PC message is done, press ECS Message Key 3 to stop recording. Select Key 2's red LED will stay on until processing is completed. Select Key 2's green LED comes on after the recording is completed.

Pressing Select Key 2 will start a playback of the recorded message.

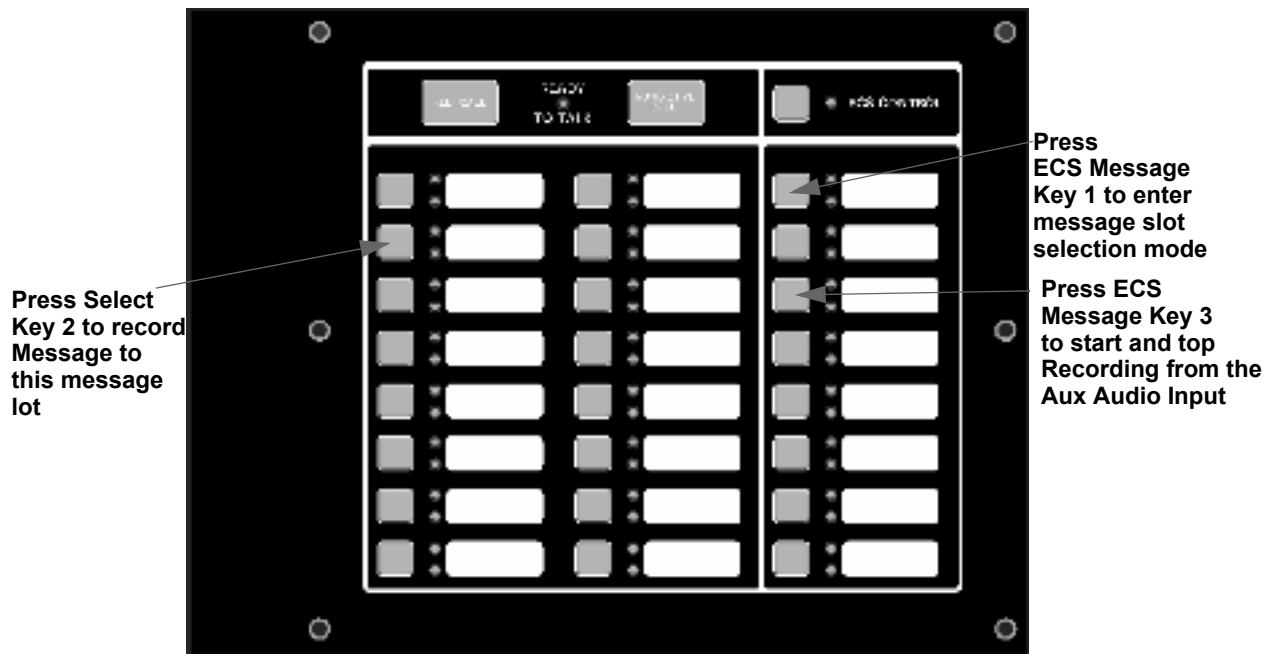


Figure 11-6 Aux Audio Input Example

11.8.2 Recording Messages 1-15 Using the Microphone

Messages can be recorded into the ECS system by using the onboard microphone.

Follow these steps to use the microphone to record your message:

1. Enter programming mode at main control panel.
2. Select 5 for System Options.
3. Select 8 for ECS-VCM Maintenance.
4. Select 2 Local Recording.
5. Select the amplifier and circuit for the audio to play through during programming. A user would generally pick the audio circuit that is in closest proximity to them.

Note: The VCM will light the green Select Key LED for message slots that are occupied. If a message is already stored in the desired slot, then you must erase the message first. (see Section 11.8.3).

6. Press ECS Message Key 1 to enter the message slot selection mode. Then, press the Select Key 1-15 that corresponds to the message slot that you wish to record to. The associated Select Key red LED will begin flashing, indicating that the message slot is ready for recording.
7. Press the push-to-talk (PTT) button on the microphone and speak your message.

8. Release the PTT button on the microphone to save your message. The Select Key green LED for this location will turn on.
9. To playback the recorded message, press the Select Key 1-15 that was just recorded to.
10. If you are not satisfied with the recorded message, erase it (see Section 11.8.3) and then repeat steps 1 through 7.

Recording with Microphone Example:

User wants to record a message to message slot 5 via the microphone.

Upon entering the Local Recording mode via the keypad menu, the VCM will light the Select Key green LEDs for 1-15 for each occupied message slot.

If a message already exists in message slot 5, it must first be erased. Press ECS Message key 8, then press Select Key 5, (see Section Figure 11.8.3 on page 15). When the message has been erased Select Key 5's green LED will turn off.

To record a message, press ECS Message Key 1, press Select Key 5 (this will use message slot 5 for the recording). Select Key 5's red LED will begin flashing.

Press the push-to-talk button on the microphone and speak your message. Release the PTT button to save your message. Select Key 5's red LED stays on until processing is completed. Select Key 5's green LED comes on after the recording is completed.

Pressing Select Key 5 will start a playback of the recorded message.

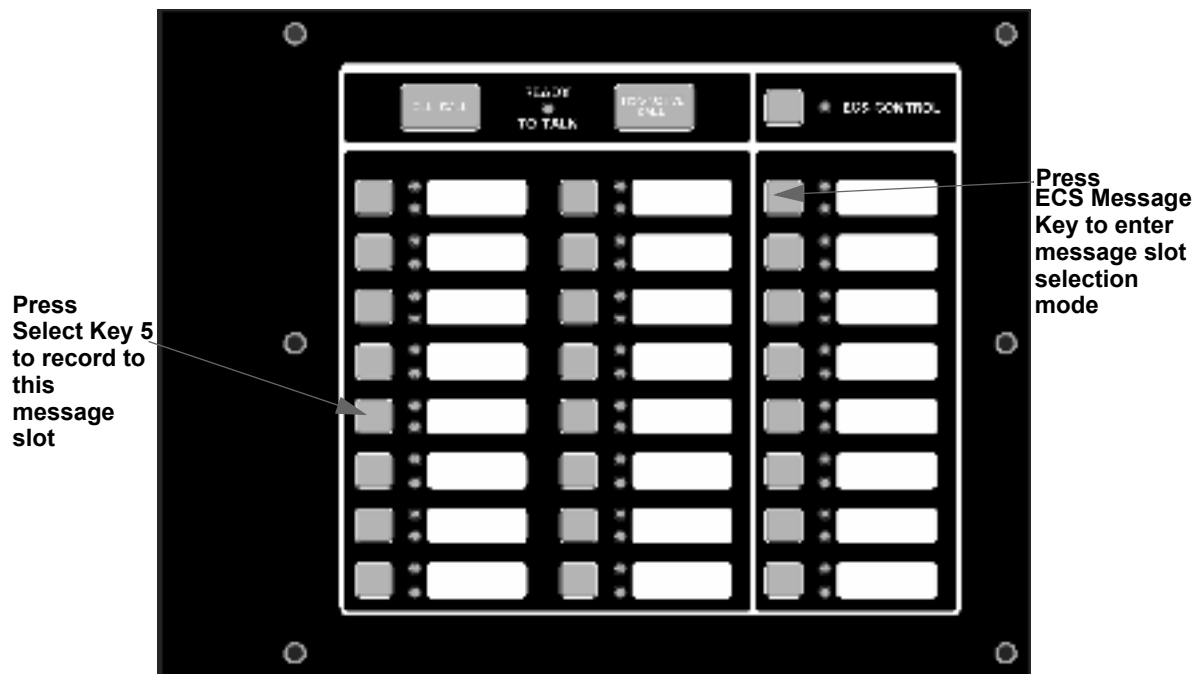


Figure 11-7 Recording with Microphone Example

11.8.3 Erasing User Message

To erase the message stored in message slot 1-15, follow these steps:

1. Enter programming mode at main control panel.
2. Select 5 for System Options.
3. Select 8 for ECS-VCM Maintenance.

Note: The VCM will light the green Select Key LEDs for message slots that are occupied (can be erased).

4. Select 2 Local Recording.
5. Select the amplifier and circuit for the audio to play through during programming. A user would generally pick the audio circuit that is in closest proximity to them.
6. Press ECS Message Key 8 on the ECS-VCM, press the Select Key 1-15 that you wish to erase. The Select Key red LED will stay on until the erase is done. When erased, the Select Key green LED by corresponding to the message slot you erased will go off.

11.8.4 Using Farenhyt ECS Message Manager Software Tool

The Farenhyt ECS Message Manager Software Tool is a software support utility that is used to download recorded messages (in .SKE format stored on your PC hard drive) to the various message locations of the ECS-Series VCM. Messages can be uploaded from the ECS-Series VCM, stored, and used again in similar installations. The Farenhyt ECS Message Manger Software Tool can also be used to move messages to different message locations. For example, move message 1 to message 3 memory location.

To read/write .SKE formatted messages to and from the main panel, follow these steps:

1. Make sure that panel is in Normal mode.
2. Connect the PC to the ECS-VCM using a standard USB cable. See Figure 11-8 on page 15.

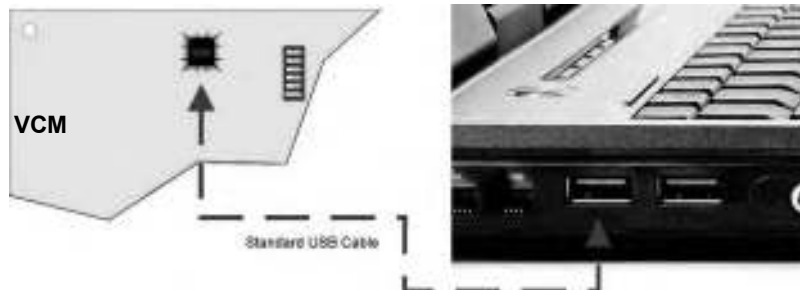


Figure 11-8 USB Cable Connections

3. Run the Farenhyt ECS Message Manager software.
4. Select “Read from Panel” to read a message and store onto your hard drive, or “Write to Panel” to transfer a .SKE formatted message to the panel.
5. Select the appropriate message location you wish to read/write.
6. Enter the file name you wish to transfer (Press “Browse” to display a list of files.)
7. Press “Start” to start the transfer.

Section 12

Reporting

This section lists receivers that are compatible with this control panel, and the reporting codes sent by the control panel for SIA and Contact ID formats.

12.1 Receivers Compatible with the Control Panel

Table 12-1 shows receivers compatible with the control panel.

Table 12-1: Receivers Compatible with the Control Panel

Manufacturer	Model	Format
Silent Knight	Model 9800	SIA and Contact ID
	Model 9000 (SIA formats)	SIA
Ademco	Model 685 (Contact ID)	Contact ID
Sur-Gard	SG-MLR2-DG (V. 1.64 or higher)	SIA and Contact ID
Osborne Hoffman	Quickalert	SIA and Contact ID

12.2 Reporting Formats Table

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
System Events	Note: System Events are reported when either "Report by Point" or Report by Zone is selected							
AC power low trouble		AT	0	ATNN000000	1	301	00	000
AC power low trouble restore		AR	0	ARNN000000	3	301	00	000
Auto dialer test communications trouble line 1		YC	1	YCNN000001	1	350	Receiver #	001
Auto dialer test communications trouble line 1 restore		YK	1	YKNN000001	3	350	Receiver #	001
Auto dialer test communications trouble line 2		YC	2	YCNN000002	1	350	Receiver #	002
Auto dialer test communications trouble line 2 restore		YK	2	YKNN000002	3	350	Receiver #	002
Automatic test normal		RP	0	RPNN000000	1	602	00	000
Automatic test off normal		RY	0	RYNN000000	1	608	00	000
Battery voltage trouble		YT	Exp. ID	YTNNXX0000	1	302	Exp. ID	000

	SIA Reporting Format				Contact ID Reporting Format			
	SIA pi Modifier			SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
Event Description	Module ID # (If Any)	SIA Event Codes	Parameter	Fixed Length Format NN - panel ID XX- SBUS ID ZZZ - Zone # PPPP- Point # GGG- Group # E - Emergency # RRRR- Receiver #				
Battery voltage trouble restore		YR	Exp. ID	YRNNXX0000	3	302	Exp. ID	000
Date changed event		JD	0	JDNN000000	1	625	00	000
ECS Reset		OR	1	ORNN000001	1	401	00	001
Emergency System Overridden		QS	0	QSNN000000	1	244	00	000
Emergency System Overridden Restore		QR	0	QRNN000000	3	244	00	000
Fire drill has begun		FI	0	FINN000000	1	604	00	000
Fire drill has ended		FK	0	FKNN000000	3	604	00	000
F1 Mapping Inhibited		FT	2001	FTNN002001	1	570	00	001
F1 Mapping Inhibited Restoral		FJ	2001	FJNN002001	3	570	00	001
F2 Mapping Inhibited		FT	2002	FTNN002002	1	570	00	002
F2 Mapping Inhibited Restoral		FJ	2002	FJNN002002	3	570	00	002
F3 Mapping Inhibited		FT	2003	FTNN002003	1	570	00	003
F3 Mapping Inhibited Restoral		FJ	2003	FJNN002003	3	570	00	003
F4 Mapping Inhibited		FT	2004	FTNN002004	1	570	00	004
F4 Mapping Inhibited Restoral		FJ	2004	FJNN002004	3	570	00	004
Fire Reset		OR	0	ORNN000000	1	401	00	000
Fire System Overridden		FS	0	FSNN000000	1	245	00	000
Fire System Override Restore		FR	0	FRNN000000	3	245	00	000
Ground fault condition trouble		YP	Exp. ID	YPNNXX0000	1	310	Exp. ID	000
Ground fault condition trouble restore		YQ	Exp. ID	YQNNXX0000	3	310	Exp. ID	000
Initial power up		RR	0	RRNN000000	1	305	00	000
Local programming aborted or ended with errors		LU	0	LUNN000000	1	628	00	000
Local programming begin		LB	0	LBNN000000	1	627	00	000
Local programming ended normally		LS	0	LSNN000000	1	628	00	000
Network node trouble (panel missing)		EM	Panel ID	EMNNNN0000	1	334	Panel ID	000
Network node trouble restore (panel no longer missing)		EN	Panel ID	ENNNNN0000	3	334	Panel ID	000
OPG Inhibit Trouble		FT	Group # + 1000	FTNN001GGG	1	320	00	Group #
OPG Inhibit Trouble Restore		FJ	Group # + 1000	FJNN001GGG	3	320	00	Group #
OPG Inhibit of Releasing Group		SS	Group # + 1000	SSNN001GGG	1	203	00	Group #
OPG Inhibit of Releasing Group Restore		SR	Group # + 1000	SRNN001GGG	3	203	00	Group #

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
Phone line 1 trouble detected		LT	1	LTNN000001	1	351	00	000
Phone line 1 trouble restore		LR	1	LRNN000001	3	351	00	000
Phone line 2 trouble detected		LT	2	LTNN000002	1	352	00	000
Phone line 2 trouble restore		LR	2	LRNN000002	3	352	00	000
Printer is off-line trouble		VZ	Exp. ID	VZNNXX0000	1	336	Exp. ID	000
Printer is off-line trouble restore		VY	Exp. ID	VYNNXX0000	3	336	Exp. ID	000
Printer is out of paper trouble		VO	Exp. ID	VONNXX0000	1	335	Exp. ID	000
Printer is out of paper trouble restore		VI	Exp. ID	VINNXX0000	3	335	Exp. ID	000
Releasing Notif/Control Circuit Disabled	pi Exp. ID	SS	Point #	SSNNXXPPPP	1	203	Exp. ID	Point #
Releasing Notif/Control Circuit enabled	pi Exp. ID	SR	Point #	SRNNXXPPPP	3	203	Exp. ID	Point #
Remote programming aborted or ended with errors		RU	0	RUNN000000	1	413	00	000
Remote programming ended normally		RS	0	RSNN000000	1	412	00	000
Repeater ground fault trouble		EM	0103	EMNN000103	1	334	Panel ID	103
Repeater ground fault trouble restore		EN	0103	ENNN000103	3	334	Panel ID	103
Repeater missing trouble		EM	0100	EMNN000100	1	334	Panel ID	100
Repeater missing trouble restore		EN	0100	ENNN000100	3	334	Panel ID	100
Repeater Rx1 communication trouble		EM	0101	EMNN000101	1	334	Panel ID	101
Repeater Rx1 communication trouble restore		EN	0101	ENNN000101	3	334	Panel ID	101
Repeater Rx2 communication trouble		EM	0102	EMNN000102	1	334	Panel ID	102
Repeater Rx2 communication trouble restore		EN	0102	ENNN000102	3	334	Panel ID	102
SBUS Class A supervision lost		ET	Exp. ID	ETNNXX0000	1	333	Exp. ID	000
SBUS Class A supervision restore		ER	Exp. ID	ERNNXX0000	3	333	Exp. ID	000
SBUS expander trouble		ET	Exp. ID	ETNNXX0000	1	333	Exp. ID	000
SBUS expander trouble restore		ER	Exp. ID	ERNNXX0000	3	333	Exp. ID	000
SLC class A supervision trouble		ET	Exp. ID	ETNNXX0000	1	331	Exp. ID	000
SLC class A supervision trouble restore		ER	Exp. ID	ERNNXX0000	3	331	Exp. ID	000
SLC programming ended, system active		TE	0	TENN000000	3	607	00	000
SLC programming started, system shut down		TS	0	TSNN000000	1	607	00	000

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	Fixed Length Format NN - panel ID XX- SBUS ID ZZZ - Zone # PPPP- Point # GGG- Group # E - Emergency # RRRR- Receiver #	Qualifier	Event Code	Group #	Contact #
SLC short circuit trouble		ET	Exp. ID	ETNXX0000	1	332	Exp. ID	000
SLC short circuit trouble restore		ER	Exp. ID	ERNXX0000	3	332	Exp. ID	000
Time changed event		JT	0	JTNN000000	1	625	00	000
Unable to report to account trouble		RT	Receiver #	RTNN00RRRR	1	354	00	Receiver #
Unable to report to account trouble restore		YK	Receiver #	YKNN00RRRR	3	354	00	Receiver #
User access code changed		JV	0	JVNN000000	1	602	00	000
User initiated manual dialer test		RX	0	RXNN000000	1	601	00	000
Walk test begin		TS	0	TSNN000000	1	607	00	000
Walk test end		TE	0	TENN000000	3	607	00	000
Zone Events	Note: Zone events are reported only when "Report by Zone" is selected							
Auxiliary power trouble		FT	0000	FTNN000000	1	320	00	000
Auxiliary power trouble restore		FJ	0000	FJNN000000	3	320	00	000
CO Detector Alarm		GA	Zone #	GANN000ZZZ	1	162	00	Zone #
CO Detector Alarm Restore		GH	Zone #	GHNN000ZZZ	3	162	00	Zone #
CO Detector Supervisory Alarm		GS	Zone #	GSNN000ZZZ	1	200	00	Zone #
CO Detector Supervisory Alarm Restore		GR	Zone #	GRNN000ZZZ	3	200	00	Zone #
CO Detector Trouble		GT	Zone #	GTNN000ZZZ	1	373	00	Zone #
CO Detector Trouble Restore		GJ	Zone #	GJNN000ZZZ	3	373	00	Zone #
Detector Alarm		FA	Zone #	FANN000ZZZ	1	110	00	Zone #
Detector Alarm Restore		FH	Zone #	FHNN000ZZZ	3	110	00	Zone #
Detector trouble		FT	Zone #	FTNN000ZZZ	1	373	00	Zone #
Detector trouble restore		FJ	Zone #	FJNN000ZZZ	3	373	00	Zone #
ECS Switch Trouble		QT	0	QTNN000000	1	242	00	000
ECS Switch Trouble Restore		QJ	0	QJNN000000	3	242	00	000
ECS Supervisory/Tamper Alarm		QS	0	QSNN000000	1	241	00	000
ECS Supervisory/Tamper Alarm Restore		QR	0	QRNN000000	3	241	00	000
ECS Output Group Trouble		QT	Group # +1000	QTNN001GGG	1	320	00	Group #
ECS Output Group Trouble Restore		QJ	Group # +1000	QJNN001GGG	3	320	00	Group #
External Reset/Silence/Fire Drill switch trouble		UT	0000	UTNN000000	1	373	00	000
External Reset/Silence/Fire Drill switch trouble restore		UJ	0000	UJNN000000	3	373	00	000
LOC Mic Activated ECS Alarm		QA	0	QANN000000	1	220	00	000

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
LOC Mic Activated ECS Alarm Restore		QH	0	QHNN000000	3	220	00	000
LOC/Point ECS # Alarm		QA	Emergency #	QANN0E0000	1	220 + Emergency #	00	000
LOC/Point ECS # Alarm Restore		QH	Emergency #	QHNN0E0000	3	220 + Emergency #	00	000
Manual pull switch alarm		FA	Zone #	FANN000ZZZ	1	115	00	Zone #
Manual pull switch alarm restore		FH	Zone #	FHNN000ZZZ	3	115	00	Zone #
Manual pull switch trouble		FT	Zone #	FTNN000ZZZ	1	373	00	Zone #
Manual pull switch trouble restore		FJ	Zone #	FJNN000ZZZ	3	373	00	Zone #
Notification output trouble		FT	Group # + 1000	FTNN001GGG	1	320	00	Group #
Notification output trouble restore		FJ	Group # + 1000	FJNN001GGG	3	320	00	Group #
Positive Alarm Sequence acknowledge switch trouble		FT	Zone #	FTNN000ZZZ	1	373	00	Zone #
Positive Alarm Sequence acknowledge switch trouble restore		FJ	Zone #	FJNN000ZZZ	3	373	00	Zone #
SLC LED Module trouble		ET	0000	ETNN000000	1	333	00	000
SLC LED Module trouble restore		ER	0000	ERNN000000	3	333	00	000
Status Point Types Trouble		UT	0	UTNN000000	1	379	00	000
Status Point Types Trouble Restore		UJ	0	UJNN000000	3	379	00	000
Supervisory Detector Alarm		FS	Zone #	FSNN000ZZZ	1	200	00	Zone #
Supervisory Detector Alarm Restore		FR	Zone #	FRNN000ZZZ	3	200	00	Zone #
Supervisory/Tamper Alarm		FS	Zone #	FSNN000ZZZ	1	200	00	Zone #
Supervisory/Tamper alarm condition restore		FR	Zone #	FRNN000ZZZ	3	200	00	Zone #
Supervisory/Tamper switch trouble		FT	Zone #	FTNN000ZZZ	1	373	00	Zone #
Supervisory/Tamper switch trouble restore		FJ	Zone #	FJNN000ZZZ	3	373	00	Zone #
System-based AUX1 switch alarm		UA	1000	UANN001000	1	140	01	000
System-based AUX1 switch alarm restore		UH	1000	UHNN001000	3	140	01	000
System-based AUX1 switch trouble		UT	1000	UTNN001000	1	373	01	000
System-based AUX1 switch trouble restore		UJ	1000	UJNN001000	3	373	01	000

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	Fixed Length Format NN - panel ID XX- SBUS ID ZZZ - Zone # PPPP- Point # GGG- Group # E - Emergency # RRRR- Receiver #	Qualifier	Event Code	Group #	Contact #
System-based AUX2 switch alarm		UA	2000	UANN002000	1	140	02	000
System-based AUX2 switch alarm restore		UH	2000	UHNN002000	3	140	02	000
System-based AUX2 switch trouble		UT	2000	UTNN002000	1	373	02	000
System-based AUX2 switch trouble restore		UJ	2000	UJNN002000	3	373	02	000
Voice Aux ECS 1 Alarm		UA	3	UANN003000	1	171	00	000
Voice Aux ECS 1 Alarm Restore		UH	3	UHNN003000	3	171	00	000
Voice Aux ECS 2 Alarm		UA	4	UANN004000	1	172	00	000
Voice Aux ECS 2 Alarm Restore		UH	4	UHNN004000	3	172	00	000
Voice Aux ECS 3 Alarm		UA	5	UANN005000	1	173	00	000
Voice Aux ECS 3 Alarm Restore		UH	5	UHNN005000	3	173	00	000
Voice Aux ECS 4 Alarm		UA	6	UANN006000	1	174	00	000
Voice Aux ECS 4 Alarm Restore		UH	6	UHNN006000	3	174	00	000
Water flow switch alarm		SA	Zone #	SANN000ZZZ	1	113	00	Zone #
Water flow switch alarm Restore		SH	Zone #	SHNN000ZZZ	3	113	00	Zone #
Water flow switch trouble		ST	Zone #	STNN000ZZZ	1	373	00	Zone #
Water flow switch trouble Restore		SJ	Zone #	SJNN000ZZZ	3	373	00	Zone #
Zone-based AUX1 switch alarm		UA	Zone # + 1000	UANN001ZZZ	1	140	01	Zone #
Zone-based AUX1 switch alarm restore		UH	Zone # + 1000	UHNN001ZZZ	3	140	01	Zone #
Zone-based AUX1 switch trouble		UT	Zone # + 1000	UTNN001ZZZ	1	373	01	Zone #
Zone-based AUX1 switch trouble restore		UJ	Zone # + 1000	UJNN001ZZZ	3	373	01	Zone #
Zone-based AUX2 switch alarm		UA	Zone # + 2000	UANN002ZZZ	1	140	02	Zone #
Zone-based AUX2 switch alarm restore		UH	Zone # + 2000	UHNN002ZZZ	3	140	02	Zone #
Zone-based AUX2 switch trouble		UT	Zone # + 2000	UTNN002ZZZ	1	373	02	Zone #
Zone-based AUX2 switch trouble restore		UJ	Zone # + 2000	UJNN002ZZZ	3	373	02	Zone #

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
Point Events	Note: For IDP devices, sensors 1–159 are reported as Points 1–159, modules 1–159 are reported as Points 201–359.							
An unexpected SLC device has been detected	pi Exp. ID	XE	Point #	XENNXXPPPP	1	380	Exp. ID	Point #
An unexpected SLC device has been removed	pi Exp. ID	XI	Point #	XINNXXPPPP	3	380	Exp. ID	Point #
Auxiliary power disabled	pi Exp. ID	FB	Point #	FBNNXXPPPP	1	571	Exp. ID	Point #
Auxiliary power enabled	pi Exp. ID	FU	Point #	FUNNXXPPPP	3	571	Exp. ID	Point #
Auxiliary power Trouble	pi Exp. ID	FT	Point #	FTNNXXPPPP	1	320	Exp. ID	Point #
Auxiliary power trouble restore	pi Exp. ID	FJ	Point #	FJNNXXPPPP	3	320	Exp. ID	Point #
Background Music Switch is Trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	379	Exp. ID	Point #
Background Music Switch is Trouble Restored	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	379	Exp. ID	Point #
Background Music Switch is Disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	580	Exp. ID	Point #
Background Music Switch is Enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	580	Exp. ID	Point #
CO Detector Trouble	pi Exp. ID	GT	Point #	GTNNXXPPPP	1	373	Exp. ID	Point #
CO Detector Trouble Restore	pi Exp. ID	GJ	Point #	GJNNXXPPPP	3	373	Exp. ID	Point #
CO Detector Disabled	pi Exp. ID	GB	Point #	GBNNXXPPPP	1	571	Exp. ID	Point #
CO Detector Enabled	pi Exp. ID	GU	Point #	GUNNXXPPPP	3	571	Exp. ID	Point #
Detector Alarm	pi Exp. ID	FA	Point #	FANNXXPPPP	1	110	Exp. ID	Point #
Detector Alarm restore	pi Exp. ID	FH	Point #	FHNNXXPPPP	3	110	Exp. ID	Point #
Detector Disabled	pi Exp. ID	FB	Point #	FBNNXXPPPP	1	571	Exp. ID	Point #
Detector Enabled	pi Exp. ID	FU	Point #	FUNNXXPPPP	3	571	Exp. ID	Point #
Detector Trouble	pi Exp. ID	FT	Point #	FTNNXXPPPP	1	373	Exp. ID	Point #
Detector Trouble restore	pi Exp. ID	FJ	Point #	FJNNXXPPPP	3	373	Exp. ID	Point #
Detector CO Alarm	pi Exp. ID	GA	Point #	GANNXXPPPP	1	162	Exp. ID	Point #
Detector CO Alarm Restore	pi Exp. ID	GH	Point #	GHNNXXPPPP	3	162	Exp. ID	Point #
Detector CO Supervisory Alarm	pi Exp. ID	GS	Point #	GSNNXXPPPP	1	200	Exp. ID	Point #
Detector CO Supervisory Alarm Restore	pi Exp. ID	GR	Point #	GRNNXXPPPP	3	200	Exp. ID	Point #
ECS Alarm # Point Alarm	pi Exp. ID	QA	(EPPP) E - Emergency # PPP - Point #	QANNXXEPPP	1	220 + Emergency #	Exp. ID	Point #
ECS Alarm # Point Alarm Restore	pi Exp. ID	QH	(EPPP) E - Emergency # PPP - Point #	QHNNXXEPPP	3	220 + Emergency #	Exp. ID	Point #
ECS Alarm # Point Trouble	pi Exp. ID	QT	Point #	QTNNXXPPPP	1	242	Exp. ID	Point #

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	SIA pi Modifier			SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
	Module ID # (If Any)	SIA Event Codes	Parameter	Fixed Length Format NN - panel ID XX- SBUS ID ZZZ - Zone # PPPP- Point # GGG- Group # E - Emergency # RRRR- Receiver #				
ECS Alarm # Point Trouble Restore	pi Exp. ID	QJ	Point #	QJNNXXPPPP	3	242	Exp. ID	Point #
ECS Alarm # Point Disabled	pi Exp. ID	QB	Point #	QBNNXXPPPP	1	243	Exp. ID	Point #
ECS Alarm # Point Enabled	pi Exp. ID	QU	Point #	QUNNXXPPPP	3	243	Exp. ID	Point #
ECS Supervisory/Tamper Alarm	pi Exp. ID	QS	Point #	QSNNXXPPPP	1	241	Exp. ID	Point #
ECS Supervisory/Tamper Alarm Restore	pi Exp. ID	QR	Point #	QRNNXXPPPP	3	241	Exp. ID	Point #
ECS Supervisory/Tamper Trouble	pi Exp. ID	QT	Point #	QTNNXXPPPP	1	242	Exp. ID	Point #
ECS Supervisory/Tamper Trouble Restore	pi Exp. ID	QJ	Point #	QJNNXXPPPP	3	242	Exp. ID	Point #
ECS Supervisory/Tamper Disabled	pi Exp. ID	QB	Point #	QBNNXXPPPP	1	243	Exp. ID	Point #
ECS Supervisory/Tamper Enabled	pi Exp. ID	QU	Point #	QUNNXXPPPP	3	243	Exp. ID	Point #
ECS NAC Trouble	pi Exp. ID	QT	Point #	QTNNXXPPPP	1	320	Exp. ID	Point #
ECS NAC Trouble Restored	pi Exp. ID	QJ	Point #	QJNNXXPPPP	3	320	Exp. ID	Point #
ECS Control Circuit Trouble	pi Exp. ID	QT	Point #	QTNNXXPPPP	1	320	Exp. ID	Point #
ECS Control Circuit Trouble Restored	pi Exp. ID	QJ	Point #	QJNNXXPPPP	3	320	Exp. ID	Point #
ECS Relay Trouble	pi Exp. ID	QT	Point #	QTNNXXPPPP	1	320	Exp. ID	Point #
ECS Relay Trouble Restored	pi Exp. ID	QJ	Point #	QJNNXXPPPP	3	320	Exp. ID	Point #
ECS Notification Trouble	pi Exp. ID	QT	Point #	QTNNXXPPPP	1	320	Exp. ID	Point #
ECS Notification Trouble Restored	pi Exp. ID	QJ	Point #	QJNNXXPPPP	3	320	Exp. ID	Point #
External Reset/Silence/Fire Drill switch disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	571	Exp. ID	Point #
External Reset/Silence/Fire Drill switch enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	571	Exp. ID	Point #
External Reset/Silence/Fire Drill switch trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	373	Exp. ID	Point #
External Reset/Silence/Fire Drill switch trouble restore	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	373	Exp. ID	Point #
Interlock switch alarm (Water Release Zone)	pi Exp. ID	FA	Point #	FANNXXPPPP	1	110	Exp. ID	Point #
Interlock switch alarm restore (Water Release Zone)	pi Exp. ID	FH	Point #	FHNNXXPPPP	3	110	Exp. ID	Point #
Interlock switch disabled	pi Exp. ID	FB	Point #	FBNNXXPPPP	1	571	Exp. ID	Point #
Interlock switch enabled	pi Exp. ID	FU	Point #	FUNNXXPPPP	3	571	Exp. ID	Point #
Interlock switch trouble (Water Release Zone)	pi Exp. ID	FT	Point #	FTNNXXPPPP	1	373	Exp. ID	Point #
Interlock switch trouble restore (Water Release Zone)	pi Exp. ID	FJ	Point #	FJNNXXPPPP	3	373	Exp. ID	Point #
LOC Mic Activated ECS Alarm	pi Exp. ID	QA	0	QANNXX0000	1	220	Exp. ID	000

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
LOC Mic Activated ECS Alarm Restore	pi Exp. ID	QH	0	Fixed Length Format NN - panel ID XX- SBus ID ZZZ - Zone # PPPP- Point # GGG- Group # E - Emergency # RRRR- Receiver # QHNNXX0000	3	220	Exp. ID	000
LOC ECS # Alarm	pi Exp. ID	QA	Emergency #	QANNXXE000	1	220 + Emergency #	Exp. ID	000
LOC ECS # Alarm Restore	pi Exp. ID	QH	Emergency #	QHNNXXE000	3	220 + Emergency #	Exp. ID	000
Manual pull switch alarm	pi Exp. ID	FA	Point #	FANNXXPPPP	1	115	Exp. ID	Point #
Manual pull switch alarm restore	pi Exp. ID	FH	Point #	FHNNXXPPPP	3	115	Exp. ID	Point #
Manual pull switch disabled	pi Exp. ID	FB	Point #	FBNNXXPPPP	1	571	Exp. ID	Point #
Manual pull switch enabled	pi Exp. ID	FU	Point #	FUNNXXPPPP	3	571	Exp. ID	Point #
Manual pull switch trouble	pi Exp. ID	FT	Point #	FTNNXXPPPP	1	373	Exp. ID	Point #
Manual pull switch trouble restore	pi Exp. ID	FJ	Point #	FJNNXXPPPP	3	373	Exp. ID	Point #
Manual release switch alarm (Water Release Zone)	pi Exp. ID	FA	Point #	FANNXXPPPP	1	110	Exp. ID	Point #
Manual release switch alarm restore (Water Release Zone)	pi Exp. ID	FH	Point #	FHNNXXPPPP	3	110	Exp. ID	Point #
Manual release switch disabled	pi Exp. ID	FB	Point #	FBNNXXPPPP	1	571	Exp. ID	Point #
Manual release switch enabled	pi Exp. ID	FU	Point #	FUNNXXPPPP	3	571	Exp. ID	Point #
Manual release switch trouble (Water Release Zone)	pi Exp. ID	FT	Point #	FTNNXXPPPP	1	373	Exp. ID	Point #
Manual release switch trouble restore (Water Release Zone)	pi Exp. ID	FJ	Point #	FJNNXXPPPP	3	373	Exp. ID	Point #
Notification output point disabled	pi Exp. ID	FB	Point #	FBNNXXPPPP	1	571	Exp. ID	Point #
Notification output point enabled	pi Exp. ID	FU	Point #	FUNNXXPPPP	3	571	Exp. ID	Point #
Notification output point trouble	pi Exp. ID	FT	Point #	FTNNXXPPPP	1	320	Exp. ID	Point #
Notification output point trouble restore	pi Exp. ID	FJ	Point #	FJNNXXPPPP	3	320	Exp. ID	Point #
Positive Alarm Sequence acknowledge switch disabled	pi Exp. ID	FB	Point #	FBNNXXPPPP	1	571	Exp. ID	Point #
Positive Alarm Sequence acknowledge switch enabled	pi Exp. ID	FU	Point #	FUNNXXPPPP	3	571	Exp. ID	Point #
Positive Alarm Sequence acknowledge switch trouble	pi Exp. ID	FT	Point #	FTNNXXPPPP	1	373	Exp. ID	Point #
Positive Alarm Sequence acknowledge switch trouble restore	pi Exp. ID	FJ	Point #	FJNNXXPPPP	3	373	Exp. ID	Point #
Status Point Trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	379	Exp. ID	Point #
Status Point Trouble Restored	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	379	Exp. ID	Point #
Status Point is Disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	580	Exp. ID	Point #
Status Point is Enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	580	Exp. ID	Point #

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	Fixed Length Format NN - panel ID XX- SBUS ID ZZZ - Zone # PPPP- Point # GGG- Group # E - Emergency # RRRR- Receiver #	Qualifier	Event Code	Group #	Contact #
Supervisory/Tamper Alarm	pi Exp. ID	FS	Point #	FSNXXPPPP	1	200	Exp. ID	Point #
Supervisory/Tamper Alarm Restore	pi Exp. ID	FR	Point #	FRNXXPPPP	3	200	Exp. ID	Point #
Supervisory/Tamper point disabled	pi Exp. ID	FB	Point #	FBNXXPPPP	1	571	Exp. ID	Point #
Supervisory/Tamper point enabled	pi Exp. ID	FU	Point #	FUNXXPPPP	3	571	Exp. ID	Point #
Supervisory/Tamper point trouble	pi Exp. ID	FT	Point #	FTNXXPPPP	1	373	Exp. ID	Point #
Supervisory/Tamper point trouble restore	pi Exp. ID	FJ	Point #	FJNXXPPPP	3	373	Exp. ID	Point #
System-based AUX1 switch alarm	pi Exp. ID	UA	Point #	UANNXXPPPP	1	140	Exp. ID	Point #
System-based AUX1 switch alarm restore	pi Exp. ID	UH	Point #	UHNXXPPPP	3	140	Exp. ID	Point #
System-based AUX1 switch disabled	pi Exp. ID	UB	Point #	UBNXXPPPP	1	571	Exp. ID	Point #
System-based AUX1 switch enabled	pi Exp. ID	UU	Point #	UUNXXPPPP	3	571	Exp. ID	Point #
System-based AUX1 switch trouble	pi Exp. ID	UT	Point #	UTNXXPPPP	1	373	Exp. ID	Point #
System-based AUX1 switch trouble restore	pi Exp. ID	UJ	Point #	UJNXXPPPP	3	373	Exp. ID	Point #
System-based AUX2 switch alarm	pi Exp. ID	UA	Point #	UANNXXPPPP	1	140	Exp. ID	Point #
System-based AUX2 switch alarm restore	pi Exp. ID	UH	Point #	UHNXXPPPP	3	140	Exp. ID	Point #
System-based AUX2 switch disabled	pi Exp. ID	UB	Point #	UBNXXPPPP	1	571	Exp. ID	Point #
System-based AUX2 switch enabled	pi Exp. ID	UU	Point #	UUNXXPPPP	3	571	Exp. ID	Point #
System-based AUX2 switch trouble	pi Exp. ID	UT	Point #	UTNXXPPPP	1	373	Exp. ID	Point #
System-based AUX2 switch trouble restore	pi Exp. ID	UJ	Point #	UJNXXPPPP	3	373	Exp. ID	Point #
Voice Aux ECS 1 Point Alarm	pi Exp. ID	UA	(3PPP) PPP - Point #	UANNXX3PPP	1	171	Exp. ID	Point #
Voice Aux ECS 1 Point Alarm Restore	pi Exp. ID	UH	(3PPP) PPP - Point #	UHNXX3PPP	3	171	Exp. ID	Point #
Voice Aux ECS 2 Point Alarm	pi Exp. ID	UA	(4PPP) PPP - Point #	UANNXX4PPP	1	172	Exp. ID	Point #
Voice Aux ECS 2 Point Alarm Restore	pi Exp. ID	UH	(4PPP) PPP - Point #	UHNXX4PPP	3	172	Exp. ID	Point #
Voice Aux ECS 3 Point Alarm	pi Exp. ID	UA	(5PPP) PPP - Point #	UANNXX5PPP	1	173	Exp. ID	Point #

Event Description	SIA Reporting Format				Contact ID Reporting Format			
	Module ID # (If Any)	SIA Event Codes	Parameter	SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
Voice Aux ECS 3 Point Alarm Restore	pi Exp. ID	UH	(5PPP) PPP - Point #	UHNNXX5PPP	3	173	Exp. ID	Point #
Voice Aux ECS 4 Point Alarm	pi Exp. ID	UA	(6PPP) PPP - Point #	UANNXX6PPP	1	174	Exp. ID	Point #
Voice Aux ECS 4 Point Alarm Restore	pi Exp. ID	UH	(6PPP) PPP - Point #	UHNNXX6PPP	3	174	Exp. ID	Point #
Voice Aux ECS Point Trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	379	Exp. ID	Point #
Voice Aux ECS Point Trouble Restore	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	379	Exp. ID	Point #
Voice Aux ECS Point Disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	580	Exp. ID	Point #
Voice Aux ECS Point Enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	580	Exp. ID	Point #
Voice Aux Status 1 Switch is Trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	379	Exp. ID	Point #
Voice Aux Status 1 Switch is Trouble Restored	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	379	Exp. ID	Point #
Voice Aux Status 1 Switch is Disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	580	Exp. ID	Point #
Voice Aux Status 1 Switch is Enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	580	Exp. ID	Point #
Voice Aux Status 2 Switch is Trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	379	Exp. ID	Point #
Voice Aux Status 2 Switch is Trouble Restored	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	379	Exp. ID	Point #
Voice Aux Status 2 Switch is Disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	580	Exp. ID	Point #
Voice Aux Status 2 Switch is Enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	580	Exp. ID	Point #
Water flow switch alarm	pi Exp. ID	SA	Point #	SANNXXPPPP	1	113	Exp. ID	Point #
Water flow switch alarm restore	pi Exp. ID	SH	Point #	SHNNXXPPPP	3	113	Exp. ID	Point #
Water flow switch disabled	pi Exp. ID	SB	Point #	SBNNXXPPPP	1	571	Exp. ID	Point #
Water flow switch enabled	pi Exp. ID	SU	Point #	SUNNXXPPPP	3	571	Exp. ID	Point #
Water flow switch trouble	pi Exp. ID	ST	Point #	STNNXXPPPP	1	373	Exp. ID	Point #
Water flow switch trouble restore	pi Exp. ID	SJ	Point #	SJNNXXPPPP	3	373	Exp. ID	Point #
Zone-based AUX1 switch alarm	pi Exp. ID	UA	Point #	UANNXXPPPP	1	140	Exp. ID	Point #
Zone-based AUX1 switch alarm restore	pi Exp. ID	UH	Point #	UHNNXXPPPP	3	140	Exp. ID	Point #
Zone-based AUX1 switch disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	571	Exp. ID	Point #
Zone-based AUX1 switch enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	571	Exp. ID	Point #
Zone-based AUX1 switch trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	373	Exp. ID	Point #
Zone-based AUX1 switch trouble restore	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	373	Exp. ID	Point #

	SIA Reporting Format				Contact ID Reporting Format			
	SIA pi Modifier			SIA IFP-2000	Qualifier	Event Code	Group #	Contact #
Event Description	Module ID # (If Any)	SIA Event Codes	Parameter	Fixed Length Format NN - panel ID XX- SBUS ID ZZZ - Zone # PPPP- Point # GGG- Group # E - Emergency # RRRR- Receiver #				
Zone-based AUX2 switch alarm	pi Exp. ID	UA	Point #	UANNXXPPPP	1	140	Exp. ID	Point #
Zone-based AUX2 switch alarm restore	pi Exp. ID	UH	Point #	UHNNXXPPPP	3	140	Exp. ID	Point #
Zone-based AUX2 switch disabled	pi Exp. ID	UB	Point #	UBNNXXPPPP	1	571	Exp. ID	Point #
Zone-based AUX2 switch enabled	pi Exp. ID	UU	Point #	UUNNXXPPPP	3	571	Exp. ID	Point #
Zone-based AUX2 switch trouble	pi Exp. ID	UT	Point #	UTNNXXPPPP	1	373	Exp. ID	Point #
Zone-based AUX2 switch trouble restore	pi Exp. ID	UJ	Point #	UJNNXXPPPP	3	373	Exp. ID	Point #

12.3 SIA - IntelliKnight / IFP-2000 Panels PI Modifier Reporting:

Events are sent to the central station as a variable length string:

The event format is:

EEZZZZ

Where:

EE Event code (2 characters)
ZZZZ Event parameter (up to four digits – not zero filled)

1. The account number is sent using an account block that is separate from the event block
2. Multiple events can be sent within a single event block. Events are separated by a “/” character.
3. Event parameter can be either a zone, point or module number.
4. When reporting by point is enabled, the dialer uses a “pi” event to supersede the actual point event to report the module the point is linked to.
5. Panel ID is not sent in the SIA event parameters.

For Example see Table 12-2:

Table 12-2: SIA- IntelliKnight / IFP-2000 Panels - PI Modifier Reporting Examples

Event	Report Zone/Point	Panel ID	Module	Zone ZZZZ	Point ZZZZ	Fields Sent	SIA Event Data
Fire Alarm-Zone	Zone	n/a	n/a97	15	n/a	EE-ZZ	FA15
Fire Alarm-Zone	Zone	n/a	n/a	05	n/a	EE-Z	FA5
Fire Alarm-Point	Point	n/a	01	n/a	123	EE-ZZ /EE-ZZZ	pi01/FA123
Fire Alarm-Point	Point	n/a	33	n/a	203	EE-ZZ /EE-ZZZ	pi11/FA203
Expander Trouble	n/a	n/a	11	n/a	n/a	EE-ZZ	ET11
Auto Test	n/a	n/a	n/a	n/a	n/a	EE-Z	RP0
Battery Trouble-Panel 32	n/a	n/a	98	n/a	n/a	EE-ZZ	YT98
Battery Trouble-Expander 18	n/a	n/a	18	n/a	n/a	EE-ZZ	YT18
SLC Loop Shorted	n/a	n/a	44	n/a	n/a	EE-ZZ	ET44
Program Begin Panel ID=32	n/a	n/a	n/a	n/a	n/a	EE-Z	LB0
Program Begin Panel ID=22	n/a	n/a	n/a	n/a	n/a	EE-Z	LB0
AC Power Loss - Panel 22	n/a	n/a	98	n/a	n/a	EE-Z	AT0
Fire Trouble	Point	n/a	97	n/a	200	EE-ZZ /EE-ZZZ	pi97/FT200
Fire Trouble	Zone	n/a	97	01	n/a	EE-Z	FT1
Fire Trouble-Nac	Point	n/a	98	n/a	Nac Circuit 7	EE-ZZ /EE-Z	pi98/FT7 Z=Pt. #

Table 12-2: SIA- IntelliKnight / IFP-2000 Panels - PI Modifier Reporting Examples

Event	Report Zone/ Point	Panel ID	Module	Zone ZZZZ	Point ZZZZ	Fields Sent	SIA Event Data
Fire Trouble-Nac	Zone	n/a	98	n/a	Nac Circuit 7	EE-ZZZ	FT400 ZZZ=OPG#

12.4 SIA – IFP-2000 Panel Dialer:

(Differences/additional features are underlined>)

Events are sent to the Central Station Receiver as a fixed length string:

The event format is:

EEPPMMZZZZ

Where

EE Event code (2 characters)
 PP Panel number (2 digits – Zero Filled) (valid range from 1 to 64)
 MM Module number (2 digits – Zero Filled) (valid range from 1 to 98, typically Module information)
 ZZZZ Event parameter (4 digits – Zero Filled) (typically Point, Zone or Circuit information)

1. The Event field will contain 10 digits including the 2 digit event code (EE), 2 digit panel ID (PP), 2 digit Module Number (MM) and a 4 digit Event Parameter (ZZZZ).
2. Based on the actual Event Code, the Module Number or Event Parameter fields might not contain pertinent information. In that case the field will contain zeros.
3. The account number is sent using an account block that is separate from the event block.
4. Multiple events can be sent within a single event block. Events are separated by a “/” character.
5. Event parameter can be a Zone, Point or Circuit Number.
6. “pi” modifier event is not used.
7. Panel can be set to report by either Point or Zone.

For examples see Table 12-3.

Table 12-3: IFP-2000 SIA REPORTING EXAMPLES

Event	Report Zone/ Point	Panel ID PP	Module MM	Zone ZZZZ	Point ZZZZ	Fields Sent	SIA Event Data
Fire Alarm-Zone	Zone	32	n/a	15	n/a	EE-PP-MM-ZZZZ	FA32000015
Fire Alarm-Zone	Zone	32	n/a	05	n/a	EE-PP-MM-ZZZZ	FA32000005
Fire Alarm-Point	Point	32	01	n/a	123	EE-PP-MM-ZZZZ	FA32010123
Fire Alarm-Point	Point	21	33	n/a	203	EE-PP-MM-ZZZZ	FA21330203
Expander Trouble	n/a	15	11	n/a	n/a	EE-PP-MM-ZZZZ	ET15110000
Auto Test	n/a	32	n/a	n/a	n/a	EE-PP-MM-ZZZZ	RP32000000
Battery Trouble-Panel 32	n/a	32	98	n/a	n/a	EE-PP-MM-ZZZZ	YT32980000
Battery Trouble-Expander 18	n/a	32	18	n/a	n/a	EE-PP-MM-ZZZZ	YT32180000
SLC Loop Shorted	n/a	01	44	n/a	n/a	EE-PP-MM-ZZZZ	ET01440000
Program Begin	n/a	32	n/a	n/a	n/a	EE-PP-MM-ZZZZ	LB32000000
Program Begin	n/a	22	n/a	n/a	n/a	EE-PP-MM-ZZZZ	LB22000000
AC Power Loss- Panel 22	n/a	22	98	n/a	n/a	EE-PP-MM-ZZZZ	AT22980000 MM = 00
Fire Trouble	Point	22	97	n/a	200	EE-PP-MM-ZZZZ	FT22970200
Fire Trouble	Zone	22	97	1	n/a	EE-PP-MM-ZZZZ	FT22970001 MM = 00
Fire Trouble-Nac	Point	22	98	n/a	Nac Circuit 7	EE-PP-MM-ZZZZ	FT22980007 ZZZZ=Pt. #
Fire Trouble-Nac	Zone	22	98	n/a	Nac Circuit 7	EE-PP-MM-ZZZZ	FT22980007 ZZZZ=OPG #

Section 13

Testing and Troubleshooting

13.1 Troubleshooting

This section of the manual offers suggestions for troubleshooting hardware problems. Please read this section if you encounter a problem when installing the control panel. If these suggestions do not solve your problem or if you encounter a problem that is not listed here, contact Silent Knight Technical Support at 800-446-6444 for assistance.

13.2 Common Problems

Problem	Possible Cause / Suggested Actions
Trouble message "DBL ADDR" (Double Address) displays on LCD.	An address has been assigned to more than one detector. Correct the address following the procedure described in Section 7.8 if using SD devices or Section 7.6 if using IDP devices
Auxiliary power or notification circuits have incorrect polarity.	Correct polarity. For notification and auxiliary power circuits: When in alarm or powered, terminals labeled "X" are positive, terminals labeled "O" are negative.
SLC devices are not being recognized (trouble message "Missing" displays).	<p>Check hardware connections.</p> <p>If devices are physically connected, make sure wiring is correct (see Section 7.7 if using SD devices or Section 7.5 if using IDP devices). For 5815XL devices, make sure the device connects to the 5815XL via the SLC OUT terminals.</p> <p>There can be only one SLC loop on the main panel and on each 5815XL module. Do not connect devices to terminals labeled SLC IN.</p> <p>Make sure SLC devices have been addressed properly following the procedure described in Section 7.8 if using SD devices or Section 7.6 if using IDP devices.</p> <p>Make sure correct polarity has been observed for SLC device wiring. See Section 7.7 if using SD devices or Section 7.5 for IDP devices.</p>
SLC devices are not being recognized (trouble message "Missing" displays on the annunciator).	<p>Check that SLC loop impedance is within the required range.</p> <p>To measure impedance, use the following procedure:</p> <ol style="list-style-type: none"> 1. Disconnect both wires from the terminal block at the panel (SLC devices can remain connected). 2. Measure the impedance from positive to negative and from negative to positive. Both measurements should be greater than 500 K ohms. If the installation uses T-taps, test each T-tap individually. 3. Temporarily connect the positive wire to the negative wire of the SLC loop at the point farthest from the panel (SLC devices can remain connected). 4. Measure the impedance from positive to negative and from negative to positive wires that were disconnected from the panel in step 1. Both measurements must be less than 50 ohms.
The panel indicates a ground fault trouble condition (trouble message "GROUND FAULT" displays).	<p>An earth ground fault occurs when the panel senses an unexpected flow of current from one or more of its terminals to the earth connection (Terminal 2).</p> <p>Isolate the wiring that is causing the fault by removing wiring connections one at a time until the earth fault is no longer present. Pause at least five seconds after removing a wire before removing the next one.</p>

Problem	Possible Cause / Suggested Actions
5815XL module that has been physically connected to the panel but is not being recognized.	<p>Check the status of the 5815XL green LED. If it flashes in the pattern .5 sec. on / .5 sec. off, it is likely that the 5815XL has not been added to the system through programming. JumpStart will add any 5815XLs connected to the panel. 5815XLs can be added manually (see Section 9.2.2).</p> <p>Check that the correct ID for the 5815XL module has been set through the DIP switches. Assign ID#1 to the first 5815XL and ID#2 to the second 5815XL. See Section 4.10.1 for complete details.</p> <p>If the wiring between the 5815XL and the panel is correct, measure the voltage from 5815XL Terminal (+) to Terminal (-). Voltage should be in the range 27.2-27.4V when AC power is present.</p> <p>If the green LED is not flashing, the likely cause is incorrect wiring from between the 5815XL and the panel. See Section 4.6.1 for wiring details.</p>

13.3 Periodic Testing and Maintenance

To ensure proper and reliable operation, it is recommended that system inspection and testing be scheduled monthly or as required by national and/or local fire codes. Testing should be done by a qualified service representative if a malfunction is encountered.

Before testing:

1. Notify the fire department and/or central alarm receiving station.
2. Notify facility personnel of a test so that alarm sounding devices are ignored during the test period.
3. When necessary, activation of Notification Appliances can be prevented by the DISABLE function.

Testing:



1. Activate a input via an alarm initiating device and check that the correct outputs activate (Notification Appliances sound/flash, relays activate, alarm indicator lights). Reset system. Repeat for each alarm initiating device.
2. Momentarily open the following circuits one at a time and check for a trouble sign:
 - Notification Appliance Circuits
 - Initiating devices
3. If new batteries were installed, wait 48 hours before completing this step. Remove AC power, activate initiating device and check that:
 - The alarm indicator lights
 - All active Notification Appliances sound

Measure battery voltage while the Notification Appliances are sounding. Replace any battery with terminal voltage less than 85% of rating. Reapply AC power and reset the system.

13.4 Event History

The event history can be useful for tracking or recalling a trouble condition.

To view event history:

1. Press ENTER to access Main Menu, then rotate the key or enter a code if prompted.
2. Press 3 to select Event History.
3. Press the  or  to view events in the history buffer.

13.5 Built-in Troubleshooting and Testing Tools

The fire control panel has several built-in testing and troubleshooting tools that can be utilized to save time while testing and troubleshooting points and SLC devices.

13.5.1 SLC Device Locator

SLC device locator can be used to locate a device on a SLC loop.

Follow these steps to locate a particular SLC device:

1. Select 2 (Point Functions) from the Main Menu.
2. Select 4 (SLC Single Device Locator).

A message similar to the one shown in Figure 13-1 will display.

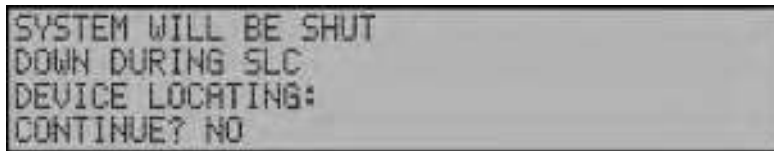





Figure 13-1 Shut Down Warning

3. Press the  or  arrow to toggle **NO** to **YES** then press ENTER.
If **NO** is chosen you will exit back to the Point Function menu.
If **Yes** is chosen the system will cease normal operation leaving the premise unprotected.
4. Select the SLC loop.
5. Enter the SLC address of the device you wish to locate.
The LED on the selected device will start flashing.
6. Press  to exit the SLC Device Locator.

Note: Once you exit, the system will resume normal operation.

13.5.2 SLC Multiple Device Locator

This feature is the same as SLC Single Device Locator, except you can locate up to 8 devices on a single search.

Follow these instructions to locate multiple SLC devices:

1. Select 2 (Point Functions) from the Main Menu.
2. Select 5 (SLC Multiple Device Locator).

A message similar to the one shown in Figure 13-2 will display.

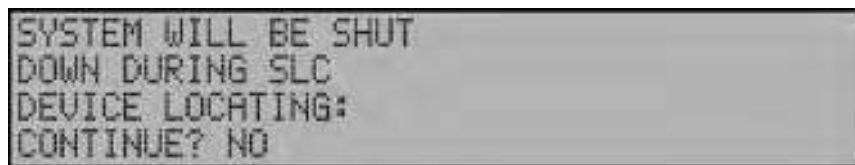





Figure 13-2 Shut Down Warning

3. Press the  or  arrow to toggle **NO** to **YES** then press ENTER.
If **NO** is chosen you will exit back to the Point Function menu.
If **Yes** is chosen the system will cease normal operation leaving the premise unprotected.




4. Select the SLC loop.
5. Enter up to 8 SLC addresses for the devices you wish to locate.
The LEDs on the selected devices will start flashing.
6. Press the  to exit SLC Multiple Device Locator.

Note: Once you exit, the system will resume normal operation.

13.5.3 I/O Point Control

This feature allows you to toggle any output on or off and trip any input device. This can be useful to test a point's output mapping.

Follow these steps to control an I/O point:

1. Select 2 (Point Functions) from the Main Menu.
2. Select 6 (I/O Point Control).
3. Select the module the point is on.
4. Make any selections specific to the module selected in the previous step.
5. Use the  or  arrow to select the point you wish to test.
6. Press ENTER to generate an alarm for an input point or activate an output point.
7. To exit press .

13.5.4 Earth Fault Resistance

Table 13-1 lists the earth fault resistance detection for each applicable terminal on the FACP.

Table 13-1: Earth Fault Resistance Values by Terminal

Function	Terminal Label		Low Biased		High Biased	
	(Values in Ohms)		High Trip	High Restore	Low Trip	Low Restore
Flexput™ Notification Circuits	X	I/O 8	-	-	0	0
	O		0	0	-	-
	X	I/O 7	-	-	0	0
	O		0	0	-	-
	X	I/O 6	-	-	0	0
	O		0	0	-	-
	X	I/O 5	-	-	0	0
	O		0	0	-	-
	X	I/O 4	-	-	0	0
	O		0	0	-	-
	X	I/O 3	-	-	0	0
	O		0	0	-	-
	X	I/O 2	-	-	0	0
	O		0	0	-	-
	X	I/O 1	-	-	0	0
	O		0	0	-	-

Table 13-1: Earth Fault Resistance Values by Terminal

Function	Terminal Label		Low Biased		High Biased	
	(Values in Ohms)		High Trip	High Restore	Low Trip	Low Restore
SBUS Communication	B	SBUS1 OUT	-	-	0	0
	A		-	-	0	0
SBUS Power	+		0	0	-	-
	-		-	-	0	0
SBUS Communication	B	SBUS1 IN	-	-	0	0
	A		-	-	0	0
SBUS Power	+		0	0	-	-
	-		-	-	0	0
SBUS Communication	B	SBUS2 OUT	-	-	0	0
	A		-	-	0	0
SBUS Power	+		0	0	-	-
	-		-	-	0	0
SBUS Communication	B	SBUS 2 IN	-	-	0	0
	A		-	-	0	0
SBUS Power	+		0	0	-	-
	-		-	-	0	0
SLC Terminals	-	SLC OUT	-	-	0	0
	+		0	0	-	-
	-	SLC IN	-	-	0	0
	+		0	0	-	-

Note: Any wire to wire fault impedance is 0 ohms

Section 14

Installation Records

This section of the manual is for you to use if you wish to track how points, zones, and groups have been programmed.

14.1 Detector and Module Point Record

If installing IDP SLC devices, use Table 14-1 to record detector points (up to 159 per SLC loop) installed on the on-board SLC loop and make a copy of Table 14-2 to record installed modules (up to 159 per SLC loop).

Table 14-1: Installation Record of Onboard Devices

Module	Addr	Zone / Group	Description	Module	Addr	Zone/ Group	Description
On-board	1			On-board	30		
On-board	2			On-board	31		
On-board	3			On-board	32		
On-board	4			On-board	33		
On-board	5			On-board	34		
On-board	6			On-board	35		
On-board	7			On-board	36		
On-board	8			On-board	37		
On-board	9			On-board	38		
On-board	10			On-board	39		
On-board	11			On-board	40		
On-board	12			On-board	41		
On-board	13			On-board	42		
On-board	14			On-board	43		
On-board	15			On-board	44		
On-board	16			On-board	45		
On-board	17			On-board	46		
On-board	18			On-board	47		
On-board	19			On-board	48		
On-board	20			On-board	49		
On-board	21			On-board	50		
On-board	22			On-board	51		
On-board	23			On-board	52		
On-board	24			On-board	53		
On-board	25			On-board	54		
On-board	26			On-board	55		
On-board	27			On-board	56		
On-board	28			On-board	57		

Table 14-1: Installation Record of Onboard Devices

Module	Addr	Zone / Group	Description	Module	Addr	Zone/ Group	Description
On-board	29			On-board	58		
On-board	59			On-board	103		
On-board	60			On-board	104		
On-board	61			On-board	105		
On-board	62			On-board	106		
On-board	63			On-board	107		
On-board	64			On-board	108		
On-board	65			On-board	109		
On-board	66			On-board	110		
On-board	67			On-board	111		
On-board	68			On-board	112		
On-board	69			On-board	113		
On-board	70			On-board	114		
On-board	71			On-board	115		
On-board	72			On-board	116		
On-board	73			On-board	117		
On-board	74			On-board	118		
On-board	75			On-board	119		
On-board	76			On-board	120		
On-board	77			On-board	121		
On-board	78			On-board	122		
On-board	79			On-board	123		
On-board	80			On-board	124		
On-board	81			On-board	125		
On-board	82			On-board	126		
On-board	83			On-board	127		
On-board	84			On-board	128		
On-board	85			On-board	129		
On-board	86			On-board	130		
On-board	87			On-board	131		
On-board	88			On-board	132		
On-board	89			On-board	133		
On-board	90			On-board	134		
On-board	91			On-board	135		
On-board	92			On-board	136		
On-board	93			On-board	137		
On-board	94			On-board	138		
On-board	95			On-board	139		
On-board	96			On-board	140		
On-board	97			On-board	141		

14.2 Conventional Output Point Record

This chart can be used to keep track of how conventional output points (circuits) have been configured.

Point/Circuit	Group	Description
1		
2		
3		
4		
5		
6		
7		
8		

Appendix A

Compatible Devices

A.1 Notification Appliances

For proper operation, you must use polarized devices with a model 7628 4.7k ohm EOL resistor on each loop. All supervised notification appliances used with the control panel must be polarized.

Note: Not all devices can use the Sync feature, be sure to check Table A-1 to ensure the devices you have chosen will work with this feature. This control is UL listed for panel wide Synchronization.

Table A-1 below lists notification appliances compatible with the fire alarm control panel. Appliances which can be synchronized indicate the type of SYNC available in the columns marked Audio and Visual.

Table A-1 Compatible Notification Appliances

Manufacturer	Model	Audio	Visual	Type
AMSECO	SH24W-153075	X	X	Horn/Strobe
	SAD24-153075		X	Strobe
	SAD24-75110		X	Strobe
	SL24W-75110		X	Strobe
	SL24C-3075110		X	Strobe
	SLB24-75		X	Strobe
	RSD24-153075		X	Strobe
	RSD24-75110		X	Strobe
	SH24W-75110	X	X	Horn/Strobe
	SH24W-3075110	X	X	Horn/Strobe
	SHB24-75	X	X	Horn/Strobe
	SCM24W-153075	X	X	Chimes/Strobe
	SCM24W-75110	X	X	Chimes/Strobe
	SCM24C-3075110	X	X	Chimes/Strobe
	SCM24C-177	X	X	Chimes/Strobe
	H24W	X		Horn
	H24R	X		Horn
	FCI	S2415-FC		X
S241575-FC			X	Strobe
S2430-FC			X	Strobe
130-3117C		X		Mini Horn
130-3147C		X		Mini Horn
BLV-6		X		Vibrating Bell
BLV-10		X		Vibrating Bell
BLVCH		X		Vibrating Chime
H12/24-FC		X		Horn
H12/24W-FC		X		Horn

Table A-1 Compatible Notification Appliances

Manufacturer	Model	Audio	Visual	Type	
FCI (cont.)	H12/24K-FC	X		Horn	
	HC12/24-FC	X		Horn	
	HC12/24W-FC	X		Horn	
	HC12/24K-FC	X		Horn	
	P2415-FC	X	X	Horn/Strobe	
	P2415W-FC	X	X	Horn/Strobe	
	P2415K-FC	X	X	Horn/Strobe	
	P241575-FC	X	X	Horn/Strobe	
	P241575W-FC	X	X	Horn/Strobe	
	P241575F-FC	X	X	Horn/Strobe	
	P241575K-FC	X	X	Horn/Strobe	
	P2430-FC	X	X	Horn/Strobe	
	P2430W-FC	X	X	Horn/Strobe	
	P2430K-FC	X	X	Horn/Strobe	
	P2475-FC	X	X	Horn/Strobe	
	P2475W-FC	X	X	Horn/Strobe	
	P2475K-FC	X	X	Horn/Strobe	
	P24110-FC	X	X	Horn/Strobe	
	P24110W-FC	X	X	Horn/Strobe	
	P24110K-FC	X	X	Horn/Strobe	
	S2430W-FC	X		Strobe	
	S2430K-FC	X		Strobe	
	S2475-FC	X		Strobe	
	S2475W-FC	X		Strobe	
	S2475K-FC	X		Strobe	
	S24110-FC	X		Strobe	
	S24110W-FC	X		Strobe	
	S24110K-FC	X		Strobe	
	Federal Signal	450	X		Horn
		VALS	X	X	Horn/Strobe
Gentex	GEC-24-15	X	X	Horn/Strobe	
	GEC-24-30	X	X	Horn/Strobe	
	GEC-24-60	X	X	Horn/Strobe	
	GEC-24-75	X	X	Horn/Strobe	
	GEC-24-177	X	X	Horn/Strobe	
	GX91	X		Mini Horn Steady Tone	
	GX93	X		Mini Horn Temporal Tone	
	HG124 X			Horn	
	HS24-15	X	X	Horn/Strobe	
	HS24-30	X	X	Horn/Strobe	
	HS24-60	X	X	Horn/Strobe	

Table A-1 Compatible Notification Appliances

Manufacturer	Model	Audio	Visual	Type	
Gentex	HS24-75	X	X	Horn/Strobe	
	HS24-110	X	X	Horn/Strobe	
	HS24-1575	X	X	Horn/Strobe	
	GCC24	X	X	Multi Candella Horn/Strobe Ceiling Mount	
	GCCR24	X	X	Multi Candella Horn/Strobe Ceiling Mount	
	GCS24		X	Multi Candella Strobe Ceiling Mount	
	GCSR24		X	Multi Candella Strobe Ceiling Mount	
	GEGR-24	X	X	Multi Candella Horn/Strobe	
	GES24-15		X	Strobe	
	GES24-30		X	Strobe	
	GES24-60		X	Strobe	
	GES24-75		X	Strobe	
	GES24-110		X	Strobe	
	GES24-15/75		X	Strobe	
	GES24-177		X	Strobe	
	GES3-24		X	Multi Candella Strobe	
	GESR-24		X	Multi Candella Strobe	
	GEH-24	X		Horn	
	ST24-30			X	Strobe
	ST24-60			X	Strobe
	ST24-75			X	Strobe
	ST24-110			X	Strobe
	ST24-1575			X	Strobe
	WGEC24-75W	X	X		Weatherproof Horn/Strobe
	WGES24-75W			X	Weatherproof Strobe
	WGMS-24-X	X	X		Horn/Strobe
	GEC-24-110	X	X		Horn/Strobe
	GEC-24-15/75	X	X		Horn/Strobe
System Sensor	CHR	X		Chime	
	CHW	X		Chime	
	CHSR	X	X	2-Wire Chime/Strobe	
	CHSW	X	X	2-Wire Chime/Strobe	
	HR	X	X	Horn	
	HW		X	Horn	
	HRK		X	Horn	
	P2R	X	X	2-Wire Horn/Strobe	
	P2R-P	X	X	2-Wire Horn/Strobe	
	PC2R	X	X	2-Wire Horn/Strobe	
	PC2R-P	X	X	2-Wire Horn/Strobe	
	P2RH	X	X	2-Wire Horn/Strobe High Candela	
	P2RH-P	X	X	2-Wire Horn/Strobe High Candela	

Table A-1 Compatible Notification Appliances

Manufacturer	Model	Audio	Visual	Type
System Sensor (cont.)	PC2RH	X	X	2-Wire Horn/Strobe High Candela
	PC2RH-P	X	X	2-Wire Horn/Strobe High Candela
	P2W	X	X	2-Wire Horn/Strobe
	P2W-P	X	X	2-Wire Horn/Strobe
	PC2W	X	X	2-Wire Horn/Strobe
	PC2W-P	X	X	2-Wire Horn/Strobe
	P2WH	X	X	2-Wire Horn/Strobe High Candela
	P2WH-P	X	X	2-Wire Horn/Strobe High Candela
	PC2WH	X	X	2-Wire Horn/Strobe High Candela
	PC2WH-P	X	X	2-Wire Horn/Strobe High Candela
	P2RK	X	X	2-Wire Horn/Strobe
	PC2RK	X	X	2-Wire Horn/Strobe
	P2RHK	X	X	2-Wire Horn/Strobe High Candela
	PC2RHK	X	X	2-Wire Horn/Strobe High Candela
	P4R	X	X	4-Wire Horn/Strobe
	PC4R	X	X	4-Wire Horn/Strobe
	P4RH	X	X	4-Wire Horn/Strobe High Candela
	P4W	X	X	4-Wire Horn/Strobe
	PC4W	X	X	4-Wire Horn/Strobe
	P4WH	X	X	4-Wire Horn/Strobe High Candela
	PC4WH	X	X	4-Wire Horn/Strobe High Candela
	P4RK	X	X	4-Wire Horn/Strobe
	PC4RK	X	X	4-Wire Horn/Strobe
	P4RHK	X	X	4-Wire Horn/Strobe High Candela
	PC4RHK	X	X	4-Wire Horn/Strobe High Candela
	PC4RH	X	X	4-Wire Horn/Strobe High Candela
	SR		X	Strobe
	SR-P		X	Strobe
	SCR		X	Strobe
	SCR-P		X	Strobe
	SRH		X	Strobe High Candela
	SRH-P		X	Strobe High Candela
	SCRH		X	Strobe High Candela
	SCRH-P		X	Strobe High Candela
	SW		X	Strobe
	SW-P		X	Strobe
	SCW		X	Strobe
	SCW-P		X	Strobe
	SWH		X	Strobe High Candela
	SWH-P		X	Strobe High Candela
	SCWH		X	Strobe High Candela

Table A-1 Compatible Notification Appliances

Manufacturer	Model	Audio	Visual	Type
System Sensor (cont.)	SCWH-P		X	Strobe High Candela
	SRK		X	Strobe
	SCRK		X	Strobe
	SRHK		X	Strobe High Candela
	SCRHK		X	Strobe High Candela
	P2RH-LF	X	x	2-Wire Low Frequency Sounder Strobe
	P2WH-LF	X	x	2-Wire Low Frequency Sounder Strobe
	HR-LF	X		Low Frequency Sounder
	HW-LF	X		Low Frequency Sounder
Wheelock	AH-12	X		Horn
	AH-24	X		Horn
	AH-12WP	X		Horn Weatherproof
	AH-24WP	X		Horn Weatherproof
	AMT-241575W	X	X	Multi-Tone Horn Strobe
	AMT-24MCW		X	Multi-Tone Horn Strobe
	AMT-241575W-NYC	X	X	Multi-Tone Horn Strobe
	AMT-12/24	X		Multi-tone Horn
	AMT-12/24 NYC	X		Multi-tone Horn
	AS-121575W		X	Horn/Strobe
	NH-12/24	X		Horn
	AS-241575W	X	X	Horn/Strobe
	AS-24MCC	X	X	Horn/Strobe
	AS-24MCCH	X	X	Horn/Strobe
	AS-24MCW	X	X	Horn/Strobe
	AS-24MCWH	X	X	Horn/Strobe
	ASWP-2475W	X	X	Horn/Strobe Weatherproof
	ASWP-2475C	X	X	Horn/Strobe Weatherproof
	ASWP-24MCWH	X	X	Horn/Strobe
	ASWP-24MCCH	X	X	Horn/Strobe
	CH-70 X			Chime
	CH-90 X			Chime
	CH70-241575W		X	Chime/Strobe
	CH70-24MCW		X	Chime/Strobe
	CH70-24MCWH		X	Chime/Strobe
	CH90-24MCC		X	Chime/Strobe
	CH90-24MCCH		X	Chime/Strobe
	HS-24	X		Horn
	HS4-241575W	X	X	Horn/Strobe
	HS4-24MCW	X	X	Horn/Strobe
	HS4-24MCWH	X	X	Horn/Strobe
	HS4-24MCC	X	X	Horn/Strobe
	MIZ-24S	X	X	Mini Horn Strobe

Table A-1 Compatible Notification Appliances

Manufacturer	Model	Audio	Visual	Type
Wheelock (cont.)	MT-121575W		X	Multi-tone Horn Strobe
	MT-241575W	X	X	Multi-tone Horn Strobe
	MT-24MCW		X	Multi-tone Horn Strobe
	MTWP-2475W		X	Multi-tone Horn Strobe
	MTWP-2475C		X	Multi-tone Horn Strobe
	MTG-121575W	X	X	Multi-tone Horn Strobe
	MTR-121575W	X	X	Multi-tone Horn Strobe
	MTWPA-2475W	X	X	Multi-tone Horn Strobe
	MTWPB-2475W	X	X	Multi-tone Horn Strobe
	MTWPG-2475W	X	X	Multi-tone Horn Strobe
	MTWPR-2475W	X	X	Multi-tone Horn Strobe
	MTWPA-24MCCH	X	X	Multi-tone Horn Strobe
	ZNH	X		Horn
	NS-121575W	X	X	Horn/Strobe
	NS-241575W	X	X	Horn/Strobe
	NS-24MCW	X	X	Horn/Strobe
	NS-24MCC	X	X	Horn/Strobe
	NS-24MCCH	X	X	Horn/Strobe
	ZNS-MCW	X	X	Horn/Strobe
	ZNS-MCWH	X	X	Horn/Strobe
	ZNS-24MCC	X	X	Horn/Strobe
	ZNS-24MCCH	X	X	Horn/Strobe
	RSS-121575W		X	Strobe
	RSS-241575W		X	Strobe
	RSS-24MCC		X	Strobe
	RSS-24MCCR		X	Strobe
	RSS-24MCCH		X	Strobe
	RSS-24MCCHR		X	Strobe
	RSS-24MCW		X	Strobe
	RSS-24MCWH		X	Strobe
	RSSP-121575W		X	Strobe
	RSSP-241575W		X	Strobe
	RSSR-2415W		X	Strobe
	RSSR-2415C		X	Strobe
	RSSR-2475W		X	Strobe
	RSSR-2475C		X	Strobe
	RSSR-24110C		X	Strobe
	RSSA-24110W		X	Strobe
	RSSB-24110W		X	Strobe
	RSSG-24110W		X	Strobe
	RSSR-24110W		X	Strobe
	RSSA-24MCC		X	Multi Candela Strobe

Table A-1 Compatible Notification Appliances

Manufacturer	Model	Audio	Visual	Type
Wheelock (cont.)	RSSB-24MCC		X	Multi Candela Strobe
	RSSG-24MCC		X	Multi Candela Strobe
	RSSR-24MCC		X	Multi Candela Strobe
	RSSWPA-2475W		X	Strobe Weatherproof
	RSSWPA-24MCCH		X	Strobe Weatherproof
	RSSWPG-24MCCH		X	Strobe Weatherproof
	RSSWPR-24MCCH		X	Strobe Weatherproof
	RSSWP-2475W		X	Strobe Weatherproof
	RSSWP-2475C		X	Strobe Weatherproof
	RSSWP-24MCWH		X	Strobe Weatherproof
	ZRS-MCWH		X	Strobe
	ZRS-24MCC		X	Strobe
	ZRS-24MCCH		X	Strobe
	MB-G6-24 Mo			tor Bell
	MB-G10-24 Mo			tor Bell
	MB-G6-12 Mo			tor Bell
	MB-G10-12 Mo			tor Bell
	MIZ-24-R Mini			Horn
	MT-12/24-R X		X	Multi-tone Horn
	MT4-12/24 X		X	Multi-tone Horn
	ZRS-MCW		X	Strobe
	MTWPR-24MCCH	X	X	Multi-tone Horn Strobe
	NH-12/24R	X		Horn
	HSR		X	Horn Strobe
	HSW		X	Horn Strobe
	STR		X	Strobe
	STW		X	Strobe
	HNR		X	Horn
	HNW		X	Horn

A.2 Two Wire Detectors

Table A-2 lists two-wire smoke detectors that are compatible with the fire control panel. The table is organized by manufacturer. The columns show the number of detectors per loop that can be used.

	IFP-2000
Identifier	24H
Operating voltage Range	17.1 - 27.3 VDC

Note: The maximum number of smoke detectors per zone is determined by both the current draw and the impedance of the smoke detector. If too many smoke detectors are used on any zone, false alarms could occur.

Do not mix different models of detectors on any zone; false alarms could occur.

Control unit Smoke Reset Time must be programmed for a number greater than or equal to the maximum reset time of the smoke detector.

Table A-2: Compatible Two-Wire Smoke Detectors Style B

Manufacturer	Model Name or Number (Base model name or number in parenthesis.)	Compatibility ID		# per Loop
		Head	Base	
Apollo	55000-350 (45681-200)	55000-350	45681-200	15 / loop
	55000-250 (45681-200)	55000-250	45681-200	24 / loop
	55000-225	55000-225	45681-255, 256	15 / loop for Ion Detectors
	55000-226	55000-226		
	55000-227	55000-227	45681-200, 220, 232, 251, 252	15 / loop for Photo Electric Detectors
	55000-325	55000-325		
	55000-326	55000-326		
	55000-327	55000-327		
	55000-328	55000-328		
Hochiki	SLR-24	HD-3	HSC-220R(HB-72) NS6-220 OR NS4-220 (HB-3)	15 / loop
	SLR-24H			
	SLR-24V			
	SLR-835	HD-3		14 / loop
	SLR-835H	HD-5		
System Sensor	1400	A	N/A	16 / loop
	1451 (B401B)	A	N/A	16 / loop
	2100	A	N/A	20 / loop
	2100T	A	N/A	20 / loop
	2151 (B401)	A	N/A	16 / loop
	2151T (B401)	A	N/A	16 / loop
	2400	A	N/A	16 / loop
	2400TH	A	N/A	16 / loop
	2451 (B401B)	A	N/A	16 / loop
	2451TH (B401B)	A	N/A	16 / loop

Table A-3 Compatible Two-Wire Smoke Detectors Style B or Style D

Manufacturer	Model Name or Number	Compatibility ID		# per Loop
		Head	Base	
System Sensor	2W-B	A	N/A	20 / loop
	2WT-B	A	N/A	20 / loop
	2WTA-B	A	N/A	1 / loop
	2WTR-B	A	N/A	1 / loop

A.3 Four-Wire Smoke Detectors/Devices (UL Listed)

Table A-4 Compatible Four-Wire Smoke Detectors

Smoke Detector/Base	Detector Type	Max Standby Current (mA)	Alarm Current (mA)
Fenwal CPD-7021 (w/70-201000-005 Base)	Ionization	0.10	*
Fenwal PSD-7125	Photoelectric	0.10	*
Fenwal PSD-7126 (w/70-201000-005 Base)	Photoelectric	0.10	*
Fire-Lite BLP-12-4W	Base	*	*
Gentex 824	Photoelectric	0.50	*
Gentex 824T	Photoelectric	0.50	*
Gentex 824CP	Photoelectric	0.50	*
Gentex 824CPT	Photoelectric	0.50	*
Hochiki HSC-4R	Base	*	*
Hochiki SPB-24	Projected Beam	0.25	*
System Sensor B112LP	Base	0.12	36
System Sensor B114LP	Base	*	*
System Sensor B404B	Base	*	*
System Sensor DH100ACDC	Photoelectric	0.15	0.70
System Sensor DH100ACDCLP	Photoelectric	0.15	0.70
System Sensor DH100ACDCLWP	Photoelectric	0.15	0.70
System Sensor DH400ACDCI	Ionization Duct	25	95
System Sensor DH400ACDCP	Photoelectric Duct	25	95
System Sensor 1112/24/D	Ionization	0.05	50
System Sensor 1424	Ionization	0.10	41
System Sensor 1451 (w/B402B Base)	Ionization	0.10	39
System Sensor 2112/24ATR	Photoelectric	0.50	60/70
System Sensor 2112/24AITR	Photoelectric	0.50	60/70
System Sensor 2112/24/D	Photoelectric	0.05	50
System Sensor 2112/24R	Photoelectric	0.50	60/70
System Sensor 2112/24TR	Photoelectric	0.50	60/70
System Sensor 2112/24T/D	Photoelectric w/135° Thermal	0.05	50
System Sensor 2112/24TSRB	Photoelectric w/135° Thermal Supervisory Relay	15	45
System Sensor 2312/24TB	Photoelectric	0.12	50
System Sensor 2412 (12 volt)	Photoelectric	0.12	77
System Sensor 2412AT (12 volt)	Photoelectric	0.12	58
System Sensor 2412TH (12 volt)	Photoelectric	0.12	77
System Sensor 2424	Photoelectric	0.10	41
System Sensor 2424TH	Photoelectric	0.10	41
System Sensor 2451	Photoelectric	0.10	39
System Sensor 2451TH (with/B402B Base)	Photoelectric	0.10	39

Smoke Detector/Base	Detector Type	Max Standby Current (mA)	Alarm Current (mA)
System Sensor 2W-MOD	Loop Test/Maintenance Mod.	30	50
System Sensor 4W-B (12/24 Volt)	Photoelectric I ³	.05	23
System Sensor 4WT-B (12/24 Volt)	Photoelectric I ³ w/Therm	.05	23
System Sensor 4WTA-B (12/24 Volt)	I ³ Photo w/ Therm Sounder	.05	35
System Sensor 4WTR-B (12/24 Volt)	I ³ Photo w/ Therm/Relay	.05	35
System Sensor 4WTAR-B (12/24 Volt)	I ³ Photo w/ Therm/Sounder/ Relay	.05	50
System Sensor 4WITAR-B (12/24 Volt)	I ³ Photo w/ Isolated Therm/ Sounder/Relay	.05	50
System Sensor 2W-MOD2	I ³ Loop Test/Maintenance Mod.	.05	*
System Sensor RRS-MOD	I ³ Reversing Relay/Sync Module	.05	*
System Sensor 6424	Projected Beam	10	28.4
System Sensor Beam 1224(S)	Projected Beam	17	38.5
* Contact manufacturer for current draws			

A.4 Door Holders (UL Listed)

Table A-5 lists door holders that are compatible with the fire control panel.

Table A-5 Compatible Door Holders

Manufacturer	Model	Type	Current (mA)
Edwards	DH150A	Floor Mount	96
Edwards	DH154A	Flush Mount	96
Edwards	DH158A	Surface Mount	96
Rixon Firemark	FM-980	Floor Mount, single	68
Rixon Firemark	FM-996	Surface Wiring	68
Rixon Firemark	FM-998	Concealed Wiring	68

A.5 Relays (UL Listed)

Table A-6 lists relays compatible with the fire control panel.

Table A-6 Compatible Relays

Manufacturer	Model	Current (mA)
Air Products & Controls, LTD	MR-101/C	15
	MR-201/C	35
	PAM-1	15
	PAM-2	15
	PAM-SD	15
System Sensor	A77-716B	20
	PR-1	15
	PR-2	30
	PR-3	30
	EOLR-1	30
	R-10T	23
	R-14T	23
	R-20T	40
	R-24T	40
	R-10E	23
	R-14E	23
	R-20E	40
	R-24E	40

A.6 Compatible 520Hz Signaling Speakers

Table A-7 520Hz Speakers

Model Number	Description
SPR	Wall High-Fidelity Speaker, Red
SPW	Wall High-Fidelity Speaker, White
SPCR	Ceiling High-Fidelity Speaker, Red
SPCW	Ceiling High-Fidelity Speaker, White
SPSR	Wall High-Fidelity Speaker Strobe, Red
SPSRH	Wall High-Fidelity Speaker Strobe, High Candela, Red
SPSW	Wall High-Fidelity Speaker Strobe, White
SPSCR	Ceiling High-Fidelity Speaker Strobe, Red
SPSCW	Ceiling High-Fidelity Speaker Strobe, White
SPSCWH	Ceiling High-Fidelity Speaker Strobe, High Candela, White
SPSCRH	Ceiling High-Fidelity Speaker Strobe, High Candela, Red
SPSCW-CLR-ALERT	Ceiling High-Fidelity Speaker Strobe, Clear Lens, ALERT, White
SPSCW-P	Ceiling High-Fidelity Speaker Strobe, Plain, White
SPSCWH-P	Ceiling High-Fidelity Speaker Strobe, High Candela, Plain, White
SPSR-P	Wall High-Fidelity Speaker Strobe, Plain, Red
SPSRH-P	Wall High-Fidelity Speaker Strobe, High Candela, Plain, Red
SPSCWH-P	Ceiling High-Fidelity Speaker Strobe, High Candela, Plain, White
SPSW-ALERT	Wall High-Fidelity Speaker Strobe, Amber Lens, ALERT, White
SPSW-CLR-ALERT	Wall High-Fidelity Speaker Strobe, Clear Lens, ALERT, White
SPSW-P	Wall High-Fidelity Speaker Strobe, Plain, Red
SPSWH	Wall High-Fidelity Speaker Strobe, High Candela, White
SPSWH-P	Wall High-Fidelity Speaker Strobe, High Candela, Plain, Red

A.7 Compatible 520Hz Low Frequency Bases

Table A-8 Low Frequency Bases

Model Number	Description
B200S-LF	Low Frequency Intelligent Sounder Base
B200SR-LF	Low Frequency Intelligent Sounder Base

Appendix B

Editing Text Using the Built-In Programmer

This section contains tables of programmable characters that may be used for device, module, site, template, group, and zone names or phone numbers.

B.1 Characters Used for Editing Text

Table B-1 lists the available characters and their associated numeric designator. When programming:







1. Use the  or  arrow key to scroll to the mode wanted.
2. Press the number shown in Table B-1 until the character wanted is shown.
3. Arrow left and right for position, and press enter to accept.

Table B-1: Character Table

Lower Case Letters							
abc	1	def	2	ghi	3	jkl	4
mno	5	pqr	6	stu	7	vwx	8
yz	9	Spc	0				
Upper Case Letters							
ABC	1	DEF	2	GHI	3	JKL	4
MNO	5	PQR	6	STU	7	VWX	8
YZ	9	Spc	0				
Numbers and Special Characters							
1 []	1	2 ()	2	3 . ,	3	4 : ;	4
5 ' "	5	6 ? !	6	7 ' /	7	8 - +	8
9 = -	9	0	0	* & @	*	# \$	#

B.2 Example Name Edit

1. Press  or  to select upper case letters mode, Press 2 until “F” appears.
2. Press  or  to change mode to lower case letters, Press 3 until “i” appears.
3. Press 6 until “r” appears.
4. Press 2 until “e” appears.
5. Press 0 to space, then continue to next word using the same process.
6. Press ENTER to accept.

Note: After three seconds of no change, letter will automatically be accepted. Also pressing next number will automatically accept previous choice.

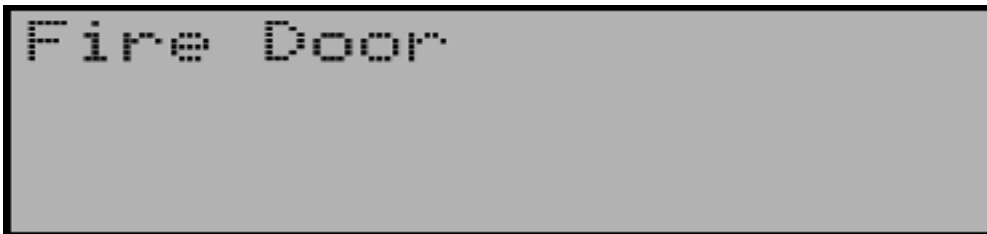


Figure B-1 Edit Name Example

Appendix C

Cadence Patterns

The cadence patterns shown in Appendix C are available for use with the control panel.


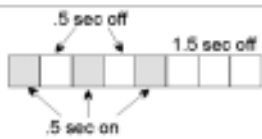
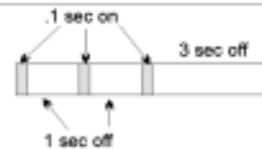


 

#	Name	Pattern Description																										
00	Constant	Continuous sound Patterns repeat until condition is cleared. <small>Note: This is the only pattern that can be used for relay circuits. The system will override any other choice.</small>																										
01	March Code	 5 sec on 5 sec off																										
02	ANSI 3.41																											
03	Single Stroke																											
04	California																											
05 ... 16	Zone Coded	<table border="1" data-bbox="349 1081 576 1407"> <thead> <tr> <th>Pattern#</th> <th>Zone</th> </tr> </thead> <tbody> <tr><td>5</td><td>Zone 1</td></tr> <tr><td>6</td><td>Zone 2</td></tr> <tr><td>7</td><td>Zone 3</td></tr> <tr><td>8</td><td>Zone 4</td></tr> <tr><td>9</td><td>Zone 5</td></tr> <tr><td>10</td><td>Zone 6</td></tr> <tr><td>11</td><td>Zone 7</td></tr> <tr><td>12</td><td>Zone 8</td></tr> <tr><td>13</td><td>Custom 1</td></tr> <tr><td>14</td><td>Custom 2</td></tr> <tr><td>15</td><td>Custom 3</td></tr> <tr><td>16</td><td>Custom 4</td></tr> </tbody> </table>  → This pattern multiplied by # of zone in alarm, followed by 3 seconds off. EXAMPLE: Pattern 06, Zone 2 coded 	Pattern#	Zone	5	Zone 1	6	Zone 2	7	Zone 3	8	Zone 4	9	Zone 5	10	Zone 6	11	Zone 7	12	Zone 8	13	Custom 1	14	Custom 2	15	Custom 3	16	Custom 4
Pattern#	Zone																											
5	Zone 1																											
6	Zone 2																											
7	Zone 3																											
8	Zone 4																											
9	Zone 5																											
10	Zone 6																											
11	Zone 7																											
12	Zone 8																											
13	Custom 1																											
14	Custom 2																											
15	Custom 3																											
16	Custom 4																											
17 . 18 . 19 . 20 21	<table border="1" data-bbox="349 1417 625 1543"> <thead> <tr> <th>Pattern #</th> <th>Sync Type</th> </tr> </thead> <tbody> <tr><td>17</td><td>Faraday- not allowed</td></tr> <tr><td>18</td><td>Genlex</td></tr> <tr><td>19</td><td>System Sensor</td></tr> <tr><td>20</td><td>Wheelock</td></tr> <tr><td>21</td><td>Amesoc</td></tr> </tbody> </table>	Pattern #	Sync Type	17	Faraday- not allowed	18	Genlex	19	System Sensor	20	Wheelock	21	Amesoc	These outputs provide synchronization for AMSECO, Faraday, Genlex, System Sensor, or Wheelock synchronized appliances.														
Pattern #	Sync Type																											
17	Faraday- not allowed																											
18	Genlex																											
19	System Sensor																											
20	Wheelock																											
21	Amesoc																											
22	Power Isolated	Disconnected, no voltage at terminals																										
23	Temporal 4																											

Figure C-2 Cadence Patterns Available with the Control Panel

Silent Knight Fire Product Warranty and Return Policy

General Terms and Conditions

- All new fire products manufactured by Silent Knight have a limited warranty period of 36 months from the date of manufacture against defects in materials and workmanship. See limited warranty statement for details.
- This limited warranty does not apply to those products that are damaged due to misuse, abuse, negligence, exposure to adverse environmental conditions, or have been modified in any manner whatsoever.

Repair and RMA Procedure

- All products that are returned to Silent Knight for credit or repair require a RMA (Return Authorization) number. Call Silent Knight Customer Service at 800-328-0103 or 203-484-7161 between 8:00 A.M. and 5:00 P.M. EST, Monday through Friday to obtain a return authorization number.
- Silent Knight Technical Support is available at 800-446-6444 between 8:00 A.M. and 5:00 P.M. CST, Monday through Friday.
- All returns for credit are subject to inspection and testing at the factory before actual determination is made to allow credit.
- RMA number must be prominently displayed on the outside of the shipping box. See return address example under Advanced Replacement Policy.
- Included with each return should be: a packing slip that has the RMA number, a content list, and a detailed description of the problem.
- All products returned to Silent Knight must be sent freight pre-paid. After product is processed, Silent Knight will pay for shipping product back to customer via UPS ground.
- Return the Silent Knight product circuit board only. Products that are returned in cabinets will be charged an additional \$50 to cover the extra shipping and handling costs over board only returns. **Do not return batteries.** Silent Knight has the authority to determine if a product is repairable. Products that are deemed un-repairable will be returned to the customer.
- Product that is returned that has a board date code more than 36 months from date of manufacture will be repaired and the customer will be assessed the standard Silent Knight repair charge for that model.

Advanced Replacement Policy

- Silent Knight offers an option of advance replacement for fire product printed circuit boards that fail during the first 6 months of the warranty period. These items must be returned with transportation charges prepaid and must be accompanied by a return authorization.
- For advance replacement of a defective board, contact your local Silent Knight distributor or call Silent Knight at 800-328-0103 to obtain a RMA (Return Authorization) number and request advanced replacement.
- A new or refurbished board will be shipped to the customer. The customer will initially be billed for the replacement board but a credit will be issued after the repairable board is received at Silent Knight. All returned products must comply with the guidelines described under “General Terms and Conditions” and “Repair and RMA Procedure”.
- The defective board must be returned within 30 days of shipment of replacement board for customer to receive credit. No credit will be issued if the returned board was damaged due to misuse or abuse.
- Repairs and returns should be sent to:
Silent Knight / Honeywell
Attn: Repair Department / RA Number _____
12 Clintonville Road
Northford, CT 06472 USA

Manufacturer Warranties and Limitation of Liability

Manufacturer Warranties. Subject to the limitations set forth herein, Manufacturer warrants that the Products manufactured by it in its Northford, Connecticut facility and sold by it to its authorized Distributors shall be free, under normal use and service, from defects in material and workmanship for a period of thirty six months (36) months from the date of manufacture (effective Jan. 1, 2009). The Products manufactured and sold by Manufacturer are date stamped at the time of production. Manufacturer does not warrant Products that are not manufactured by it in its Northford, Connecticut facility but assigns to its Distributor, to extent possible, any warranty offered by the manufacturer of such product. This warranty shall be void if a Product is altered, service repaired by anyone other than Manufacturer or its authorized Distributors. This warranty shall also be void if there is a failure to maintain the Products and the systems in which they operate in proper working conditions.

MANUFACTURER MAKES NO FURTHER WARRANTIES, AND DISCLAIMS ANY AND ALL OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCTS, TRADEMARKS, PROGRAMS AND SERVICES RENDERED BY MANUFACTURER INCLUDING WITHOUT LIMITATION, INFRINGEMENT, TITLE, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. MANUFACTURER SHALL NOT BE LIABLE FOR ANY PERSONAL INJURY OR DEATH WHICH MAY ARISE IN THE COURSE OF, OR AS A RESULT OF, PERSONAL, COMMERCIAL OR INDUSTRIAL USES OF ITS PRODUCTS.

This document constitutes the only warranty made by Manufacturer with respect to its products and replaces all previous warranties and is the only warranty made by Manufacturer. No increase or alteration, written or verbal, of the obligation of this warranty is authorized. Manufacturer does not represent that its products will prevent any loss by fire or otherwise.

Warranty Claims. Manufacturer shall replace or repair, at Manufacturer's discretion, each part returned by its authorized Distributor and acknowledged by Manufacturer to be defective, provided that such part shall have been returned to Manufacturer with all charges prepaid and the authorized Distributor has completed Manufacturer's Return Material Authorization form. The replacement part shall come from Manufacturer's stock and may be new or refurbished. THE FOREGOING IS DISTRIBUTOR'S SOLE AND EXCLUSIVE REMEDY IN THE EVENT OF A WARRANTY CLAIM.

Warn-HL-08-2009.fm



Model IFP-2000 Basic Operating Instructions

These instructions must be framed and displayed next to the IFP-2000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems. Test the system in accordance to NFPA 72.

Operation	Task to Perform
Silence Alarms and Troubles	Press SILENCE then enter a code if prompted. Silence LED will light.
Reset Alarms	Press RESET then enter a code if prompted.
View Alarms, Supervisories, and Troubles	For each type of condition, press the or button associated with Alarm, Supervisory, or Trouble.
Conduct a Fire Drill	Hold the DRILL button and then enter a code if prompted. OR <ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 1 to select System Tests. 3. Enter code if prompted, then press 1 to select Fire Drill. 4. Press ENTER to start the fire drill., and Press ENTER to end the fire drill.
View a Point's Status	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 2 to select Point Functions. 3. Enter code if prompted, then press 2 to select Point Status. 4. Select the module the device is located on by using the or . Then press ENTER. 5. Enter the point number.
Check Detector Sensitivity	<ol style="list-style-type: none"> 1. Follow steps 1 through 5 for viewing a point's status. 2. Press to view detector sensitivity.
Set Time and Date	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 4 to select Set Time & Date. Enter a code if prompted. 3. Make changes to the fields on the screen as necessary. 4. Press ENTER if you wish to keep the changes. 5. Press ENTER to set the entered time and date.
Enable / Disable a Point	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 2 to select Point Functions. 3. Press 1 to select Disable / Enable Point. 4. Press 7 to select Disable/Enable Point. 5. Select the module the point is located on by using the or . Then press ENTER. 6. Enter the point number then press ENTER. 7. Press the to Disable/Enable Point.
View Event History	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 3 to select Event History. 3. Enter code if prompted. 4. Press the or to view events in the history buffer.
For Service call:	

Cut Along the Dotted Line



Model IFP-2000ECS / ECS-RCU2000 Basic Operating Instructions

These instructions must be framed and displayed next to the IFP-2000 or ECS-RCU2000 panel in accordance with NFPA 72 fire code for Local Protected Fire Alarm Systems.

FS = Fire System ECS = Emergency Communication System

Operation	Task to Perform
Silence Alarms and Troubles (Fire Only)	Press SILENCE then enter a code if prompted. Silence LED will light.
Reset Fire Alarms OR Reset ECS Alarms	Press RESET then enter a code if prompted. <i>Note: To reset ECS at an LOC, the user must gain ECS Control (See Figure 1).</i>
Reset Alarms (ECS & Fire Active)	<ol style="list-style-type: none"> 1. Press RESET. 2. Press 1 to Reset Fire System. 3. Press 2 to Reset Emergency Communication. System. <i>Note: To reset ECS at an LOC, the user must gain ECS Control (See Figure 1).</i>
Conduct a Fire Drill	Hold the DRILL button and then enter a code if prompted. OR <ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 1 to select System Tests. 3. Enter code if prompted, then press 1 to select Fire Drill. 4. Press ENTER to start the fire drill, and Press ENTER to end the fire drill.
View Alarms, Troubles, and Supervisories	For each type of condition, press the or button associated with Alarm, Supervisory, or Trouble.
Set Time and Date	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 4 to select Set Time & Date. Enter a code if prompted. 3. Make changes to the fields on the screen as necessary. 4. Press ENTER if you wish to keep the changes. 5. Press ENTER to set the entered time and date.
Enable / Disable a Point	<ol style="list-style-type: none"> 1. Enter the installer code. The panel will automatically go to the main menu. 2. Press 2 to select Point Functions. 3. Enter code if prompted, then press 1 to select Disable / Enable Point. 4. Press 7 to select Disable/Enable Point. 5. Select the module the point is located on by using the or . Then press ENTER. 6. Enter the point number then press ENTER. 7. Press the to Disable/Enable Point.
To Gain / Request ECS Control	<ol style="list-style-type: none"> 1. Press the Button and follow the on-screen Instructions. <i>Note: When ECS Control LED is blinking, another LOC has ECS Control. ECS Control LED is on steady when the LOC has ECS Control.</i>
For Service call:	

Cut Along the Dotted Line

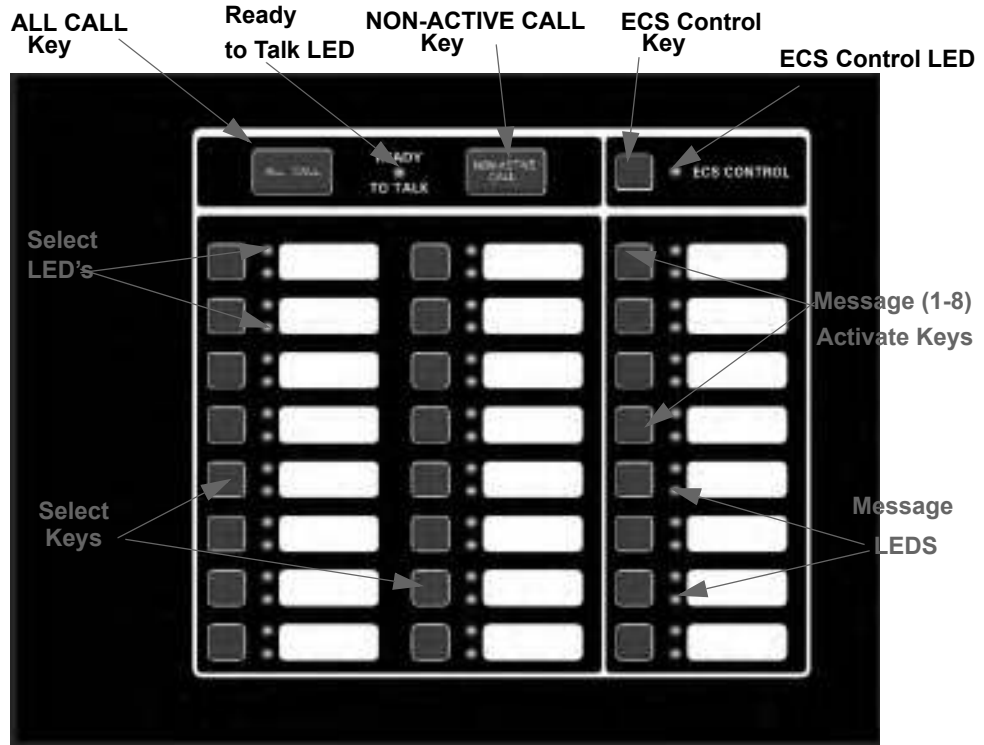


Figure 1-1: ECS Front view

Table 1-1: LED Conditions

LED	Color	States	Meaning
Select Keys	Red	On	The corresponding area is active for the currently playing ECS message.
		Off	The corresponding area is not active.
	Green	On	The corresponding area is active for the microphone.
		Off	The corresponding area is not active for the microphone.
ECS Control LED	Green	On	LOC has ECS Control and the user is able to make changes to the ECS.
		Off	LOC does not have ECS Control.
ECS Message LED	Red	On	The corresponding ECS event was activated by an ECS device.
		Off	The corresponding ECS event was not activated from this LOC.
	Green	On	The corresponding ECS event is active and was generated from the LOC (or was activated from another LOC, but this LOC now has ECS Control).

Table 1-2: ECS Control Request

Operation	Task
Gain ECS Control at an LOC	Press the ECS Control Key and enter a code if prompted. If ECS Control is available, the ECS Control LED will illuminate. If another LOC has ECS Control, the display will be similar to the one shown. Press 1 to request control. The LOC with ECS Control will then be able to allow or deny the request.
Gain ECS Control as ECS Super User at an LOC (only one ECS Super User is allowed ECS Control in the system at a time).	From the idle screen, enter an ECS Super User access code and then press the ECS Control Key. If ECS Control as Super User is available, the ECS Control LED will illuminate. If another LOC has Super User ECS Control, a request for Super User ECS Control will automatically be made to the LOC with control. The LOC with Super User ECS Control will then be able to allow or deny the request. (See Figure 1-2 for screen display example).
Select all output group for microphone override	Key the microphone, wait for the Ready-to-Talk LED to light, press the All Call Key, and then deliver your verbal message.

Table 1-2: ECS Control Request

Operation	Task
Select all non-activated output groups for microphone override	Key the microphone, wait for the Ready-to-Talk LED to light, press the Non-Active Call Key, and then deliver your verbal message.

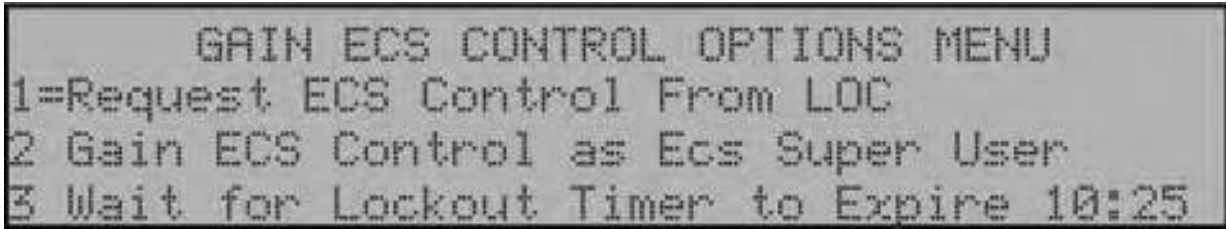


Figure 1-2: Gain ECS Control as ECS Super User Screen

Cut Along the Dotted Line



**SILENT
KNIGHT**

by Honeywell

Silent Knight
12 Clintonville Road
Northford, CT 06472-1610
203-484-7161
Fax: 203-484-7118

www.silentknight.com



Indoor Selectable-Output Strobes and Horn Strobes for Ceiling Applications

System Sensor L-Series audible visible notification products are rich with features guaranteed to cut installation times and maximize profits with lower current draw and modern aesthetics.



Features

- Plug-in design with minimal intrusion into the back box
- Tamper-resistant construction
- Automatic selection of 12- or 24-volt operation at 15 and 30 candela
- Field-selectable candela settings on ceiling units: 15, 30, 75, 95, 115, 150, and 177
- Horn rated at 88+ dBA at 16 volts
- Rotary switch for horn tone and two volume selections
- Universal mounting plate for ceiling units
- Mounting plate shorting spring feature checks wiring continuity before device installation
- Electrically Compatible with legacy SpectrAlert and SpectrAlert Advance devices
- Compatible with MDL3 sync module
- Listed for ceiling mounting only

The System Sensor L-Series offers the most versatile and easy-to-use line of horns, strobes, and horn strobes in the industry with lower current draws and modern aesthetics. With white and red plastic housings, wall and ceiling mounting options, System Sensor L-Series can meet virtually any application requirement.

The entire L-Series product line of ceiling-mount strobes and horn strobes include a variety of features that increase their application versatility while simplifying installation. All devices feature a plug-in design with minimal intrusion into the back box, making installations fast and foolproof while virtually eliminating costly and time-consuming ground faults.

To further simplify installation, the L-Series utilizes a universal mounting plate so installers can mount them to a wide array of back boxes. With an onboard shorting spring, installers can test wiring continuity before the device is installed.

Installers can also easily adapt devices to suit a wide range of application requirements using field-selectable candela settings, automatic selection of 12- or 24-volt operation, and a rotary switch for horn tones with two volume selections.

Agency Listings



S5512
S4011



FM approved except
for ALERT models
3057383



7125-1653:0504
7135-1653:0503

L-Series Specifications

Architect/Engineer Specifications

General

L-Series ceiling-mount strobes and horn strobes shall mount to a standard 4 × 4 × 1½-inch back box, 4-inch octagon back box, or double-gang back box. Two-wire products shall also mount to a single-gang 2 × 4 × 17/8-inch back box. A universal mounting plate shall be used for mounting ceiling and wall products. The notification appliance circuit wiring shall terminate at the universal mounting plate. Also, L-Series products, when used with the Sync•Circuit™ Module accessory, shall be powered from a non-coded notification appliance circuit output and shall operate on a nominal 12 or 24 volts. When used with the Sync•Circuit Module, 12-volt-rated notification appliance circuit outputs shall operate between 8.5 and 17.5 volts; 24-volt-rated notification appliance circuit outputs shall operate between 16.5 and 33 volts. Indoor L-Series products shall operate between 32 and 120 degrees Fahrenheit from a regulated DC or full-wave rectified unfiltered power supply. Ceiling strobes and horn strobes shall have field-selectable candela settings including 15, 30, 75, 95, 115, 150, and 177.

Strobe

The strobe shall be a System Sensor L-Series Model _____ listed to UL 1971 and shall be approved for fire protective service. The strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1 Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system.

Horn Strobe Combination

The horn strobe shall be a System Sensor L-Series Model _____ listed to UL 1971 and UL 464 and shall be approved for fire protective service. The horn strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1 Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system. The horn shall have two audibility options and an option to switch between a temporal three pattern and a non-temporal (continuous) pattern. These options are set by a multiple position switch. The horn on horn strobe models shall operate on a coded or non-coded power supply.

Synchronization Module

The module shall be a System Sensor Sync•Circuit model MDL3 listed to UL 464 and shall be approved for fire protective service. The module shall synchronize L-Series strobes at 1 Hz and horns at temporal three. Also, while operating the strobes, the module shall silence the horns on horn strobe models over a single pair of wires. The module shall mount to a 4 11/16 × 4 11/16 × 2 1/8-inch back box. The module shall also control two Style Y (class B) circuits or one Style Z (class A) circuit. The module shall synchronize multiple zones. Daisy chaining two or more synchronization modules together will synchronize all the zones they control. The module shall not operate on a coded power supply.

Physical/Electrical Specifications

Standard Operating Temperature	32°F to 120°F (0°C to 49°C)
Humidity Range	10 to 93% non-condensing
Strobe Flash Rate	1 flash per second
Nominal Voltage	Regulated 12 VDC or regulated 24 DC/FWR ¹
Operating Voltage Range²	8 to 17.5 V (12 V nominal) or 16 to 33 V (24 V nominal)
Operating Voltage Range (MDL3)	8.5 to 17.5V (12 V nominal) or 16.5 to 33 V (24V nominal)
Input Terminal Wire Gauge	12 to 18 AWG
Ceiling-Mount Dimensions (including lens)	6.8" diameter × 2.5" high (173 mm diameter × 64 mm high)
Ceiling-Mount Surface Mount Back Box Skirt Dimensions (SBBCRL, SBBCWL)	6.9" diameter × 3.4" high (175 mm diameter × 86 mm high)

Notes:

1. Full Wave Rectified (FWR) voltage is a non-regulated, time-varying power source that is used on some power supply and panel outputs.
2. P, S, PC, and SC products will operate at 12 V nominal only for 15 and 30 cd.

UL Current Draw Data


UL Max. Strobe Current Draw (mA RMS)			
Candela	8-17.5 Volts		16-33 Volts
	DC	DC	FWR
15	87	41	60
30	153	63	86
75	N/A	111	142
95	N/A	134	164
115	N/A	158	191
150	N/A	189	228
177	N/A	226	264

UL Max. Current Draw (mA RMS), 2-Wire Horn Strobe									
DC Input	8-17.5 Volts		16-33 Volts						
	15cd	30cd	15cd	30cd	75cd	95cd	115cd	150cd	177cd
Temporal High	103	167	71	90	143	165	187	217	254
Temporal Low	96	165	54	71	137	161	185	211	249
Non-Temporal High	106	173	71	90	141	165	187	230	273
Non-Temporal Low	95	166	54	71	124	161	170	216	258
3.1K Temporal High	111	164	69	94	147	163	184	229	257
3.1K Temporal Low	103	163	54	88	143	155	185	212	252
3.1K Non-Temporal High	111	172	69	94	144	164	202	229	271
3.1K Non-Temporal Low	103	169	54	88	131	155	187	217	259
FWR Input	16-33 Volts								
	15cd	30cd	75cd	95cd	115cd	150cd	177cd		
Temporal High	107	135	179	198	223	254	286		
Temporal Low	78	101	151	172	199	229	262		
Non-Temporal High	107	135	179	198	223	254	286		
Non-Temporal Low	78	101	151	172	199	229	262		
3.1K Temporal High	108	135	179	200	225	255	289		
3.1K Temporal Low	79	101	150	171	196	229	260		
3.1K Non-Temporal High	108	135	179	200	225	255	289		
3.1K Non-Temporal Low	79	101	150	171	196	229	260		


Horn Strobe Tones and Sound Output Data

Horn and Horn Strobe Output (dBA)					
Switch Position	Sound Pattern	dB	8-17.5	16-33	FWR
			Volts	Volts	
			DC	DC	
1	Temporal	High	84	89	89
2	Temporal	Low	75	83	83
3	Non-Temporal	High	85	90	90
4	Non-Temporal	Low	76	84	84
5	3.1 KHz Temporal	High	83	88	88
6	3.1 KHz Temporal	Low	76	82	82
7	3.1 KHz Non-Temporal	High	84	89	89
8	3.1 KHz Non-Temporal	Low	77	83	83


L-Series Dimensions

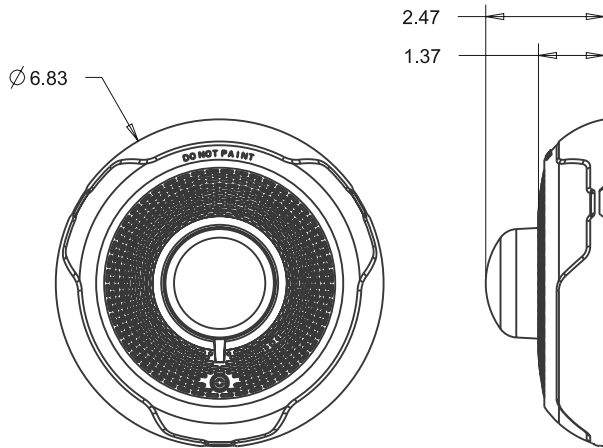

Ceiling-Mount Horn Strobes

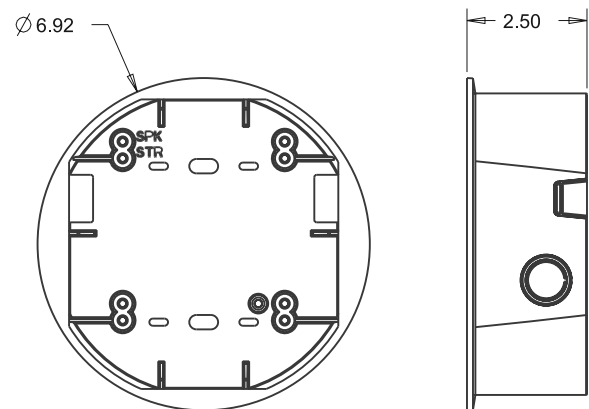

Ceiling Surface Mount Back Box

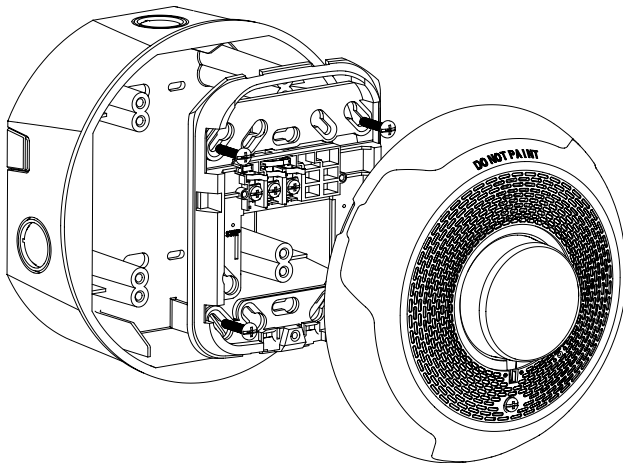

Ceiling Mount Horn Strobes with Ceiling Surface Mount Back Box

L-Series Ordering Information

Model	Description
Ceiling Horn Strobes	
PC2RL	2-Wire, Horn Strobe, Red
PC2WL	2-Wire, Horn Strobe, White

Model	Description
Ceiling Strobes	
SCRL	Strobe, Red
SCWL	Strobe, White
SCWL-CLR-ALERT	Strobe, White, ALERT
Accessories	
TRC-2	Universal Ceiling Trim Ring Red
TRC-2W	Universal Ceiling Trim Ring White
SBBCRL	Ceiling Surface Mount Back Box, Red
SBBCWL	Ceiling Surface Mount Back Box, White



3825 Ohio Avenue • St. Charles, IL 60174
 Phone: 800-SENSOR2 • Fax: 630-377-6495

©2017 System Sensor.
 Product specifications subject to change without notice. Visit systemsensor.com
 for current product information, including the latest version of this data sheet.
 AVDS86801 • 03/17



Outdoor Selectable-Output Horns, Strobes, and Horn Strobes for Wall Applications

SpectrAlert® Advance outdoor audible visible products are rich with features that cut installation times and maximize profits.



SPECTRAlert
ADVANCE
from System Sensor

Features

- Weatherproof per NEMA 4X, IP56
- Listed to UL 1638 (strobe) and UL 464 (horn)
- Compatible with System Sensor synchronization protocol and legacy SpectrAlert products
- Field-selectable candela settings: 15, 15/75, 30, 75, 95, 110, 115, 135, 150, 177, and 185
- Automatic selection of 12- or 24-volt operation at 15 and 15/75 candela
- Rotary switch for horn tone and three volume selections
- Horn rated at 88+ dBA at 16 volts
- Rated from -40°F to 151°F
- Universal mounting plate with an onboard shorting spring that tests wiring continuity before devices are installed
- Plug-in design with minimal intrusion into the back box
- Tamper-resistant construction
- Listed for ceiling or wall mounting

Agency Listings



S4011 (chimes, horn strobes, horns)
S3593 (outdoor and alert strobes)



3023572



MEA452-05-E



7300-1653-187 (outdoor strobes)
7125-1653-188 (horn strobes,
chime strobes)
7135-1653-189 (horns, chimes)

SpectrAlert Advance offers the broadest line of outdoor horns, strobes, and horn strobes in the industry. With white or red plastic housings, wall or ceiling mounting options, and plain or FIRE-printed devices, SpectrAlert Advance can meet virtually any application requirement, including indoor, outdoor, wet, and dry applications in temperatures from -40°F to 151°F.

Like the entire SpectrAlert Advance line, outdoor horns, strobes, and horn strobes for wall applications include a variety of features that increase application flexibility and simplify installation. First, field-selectable settings, including candela, automatic selection of 12- or 24-volt operation, horn tones, and three volume options enable installers to easily adapt devices to meet requirements.

Next, SpectrAlert Advance devices use a universal mounting plate for both wall and ceiling applications. This mounting plate includes an onboard shorting spring that ensures wiring continuity before devices are installed, so installers can verify proper wiring without mounting the devices and exposing them to potential construction damage. Once the plates are mounted, all SpectrAlert Advance devices utilize a plug-in design with a single captured screw to speed installation and virtually eliminate costly ground faults.

Outdoor devices ship with weatherproof plastic back boxes (metal back boxes are available separately) that accommodate in-and-out wiring for daisy chaining devices. Plastic back boxes feature removable side flanges and improved resistance to saltwater corrosion. Knock-outs located on the back eliminate the need to drill holes for screw-in mounting. Plastic and metal weatherproof back boxes come with 3/4-inch top and bottom conduit entries and 3/4-inch knock-outs at the back. A screw-in NPT plug with an O-ring gasket for a watertight seal is included with each back box.

SpectrAlert Advance Outdoor Horn, Strobe, and Horn Strobe Specifications

Architect/Engineer Specifications

General

SpectrAlert Advance outdoor horns, strobes, and horn strobes shall mount to a weatherproof back box. A universal mounting plate shall be used for mounting ceiling and wall products. The notification appliance circuit wiring shall terminate at the universal mounting plate. Also, SpectrAlert Advance products, when used with the Sync•Circuit™ Module accessory, shall be powered from a non-coded notification appliance circuit output and shall operate on a nominal 12 or 24 volts. When used with the Sync•Circuit Module, 12-volt-rated notification appliance circuit outputs shall operate between 9 and 17.5 volts; 24-volt-rated notification appliance circuit outputs shall operate between 17 and 33 volts. Outdoor SpectrAlert Advance products shall operate between –40 and 151 degrees Fahrenheit from a regulated DC or full-wave rectified unfiltered power supply. Strobes and horn strobes shall have field-selectable candela settings including 15, 15/75, 30, 75, 95, 110, 115, 135, 150, 177, and 185.

Strobe

The strobe shall be a System Sensor SpectrAlert Advance Model _____ listed to UL 1971 and shall be approved for fire protective service. The strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1 Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system. The strobe must be installed with its weatherproof back box in order to remain outdoor approved per UL. The strobe shall be suitable for use in wet environments.

Horn Strobe Combination

The horn strobe shall be a System Sensor SpectrAlert Advance Model _____ listed to UL 1971 and UL 464 and shall be approved for fire protective service. The horn strobe shall be wired as a primary-signaling notification appliance and comply with the Americans with Disabilities Act requirements for visible signaling appliances, flashing at 1 Hz over the strobe's entire operating voltage range. The strobe light shall consist of a xenon flash tube and associated lens/reflector system. The horn shall have three audibility options and an option to switch between a temporal three pattern and a non-temporal (continuous) pattern. These options shall be set by a multiple position switch. On four-wire products, the strobe shall be powered independently of the sounder. The horn or horn strobe models shall operate on a coded or non-coded power supply. The horn strobe must be installed with its weatherproof back box in order to remain outdoor approved per UL. The horn strobe shall be suitable for use in wet environments.

Physical/Electrical Specifications

Operating Temperature	–40°F to 151°F (–40°C to 66°C)
Strobe Flash Rate	1 flash per second
Nominal Voltage	Regulated 12 DC/FWR or regulated 24 DC/FWR ¹
Operating Voltage Range²	8 to 17.5 V (12 V nominal) or 16 to 33 V (24 V nominal)
Input Terminal Wire Gauge	12 to 18 AWG
Wall-Mount Dimensions (including lens)	5.6" L × 4.7" W × 2.5" D (142 mm L × 119 mm W × 64 mm D)
Horn Dimensions	5.6" L × 4.7" W × 1.3" D (142 mm L × 119 mm W × 33 mm D)
Wall-Mount Weatherproof Back Box Dimensions (SA-WBB)	5.7" L × 5.1" W × 2.0" D (145 mm L × 130 mm W × 51 mm D)

Notes:

1. Full Wave Rectified (FWR) voltage is a non-regulated, time-varying power source that is used on some power supply and panel outputs.
2. P, S, PC, and SC products will operate at 12 V nominal only for 15 and 15/75 cd.

UL Current Draw Data

UL Max. Strobe Current Draw (mA RMS)						UL Max. Horn Current Draw (mA RMS)					
	Candela	8–17.5 Volts		16–33 Volts		Sound Pattern	dB	8–17.5 Volts		16–33 Volts	
		DC	FWR	DC	FWR			DC	FWR	DC	FWR
Standard Candela Range	15	123	128	66	71	Temporal	High	57	55	69	75
	15/75	142	148	77	81	Temporal	Medium	44	49	58	69
	30	NA	NA	94	96	Temporal	Low	38	44	44	48
	75	NA	NA	158	153	Non-Temporal	High	57	56	69	75
	95	NA	NA	181	176	Non-Temporal	Medium	42	50	60	69
	110	NA	NA	202	195	Non-Temporal	Low	41	44	50	50
	115	NA	NA	210	205	Coded	High	57	55	69	75
High Candela Range	135	NA	NA	228	207	Coded	Medium	44	51	56	69
	150	NA	NA	246	220	Coded	Low	40	46	52	50
	177	NA	NA	281	251						
	185	NA	NA	286	258						

UL Max. Current Draw (mA RMS), 2-Wire Horn Strobe, Standard Candela Range (15–115 cd)									
DC Input	8–17.5 Volts			16–33 Volts					
	15	15/75	15	15/75	30	75	95	110	115
Temporal High	137	147	79	90	107	176	194	212	218
Temporal Medium	132	144	69	80	97	157	182	201	210
Temporal Low	132	143	66	77	93	154	179	198	207
Non-Temporal High	141	152	91	100	116	176	201	221	229
Non-Temporal Medium	133	145	75	85	102	163	187	207	216
Non-Temporal Low	131	144	68	79	96	156	182	201	210
FWR Input									
Temporal High	136	155	88	97	112	168	190	210	218
Temporal Medium	129	152	78	88	103	160	184	202	206
Temporal Low	129	151	76	86	101	160	184	194	201
Non-Temporal High	142	161	103	112	126	181	203	221	229
Non-Temporal Medium	134	155	85	95	110	166	189	208	216
Non-Temporal Low	132	154	80	90	105	161	184	202	211

UL Max. Current Draw (mA RMS), 2-Wire Horn Strobe, High Candela Range (135–185 cd)									
DC Input	16–33 Volts				FWR Input	16–33 Volts			
	135	150	177	185		135	150	177	185
Temporal High	245	259	290	297	Temporal High	215	231	258	265
Temporal Medium	235	253	288	297	Temporal Medium	209	224	250	258
Temporal Low	232	251	282	292	Temporal Low	207	221	248	256
Non-Temporal High	255	270	303	309	Non-Temporal High	233	248	275	281
Non-Temporal Medium	242	259	293	299	Non-Temporal Medium	219	232	262	267
Non-Temporal Low	238	254	291	295	Non-Temporal Low	214	229	256	262

Candela Derating

For K series products used at low temperatures, listed candela ratings must be reduced in accordance with this table.


Strobe Output (cd)	
Listed Candela	Candela rating at –40°F
15	Do not use below 32°F
15/75	
30	
75	
95	44
110	70
115	110
135	115
150	135
177	150
185	177

Horn Tones and Sound Output Data


Horn and Horn Strobe Output (dBA)											
Switch Position	Sound Pattern	dB	8–17.5 Volts		16–33 Volts		24-Volt Nominal				
			DC	FWR	DC	FWR	Reverberant		Anechoic		
			DC	FWR	DC	FWR	DC	FWR	DC	FWR	
1	Temporal	High	78	78	84	84	88	88	99	98	
2	Temporal	Medium	74	74	80	80	86	86	96	96	
3	Temporal	Low	71	73	76	76	83	80	94	89	
4	Non-Temporal	High	82	82	88	88	93	92	100	100	
5	Non-Temporal	Medium	78	78	85	85	90	90	98	98	
6	Non-Temporal	Low	75	75	81	81	88	84	96	92	
7†	Coded	High	82	82	88	88	93	92	101	101	
8†	Coded	Medium	78	78	85	85	90	90	97	98	
9†	Coded	Low	75	75	81	81	88	85	96	92	

†Settings 7, 8, and 9 are not available on 2-wire horn strobe.


SpectrAlert Advance Diagrams

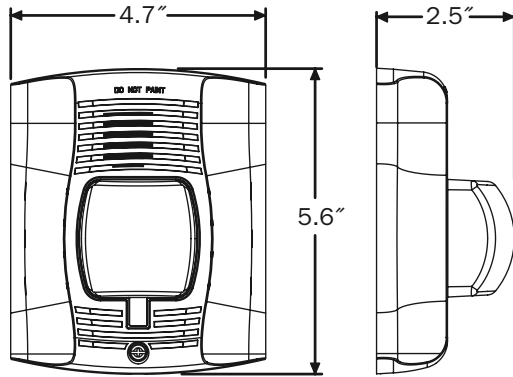

Wall-Mount Horn Strobes

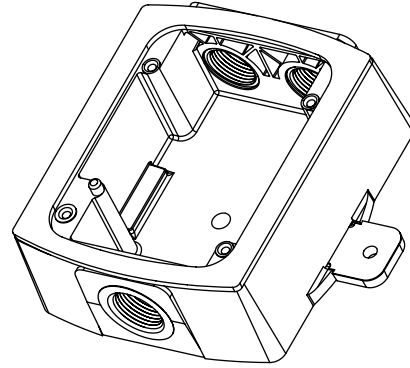

Wall Plastic Weatherproof Back Box

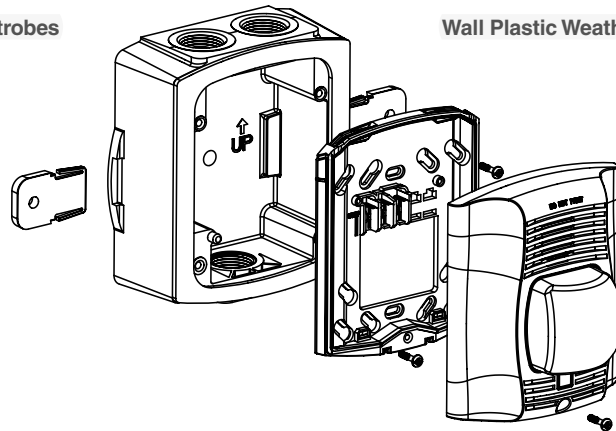

Wall-Mount Horn Strobe with Plastic Weatherproof Back Box

SpectrAlert Advance Ordering Information

Model	Description
Wall Horn Strobes	
P2RK*†	2-Wire Horn Strobe, Standard cd, Red, Outdoor (includes plastic weatherproof back box)
P2RHK*†	2-Wire Horn Strobe, High cd, Red, Outdoor (includes plastic weatherproof back box)
P2WK*†	2-Wire Horn Strobe, Standard cd, White, Outdoor (includes plastic weatherproof back box)
P2WHK*†	2-Wire Horn Strobe, High cd, White, Outdoor (includes plastic weatherproof back box)
P4RK†	4-Wire Horn Strobe, Standard cd, Red, Outdoor (includes plastic weatherproof back box)
P4WK	4-Wire Horn Strobe, Standard cd, White, Outdoor (includes plastic weatherproof back box)
P2RHK-120	2-Wire Horn Strobe, High cd, Red, Outdoor, 120 V (includes plastic weatherproof back box)
Wall Strobes	
SRK*†	Strobe, Standard cd, Red, Outdoor (includes plastic weatherproof back box)
SRHK*†	Strobe, High cd, Red, Outdoor (includes plastic weatherproof back box)
SWK*†	Strobe, Standard cd, White, Outdoor (includes plastic weatherproof back box)
SWHK*†	Strobe, High cd, White, Outdoor (includes plastic weatherproof back box)
Horns	
HRK†	Horn, Red, Outdoor (includes plastic weatherproof back box)
Accessories	
SA-WBB	Red, Metal Weatherproof Back Box
SA-WBBW	White, Metal Weatherproof Back Box

Notes:

* Add "-P" to model number for plain housing (no "FIRE" marking on cover), e.g., P2RK-P.

† Add "-R" to model number for weatherproof replacement device (no back box included), only for use with weatherproof outdoor flush mounting plate, WTP and WTPW. "Standard cd" refers to strobes that include 15, 15/75, 30, 75, 95, 110, and 115 candela settings. "High cd" refers to strobes that include 135, 150, 177, and 185 candela settings. **When replacing standard outdoor units both the device and back box must be replaced.**



3825 Ohio Avenue • St. Charles, IL 60174
Phone: 800-SENSOR2 • Fax: 630-377-6495

©2012 System Sensor.
Product specifications subject to change without notice. Visit systemsensor.com
for current product information, including the latest version of this data sheet.
AVDS01201 • 3/12

ESL

Electromagnetic Door Holder

Assembly Instructions & Electric Configurations


Part Number 13047




California State Fire Marshal Approved
MEA (New York City)

II. Electromagnet Mounting



Surface Mounting

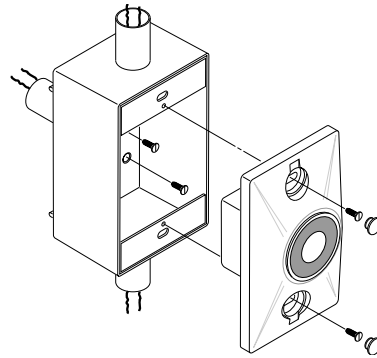

Flush Mounting

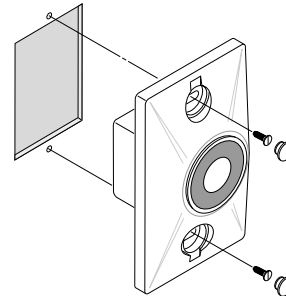

Recessed Mounting

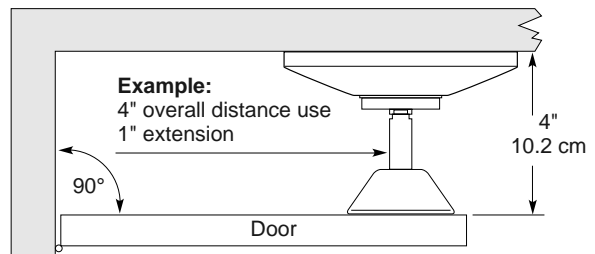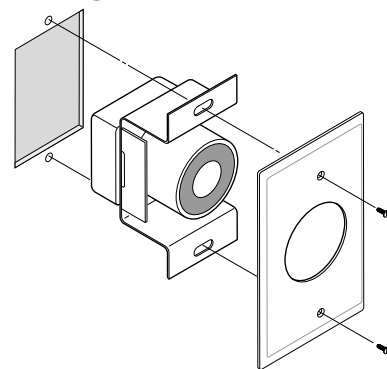


This product is a high quality electromagnetic holding device intended for use in fire door applications.


I. Wiring Instructions

Voltage References


C= common
L= low
H= high

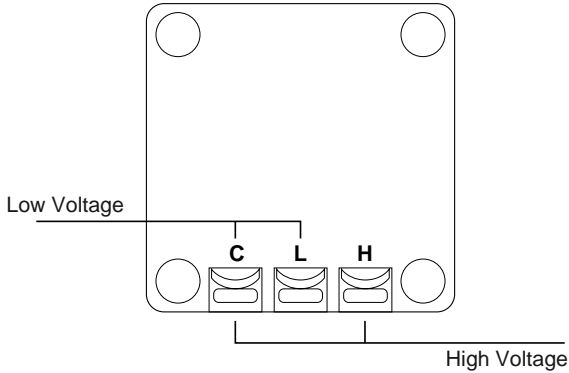

Low Voltage Application

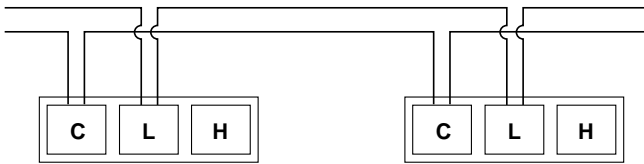

High Voltage Application

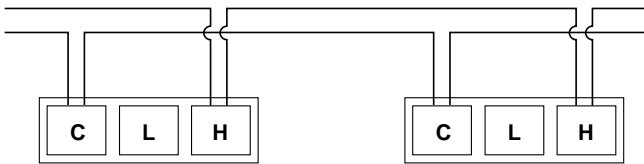

Performance Data

Model	Voltage	DC	AC	Terminals
DHX*-1224	12V	30mA	30mA	C and L
	24V	30mA	30mA	C and H
DHX*-24120	24V	15mA	15mA	C and L
	120V	—	15mA	C and H
DHX*-24220	24V	15mA	15mA	C and L
	220V	—	15mA	C and H

* X= F— Flush Mount
R— Recessed Mount
S— Surface Mount

Note:
When using models DHX-24120 or DHX-24220 (see chart above) attach green wire to earth ground.

Electromagnetic Door Holder

Door Holder Assembly Instructions

III. Catch-Plate Mounting

 
 


Step 1:
With door magnet securely fastened, aligned and energized, proceed with swivel base assembly. NOTE: If door extensions are required, install before step 2.

Step 2:
Attach swivel portion of magnet, being careful to center catch plate over magnet.

Step 3:
With catch plate assembly attached magnetically to door magnet, peel adhesive backing off mounting template and slide over catch plate, making sure adhesive side faces door.

Step 4:
Gently close door and with one hand adjust base of catch plate to lie flat against door.

Step 5:
While keeping slight pressure on door, slide mounting template over catch plate to door surface and apply pressure to template in a few spots.

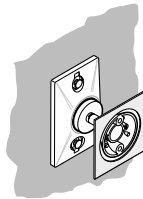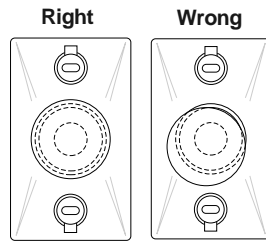





Step 6:
Opening door will reveal mounting template. Apply final pressure to insure template does not fall off while assembly takes place.

Step 7:
Insert alignment template into center of mounting template. Use tab to rotate for fine adjustment. While holding alignment template with one hand, remove adhesive backing of tab, then push flat against door.

Step 8A:
If using optional door back plate, center punch points indicated on alignment template for either horizontal or vertical mounting. For best results drill 1/8" pilot first, then follow with 5/16" dia. drill.


Step 8B:
If mounting catch plate assembly directly to door, drill 1/8" dia. pilot hole approximately 1 to 1 1/2" deep, being careful not to go through door.

Step 9:
For either style of mounting (thru door/direct) remove only alignment template, then place swivel in center. Align holes, then insert screws and tighten assembly fully. Lastly, remove mounting template.

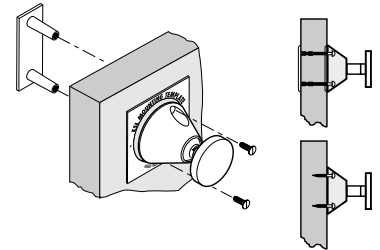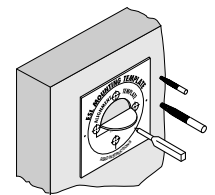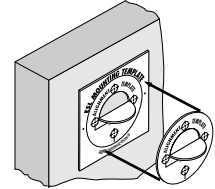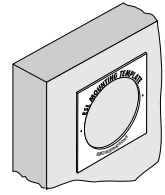


IV. General Dimensions


Door Magnet Dimensions

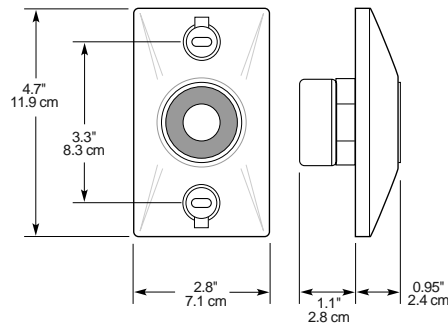

Surface Mount Back Box Dimensions


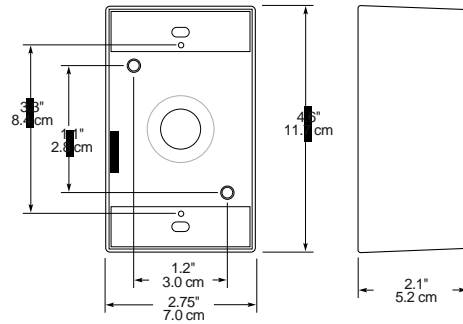


Catch Plate Dimensions

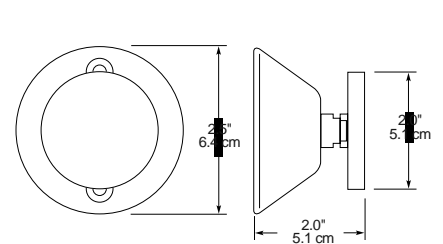


V. Accessories

 
Extension Rods

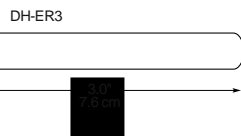

Backplate

 

Catch Plate Extension Rod Assembly

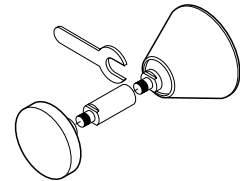

SENTROL

CORPORATE HEADQUARTERS

12345 SW Leveton Dr., Tualatin, OR 97062

Tel.: 503.692.4052 Fax: 503.691.7566

<http://www.sentrol.com>

U.S. & Canada: 800.547.2556

Technical Service: 800.648.7424

FaxBack: 800.483.2495

Sentrol reserves the right to change specifications without notice.

©1998 Sentrol

E-3627-1098
13047 Rev. C

Smart Subscribers for Commercial Fire Alarm Systems

7788F/7744F Series Fire Subscribers



Features

- AES-IntelliNet[®] smart mesh radio networks are self-forming, self-healing, and highly scalable
- AES-IntelliNet alarm communications technology never sunsets compared to cellular alternatives
- Each Smart Subscriber enables multiple paths to a central monitoring station
- Option to transmit full data from FACP digital dialer to AES-MultiNet receiver
- Simple and fast activation on AES-IntelliNet network

Benefits

- Most stable and profitable fire alarm communication technology
- Network owner-operators retain virtually all RMR
- Meets UL 864 Commercial Fire Alarm requirements for primary standalone communication
- Ideal drop-in full-function replacement for phone lines
- Universal wireless Smart Subscriber Transceivers support all new and legacy FACPs

Advanced Wireless Fire Alarm Monitoring


AES 7788F/7744F Series Subscribers are the ideal universal wireless communicators for any new or existing fire alarm system. AES-IntelliNet networks are built using AES Corporation's patented mesh radio communications technology. A Smart Subscriber at each alarm site acts as transmitter, receiver, and repeater of alarm signals across the network. This creates a smart long-range radio network with multiple pathways between each alarm site and the central receiver. Multiple pathways mean multiple redundancies assuring the most reliable delivery of signals and compliance with rigorous industry standards. AES-IntelliNet networks self-adjust to network changes and assure that signals automatically follow the shortest path available as the network of Subscribers grows.

Highest Long Term Stability and Profitability

AES-IntelliNet remains the most stable and profitable fire alarm communication technology available today in the rapidly changing world of communications. AES private wireless networks never sunset compared to cellular technology and traditional phone lines. AES-IntelliNet networks maximize RMR generated from network alarm communication services because signals are delivered without the need for a costly operations center or cellular service providers.

UL 864 Edition 9 Compliant – Primary Standalone Communicators


In order to meet UL approval and NFPA compliance, most fire alarm communicators require either a second communication technology or a costly service plan included with sole path cellular alternatives. With AES-IntelliNet alarm communications technology, each standalone AES 7788F/7744F Subscriber provides multiple RF pathways across the mesh radio network to the central monitoring station. To meet compliance standards, only 2 RF paths are required. Please refer to the official NFPA 72 National Fire Alarm and Signaling Code handbook, Chapter 26 (26.6.3.3.2 One-Way Private Radio Alarm Systems/Technology Reference Comparison Table A.26.6.1).

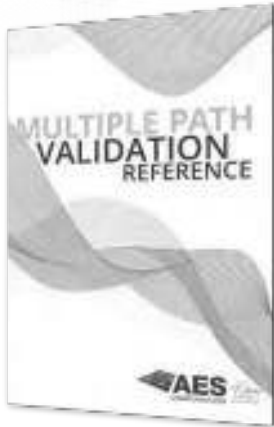

Multiple RF Path Reference Guide

AES provides a *Multiple Path Validation Reference* guide detailing how to easily validate multiple RF paths at each AES 7788F/7744F Series Fire Subscriber. The guide also provides a complete listing of the codes and standards to which AES-IntelliNet products have been tested. To assist Authorities Having Jurisdiction (AHJs) with the fire alarm inspection process, the guide and other valuable installer tools are available for download from the company website. Visit our Fire Marshal Resources page at (<http://www.aes-intellinet.com/products/fire/fire-marshall-resources/>).

AES-IntelliNet® Private Wireless Mesh Network

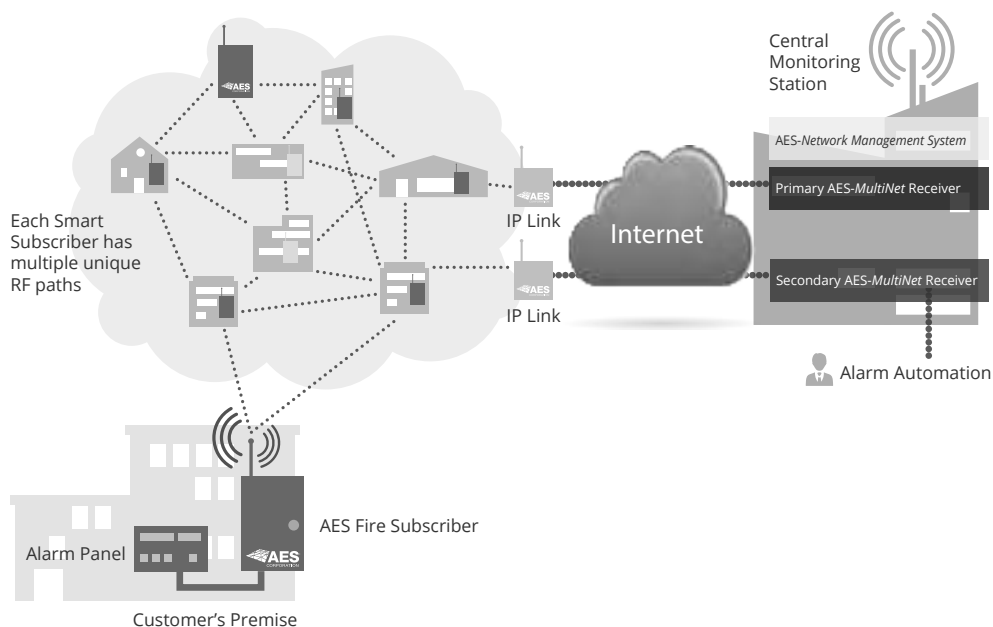

Each Smart Subscriber acts as transmitter, receiver, and repeater creating a smart long-range radio network with multiple pathways and multiple redundancies. The AES-IntelliNet network is self-forming, self-healing, highly scalable and assures that signals follow the shortest path available as the network expands.

Cost Free Supervised Operation

AES Subscribers offer fully-supervised operation that includes monitoring of primary and back-up operating power as well as the radio connection to the AES-*IntelliNet* network. Each Subscriber performs “Check-ins” with the AES central station receiver at least once every 24 hours which complies with the UL 864 standard for commercial fire alarm communications. The supervision Check-in time can be set to as often as needed for the application. Because the central station owns and operates the long-range wireless network, there is no cost for air time to transmit supervisory signals. This is very different from cellular alternatives which require an aggressive supervision Check-in schedule in order to comply with UL 864 listing. The high monthly cost for cellular service fees significantly reduce RMR profit.

Unlike cellular, there is no cost for air time to transmit supervisory signals.

Full Data Module Option - Ideal replacement for Phone Lines

AES Subscribers transmit consolidated alarm, trouble, and supervisory signals triggered by a FACP output relay. Subscribers with an integrated AES-*IntelliPro* Fire full data module transmit full alarm zone and event codes captured from a panel's digital communicator. Both options individually meet UL and NFPA 72 requirements. AES Fire Subscribers with built-in full data module are the ideal drop-in full-function replacement for phone lines for communicating signals from both new and existing UL commercial fire alarm systems. Replacing phone lines with AES-*IntelliNet* maximizes RMR profit with significant bottom line impact, unlike with cellular technologies that charge high monthly service fees.

How to Order

AES Fire Subscribers	
7788F	8 Zone Fire Subscriber, 8 Supervised Zones, Red Enclosure.
7744F	4x4 Zone Fire Subscriber, 4 Reversing Polarity, 4 Supervised Zones, Red Enclosure.
7788F-ULP	8 Zone Fire Subscriber, 8 Supervised Zones, includes 7794 AES- <i>IntelliPro</i> Fire, Red Enclosure.
7744F-ULP	4x4 Zone Fire Subscriber, 4 Reversing Polarity, 4 Supervised, includes 7794 AES- <i>IntelliPro</i> Fire, Red Enclosure.
7788F-ULP-P	8 Zone Fire Subscriber, 8 Supervised Zones, includes 7795 AES- <i>IntelliPro</i> Fire, Red Enclosure. UL listed for primary standalone communication with fire radios.
7744F-ULP-P	4x4 Zone Fire Subscriber, 4 Reversing Polarity, 4 Supervised Zones, includes 7795 AES- <i>IntelliPro</i> Fire, Red Enclosure. UL listed for primary standalone communication with fire radios.
7788F-C	8 Zone Fire Alarm Subscriber. ULC listed for Canada.
7788F-C-ULP	7788F-C Fire Alarm Subscriber with AES- <i>IntelliPro</i> Fire full data module. ULC listed for Canada.
Add-on AES- <i>IntelliPro</i> Fire Modules	
7794	AES- <i>IntelliPro</i> Fire Full Data Module. UL listed for supplemental communication with fire radios.
7795	AES- <i>IntelliPro</i> Fire Full Data Module (7794) with 7762 Hardware Supervisory Module and 7740 AES Local Annunciator. UL listed for primary standalone communication with fire radios.
7742	7762 Hardware Supervisory Module and 7740 AES Local Annunciator. 7762 module provides power and supervision of the 7740 AES Local Annunciator.
AES Local Annunciator	
7740	7740 AES Local Annunciator. UL listed for use with 7795 module or 7742 module.

Technical Specifications

7788F/7744F

Dimensions

- 13.25"H x 8.5"W x 4.3"D
(34cm H x 21.5cm W x 11cm D)

Weight

- Approx. 7 pounds (3.2 kilograms),
excludes battery

Radio Frequency

- Standard Frequency Range: 450-470MHz
(others available in 400-512MHz range)
- Output Power – 2 Watts and 5 Watts

Antenna

- Included 2.5 db tamper resistant antenna
mounts on enclosure
- Multiple remote antenna options available

Power Input

- 16.5VAC, 40VA transformer (not included)
(AES 1640, ELK TRG1640, MG Electronics
MGT1640 – UL Listed for use)

Backup Battery

- Will charge 12V battery up to 7.5 - 12 AH,
• Requires 12VDC 7.5 AH battery for UL 864

Alarm Signal Inputs (subscriber)

- 7788F – 8 individually programmable zones
- 7744F – 4 individually programmable
zones and 4 reverse polarity inputs

UL Standards

- UL 864 Edition 9 – Standard for
Control Units and Accessories for Fire
Alarm Systems
- UL 365 – Standard for Police Station
Connected Burglary Alarm Units
and Systems
- UL 1681 – Standard for
Central Station Burglary Alarm Units

Antenna Cut/Communication Trouble Output

- Form C relay; fail secure; rated for
24 VDC 1A resistive

Reset Button

- Located on main circuit board

Operating Temperature

- 0° to 50° C (32° to 122°F)

Storage Temperature

- -10° to 60° C (14° to 140°F)

Relative Humidity

- 0 to 85% RHC, Non-Condensing

7794

- Transmits full data to AES-*MultiNet*
receiver using Contact ID or Pulse formats
- Formats Supported: Contact ID, Pulse
3+1, Pulse 4+1, Pulse 4+2, Modem IIe,
and Modem IIIa2

Input/Output Connections

- AES Subscriber – data and power
- Handheld/PC programming port
- Plain Old Telephone Service (POTS)
incoming phone line
- Phone output connection from
alarm panel
- Trouble output (form C relay)

Size

- 4.875" x 5" (12.3cm x 12.7cm)

Power Requirements

- 12 VDC nominal, primary and backup
power provided by the AES RF
Transceiver Unit

Current Consumption

- 350 mA nominal

7795

- P/N 40-7795 is a kit that includes 7794
module and 7762 Hardware Supervisory
module. For 7794, please see Technical
Specifications above

7762

- Hardware Supervisory Module

Input/Output Connections

- J1 - AES 7794 (J2) or Subscriber
(J1) - data and power
- Input for Subscriber J4 Output
- Input for AES 7740 Local
Annunciator - data and power
- AES 7740/AES 7794 Trouble
Output to Subscriber input zone

Size

- 2.5" x 4.9375" (6.3cm x 12.5cm)

Power Input

- 12VDC nominal, power supplied
from AES 7794 module or AES
7788F/7744F Subscribers

Current Consumption

- 40 mA average; 100 mA peak

Specifications Subject to Change Without Notice



About AES Corporation

Established in 1974, AES Corporation empowers companies to grow profitable alarm monitoring businesses, and government agencies to enhance security anywhere in the world. By providing the industry's only patented owner operated and controlled private wireless mesh networks, AES ensures superior reliability, low Total Cost of Ownership (TCO) and optimal Recurring Monthly Revenue (RMR) while reducing dependence on service provider infrastructures. The company's flagship AES-*IntelliNet*® systems are deployed in over a half million locations worldwide.

For more information, go to www.aes-corp.com or call
(800) 237-6387 or contact us at sales@aes-corp.com

© Copyright 2014 AES Corporation | AES-*IntelliNet* is a registered trademark of AES Corporation