




EXTERIOR ELEVATION
SCALE: 1/4" = 1'-0"

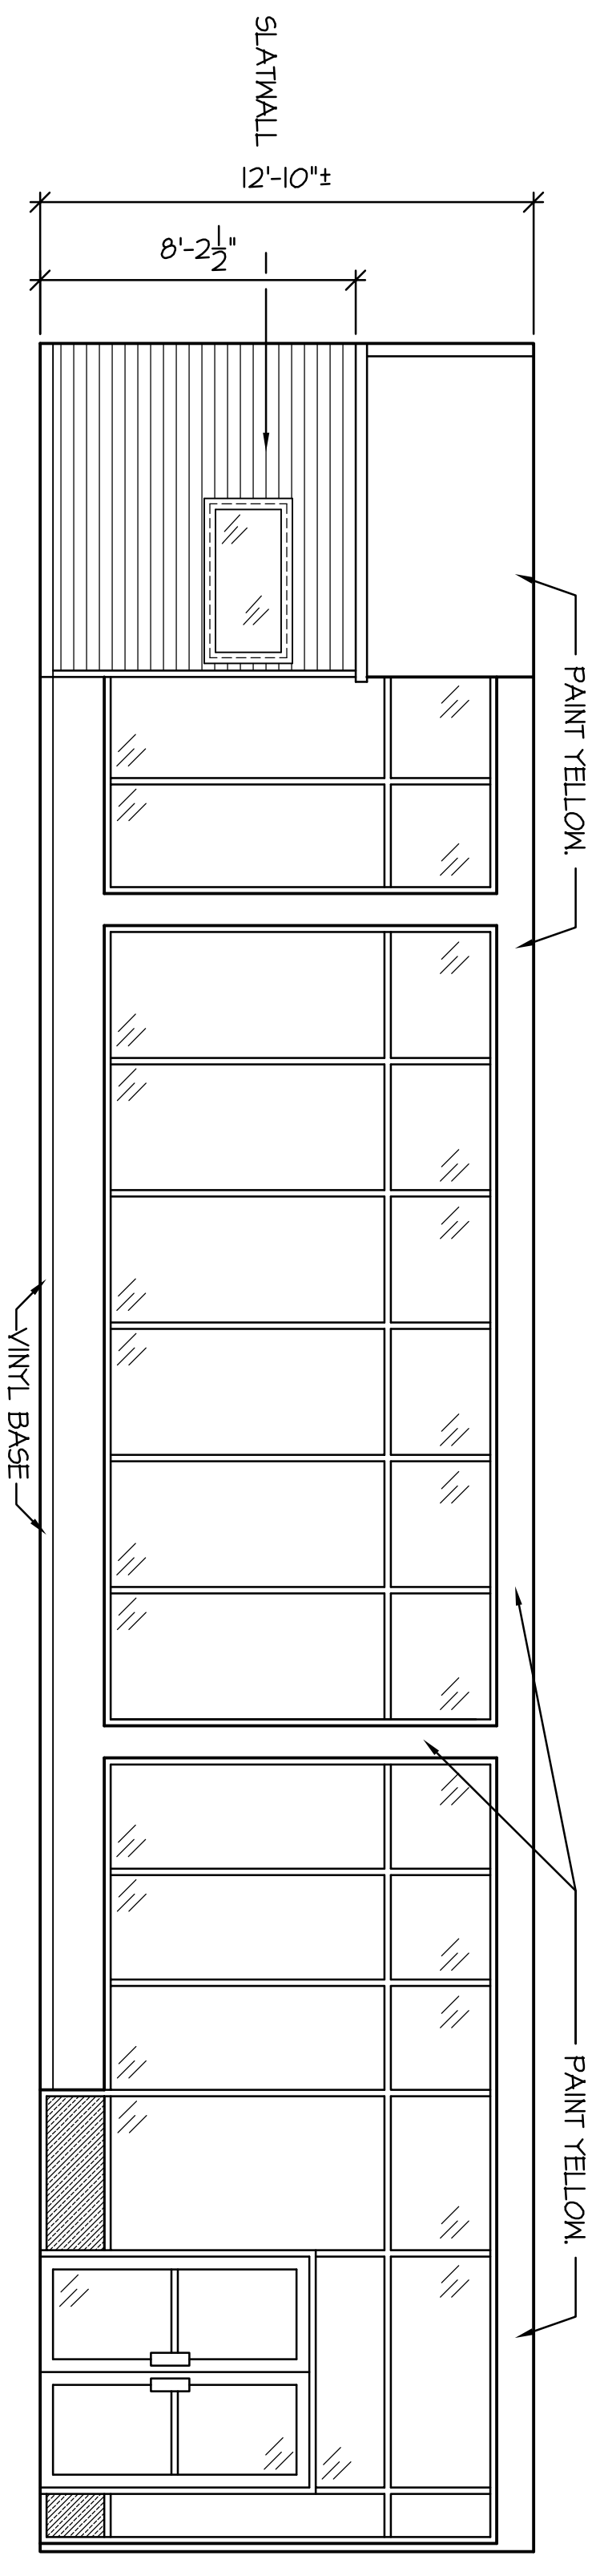


INTERIOR ELEVATION
SCALE: 1/4" = 1'-0"

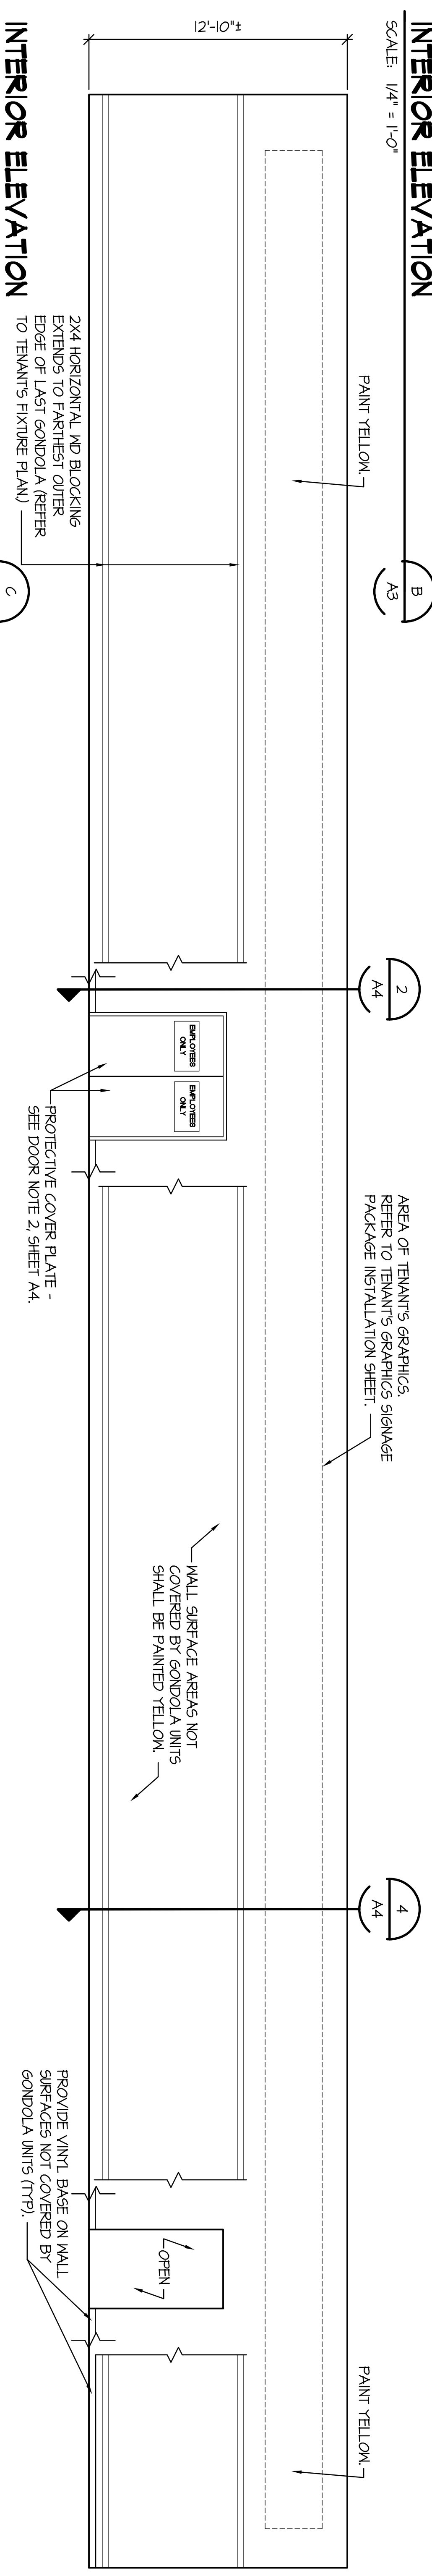

INTERIOR ELEVATION
SCALE: 1/4" = 1'-0"

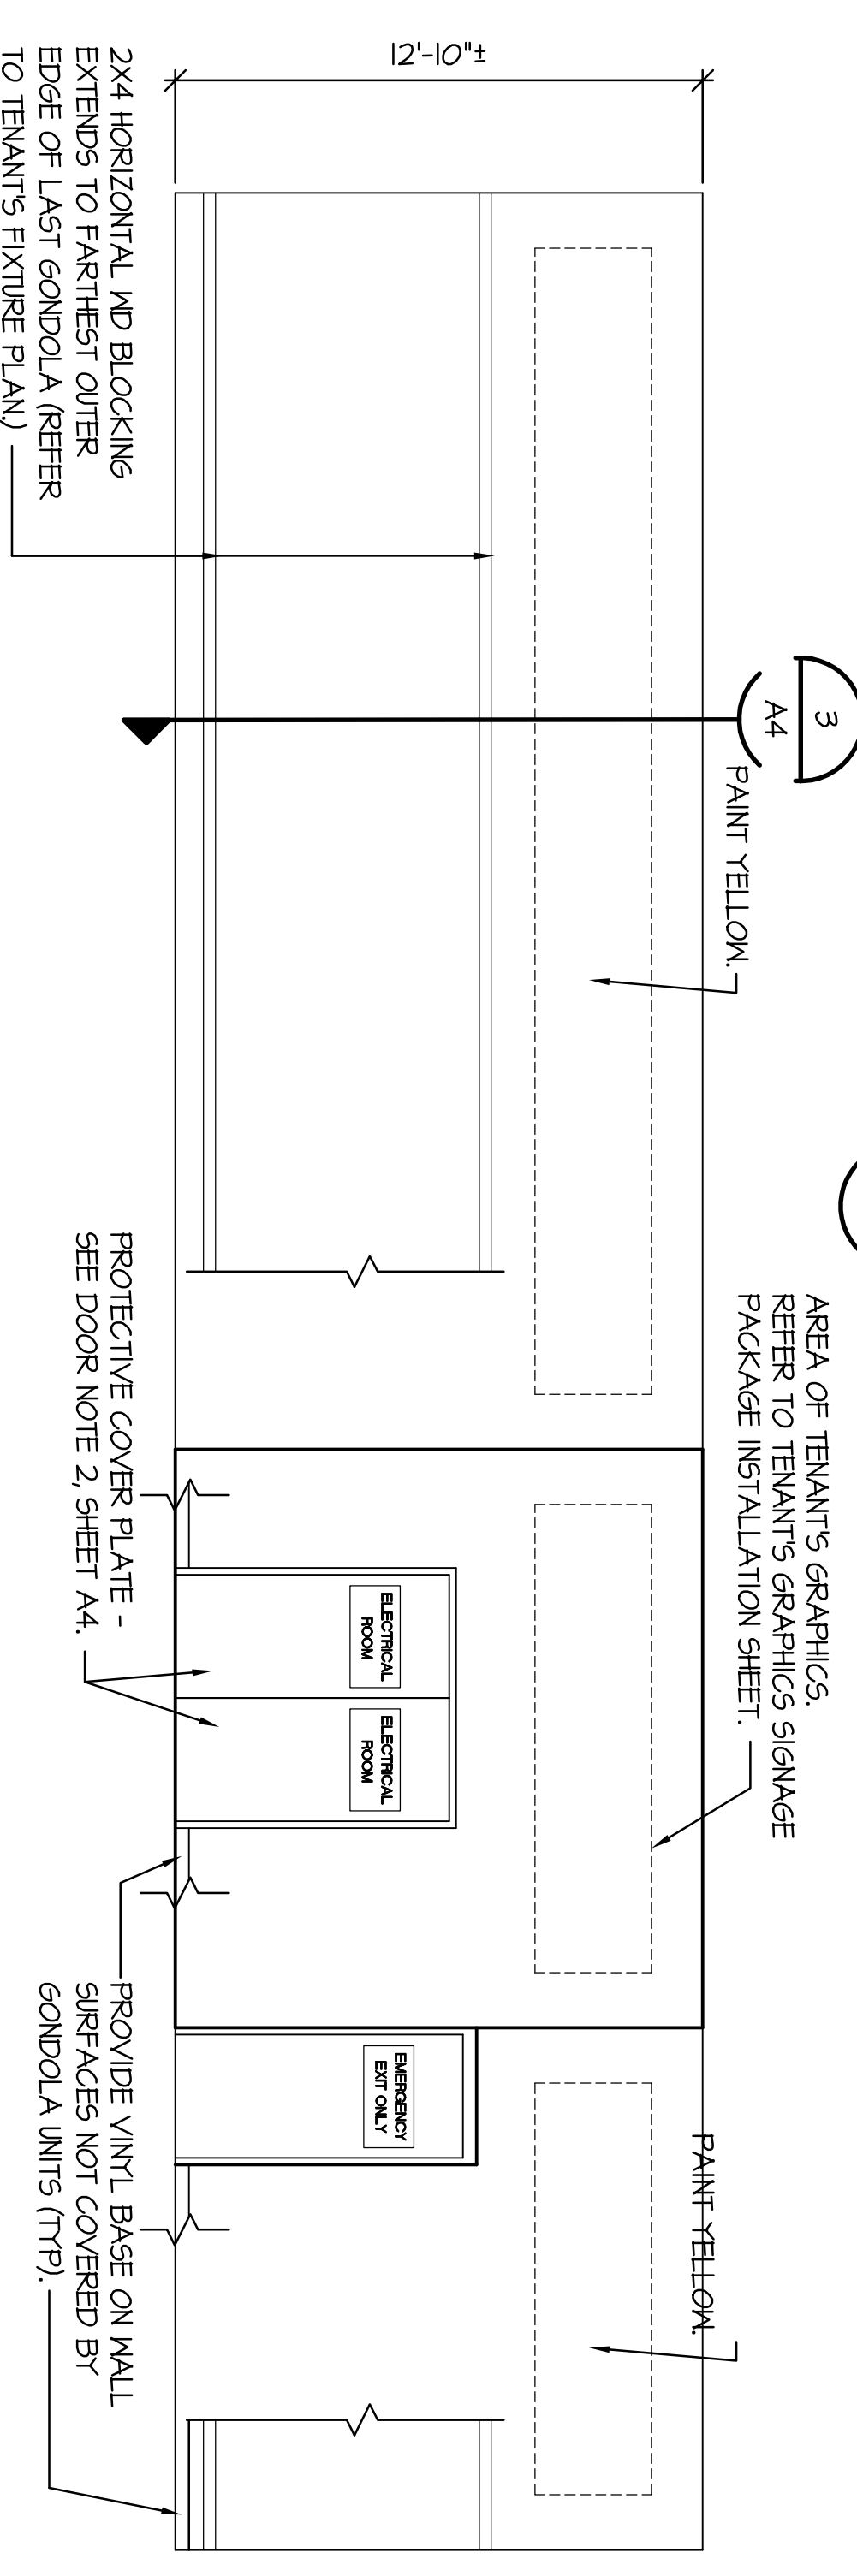

INTERIOR ELEVATION
SCALE: 1/4" = 1'-0"

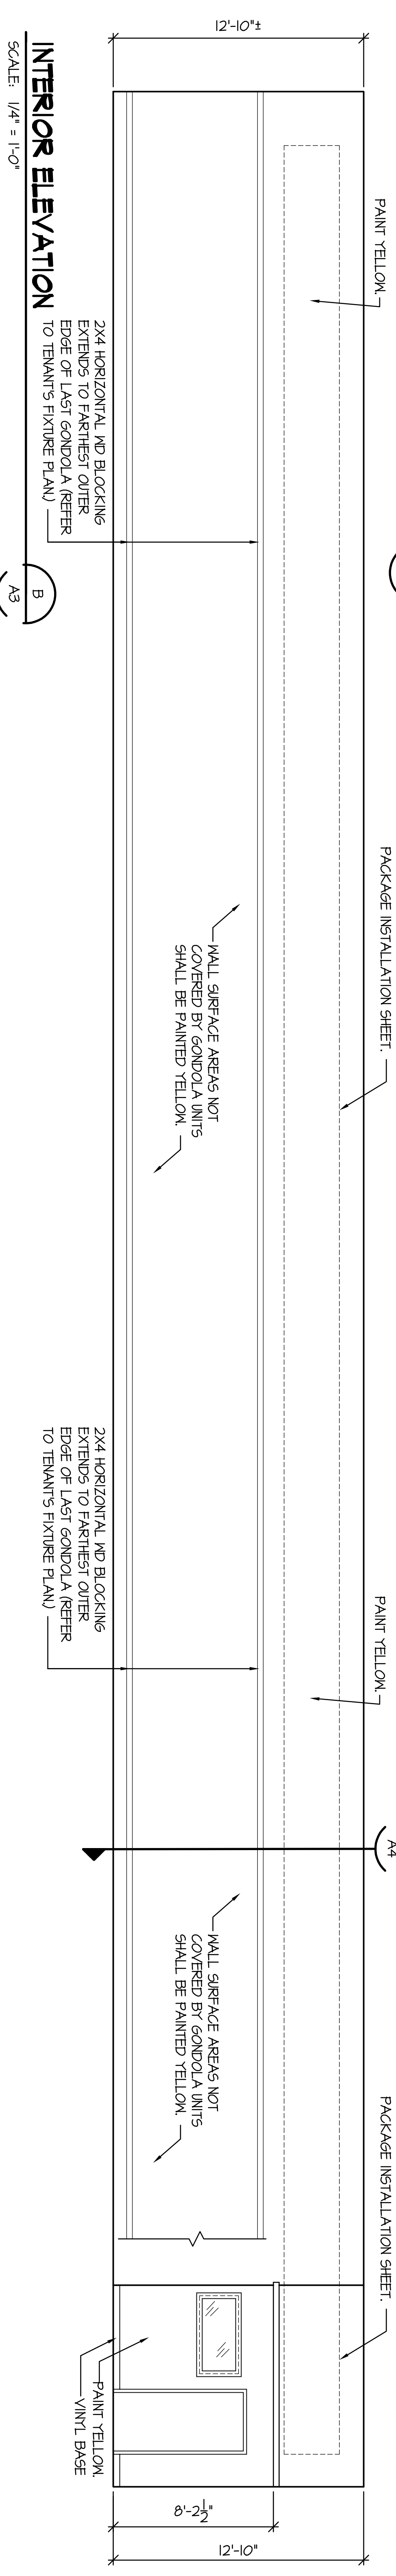

INTERIOR ELEVATION
SCALE: 1/4" = 1'-0"