



CERTIFIED BY BFC

M.A.W.P. STEAM 15 P.S.I.

M.A.W.P. WATER 80 P.S.I.

MAX. WATER TEMP. 250°F.

| BOILER MODEL | Jacket Length (Inches) | NET AHRI Ratings |           |           | AHRI Burner Capacity |         | Minimum Relief & Safety Valve Capacity (lbs/hr) |
|--------------|------------------------|------------------|-----------|-----------|----------------------|---------|---|
|              |                        | Steam (Sq. Ft.)  | Steam MBH | Water MBH | Light Oil GPH        | Gas MBH |   |
| 19HE-S/W-03  | 20                     | 963              | 231       | 268       | 2.6                  | 375     | 308   |
| 19HE-S/W-04  | 26                     | 1317             | 316       | 369       | 3.6                  | 520     | 421   |
| 19HE-S/W-05  | 32                     | 1656             | 441       | 510       | 5.0                  | 775     | 557   |
| 19HE-S/W-06  | 38                     | 2384             | 572       | 663       | 6.5                  | 938     | 762   |
| 19HE-S/W-07  | 44                     | 2952             | 694       | 803       | 7.0                  | 1140    | 897   |
| 19HE-S/W-08  | 50                     | 3405             | 817       | 945       | 9.3                  | 1342    | 1087  |
| 19HE-S/W-09  | 56                     | 3947             | 947       | 1087      | 10.8                 | 1559    | 1262  |
| 19HE-S/W-10  | 62                     | 4505             | 1081      | 1238      | 12.2                 | 1761    | 1424  |
| 19HE-S/W-11  | 68                     | 5072             | 1217      | 1380      | 13.6                 | 1963    | 1587  |
| 19HE-S/W-12  | 74                     | 5635             | 1352      | 1522      | 15.0                 | 2165    | 1750  |

ANSI Z21.13-2010 \* CSA 4.9-2010 LOW PRES. BOILER

To determine boiler size, count the number of sections or measure the jacket length.

82-1024

**CAUTION:**  
 This Boiler must be serviced annually by a licensed contractor. Failure to comply with this requirement may void the warranty. Refer to the commercial warranty or the instructions supplied with this