


*Standard configuration for unit access is on the right-hand side, when looking into the unit intake in the direction of airflow.
 *Note: Order of unit sections is from intake of unit to discharge of unit.
 *Sections included on this unit: Weatherhood Section, Heating Section
 *Insulation: Duct Liner, from Burner Section through end of unit.

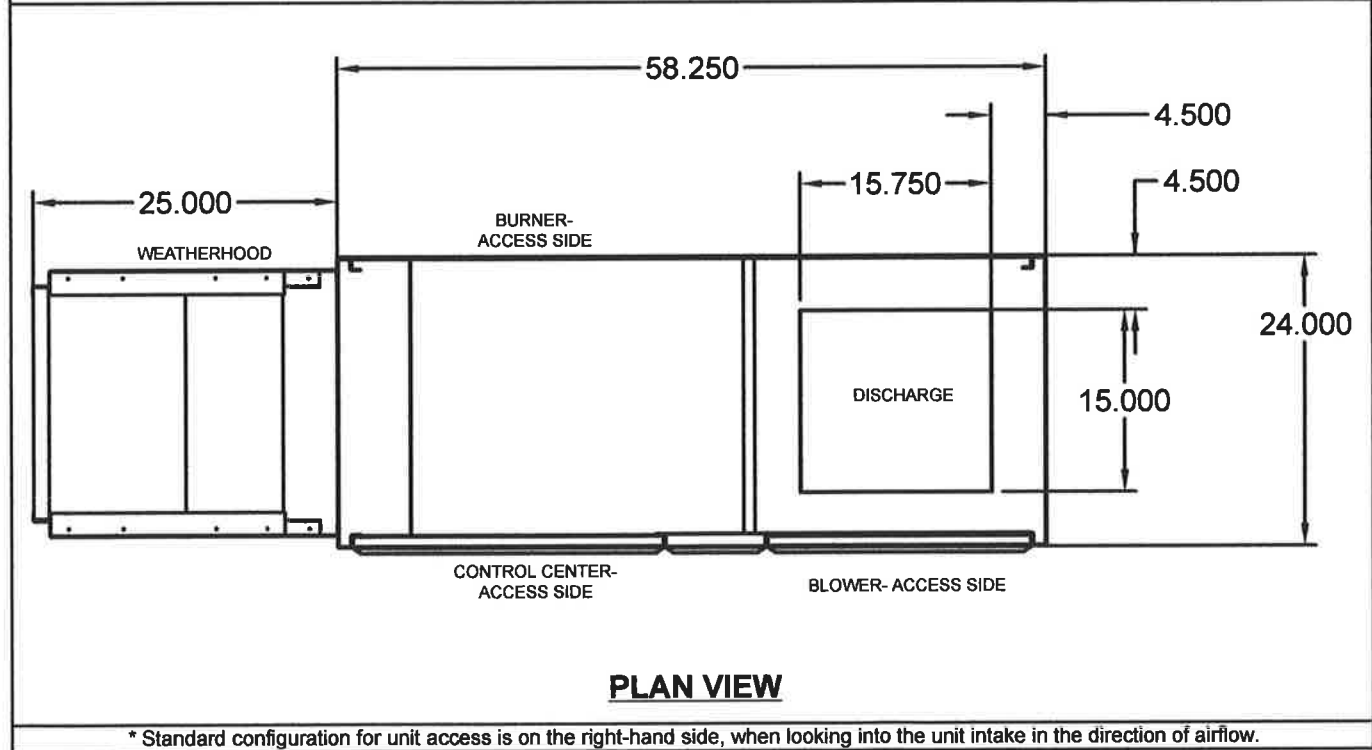

* Standard configuration for unit access is on the right-hand side, when looking into the unit intake in the direction of airflow.