


Ground floor Living Room fireplace insert location:

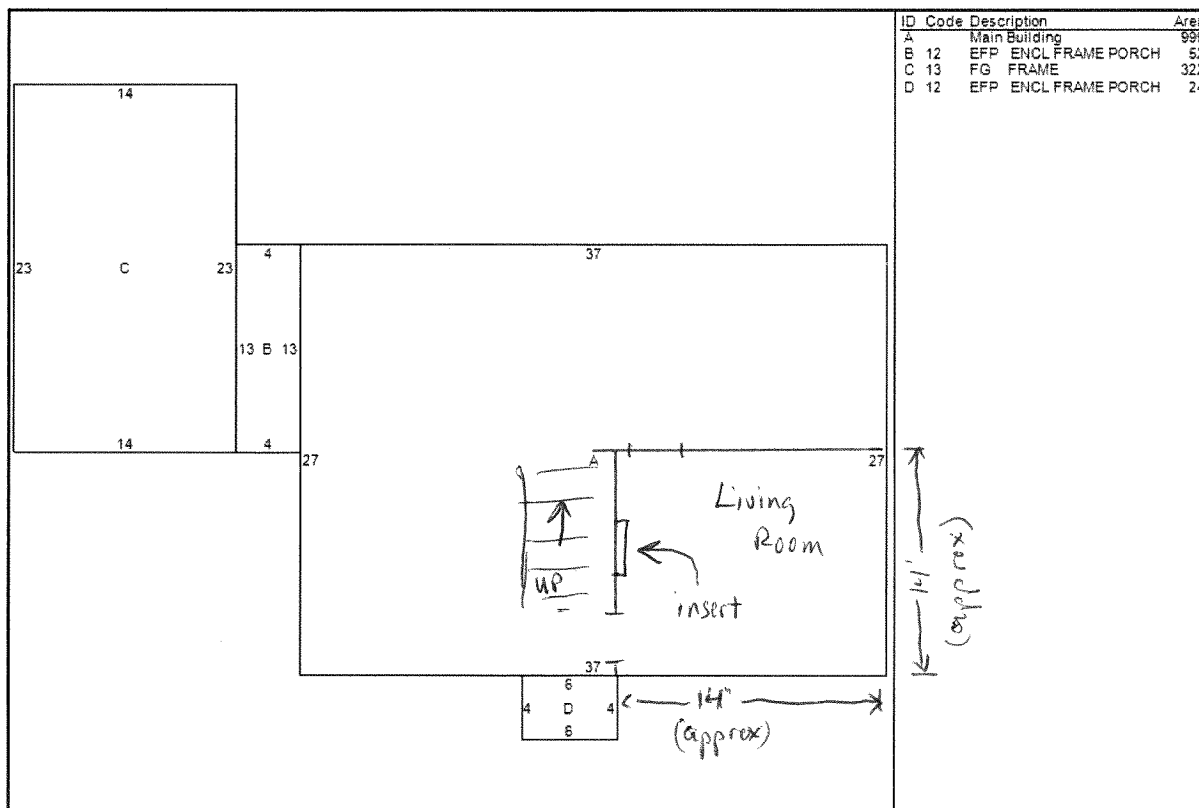

Basement fireplace insert location:

