SEQUENCE OF OPERATION MATRIX

| | Alarm | Radio Master Box Dioissignal to Casa | Annunciate at F. | 7 | Supervisory Signal to 6 | Trouble Signal to C | System Communicator (DACT) Short Security via the state of the state |
|-----------------------------|-------|-----------------------------------------|------------------|---|-------------------------|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| System Inputs | Α | В | С | D | E | F | ' |
| System Waterflow | | | | | | | System Waterflow |
| System Tamper Switch | | | | | | | System Tamper Switch |
| Manual Pull Stations | х | | х | x | | | Manual Pull Stations |
| Area Smoke Detector | x | | x | x | | | Area Smoke Detector |
| Area Heat Detector | x | | x | X | | | Area Heat Detector |
| Duct Smoke | х | | x | x | | | Duct Smoke |
| Fire Alarm - AC Failure | | | х | | | х | Fire Alarm - AC Failure |
| Fire Alarm - Low Battery | | | х | | | х | Fire Alarm - Low Battery |
| Signal Line Open Circuit | | | х | | | х | Signal Line Open Circuit |
| Signal Line Ground Fault | | | x | | | х | Signal Line Ground Fault |
| Horn/Strobe Circuit Open | | | х | | | х | Horn/Strobe Circuit Open |
| Horn/Strobe Circuit Ground | | | х | | | х | Horn/Strobe Circuit Ground |
| System Ground Fault | | | х | | | х | System Ground Fault |
| | Α | В | С | D | Е | F | |