

1 SYSTEM TROUBLE

TROUBLE =

TROUBLE CONDITION

LED LEGEND

- = OFF
- = ON STEADY
- = FLASH

2 DISPLAY

CURRENT NUMBER OF TIME MESSAGES		EVENT TIME
14:55:18	18:00	10:23
TROUBLE		407
4 FL SPRINKLER VALVE		
MAINT ROOM 1400		

EVENT TYPE EVENT MESSAGE ZONE NUMBER

3 LOCAL SILENCE

4 TROUBLE REVIEW

=

TRBLE

=

=

TRBLE

5 SYSTEM RESET

00P54.CDR

(written instructions on opposite page)

8