



1 PARTITION TYPE P1
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.

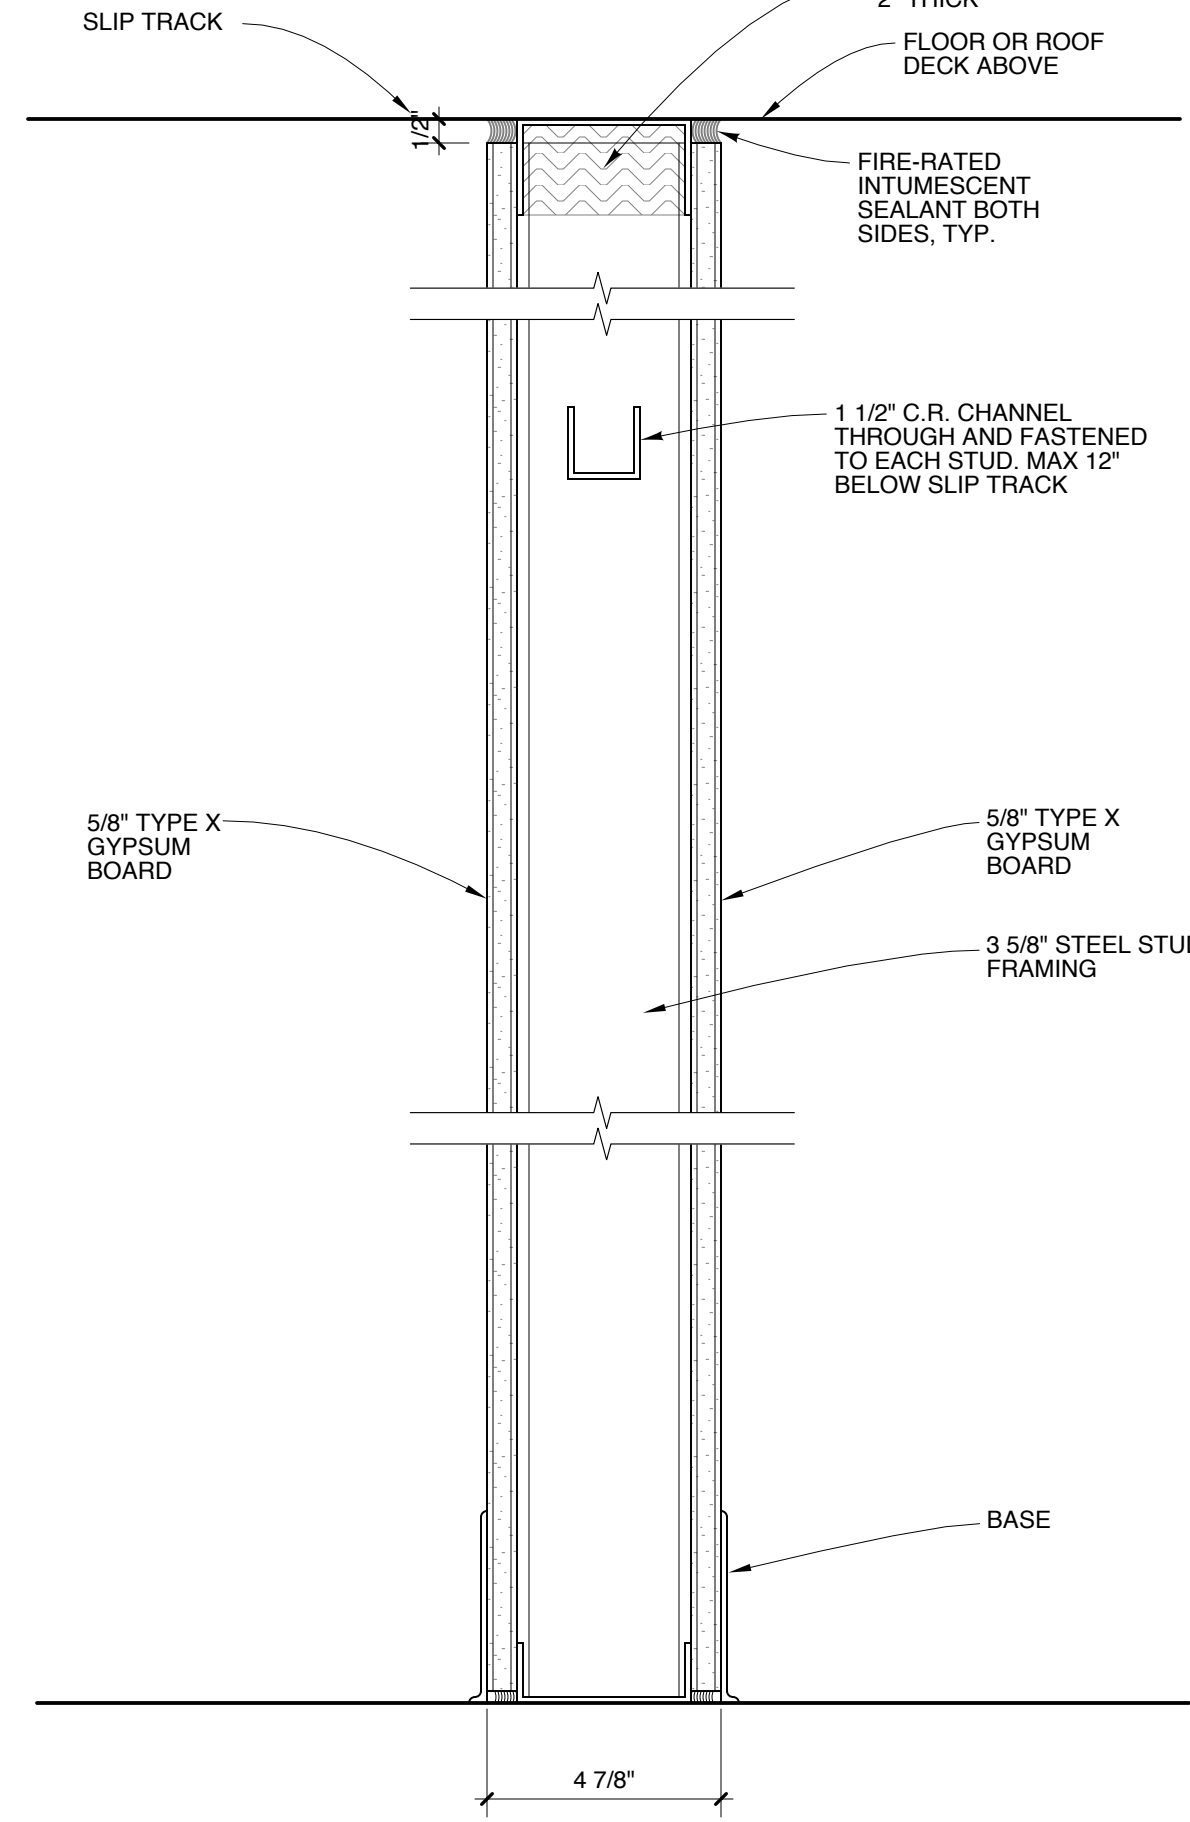


2 PARTITION TYPE P2
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.
2. 1-HOUR FIRE RESISTANCE RATED.

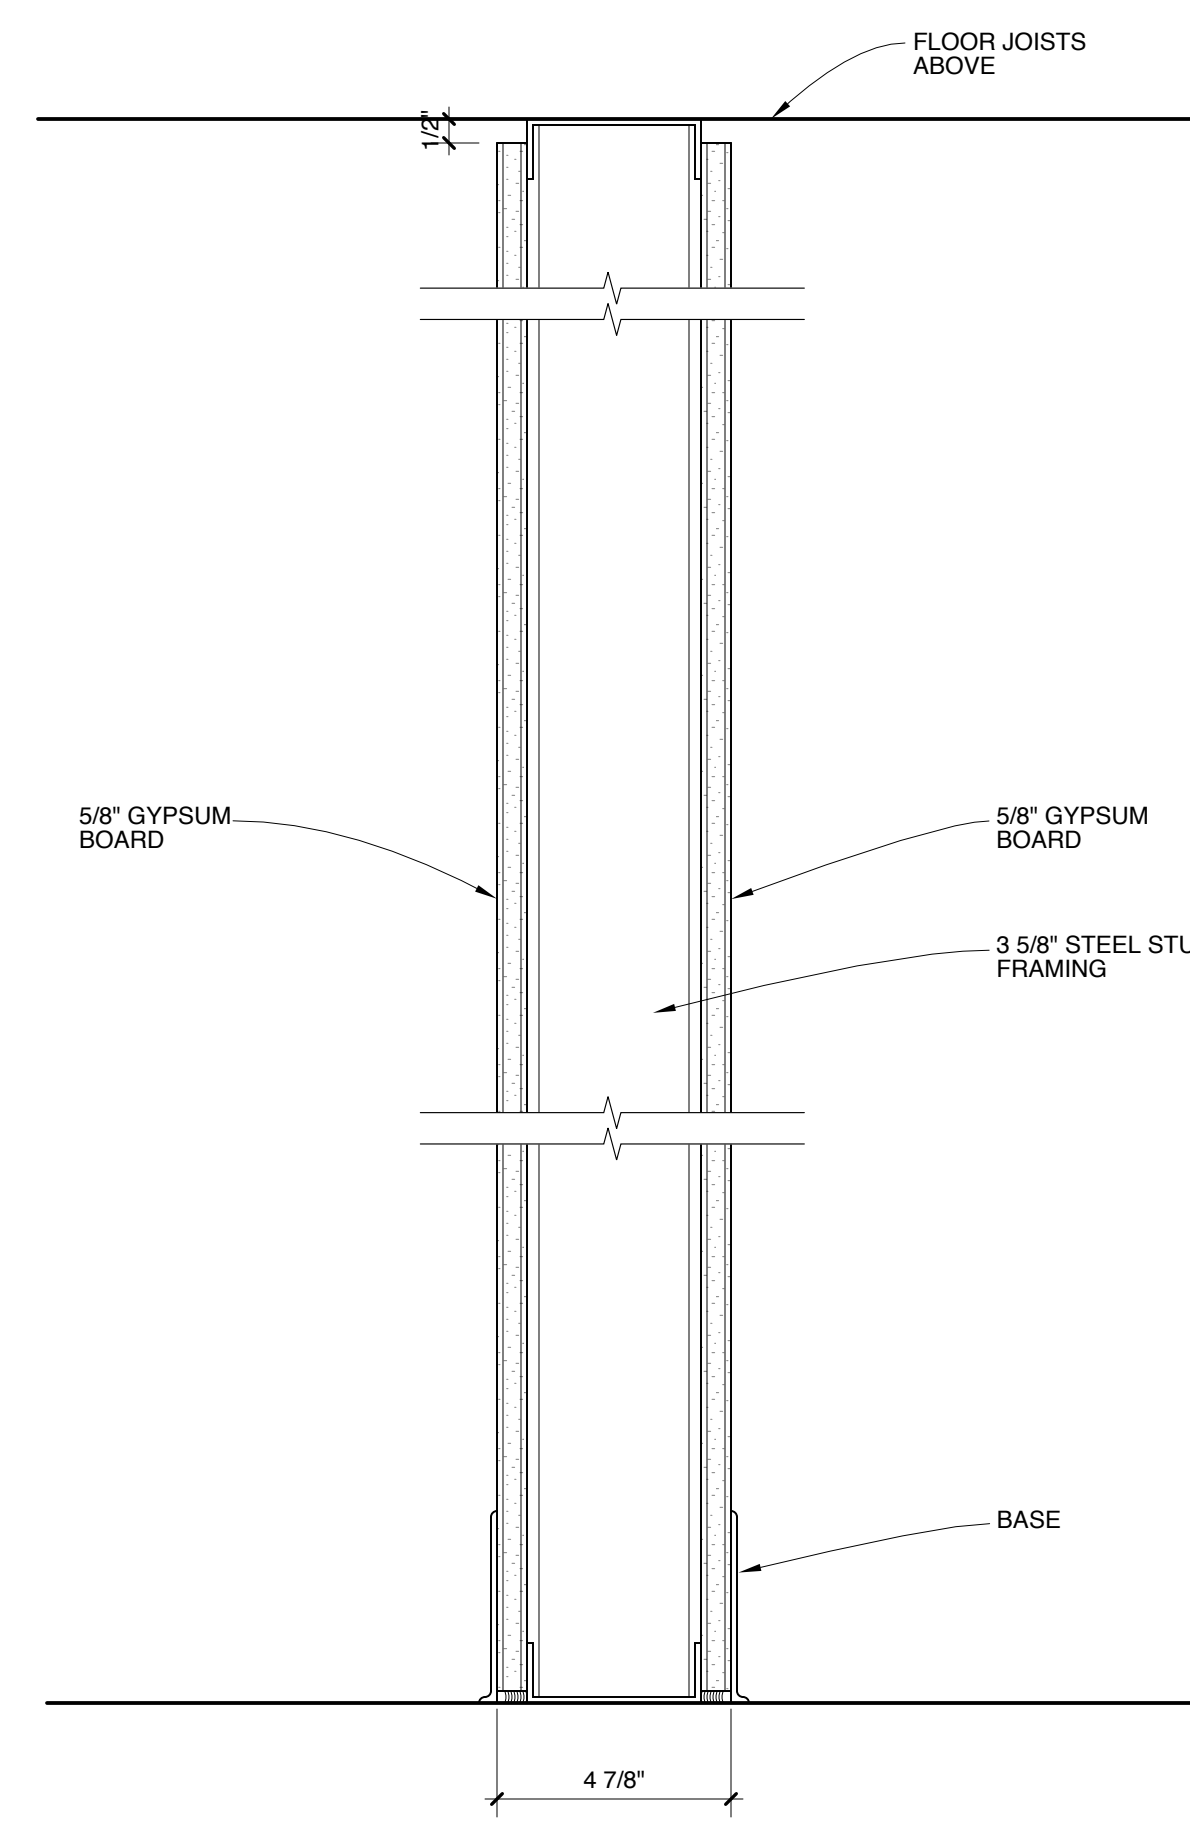


3 PARTITION TYPE P3
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.
2. LOAD BEARING PARTITION. SEE STRUCTURAL DRAWINGS FOR MORE INFORMATION.

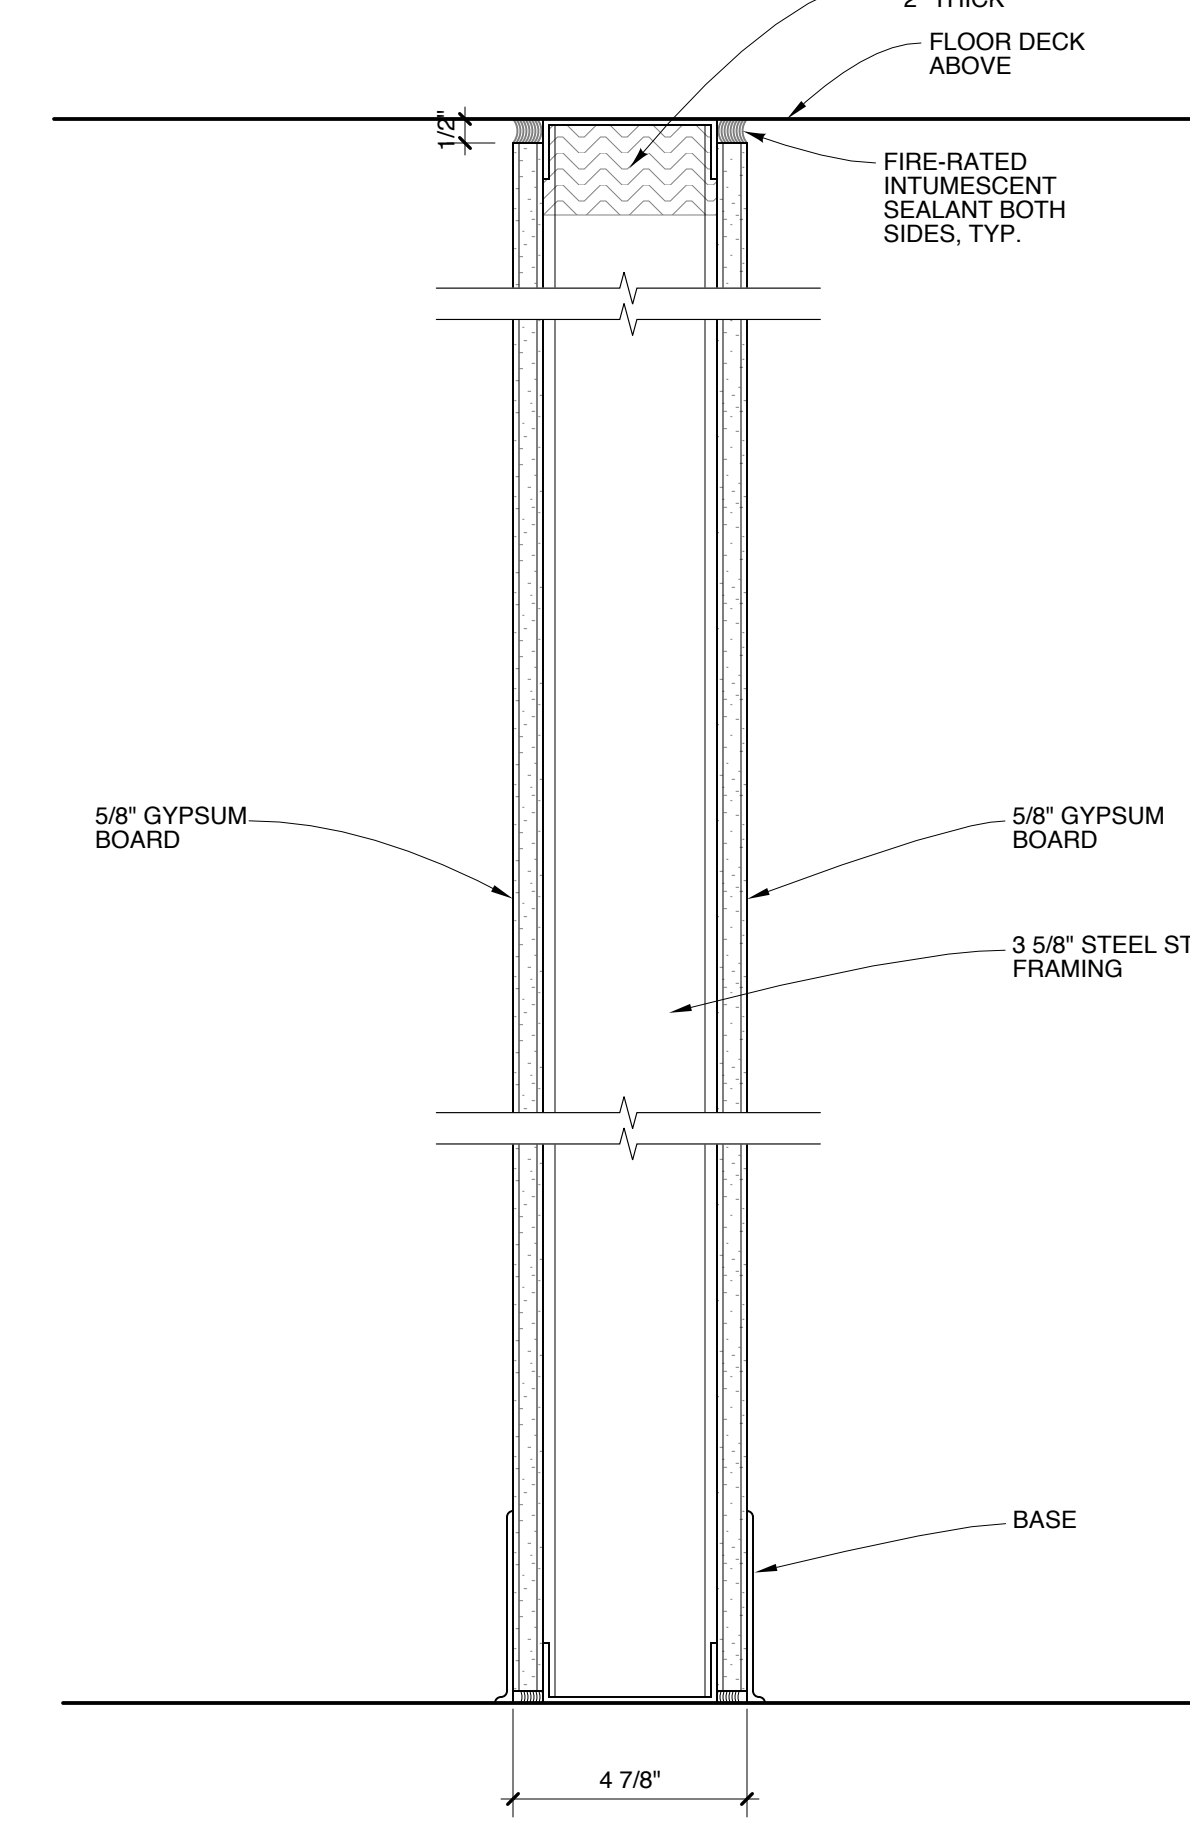


4 PARTITION TYPE P4
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.
2. 1 HOUR FIRE RESISTANCE RATED.
3. LOAD BEARING PARTITION. SEE STRUCTURAL DRAWINGS FOR MORE INFORMATION.

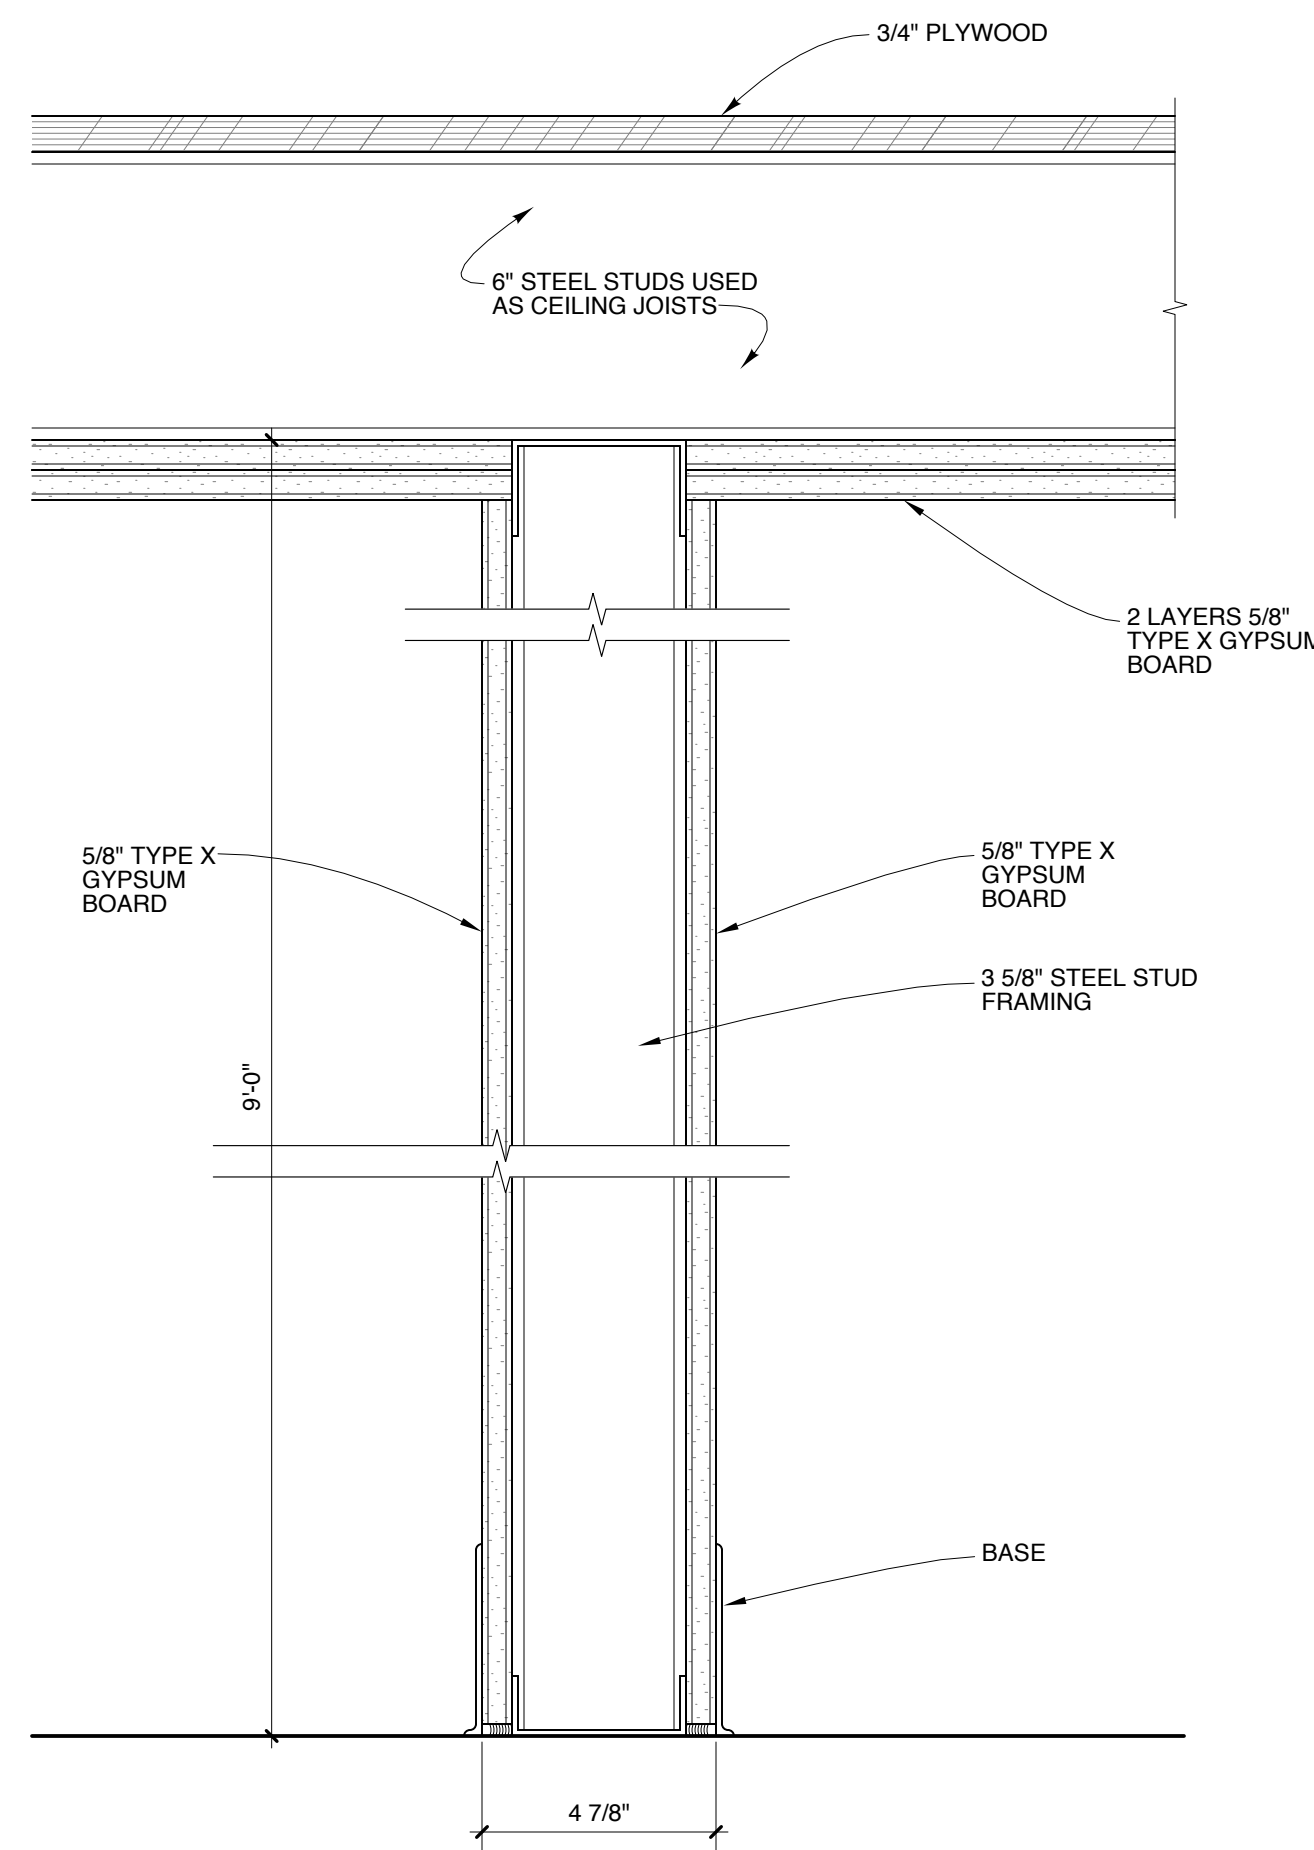


5 PARTITION TYPE P5
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.

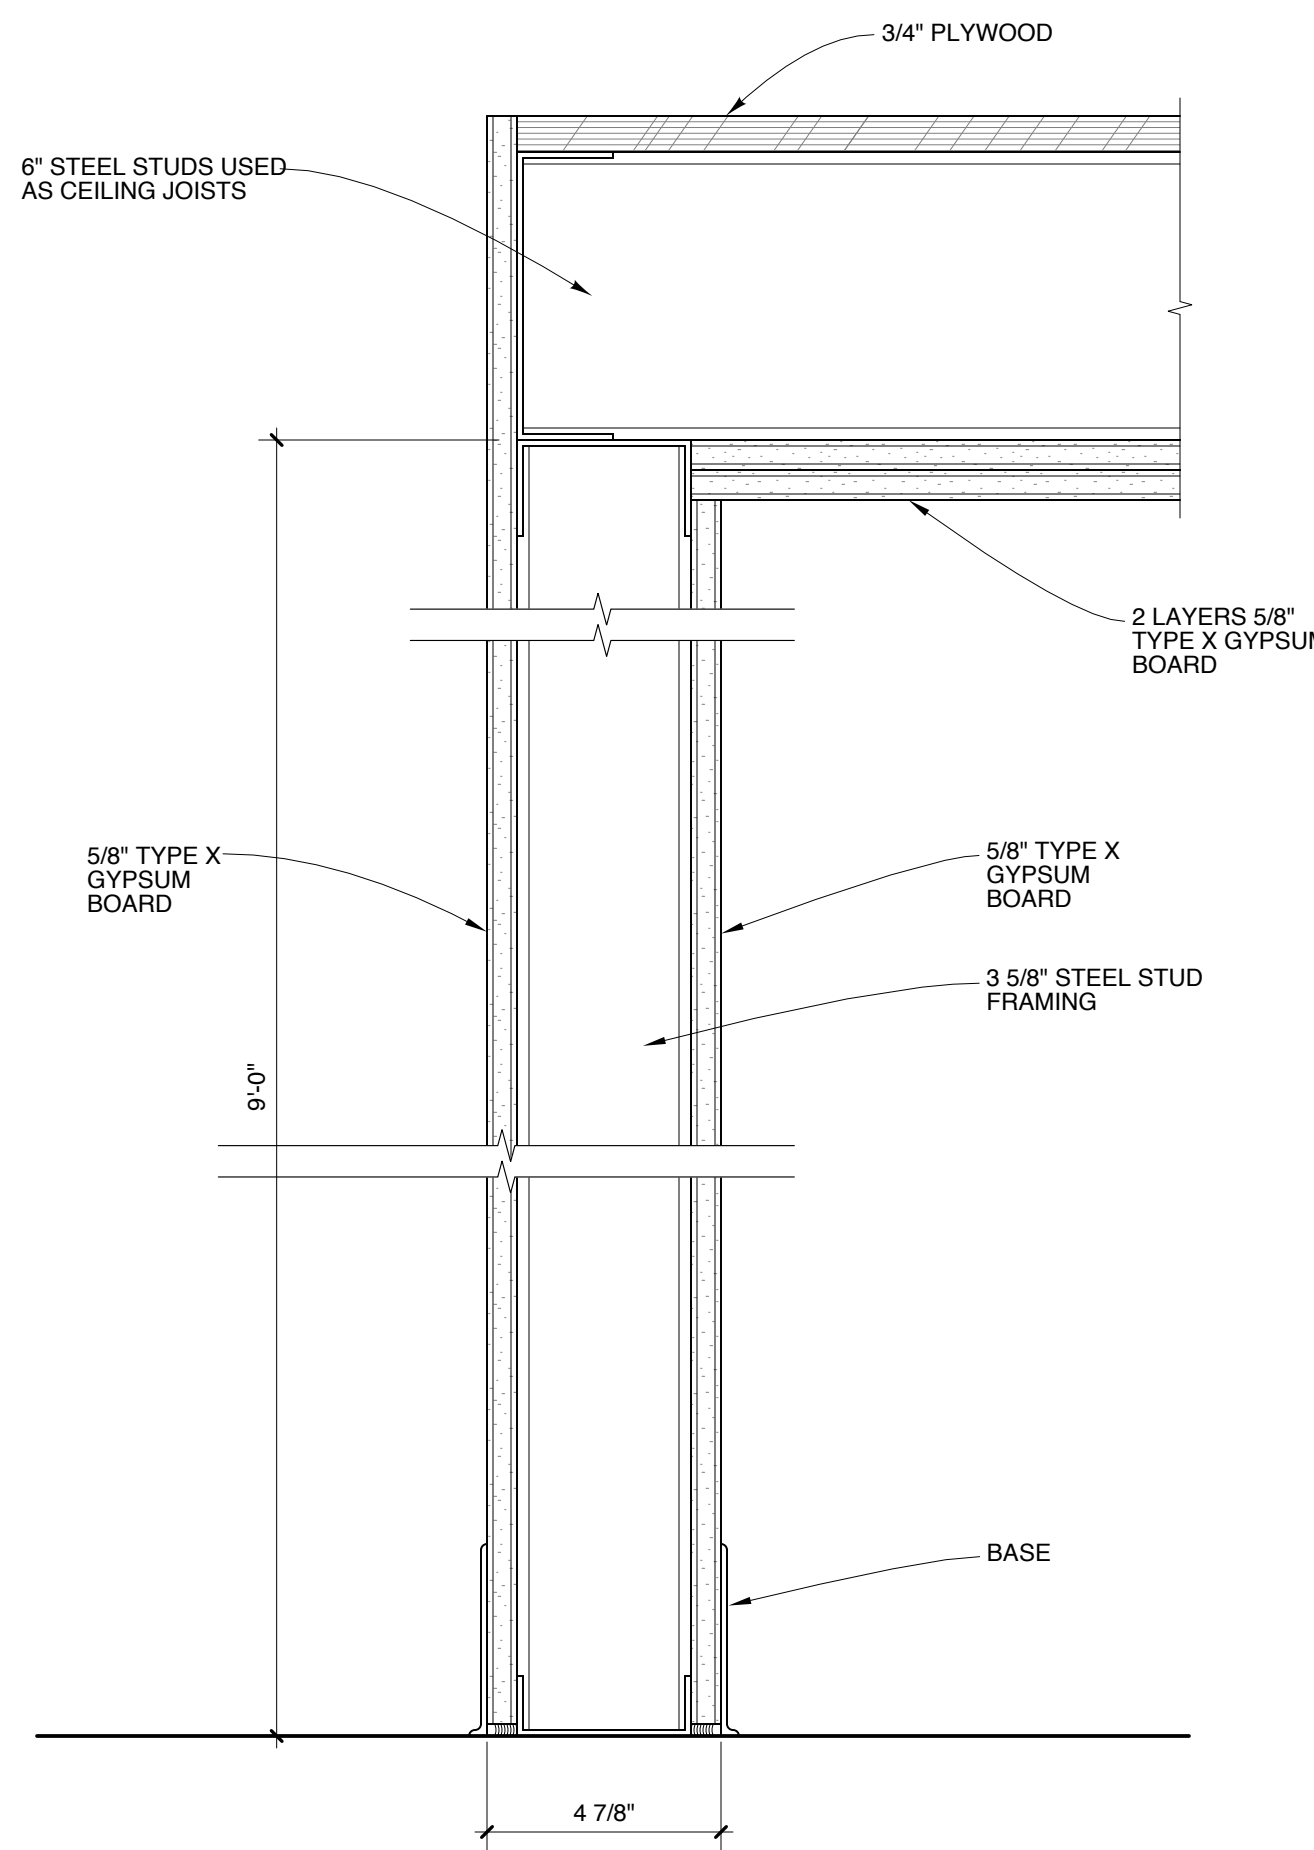


6 PARTITION TYPE P6
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.
2. 1-HOUR FIRE RESISTANCE RATED.

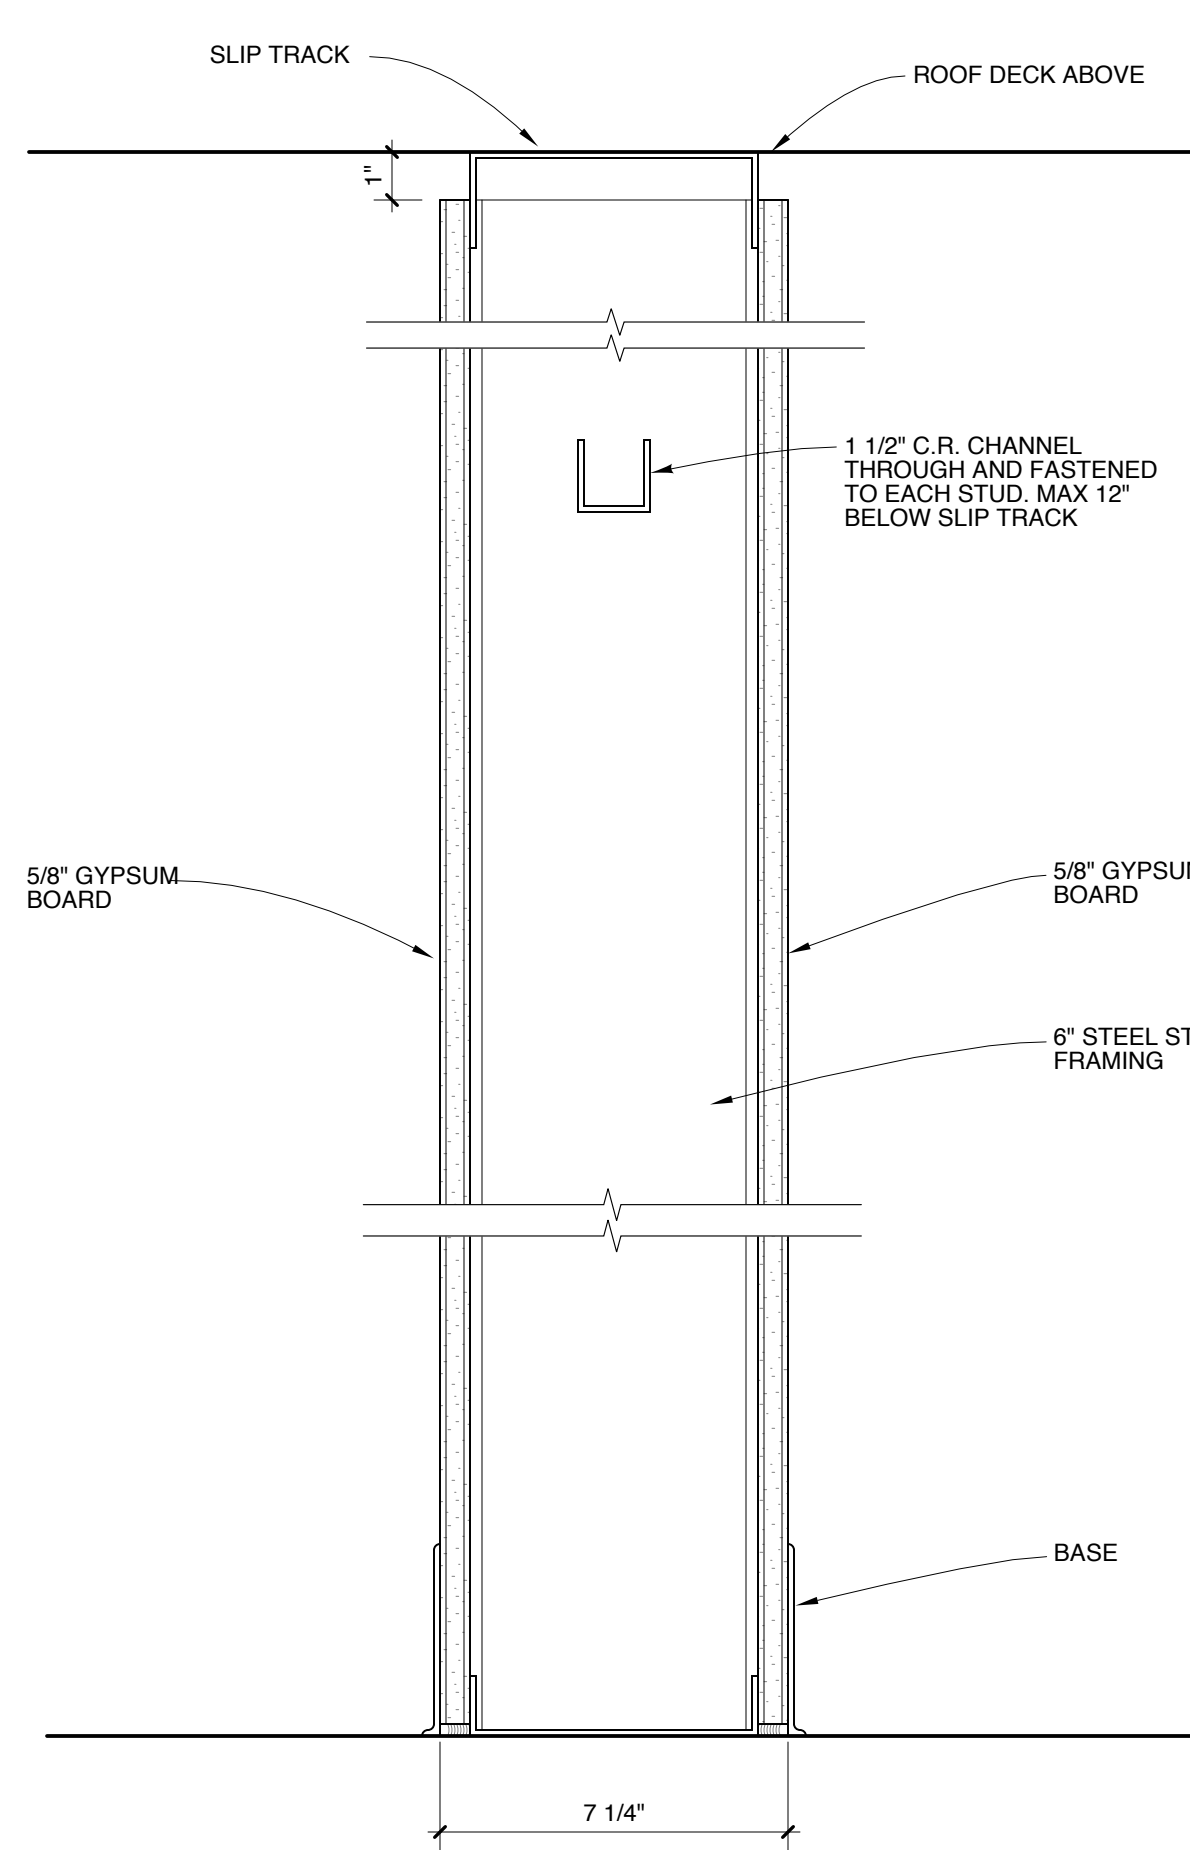

7 PARTITION TYPE P7
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.

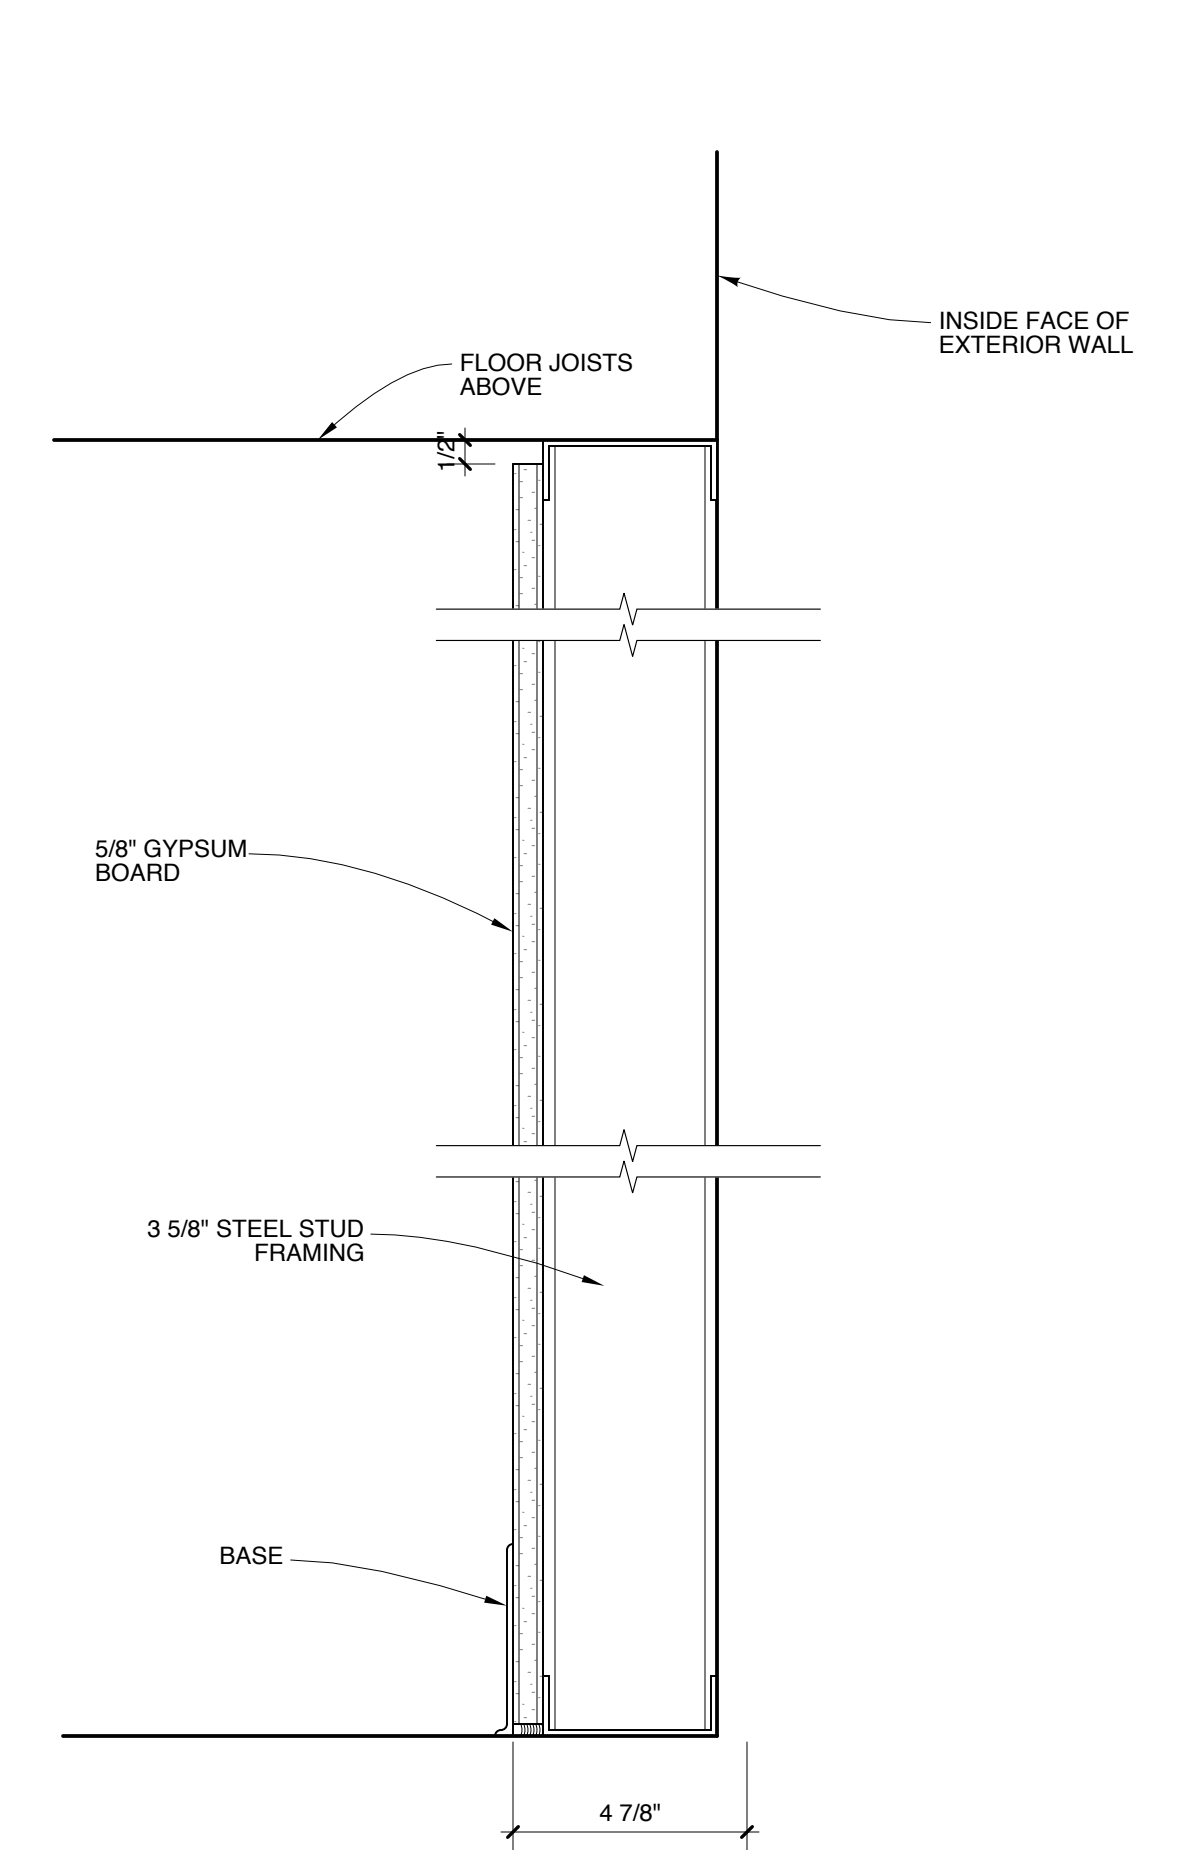

8 PARTITION TYPE P8
SCALE: 3" = 1'-0"
1" 2" 4" 8"

NOTES:
1. SELECT STUD SPACING AND GAUGE FROM MANUFACTURER'S SPAN TABLES.
2. LOAD BEARING PARTITION. SEE STRUCTURAL DRAWINGS FOR MORE INFORMATION.

