

HUNTINGTON APTS ALARM INPUT/OUTPUT MATRIX

System Inputs	Activate Alarm LED on FACP	Activate Local Alarm LED on FACP	Activate Supervisory LED on FACP	Activate Local Audible Signal	Activate Supervisory LED on FACP	Activate Local Trouble LED on FACP	Indicate System Status & Location	Activate Audible/Vision Evacuation Devices in Dwelling Units	Activate Alarm LED in Dwelling Signals in Common Area	Activate Remote Devices in Dwelling Signals in Common Area	Activate Supervisory LED on Remote Annunciator	Activate Remote LED on Remote Annunciator	Indicate Remote Trouble LED on Remote Annunciator	Transmit System Status and Location Signal	Transmit Alarm Signal to Central Station	Transmit Supervisory Signal to Central Station	Trip Alarm on City Master Box	Activate Code 4 Audible Signal to Central Station	Activate Signal on Sounder Base
Manual Pull Station	X	X			X	X	X	X			X	X	X	X	X	X	X		
Smoke Detector	X	X			X	X	X	X			X	X	X	X	X	X	X		
Heat Detector	X	X			X	X	X	X	X		X	X	X	X	X	X	X		
Low Battery				X	X	X				X	X	X			X				
Loss of AC Power				X	X	X				X	X	X			X				
Open Circuit				X	X	X				X	X	X			X				
Short Circuit				X	X	X				X	X	X			X				
Ground Fault				X	X	X				X	X	X			X				
C/O Smoke Detector	X	X		X		X	X	X			X	X			X			X	