


7 INSTALL PATIO DOOR - CONTINUED

SECURE THE DOOR

Note! Vinyl door instructions later in this section. All others begin here. Double door units are shown, however, the fastening instructions also apply to triple, quad and sidelight French and patio door units.


For French Doors:

Remove a screw from each hinge next to the weatherstrip and replace with one of the provided #8 x 3" screws, seating all screws fully.

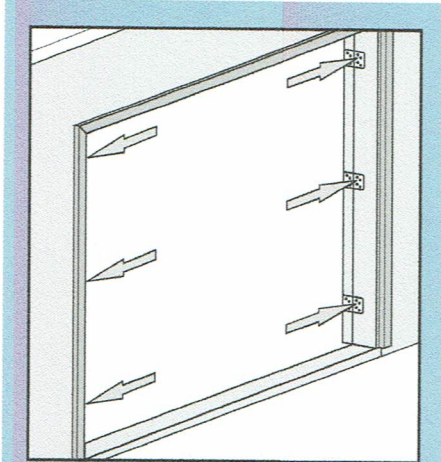

For Patio Doors:

Pre-drill and install four more #8 x 3" screws through the thick part of the jamb where shown in a similar manner to those installed previously. Seat all screws fully.

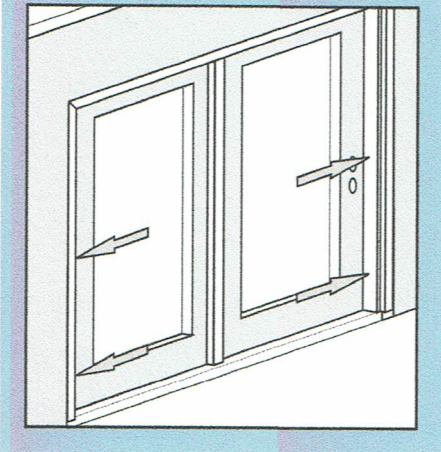

VINYL FRENCH AND PATIO DOORS:

Note! Use the six screws that come in the hardware pack to install the door. The hardware pack also contains six screw caps and a #25 torx bit to install the screws.

1. Verify the door is level, square and plumb. Check for even margins around all panels and the frame and that the lockset holes (if applicable) align properly. If not, adjust shims. Once the screws are captured in the jamb jacks, they cannot be removed and reinstalled.



2. Use the jamb jack screws and TORX bit (provided) to initially secure the frame to the opening at locations 1 & 2. Turn jamb jack screws #1 and #2 until they click twice. Do the same for #3.

3. Check the inside of jamb on the #1 side for plumb and adjust by turning jamb jack screws clockwise to move toward the jamb, or counter clockwise to move away from the jamb. Check unit for plumb, square and level.

4. Turn #4 jamb jack screw until it clicks twice. Adjust jamb jack screws on the #4 side to plumb jamb. Again, check unit for level, plumb and square.

5. Tighten jamb jack screws #5 and #6 being careful not to bow the side jambs.

6. Check unit for plumb, square and level and adjust as necessary.

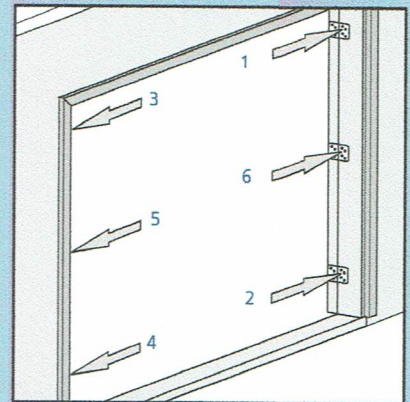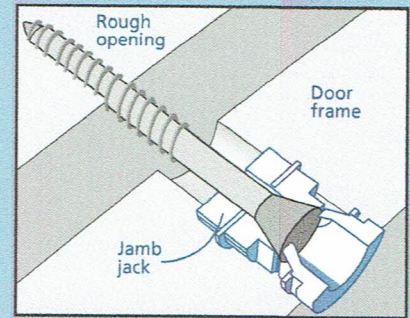

ADJUST SILL CAP (IF NECESSARY)

Verify the sweep properly contacts the threshold with 1/8" overlap as shown. Door units are manufactured so that, if installed level and square, the sweep will contact the threshold properly, making adjustments to the sill cap unnecessary. However, if adjustments are needed, use a flat head screwdriver to remove screw covers and turn screw clockwise to adjust the sill cap up. Sills are shipped with sill cap adjusted all the way down.

