Inner

Outer

screen

track

screen



for Swinging French and Patio Doors (JII105)

8

INSTALL SCREEN SYSTEM

Note! Some doors are shipped with a screen track pre-installed. For those doors, follow these instructions to install the screen system. If the screen track was not previously installed, follow the instructions provided with the screen to install the screen track and the screen system.

For French Doors:

- Position smaller inactive screen on the inner track at the top and bottom.
- 2. Secure inactive screen to the side jamb with 2 of the provided #8 x 3" screws through the pre-drilled screen edge holes.
- Position larger active screen on the outer track at the top and bottom.
- Using a #2 Phillips screwdriver, adjust outer screen rollers at top and bottom until screen slides

properly. Turning the screws counter clockwise retracts the rollers into the frame.

5. Adjust the wheels at both the top and bottom in order to center the screen between the head and the sill.


Note! Excessive tension may cause binding. Adjust so the top and bottom are parallel with the head and sill.

For Patio Doors:

 Position screen on the screen track at the top and bottom.

For Both Doors:

- Trim bug flap on screens to desired length. Adjust the upper and lower adjustment screws to ensure smooth screen operation.
- Mark where active screen securing hardware should be mounted and apply strike plate. Door frame must be pre-drilled to accept screws.

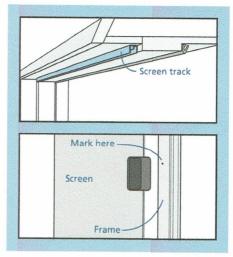

INSTALL DRIP CAP

- Install drip cap above the brickmould header trim.
- Cut a piece of drip cap the length of the header trim + 1/8" to allow for 1/16" overlap on each end of the trim.
- Apply 1/4" bead of sealant to header trim as shown.



- 4. Nail drip cap in place as shown.
- 5. Apply sealant underneath the drip cap where it meets both ends of the trim.

9

COMPLETE INSTALLATION

 Apply sealant along both sides and top of the door unit where the exterior trim rests against the outside of the house and where the brickmould meets the jambs.

