

# Installation and Service Instructions

Low Emissions and High Efficiency Oil Boiler



7 747 010 678-00.1RS



## Logano G125 BE US/CA

For trained and certified installers

Read carefully prior to installation, maintenance and service.

<b>1</b>	<b>Safety Considerations and Symbol Descriptions</b>	<b>4</b>
1.1	Regarding this Manual	4
1.2	Guideline of Notices	4
1.3	Observe the following Symbols	4
1.3.1	Installation Guidelines	5
1.3.2	Boiler Room Guidelines	5
1.4	Tools, Materials and Accessories	5
1.5	Disposal	5
<b>2</b>	<b>Product Description</b>	<b>6</b>
2.1	Product Applications	6
2.2	Product Description	6
<b>3</b>	<b>Technical Information</b>	<b>7</b>
3.1	Technical Data less Burner	7
3.2	Operating Conditions	8
3.2.1	General Operating Requirements	9
<b>4</b>	<b>Packaging and Components</b>	<b>12</b>
<b>5</b>	<b>Moving the Boiler</b>	<b>13</b>
5.1	Reducing Boiler Weight for Transportation	13
5.2	Lifting and Carrying the Boiler	14
5.3	Moving the Boiler with the Boiler Cart	14
<b>6</b>	<b>Placing the Boiler</b>	<b>15</b>
6.1	Clearances	15
6.2	Reversing the Burner Door Swing	16
6.3	Installation of boiler Feet (Components of B-Kit)	17
6.4	Placement of the Boiler	17
<b>7</b>	<b>Boiler Installation</b>	<b>18</b>
7.1	Installation of Venting Systems	18
7.1.1	Vertical Venting Systems	19
7.1.2	Horizontal Venting	19
7.2	Installation of Combustion Air Supply System	28
7.3	Installation of Water Connections	31
7.3.1	B-Kit Installation	31
7.3.2	Installation of Boiler Drain (B-Kit Component)	32
7.3.3	Installation of System Components	32
7.4	Filling and Checking for Water Leaks	33
7.5	Installation of Oil Line	34
7.6	Electrical Connections	35
7.6.1	Installation of Aquasmart	35
7.6.2	Control System Installation	36
7.6.5	Strain Relief Installation	38
7.6.6	Top Rear Panel Installation	38

<b>8</b>	<b>Placing the Boiler in Operation</b>	<b>39</b>
8.1	Setting the Initial System Pressure	39
8.2	Checking the Relief Valve	40
8.3	Check Position of Flue Baffles (Room Air Operation)	40
8.4	Check Position of Flue baffle Plates (Outside Air Operation)	41
8.5	Prepare System for Operation	41
8.6	Start-up of Control and Burner	41
8.7	Guidelines for Burner Start-up	41
8.8	Adjusting Stack Temperatures	42
8.8.1	Adjusting/Removing Flue Baffles	43
8.8.2	Removing Flue Blocking Plate	44
8.9	Testing of the Manual Reset High Limit (STB) of Logamatic controls	44
8.10	Installation of Front Burner Cover	45
8.11	Detailed Start-up Procedure	46
<b>9</b>	<b>Taking the Boiler Out of Operation</b>	<b>47</b>
9.1	Normal Boiler Shut-down	47
9.2	Emergency Shut-down	47
<b>10</b>	<b>Boiler Maintenance</b>	<b>48</b>
10.1	Why do maintenance?	48
10.2	Prepare Boiler for Cleaning	48
10.3	Boiler Cleaning	49
10.3.1	Cleaning the Boiler with Brushes	49
10.3.2	Wet Cleaning	50
10.3.3	Inspecting the combustion air hose (sealed combustion only)	50
10.4	Testing System Pressure	51
10.5	Testing Relief Valve	51
10.6	Inspection and Maintenance Procedure	52
<b>11</b>	<b>Restoring System Lock-outs</b>	<b>56</b>
<b>12</b>	<b>Piping Diagrams</b>	<b>57</b>
<b>13</b>	<b>Spare Parts</b>	<b>60</b>
<b>14</b>	<b>Burner Wiring Examples</b>	<b>67</b>
<b>15</b>	<b>Glossary</b>	<b>69</b>

# 1 Safety Considerations and Symbol Descriptions

## 1.1 Regarding this Manual

This document contains important information regarding safe and proper installation, operation and maintenance of the boiler.

The high tech G125 BE boiler is designated as a hot water heating boiler.

The Installation and Maintenance Instructions are directed to the installing contractor who has professional knowledge regarding boiler installation and maintenance.

## 1.2 Guideline of Notices

Two levels of danger are identified by the following warning labels:



**WARNING!**

### DANGER

Denotes a possible severely dangerous situation where, without proper caution, bodily injury or loss of life may result.



**CAUTION!**

### DANGER OF INJURY/SYSTEM DAMAGE

Denotes a possible dangerous situation that can lead to mild to moderate bodily injury or physical damage.



### NOTICE

Application comment for optimum use of equipment and adjustment as well as useful information.

### → Cross reference

Designated by means of an arrow →, refers to a notice in another document.

## 1.3 Observe the following Symbols

The local and state codes and regulations must be observed during the installation of the boiler:

- The local building code requirements regarding placement, combustion air and venting and chimney system must be followed.
- Follow applicable electrical code requirements.
- Follow the local code and standards regarding safe boiler operation.



### NOTICE

Use only original Buderus spare parts. Buderus can not be held liable for damage caused by non-Buderus parts.



### NOTICE

The boiler installation must be performed by a qualified installer in accordance with regulations put forth in NFPA-31 Installation of Oil-Burning Equipment. The installation must comply with all local and national codes, regulations and authorities having jurisdiction regarding the installation of oil fired boilers.

For Canada refer to the guidelines of CSA/CGA-B149.1 and 2 Installation Codes.

### 1.3.1 Installation Guidelines



**CAUTION!**

#### **DANGER TO LIFE**

from electric shock

- Do not work on electrical components unless you have the required qualification and applicable certification.
- Do not work on electrical components unless you have the required qualification and applicable certification.
- Prior to opening the control: shut down the power supply and prevent from accidental reactivation.
- Observe all applicable installation guidelines.

### 1.3.2 Boiler Room Guidelines



**CAUTION!**

#### **DANGER TO LIFE**

from poisoning.

Insufficient combustion air can result in dangerous operation if combustion air is taken from indoors.

- Please observe that combustion air openings are not reduced in size or closed.
- Make sure that no mechanical air openings or devices remove combustion air from the boiler room such as central vacuum systems, dryers and air conditioning appliances.
- Make sure that the boiler is connected to a chimney or horizontal venting system that is capable of handling the slight positive breeching pressure.
- If any of these problems have not been corrected, one cannot operate the boiler.
- Make the end-user aware of these guidelines and their potential danger.



**CAUTION!**

#### **FIRE DANGER**

due to flammable or liquid materials.

- Make sure that flammable and liquid materials are not in the close vicinity of the boiler.

## 1.4 Tools, Materials and Accessories

For the installation and maintenance of the boiler you will need typical tools used in .

In addition, the following components are useful:

- Boiler cart with rope or Buderus boiler cart.
- Wood blocking.
- Cleaning brushes and/or chemical cleaning agents for wet cleaning.

## 1.5 Disposal

- Please dispose of any trash in an environmentally friendly fashion.
- Please discard properly of any heating system related components.

## 2 Product Description

### 2.1 Product Applications

The boiler is designated for use as a hot water heating boiler for space heating applications and to heat domestic hot water by means of an indirect fired tank for single and multi-family homes and small commercial heating applications.

Please observe the technical data on the rating label and technical information (→ Chapter 3, page 7), to ensure proper application of this product.

### 2.2 Product Description

The G125 BE is a oil fired low temperature boiler with boiler water temperature regulation.

The boiler consists of:

- Optional Logamatic control
- Boiler jacket
- Boiler block with insulation
- Burner

The optional Logamatic control manages most control functions in a heating system.

As an alternative, a Aquasmart control can be used for boiler control.

The boiler jacket serves to reduce energy loss and as a noise reducing agent.

The boiler block transfers the heat generated by the burner to the boiler water. The insulation reduces the stand-by losses.

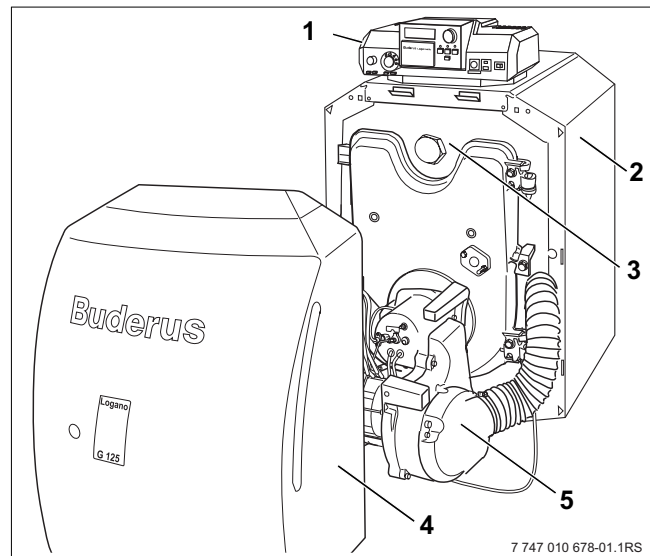


Fig. 1 Boiler G125 BE US/CA

- 1 Control panel
- 2 Boiler jacket
- 3 Boiler block with insulation
- 4 Burner door cover
- 5 Burner

### 3 Technical Information

#### 3.1 Technical Data less Burner

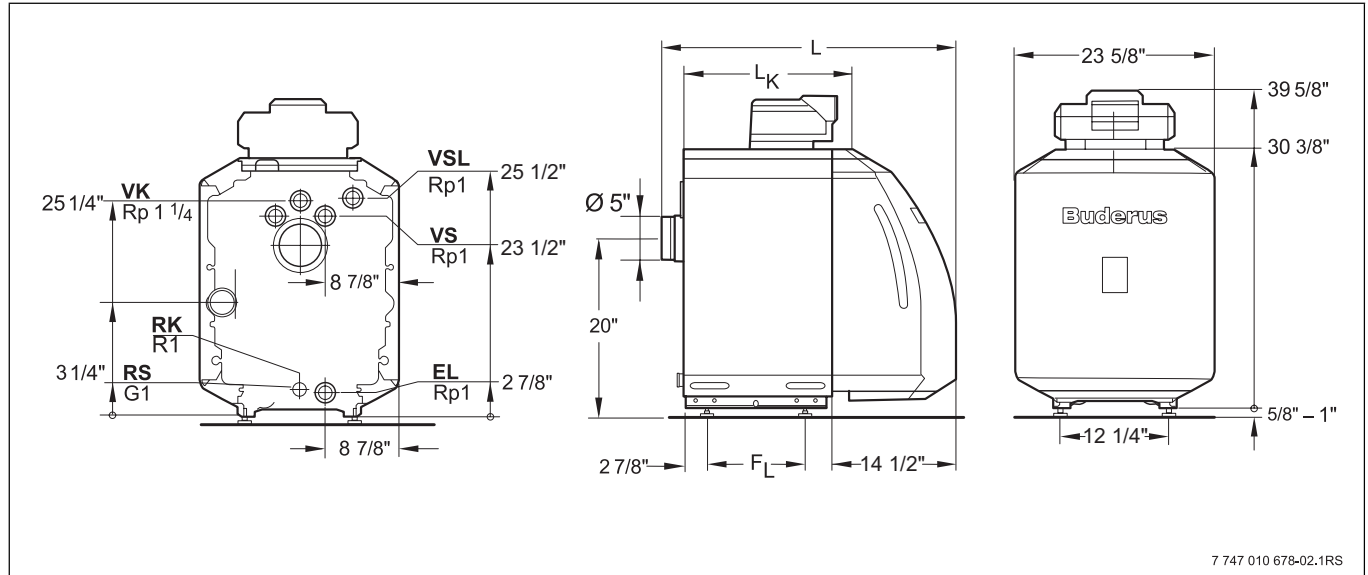


Fig. 2 Dimensions and connections (measurements in inches)

**Connections (For Measurements see following tables):**

VK = Boiler supply

RK = Boiler return

EL = Boiler drain (Connection for drain valve)

VS = Connection (plugged)

RS = Connection (plugged)

VSL = Connection (plugged)

Boiler Model		G125/21-BE	G125/28-BE	G125/34-BE
Number of boiler blocks		3	4	5
Heating Capacity (Gross Output)	MBtu/hr	72	96	116
Net IBR	MBtu/hr	63	83	101
Boiler water content	Gal	8.7	10.8	12.9
Fireside volume	cu.ft.	1.20	1.75	2.21
Oil firing rate	GPH	.60	.80	1.0
Fireside pressure drop	psi	0.00058 – 0.00145		
Permissible max. supply temperature <sup>1</sup>	°F	230		
Allowable operating pressure	psi	58		
Maximum Reset High Limit for temperature sensor and overheat thermostat (STB)	s	40		

Table 1 Technical Data for G125 BE less burner

<sup>1</sup> High limit (overheat thermostat STB)

Permissible maximum supply temperature = High limit (STB) – 32 °F

e.g.: High limit (STB) = 212 °F, maximum permissible supply temperature = 212 – 32 = 180 °F

Select your high limit (STB setting) according to your local codes and requirements.

Boiler Model		G125/21-BE	G125/28-BE	G125/34-BE
Total boiler length (L)		34 5/8"	39 3/8"	44"
Boiler block length (LK)		21 1/8"	25 3/4"	30 1/2"
Combustion chamber length		16"	20 1/2"	25 1/4"
Firebox diameter		10 5/8"		
Burner door thickness		3 1/2"		
Distance between boiler feet (FL)		11 3/8"	16 1/8"	20 7/8"
Dry weight <sup>1</sup>		386lbs	459lbs	513lbs

Table 2 Dimensions, Weight and other Data for G125 BE less burner

<sup>1</sup> Weight incl. packaging material approx 6 – 8% more.

### 3.2 Operating Conditions

Maintain the operating requirements listed on the following page for long and trouble free operation of the boiler. Proper and timely maintenance procedures must be followed.



**CAUTION!**

#### SYSTEM DAMAGE

If these operating requirements are not followed, it can lead to premature failure can result and cause permanent damage to the boiler.

- Follow the instructions on the rating label and those in the manual.



3.2.1 General Operating Requirements

Operating Conditions			
Minimum Boiler temperature	Boiler Shutdown	Boiler Shutdown/ Mixed temperature <sup>1</sup>	Minimum return temperature
<b>Systems controlled by R2107 controls for outdoor reset operation</b>			
No requirements  Operating conditions are met with R2107 control <sup>2</sup>	Automatic with Logamatic R2107	No requirement, yet beneficial with low temperature boiler with 130/113 °F system design Necessary with: – Radiant floor applications – Systems with large water content > 115 gal/100,000 Btu/hr	No requirement
<b>Systems controlled by Aquasmart or R2109</b>			
150 °F <sup>3</sup>	Possible, provided the boiler operates after total shut-down for at least 3 hours.	Necessary	Necessary for: – Systems with large water content > 115 gal/100,000 Btu/hr: 130 °F – Firing with modulating burners: 130 °F

Table 3 General Operating Requirements

- <sup>1</sup> A heating circuit equipped with a motorized mixing valve improves the controllability of that sub-system and is specifically recommended when requiring different water temperatures.
- <sup>2</sup> In case the control system has no influence over the flow in a heating circuit (for instance using the Pumplogic feature of the R2107), then one should achieve a minimum supply temperature of 122 °F within 10 minutes after burner start-up by means of reducing (or interrupting) the water flow through the boiler.
- <sup>3</sup> Minimum setting on the adjustable high limit or Aquasmart: During burner operation one should achieve the minimum boiler temperature within 10 minutes after burner start-up by means of flow reduction and one should maintain this temperature.

## 3.2.2 Requirements for Boiler Room and Surroundings

Operating Conditions		Comments – Detailed Information
Boiler room temperature	+40 to +104 °F	
Relative humidity	max. 90 %	No condensate or dampness in boiler room.
Dust	–	<b>No excess amounts of dust should be present in the boiler room, e.g.:</b> <ul style="list-style-type: none"> <li>– No sheet rock or construction dust.</li> </ul> The available combustion air can not contain dust or other particles/ use of an air filter might be needed, e.g.: <ul style="list-style-type: none"> <li>– Combustion air from nearby roads with high dust levels.</li> <li>– Combustion air from nearby production facilities such as chemical plants &amp; shops.</li> <li>– Airborne particulates.</li> </ul>
Halogenated Hydrocarbons contamination	–	<b>Combustion air must be free of halogenated hydrocarbons components.</b> <ul style="list-style-type: none"> <li>– Eliminate any chemical compound such as paints, lacquers, thinners, cleaning agents. If not possible, provide fresh outside air for combustion.</li> </ul> <b>Please observe the following:</b> <ul style="list-style-type: none"> <li>– Product information of Buderus catalog.</li> <li>– Also observe guidelines in K3 chapter of Buderus catalog.</li> </ul>
Fans, removing air from boiler room	–	Avoid forced air removal by mechanical means during boiler operation such as: <ul style="list-style-type: none"> <li>– Bathroom exhaust fans</li> <li>– Dryer</li> <li>– Air-conditioning equipment</li> </ul>
Animals	–	The boiler room and especially the air inlet openings for combustion air must be kept free from animals entering by means of grills.
Fire Protection	–	Maintain proper clearances to combustible materials as required per local code. Maintain a minimum distance of 16". Do not store flammable materials near the boiler.
Flood Zone Conditions	–	Separate the fuel supply and electrical power supply from the boiler during flood conditions. Replace the boiler components such as insulation, electrical and control components afterwards.

Table 4 Boiler room and surroundings

## 3.2.3 Combustion Air Requirements

Operating Conditions	Boiler capacity (combine total boiler capacity for multiple units)	Cross area required
Two air inlet openings from outside: one top, one near bottom	< 170,000 Btu/hr	At least 43 square inch
	> 170,000 Btu/hr	At least 43 square inch plus 2.5 square inch per 10,000 Btu/hr, if the output is higher than 170,000 Btu/hr.

Table 5 Observe local codes and regulations for combustion air requirements

## 3.2.4 Fuel Conditions

Country	All Countries
Fuel	#2 Fuel Oil ASTM D396-05 Type 2
Comments	No other fuel may be used with this burner. Burner requires annual service and cleaning. Verify each time that the complete heating system is in working order. Defects must be remedied immediately.

Table 6 Permitted fuel types

### 3.2.5 Requirements for Power Supply

Operating Conditions		Comments – Detailed Information
Main power supply	120 V	Provide proper grounding for equipment and personal protection.
High amp protection	10 A	
Frequency	60 Hz	
Protection	–	Group all equipment per local code

Table 7 Power supply

### 3.2.6 Conditions Pertaining to Piping and Water Quality

Operating Conditions		Comments – Detailed Information
Operating pressure (over pressure)	12 – 58 psi	Maximum pressure is 30 psi based on supplied relief valve
Allowable test pressure	45 – 75 psi	
Adjustable temperature limit TR	122 – 194 °F	
Manual reset high limit	210 °F	In combination with Beckett AquaSmart the limit value (210 °F) may not be exceeded.
Water quality	–	Initial fill water and make-up water should be potable water type quality. A pH range of 8.2 to 9.5 is desired.

Table 8 Piping and water quality

## 4 Packaging and Components

- Check the packaging for concealed damage.
- Check the packaging for completeness. Contact your wholesaler in case of missing parts.

Component	Qty	Packaging
Boiler block	1	Pallet
Boiler jacket, installed on boiler		
Burner door and burner door cover installed on boiler block		
Buderus oil burner mounted on customized burner door		
B-Kit-Components: Supply manifold (1¼" NPT) 30 psi relief valve (¾") boiler drain Pressure/temperature gauge (1¼" NPT × R1¼) conversion nipple (parallel to NPT) 90°-elbow (1¼" NPT) 90°-elbow (¾" NPT) Burner mounting studs and washers Screw in feet	4	Plastic packaging with boiler
Control panel, alternative Aquasmart control (ordered separately)		Cardboard box
Tigerloop oil filter	1	included with boiler package
Taco 007 circulator pump w/flanges		
Technical documents	1	Plastic packaging w/boiler

Table 9 Packaging and components

## 5 Moving the Boiler

This chapter describes how to move the boiler.



**CAUTION!**

### SYSTEM DAMAGE

due to bumps.

- Protect the boiler from bumps and rough treatment.



### NOTICE

- Protect the boiler from connections from damage and dirt, when the boiler is not installed immediately.



### NOTICE

Please dispose of the packaging in an environmentally friendly fashion.

### 5.1 Reducing Boiler Weight for Transportation

One can reduce boiler weight by removing the front cover and burner door itself.

- Remove the screws holding the front cover in place.
- Lift up the front cover slightly and remove.
- Disconnect burner cable from burner control before removing the burner door.

- Open burner door by removing the two burner door bolts.
- Lift burner door from hinges.



### NOTICE

- Protect the burner door and the burner tube from damage and dirt when the burner door is removed from the boiler.

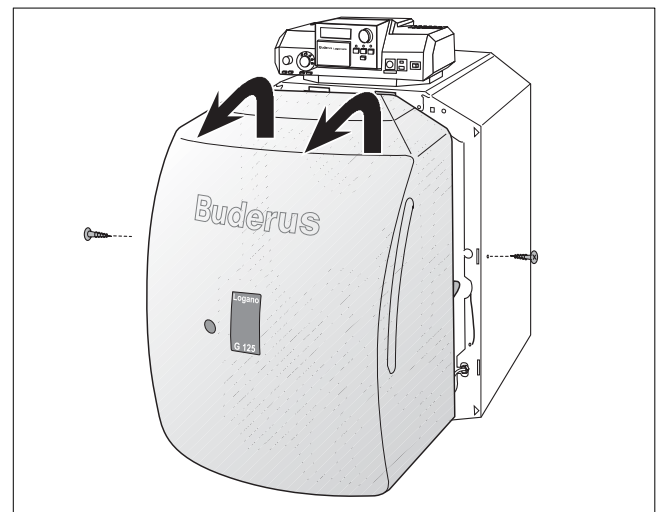


Fig. 3 Removing the front cover

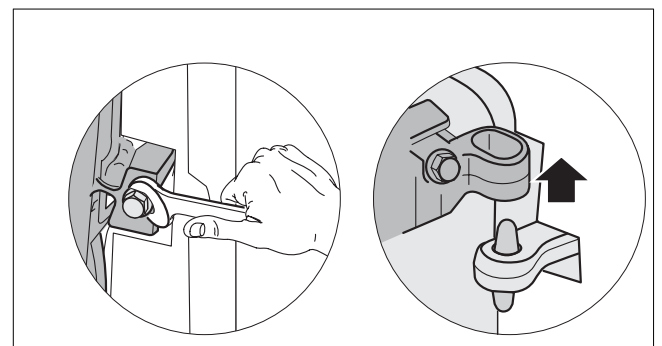


Fig. 4 Removal of burner door

## 5.2 Lifting and Carrying the Boiler



### NOTICE

The boiler is secured to the pallet with two bolts.

- Remove the bolts from pallet before lifting the boiler.

The boiler can be picked up at the hand grips located along the lower jacket panels.



**CAUTION!**

### BODILY DANGER

due to carrying of heavy loads.

- Lift and carry the boiler with at least two people at the designated hand grip positions.

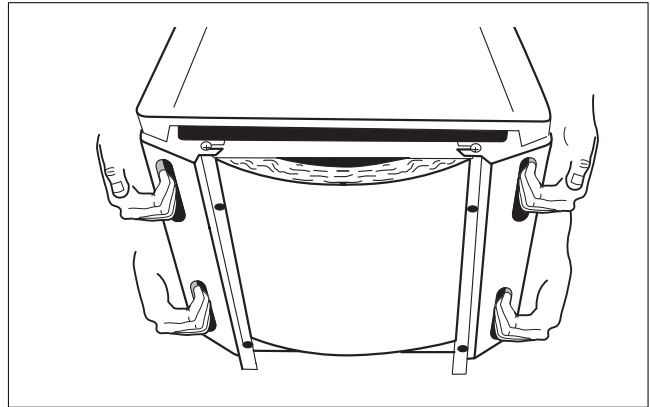


Fig. 5 Lifting and carrying the boiler

## 5.3 Moving the Boiler with the Boiler Cart



**CAUTION!**

### BODILY DANGER

if the product is not properly secured to the cart.

- Use proper moving equipment such as the Buderus cart or other dolly.
- Secure the boiler to the cart and move the boiler to the job location.

- Lift up the boiler from the rear side by using moving equipment (e.g. Buderus card or other dolly).
- Secure the boiler to the cart.
- Move the boiler to the job location.



### NOTICE

By tipping the cart you can install the boiler feet (→ Chapter 6.3, page 17).

You can order a Buderus cart from your local wholesaler.

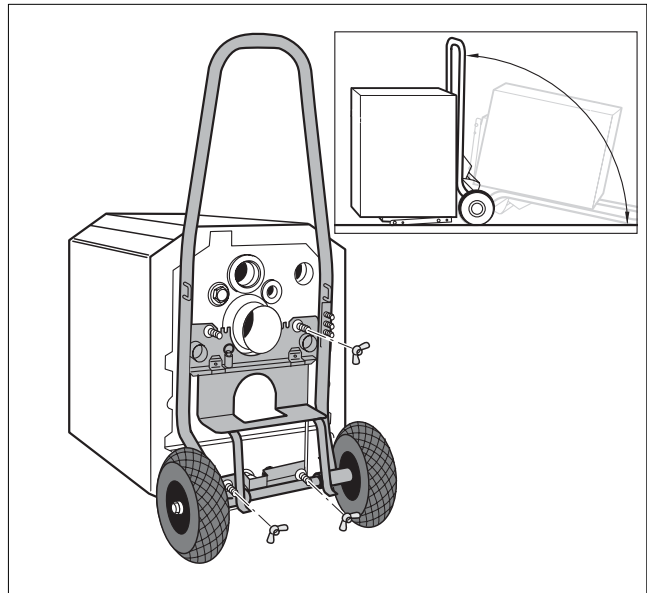


Fig. 6 Moving the boiler with a Buderus cart

## 6 Placing the Boiler

This chapter discusses how to place the boiler in the boiler room.



**CAUTION!**

### SYSTEM DAMAGE

due to freezing temperatures

- Place the boiler in a frost free room.

### 6.1 Clearances

Position the boiler while observing the clearances in (→ Fig. 7). Access to the boiler is reduced when reducing these clearances.

The boiler foundation must be level and sufficiently strong.

The burner door is factory installed right swinging. You can reverse the door swing in the field.

Distance		
A	Recommended	51 1/8"
	minimum	39 3/8"
B	Recommended	27 1/2"
	minimum	15 3/4"
C	Recommended	15 3/4"
	minimum	3 7/8"
L	see Chapter 3 „Technical Information“	

Table 10 Recommended and minimum clearances  
(Measurement in Inches)



### NOTICE

Smaller clearances must abide with state and local code. The boiler is approved for 6" side clearances. A minimum distance of 18" to combustible materials must be maintained per NFPA 31.

Floor material must comply with NFPA 31.



### NOTICE

Observe required distances to other components such as water piping, venting and other components.

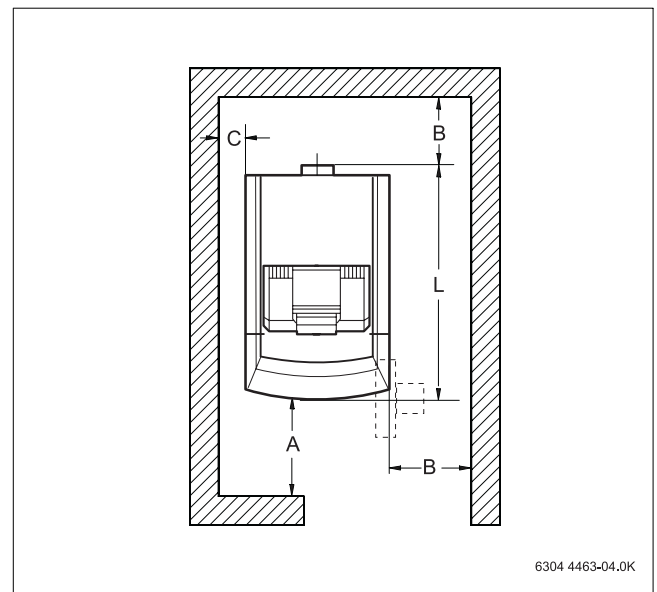


Fig. 7 Clearance dimensions for G125 boilers

6304 4463-04.0K

## 6.2 Reversing the Burner Door Swing

The burner door hinges are factory installed on the right handside the burner door swings to the right. You can adjust the hinges so that the burner door swings to the left in the field.

Note: the front panel must first be removed.  
(→ Chapter 5.1, page 13).

- Remove burner door (→ Chapter 5.1, page 13).
  - Remove hex head bolts of burner door hinges and remove hinges.
  - Install the hinges on the left side of the boiler with the hex head bolts.
- 
- Remove the eyelets from the burner door by removing the hex head bolts.
  - Locate and secure with hex head bolts these eyelets to the left side of the burner door.
  - Hang the burner door on the hinges.
  - Check to make sure that the flue baffle plates are horizontally in the boiler (→ Chapter 8.3, page 40).
  - Secure the burner door with the burner door bolts. Make sure to tighten the burner door bolts evenly with about 7.5 ft-lbs torque.



### NOTICE

When reversing the swing of the burner door, make sure to remove the burner cable and oil line from the burner first.

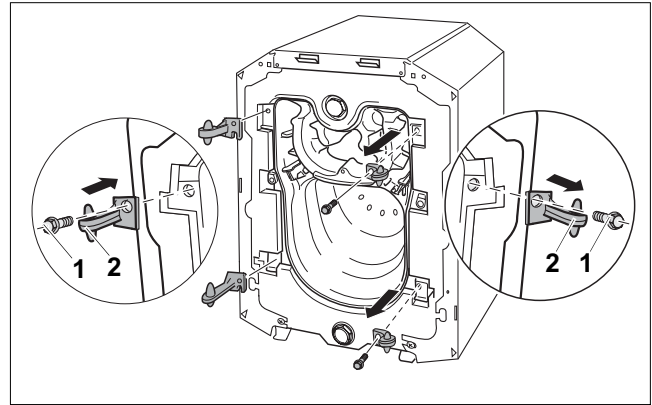


Fig. 8 Reversing burner door (boiler block)

- 1 Hex head bolts for hinges
- 2 Door hinges

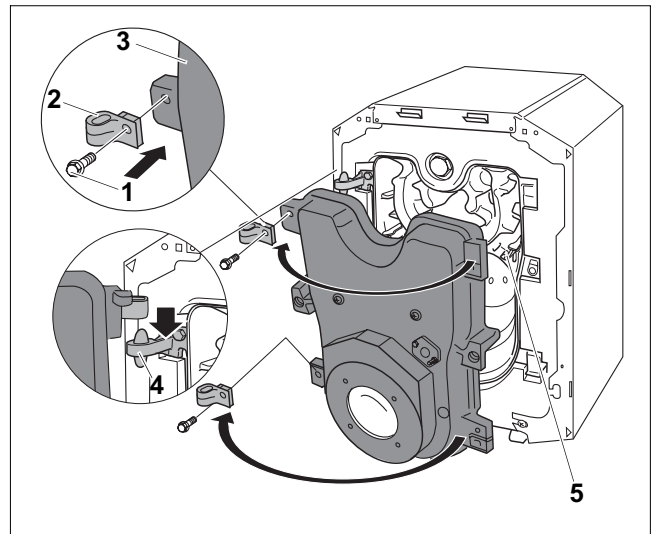


Fig. 9 Reversing burner door (on burner door)

- 1 Hex head bolts for door eyelets
- 2 Door eyelet
- 3 Burner door
- 4 Door hinges
- 5 Flue baffles



### 6.3 Installation of boiler Feet (Components of B-Kit)

You can level the boiler using the screw-in boiler feet, so that air can not collect in the boiler.

Requirement: remove front panel from boiler  
(→ Chapter 5.1, page 13).



#### NOTICE

When installing a G125 BE boiler on top of a horizontal Buderus DHW indirect tank, do not use the boiler feet on the boiler, but rather use the feet to level the tank.

- Tip the boiler slightly using the boiler cart (→ Chapter 5.3, page 14) or put a piece of wood under one side.
- Screw in the boiler feet 1/4" – 3/8".
- Level the boiler.

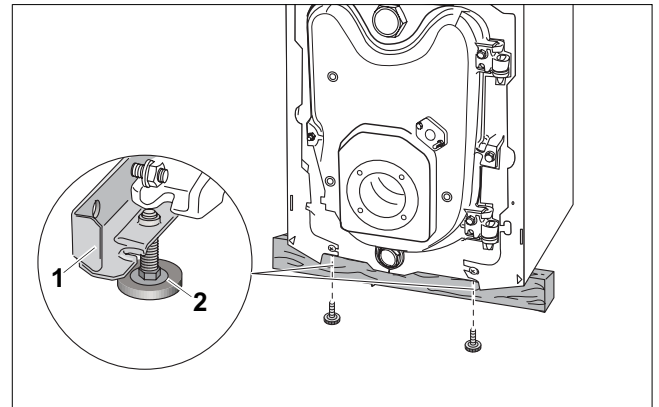


Fig. 10 Installation of boiler feet

- 1 Boiler rail
- 2 Boiler feet

### 6.4 Placement of the Boiler

- Bring the boiler to its final location.
- Put a level on the boiler and adjust boiler feet to level the boiler.



#### NOTICE

- Protect the boiler connections from dust and debris, if the boiler will not be connected right away.

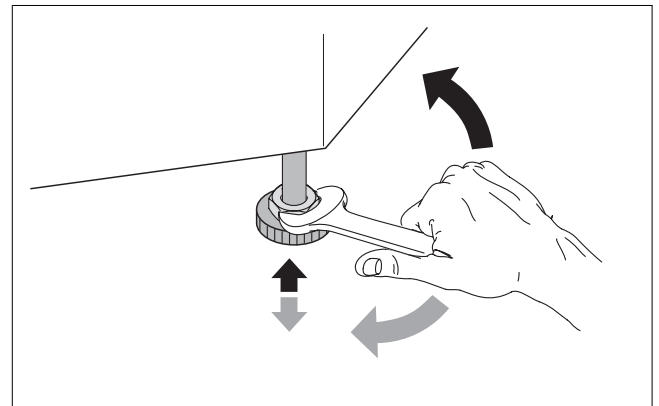


Fig. 11 Leveling the boiler

## 7 Boiler Installation

### 7.1 Installation of Venting Systems

This chapter describes the installation of the venting system and the combustion air supply system for the G125 BE boiler.

Following venting options are available:

Venting system	Comment	Draft	Combustion air	Chapter
Masonry chimney (no liner)	Barometric damper required	Negative	Outside air or room air	7.1.1.1, Page 19
Masonry chimney w/ 5" liner				7.1.1.2, Page 20
Vertical vent 5"				7.1.1.3, Page 21
Side wall	Sealed vent	Positive	Outside air only	7.1.2, Page 22

Table. 11 Venting options



#### DANGER TO LIFE

from toxic flue gases.

#### WARNING!

- Never connect more than one appliance to a venting system - regardless of vertical or horizontal venting.
- Common venting of appliances can cause property damage and put life at risk.
- Chimney liners must be a single continuous piece inside an existing chimney and can not have any connections inside the chimney chase.
- The venting system shall not be routed into, through, or within any other vent, such as an existing masonry or factory-built chimney that is used to vent any other appliance.
- Always follow vent manufacturer's instructions.



#### FIRE DANGER

from insufficient clearance between vent system components and combustible surfaces.

#### WARNING!

- Maintain 18" clearance to combustible surfaces when using galvanized or stainless pipe in vertical or horizontal venting.
- Maintain 1" clearance to combustible surfaces when using flexible oil vent for horizontal venting.
- Both the Aerocowl (AT-4) exhaust termination and Fields (FT-4) concentric exhaust/intake terminations are approved with zero clearance to combustible surfaces.



#### NOTICE

The boiler installation must be performed by a qualified installer in accordance with regulations put forth in NFPA-31 Installation of Oil-Burning Equipment. The installation must comply with all local and national codes, regulations and authorities having jurisdiction regarding the installation of oil fired boilers.

For Canada refer to the guidelines of CSA/B139 Installation Codes.



#### NOTICE

- Avoid excessively long venting systems and keep the number of elbows to a minimum.

**NOTICE**

Due to tight construction of modern homes, Buderus recommends drawing combustion air from outdoors. The boiler is factory prepared for connecting 4" rigid pipe ducted directly to the increaser at the rear of the boiler. For further directions → Chapter 7.2, page 28.

Except for direct venting, and provided ample combustion air is available in the boiler room, combustion air can also be drawn from the room (→ Chapter 7.2, page 28 for details).

**NOTICE**

For Canada the G125 BE is approved without a Blocked Vent Switch. Should local authorities require a Blocked Vent Switch → Chapter Fig. 63, page 68.

### 7.1.1 Vertical Venting Systems

The G125 BE boiler can be vented vertically using an existing masonry chimney or a factory built All-Fuel or L-vent chimney.

#### 7.1.1.1 Masonry Chimney

Venting system: Masonry Chimney			
Comment	Draft	Combustion air	Max. vent length
Barometric damper required	Negative	Outside air or room air	60 ft.

Refer to NFPA 31 for requirements on chimney venting. Old, cold or over-sized chimneys require the use of an approved 5" chimney liner (→ Page 20). The maximum vent length of a masonry chimney is 60 ft.

A masonry chimney is operated under slight negative pressure, and requires a barometric damper.

- Follow damper manufacturer's instructions as to placement.
- Adjust draft for negative 0.02 – 0.04" W.C.

**DANGER TO LIFE**

from toxic flue gases.

**WARNING!**

- Verify that all vent pipe connections have been installed properly.
- Have the entire venting system cleaned and inspected annually by a qualified service company.

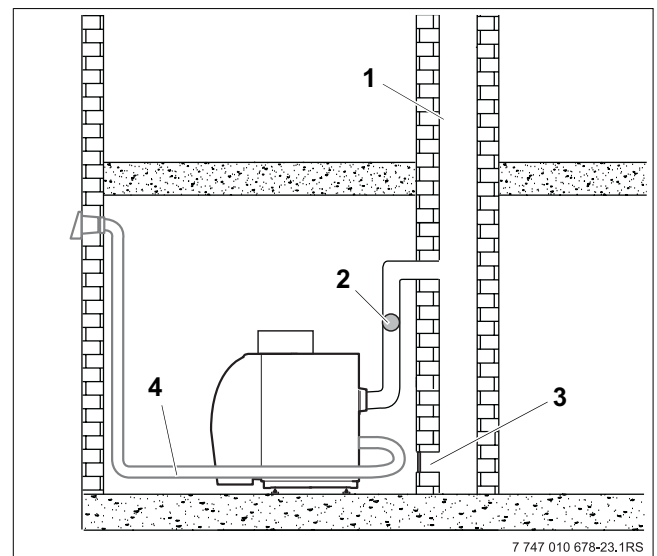


Fig. 12 Masonry chimney installation

- 1 Chimney
- 2 Barometric damper
- 3 Clean-out
- 4 Horizontal air connection for combustion air (optional, see 7.2)

7 747 010 678-23.1RS

## 7.1.1.2 Chimney with 5" Liner

Venting system: Chimney with 5" Liner			
Comment	Draft	Combustion air	Max. Vent length
Barometric damper required	Negative	Outside air or room air	60 ft.

Install liner according to manufacturer's instructions. Follow all applicable local and national codes and regulations.

The maximum vent length of 5" liner in a masonry chimney is 60 ft.

The 5" liner in a chimney is operated under slight negative pressure, which requires a barometric damper.

- Follow damper manufacturer's instructions as to placement.
- Adjust draft for negative 0.02 – 0.04" W.C.

**DANGER TO LIFE**

from toxic flue gases.

**WARNING!**

- Verify that all vent pipe connections have been installed properly.
- Have the entire venting system cleaned and inspected annually by a qualified service company.

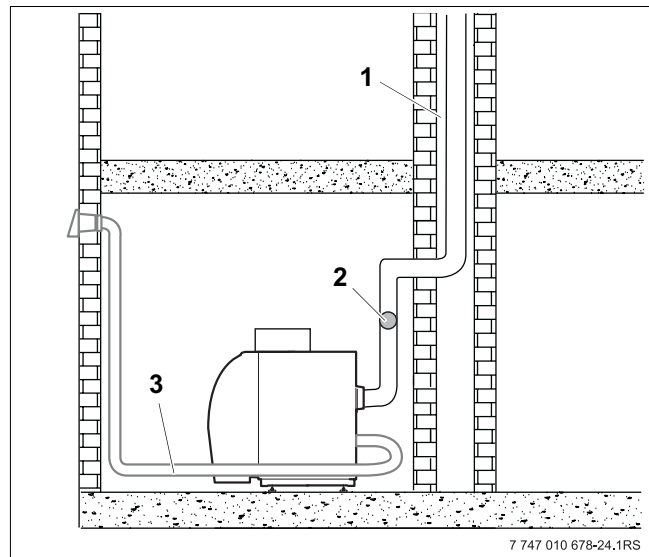


Fig. 13 5" Chimney liner installation

- 1 5" Chimney liner
- 2 Barometric damper
- 3 Horizontal air connection for combustion air (optional, see 7.2)

### 7.1.1.3 Vertical Vent

Venting system: 5" Vertical Vent			
Comment	Draft	Combustion air	Max. Vent length
Barometric damper required	Negative	Outside air or room air	60 ft.

Extend the vertical vent pipe sufficiently far above the roof per NFPA 31. Follow all applicable local and national codes and regulations.

The maximum length of the vertical 5" venting system is 60 ft.

The 5" vertical venting system operates under a slight negative pressure, which requires a barometric damper.

- Follow damper manufacturer's instructions as to placement.
- Adjust draft for negative 0.02 – 0.04" W.C.



#### DANGER TO LIFE

from toxic flue gases.

- WARNING!**
- Vertical vent pipe must have an approved fire stop at each ceiling penetration and the stack must be properly supported at its base.
  - Each venting section must be supported at each elbow and at least every 48" of straight pipe.



#### DANGER TO LIFE

from toxic flue gases.

- WARNING!**
- Verify that all vent pipe connections have been installed properly.
  - Have the entire venting system cleaned and inspected annually by a qualified service company.

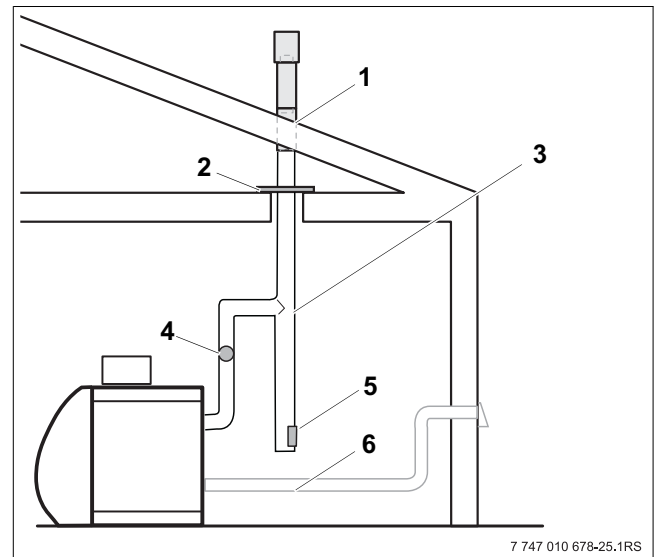


Fig. 14 Vertical venting system installation (supports are not shown for clarity)

- 1 Roof Penetration
- 2 Fire stop
- 3 All-Fuel or L vent flue pipe
- 4 Barometric Damper
- 5 Clean-out
- 6 Horizontal air connection for combustion air (optional, see 7.2)

7.1.2 Horizontal Venting

Venting system: Side wall			
Comment	Draft	Combustion air	Max. Vent length
Sealed vent	Positive	Outside air only	20 ft.

The maximum length of the direct vent system is 20 ft. of linear pipe including 3 x 90° elbows. With 4 elbows the maximum pipe length is 10 ft.

The following two direct vent terminations are approved with the G125 BE, and are available for purchase from your Buderus supplier.

Both exhaust terminations are approved for use with two different exhaust vent pipe options.

- **Option 1:**  
Flexible, insulated 4" stainless steel oil vent. The insulated oil vent is rated for 1" clearance to combustibles. Wrap the adapters with 3" of ceramic wool covered with foil tape or sheet metal to maintain 1" clearance. For installation instructions → Chapter „7.1.2.6 Installation of Insulated Flexible Oil Vent“, page 26.
- **Option 2:**  
Standard, 26 gauge galvanized 4" vent pipe. Maintain 18" clearance to combustibles with galvanized vent pipe (→ Chapter „7.1.2.7 Installation of Galvanized Vent Pipe“, page 27).



**NOTICE**

Horizontal vent systems operate under positive pressure, which requires all seams to be sealed. Use high temperature silicone (500°F rated, G.E. 106 or equivalent) to seal any joints, screw penetrations, or combustion test holes, and seal at each pipe connection and all joints on adjustable elbows. Refer to 7.1.2.2 for details.



**NOTICE**

Installations in Canada less than 7 ft. above ground are required to have a cage/screen over the termination to prevent injury from touching hot surfaces.

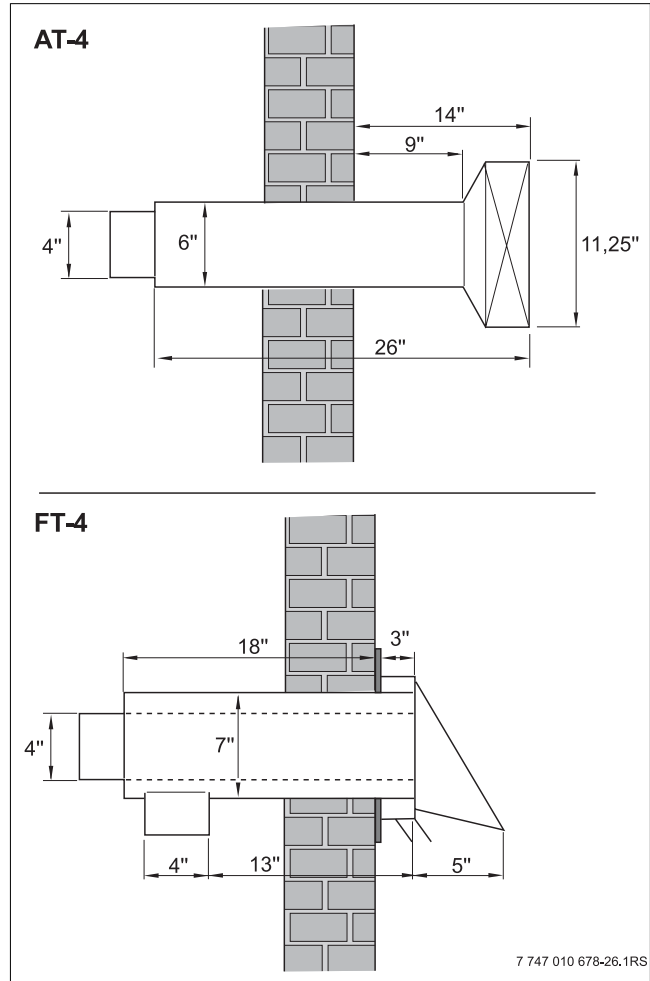


Fig. 15 Aerocowl (AT-4) and Concentric (FT-4) termination

### 7.1.2.1 Location of Exhaust Wall Termination

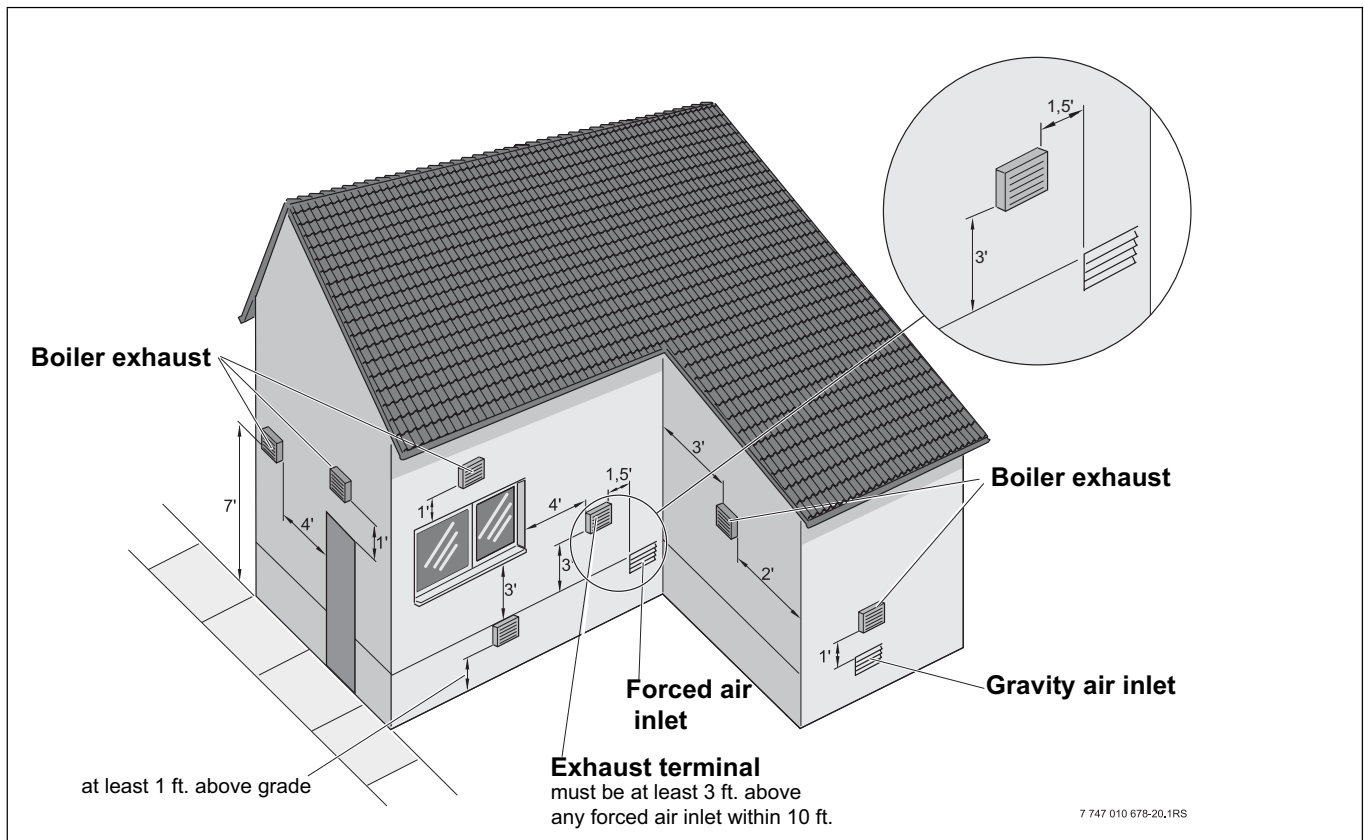


Fig. 16 Minimum clearance for termination

**The location of the wall termination is one of the most important aspects of a direct-vent installation. In addition to the minimum clearances of terminations shown in Fig. 16, observe the following rules:**

1. Both the intake and exhaust terminations must be located on the same outside wall in order to balance wind pressure effects.
2. Wall terminations shall not be facing the direction of prevailing winds.
3. The exhaust terminal must be located such that flue gases will be freely dispersed without reentering the building.
4. Exhaust terminal shall be at least 2 ft. from adjacent buildings, and flue gases shall not be able to enter adjacent buildings.
5. The exhaust terminal shall be at least 7 ft. above grade when above public walkways. Ensure that freezing condensate does not lead to hazardous conditions on walkways.
6. The exhaust terminal shall never be located underneath porches or crawl spaces, alcoves, or other building features that prevent dispersing flue gases.
7. The exhaust terminal shall never be located less than 3 ft. from inside building corners, and never less than 2 ft. from outside corners.
8. The exhaust terminal shall be located at least 3 ft. above any forced air inlet within 10 ft. horizontally.
9. The exhaust terminal shall never be less than 4 ft. below, 1 ft. above, or 4 ft. horizontally from any door, window, or gravity air inlet into the building.
10. The exhaust terminal shall be at least 1 ft. above grade and snow line, and where it is not susceptible to blockage from debris, leaves or falling snow or ice.
11. A ½" wire-mesh screen at the exhaust terminal must be maintained in good working order.
12. The exhaust terminal shall terminate at least 3 ft. from any other building opening, oil tank vent or oil tank fill inlet, and 6 ft. from any gas service regulator vent outlet.
13. Select the point of wall penetration maintaining a minimum slope of ¼" per foot toward the termination on the last horizontal pipe section. The wall termination assembly must also slope ¼" per foot toward the outside to drain possible condensate from the venting system.

### 7.1.2.2 Installation of Aerocowl exhaust termination (Part No. AT-4)

- Follow guidelines in section 7.1.2.1 regarding the relative position of the exhaust and terminal.
- Follow manufacturer's installation guidelines of the AT-4.

This system consists of a 4" air intake hood, a 5" x 4" reducer and a 26½" long, insulated Aerocowl exhaust termination. This termination has a zero clearance rating to combustibles. **Do not install** the vacuum relief damper ("not needed").

- Cut a 6" round opening in the outside wall at the selected location. Apply silicone caulking to the backside of the outer face plate and secure it to the outside wall.
- Insert the Aerocowl termination from the outside up to the outer wall stop. Ensure slope of ¼" per foot to outside.
- Slide inner plate on the termination up to the inside wall, tighten the gear clamp and secure the inner plate to the wall.
- For Aerocowl AT-4 installations in Canada less than 7 ft. above ground, install a cage/screen over the termination to prevent injury from touching hot surfaces.

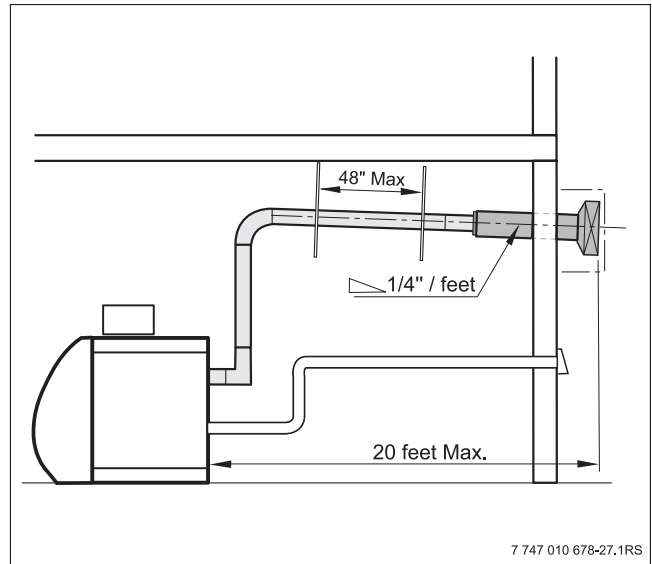


Fig. 17 Aerocowl exhaust termination (Part No. AT-4) and separate air intake hood

### 7.1.2.3 Installation of the concentric Fields termination (FT-4)

- Follow manufacturer's installation guidelines of the FT-4.

This system consists of a 5" x 4" reducer and a zero clearance concentric combination intake/exhaust termination with a 4" provision for fresh air intake piping. **Do not install** the vacuum relief damper ("not needed").

- Cut a round 7" diameter opening in the outside wall at the selected location.
- Remove the 4" air intake collar from the termination assembly.
- Apply silicone caulking to the back side of the wall face plate. Insert the concentric termination from the outside.
- Ensure slope of ¼" per foot to outside. Secure the face plate to the outside wall.
- Reinstall the 4" collar.

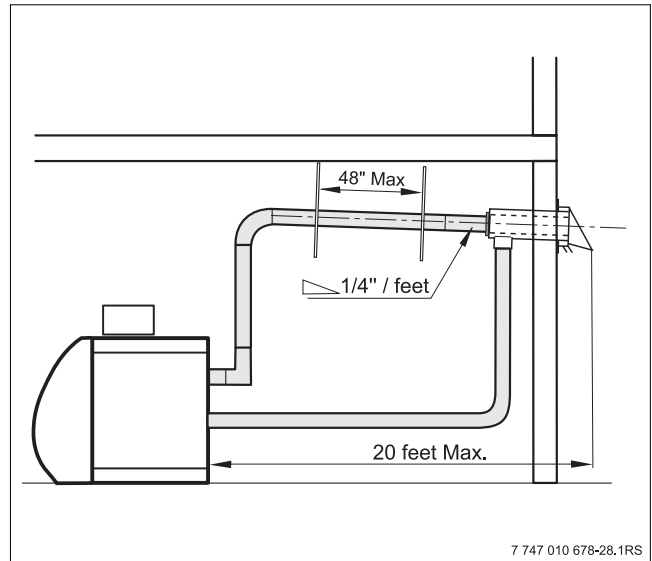


Fig. 18 Combination air intake/exhaust termination (Part No. FT-4)



### 7.1.2.4 Sealing of the Vent Pipe



#### DANGER TO LIFE

from toxic flue gases.

#### WARNING!

The discharge side of the direct vent combustion system operates under positive pressure.

- It is of vital importance to seal all joints and screw penetrations using high temperature silicone (rated for 500°F, G.E. 106 or equivalent) to prevent leakage of flue gases into the building.
- The venting system shall never be pierced under any circumstances after initial installation. Combustion measurements shall be taken at the exhaust termination and/or overfire. The breeching can be pierced for testing as long as the hole is sealed airtight with a bolt, washers and high temperature silicone.



#### DANGER OF FIRE

from combustible material or liquid.

#### CAUTION!

- Establish a safe clearance between the vent termination and the combustible material per NFPA 31. The minimum clearance are:
  - galvanized vent pipe 18",
  - insulated oil vent pipe 1"

The minimum clearances compared to the boiler → Chapter 6.1, page 15.

### 7.1.2.3 General Guidelines for Vent Pipe Installation

Maintain a minimum slope of ¼" per foot toward the termination on the last horizontal vent pipe section.

- The wall termination assembly must also slope ¼" per foot toward the outside to drain possible condensate from the venting system.
- Slope all other horizontal pipe runs ¼" per foot toward the boiler.
- Avoid any dips in the piping, particularly when using the flexible insulated stainless steel oil vent.



#### DANGER OF LIFE

from toxic flue gases.

#### WARNING!

- Never install a barometric damper into the horizontal direct vent exhaust piping.
- Verify that after system installation, all vent pipe connections have been installed properly.
- Check all seams and joints for gas leaks. Correct as necessary.
- Have the entire venting system cleaned and verified annually by a qualified service company.

### 7.1.2.6 Installation of Insulated Flexible Oil Vent

- Apply a ¼" wide bead of high temperature silicone all around the boiler vent connection 1" from the end.
- Install 5" to 4" reducer on boiler vent connection. Secure properly with a clamp.
- Carefully measure the required length of vent pipe. Cut to length with a hacksaw allowing for the two end adapters in your measurement.
- Apply a small bead of high temperature silicone to the outside of the oil vent ends.
- Twist end adapters to each end of the oil vent. Turn adapters counter clockwise. Engage the outer cover of the adapter evenly over the exterior of the vent pipe. Turn the adapter until the vent pipe interior seats evenly against the expanded teflon gasket of the end connector.
- Secure adapters to the vent pipe with the provided clamps.
- Apply a ¼" wide bead of high temperature silicone all around at the 5" x 4" boiler reducer and wall termination connection.
- Slide adapters on to reducer and wall termination pipe all the way. Tighten with clamps.
- Support the flexible vent pipe at regular intervals with brackets or hangers.
- Maintain a 1/2" rise per foot on horizontal runs sloped to outside.

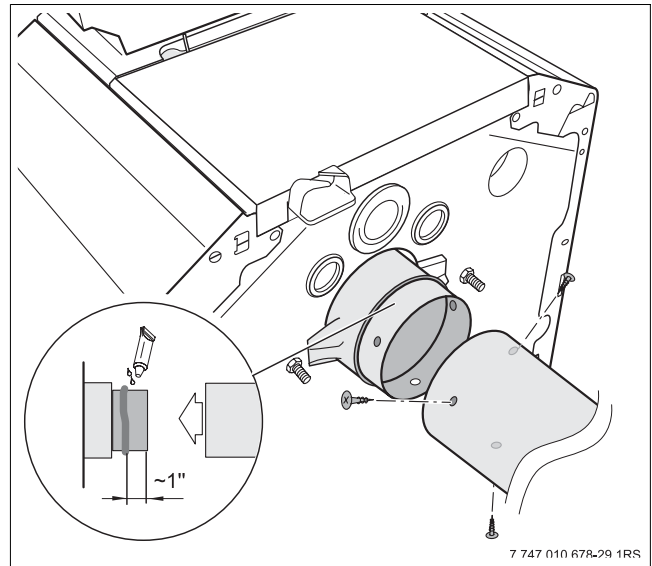


Fig. 19 Boiler exhaust pipe



#### NOTICE

With the installation:

- Avoid any sag in the pipe.
- Do not bend pipe excessively. Slope termination to outside.
- Wrap 3" ceramic insulation around adapter near termination and secure with sheet metal or foil tape and hose clamps to maintain 1" clearance.

### 7.1.2.7 Installation of Galvanized Vent Pipe

- Apply a ¼" wide bead of high temperature silicone (500°F rated silicone, G.E. 106 or equivalent) all around the boiler vent connection (breech) 1" from the end (→ Fig. 19, page 26).
- Install 5" to 4" reducer on boiler vent connection. Secure properly with a clamp.
- The maximum length of the direct vent system is 20 ft. of linear pipe plus a maximum of 3 x 90° elbows. With 4 elbows the maximum pipe length is 10 ft. Use high temperature silicone to seal any joints, screw penetrations, or combustion test holes, as well as seal at each pipe connection and all joints on adjustable 90° elbows.



#### NOTICE

Once the entire venting system is installed, make sure all joints are secure (→ as well as Chapter „7.1.2.4 Sealing of the Vent Pipe“, page 25).



#### NOTICE

Installations in Canada less than 7 ft. above ground are required to have a cage/screen over the termination to prevent injury from touching hot surfaces.



**WARNING!**

#### DANGER TO LIFE

from toxic flue gases.

- All seams and joints of the exhaust venting must be inspected for flue gas leaks.
- Have the entire venting system cleaned and inspected annually by a qualified service company.



**CAUTION!**

#### BOILER DAMAGE

from condensation.

When using galvanized vent pipe the flue gas temperature at the boiler breech must exceed 300°F in order to avoid condensation. If less than 300°F are measured, the flue gas temperature will have to be raised by removal of 2 or more baffles (→ Chapter 8.8, page 42).

This notice is not applicable if stainless steel vent pipe is being used instead of galvanized pipe.



**WARNING!**

#### HEALTH DANGER

- When using galvanized vent pipe a proper protection (e.g. screen) at the wall termination has to be installed. Follow also local codes.

## 7.2 Installation of Combustion Air Supply System


**CAUTION!**
**BOILER DAMAGE AND SYSTEM PROBLEMS**

Due to missing or insufficient openings for combustion air.

Sufficient openings for combustion air and ambient air are required.

Insufficient air flow in the boiler room can lead to temperature rise, with a potential for consequential property damage.

Insufficient combustion air can result in poor burner performance and lead to service calls.

- Ensure that primary and secondary air openings are of sufficient size, and are not closed off or reduced in size.
- The boiler can not be placed in operation if such deficiencies have not been corrected.
- Make the equipment owner aware of the situation.

To ensure adequate combustion air supply for the boiler system, follow the guidelines of the NFPA 31, and observe all local and national codes and regulations.

For Canada refer to the guidelines of CSA/CGA-B149.1 and 2 Installation Codes.


**CAUTION!**
**BOILER DAMAGE**

from contaminated combustion air.

- Never place chlorine containing cleaning agents, and hydrocarbon based chemicals near the boiler (e.g. spray cans, solvents, cleaning agents, paint, glue).
- Avoid generation and accumulation of large amounts of dust.


**NOTICE**

When contamination of combustion air is expected (such as installations near swimming pools, dry cleaning operations or hair salons), Buderus strongly recommends using fresh air ducted directly from the outside to the boiler.


**WARNING!**
**DANGER OF FIRE**

from flammable material and liquids.

- Do not store flammables or other liquids in the vicinity of the boiler.

### 7.2.1 All air drawn from inside the building

The G125 BE boiler has been approved for operation drawing all combustion air from the room, provided the installation meets the requirements of NFPA 31, and the boiler is NOT vented horizontally.

### 7.2.2 All air drawn from outdoors

The boiler has been approved for operation drawing all combustion air from the outside, provided the combustion air intake system meets the following requirements.

The combustion air shall be directly delivered to the rear of the boiler via 4" ducting.

- Make an opening in the outside wall for wall termination.
- Use 4" rigid galvanized pipe or 4" flexible metal pipe.
- The maximum length of the fresh air piping must never exceed 100 ft. Reduce by 10 ft. for every 90° elbow, 5 ft. for every 45° elbow.
- Install a fresh air intake hood with 1/2" screen to avoid debris and objects from entering the pipe. Install from the outside and secure.
- Secure reducer to rear of boiler with 2 screws.
- Connect fresh air ducting to reducer.



#### NOTICE

Use only 4" diameter air intake piping or flexible metal hose. Outside components, and not be susceptible to blockage from debris, leaves or falling snow or ice.

Maximum fresh air intake piping must not exceed 100 ft.

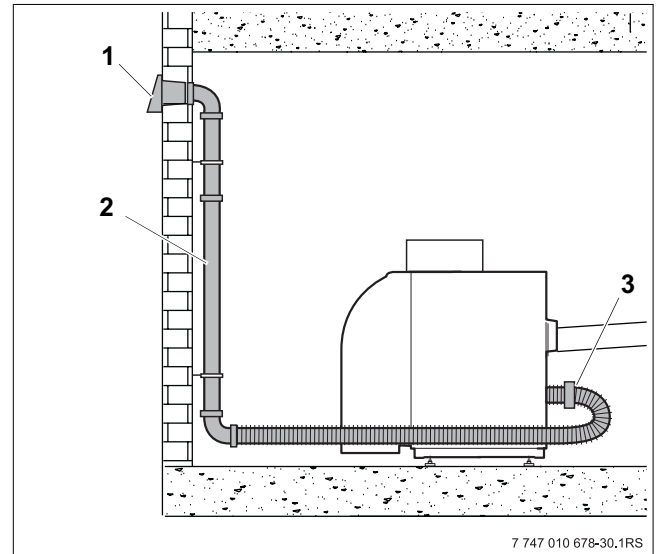


Fig. 20 Combustion air supply system

- 1 Wall termination
- 2 Fresh air intake piping
- 3 Reducer with sensing port

### 7.2.3 Guidelines for the location of the air intake terminal

In addition to the minimum clearances of terminations (→ Chapter „7.1.2.1 Location of Exhaust Wall Termination“, page 23), observe the following rules:

- Both the intake and exhaust terminations must be located on the same outside wall in order to balance wind pressure effects.
- Wall terminations shall not be facing the direction of prevailing winds.
- The exhaust terminal shall be at least 1 ft. above grade and snow line, and where it is not susceptible to blockage from debris, leaves or falling snow or ice.
- An outside air intake riser is permitted, provided it terminates in 2 x 90° elbows facing down (→ Fig. 21).
- The intake and exhaust terminals must be at least 4 ft. apart when using the Aerocowl (AT-4) exhaust termination. This minimum distance can be reduced to 2 ft. when the intake terminal is at least 1 ft. below the exhaust terminal.
- A ½" wire-mesh screen at the exhaust terminal must be maintained in good working order.

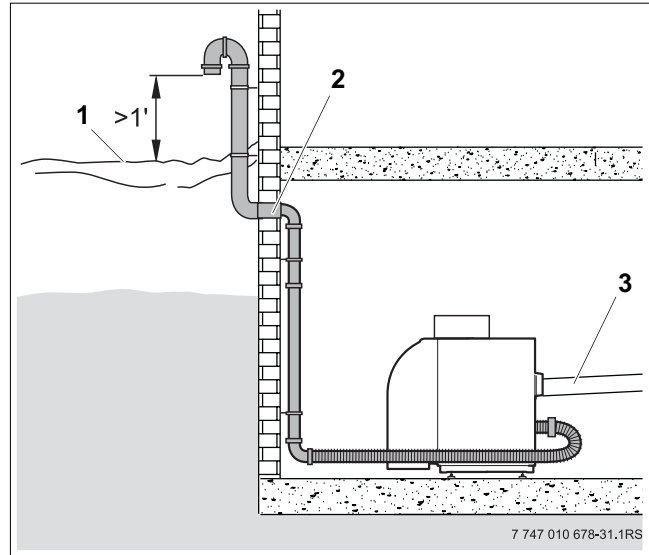


Fig. 21 Outside air intake riser

- 1 Maximum snow level
- 2 Air intake riser terminating in 2 x 90° elbows
- 3 Vent pipe

## 7.3 Installation of Water Connections



### SYSTEM DAMAGE

due to leaking connections.

#### CAUTION!

- Install the piping connections to the boiler without having undue stress on the near boiler piping.

### 7.3.1 B-Kit Installation

The relief valve and pressure/temperature gauge are installed into the supply manifold as described below:

- Use the 1-1/4" BSP x NPT conversion nipple and install the unmarked end into the supply (VK) connection of the boiler. This side also has longer thread length and the thread is straight (BSP).
- The conversion nipple is marked on the 1-1/4" NPT side with pink color and a NPT stamping in the pipe.

- Install 90° elbow 1-1/4" on conversion nipple.
- Install supply manifold into elbow and orient in desired direction (Fig. 23).
- Install 90° elbow, relief valve and pressure/temperature gauge.



### NOTICE

The pressure relief valve can only be installed after the hydrostatic test (→ Chapter 7.4, page 33)

Use the supplied 3/4" 90° elbow to ensure that the relief valve discharge is installed horizontally.



### NOTICE

We recommend, especially in older, large volume systems, to install a dirt filter in the return connection to the boiler to reduce waterside debris build-up.

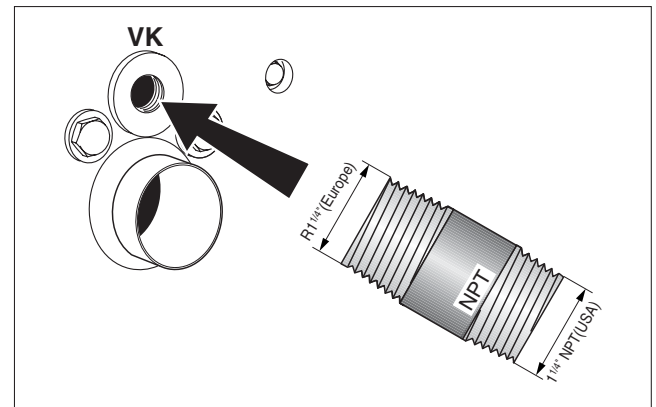


Fig. 22 Measuring thread length on 1-1/4" conversion nipple

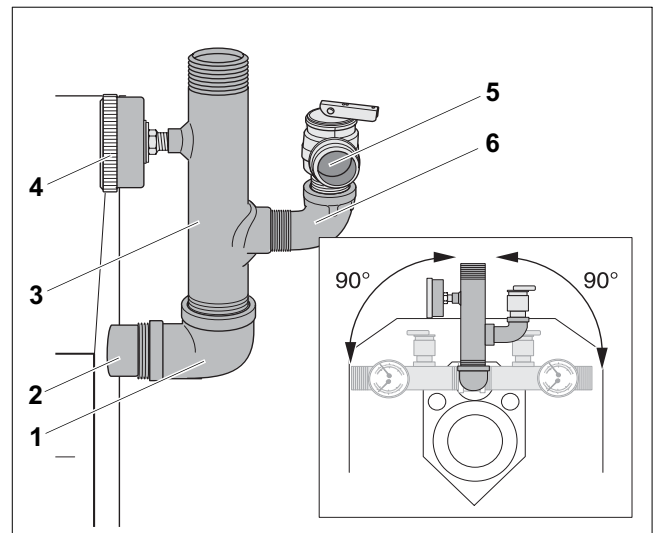


Fig. 23 B-Kit Installation

- 1 90 degree 1 1/4" NPT elbow
- 2 (Conversion) nipple
- 3 Supply manifold
- 4 Pressure/temperature gauge
- 5 Relief valve
- 6 90 degree 3/4" NPT street elbow

7.3.2 Installation of Boiler Drain (B-Kit Component)

- Install the 3/4" boiler drain (B-kit component) into the EL tapping.



**NOTICE**

Install a fill connection in the supply piping to the boiler.

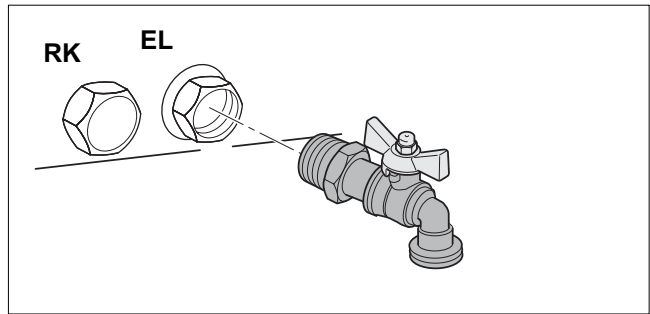


Fig. 24 Boiler Drain installation

7.3.3 Installation of System Components

Use the adjacent diagram as an aid during the installation of near boiler components.

Additional installation samples are found in → Chapter 12, page 57.

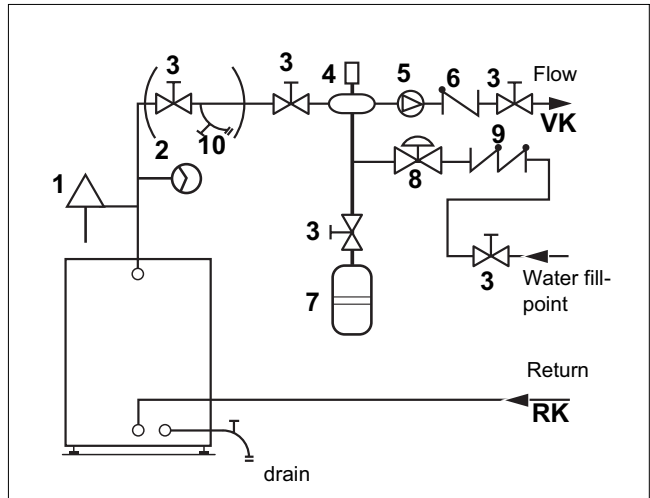


Fig. 25 Installation Diagram

- 1 Relief valve
- 2 Pressure/temperature gauge
- 3 Ball valve
- 4 Air eliminator
- 5 System pump
- 6 Backflow preventer
- 7 Expansion tank
- 8 Automatic feet valve
- 9 Flow check
- 10 Purge station



## 7.4 Filling and Checking for Water Leaks

The boiler must be tested hydrostatically for leaks. Check the entire system for leaks prior to placing the system in operation to prevent leaks during operation.



**CAUTION!**

### SYSTEM DAMAGE

Be careful not to expose the system to excessive test pressures during the hydrostatic test as it can damage pressure, control and safety components.

- Make sure that all pressure, control and safety components are NOT installed during the hydrostatic test.



**CAUTION!**

### SYSTEM DAMAGE

due to excessive temperatures.

When a hot system is filled with cold water, large temperature stresses can occur. The boiler can develop a leak under these circumstances.

- Fill the system only when the boiler is cold (The fill water temperature can not exceed 100 °F).
- Water quality must comply with quality guidelines and fill water conditions must be recorded.

Perform the hydrostatic test at 1.5 times the expected operating pressure and in accordance with local code requirements:

Maximum operating pressure	Maximum test pressure
30 psi (based on supplied relief valve)	45 psi
58 psi (based on 50 psi relief valve)	75 psi

- Plug relief valve connection (→ Fig. 23, page 31) and all boiler openings with plugs. (Not supplied).
- Close the ball valve to the expansion tank.
- Open automatic feed valve.
- Fill the boiler slowly with the feed valve.

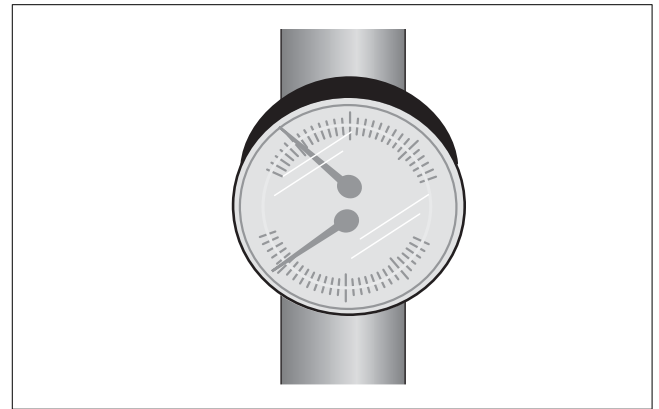


Fig. 26 Pressure and temperature gauge

**HEALTH DANGER**

due to contamination of drinking water.

**CAUTION!**

- Please observe local and state requirements regarding avoidance of contamination of drinking water (e.g. due to water from closed loop heating systems).


- Open the automatic air vent to allow air to escape.
- Slowly fill the heating system. Monitor the pressure gauge.
- Check all water connections for leaks.
- Vent the heating system by opening and bleeding radiators. Open purge valve slowly and allow air to escape.
- When water pressure drops during the fill, open up the fill valve more.
- When no leaks are found, remove plug, drain water and install relief valve (→ Fig. 23, page 31).

## 7.5 Installation of Oil Line

- Install the oil line per local code.

The furnished Tigerloop oil filter must be installed on the outside of the boiler using the supplied mounting bracket.

- Inspect the existing oil line and replace if necessary. Check swing direction on burner door and reverse door swing if desired.
- Drill 4 holes into the side panel of the jacket panel conforming to the Tigerloop mounting bracket.
- Secure mounting bracket to boiler side panel.
- For a 3/8" oil line, install a 3/8" flare x 3/8" NPT adapter in the inlet and a 1/4" x 3/8" NPT adapter in the outlet of the Firomatic valve.
- Install the Firomatic in Tigerloop.
- Connect the return oil line from the burner using the G3/8" x 1/4" NPT adapter back to the oil filter.
- Install the vacuum gauge in its adapter and screw into the oil line feeding the burner.
- Secure oil filter assembly to the mounting bracket.
- Attach oil lines.
- Check entire oil line assembly for leaks.

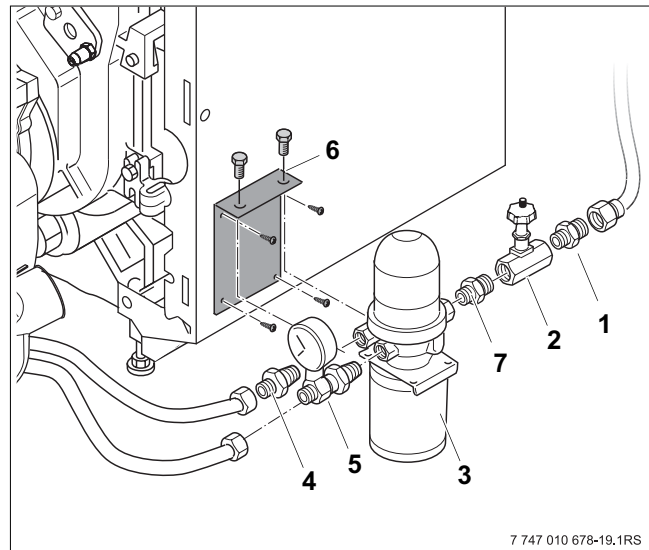

7 747 010 678-19.1RS

Fig. 27 Field installation of Tigerloop oil filter

- 1 NPT adapter (3/8" flare x 3/8" NPT)
- 2 Firomatic valve
- 3 Tigerloop oilfilter
- 4 NPT adapter (3/8" x 1/4")
- 5 Vacuum gauge
- 6 Mounting plate
- 7 adapter 3/8" x 1/4" NPT

## 7.6 Electrical Connections

This section only applies to G125 BE boilers equipped with a Buderus Logamatic or Aquasmart control.



### HEALTH DANGER

from electric shock.

#### WARNING!

- All electrical work must be performed by a qualified electrician.
- Before opening the control: Shut off electrical supply and prevent from accidental reactivation.
- Observe all installation instructions.

### 7.6.1 Installation of Aquasmart

An Aquasmart controls the boiler water supply temperature when not using a Buderus Logamatic control.

- If a Beckett AquaSmart is being installed the factory-fitted immersion well must be replaced by the immersion well supplied with the control.

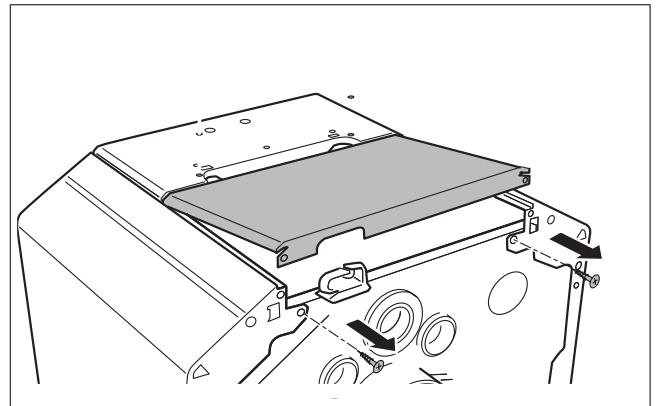


Fig. 28 Top rear cover removal

- Install the Aquasmart according to manufacturers' instructions.
- Install Aquasmart as per wiring diagram (Fig. 62, page 67).

## 7.6.2 Control System Installation

- To remove rear top cover first unscrew two rear sheet metal screws.
- Carefully route the burner cable on the outside of the insulation from the front of the boiler to the controls location at the top of the boiler.

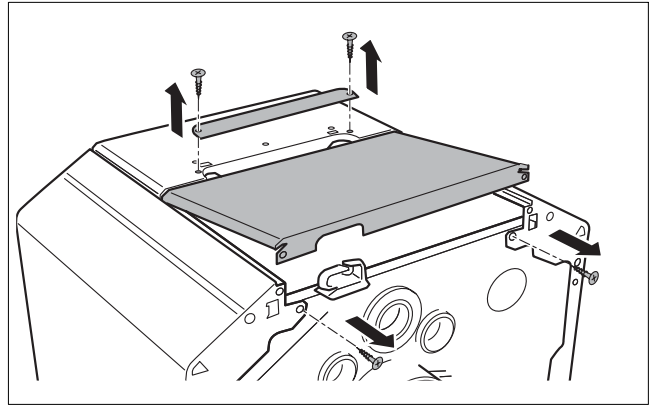


Fig. 29 Removal of rear top cover and top cover plate

- Slide plastic front tabs of control panel into the oval shaped openings.
- Slide the control panel forward.
- Push forward on plastic snap tabs in rear of control to engage them into the top panes square knock-outs.

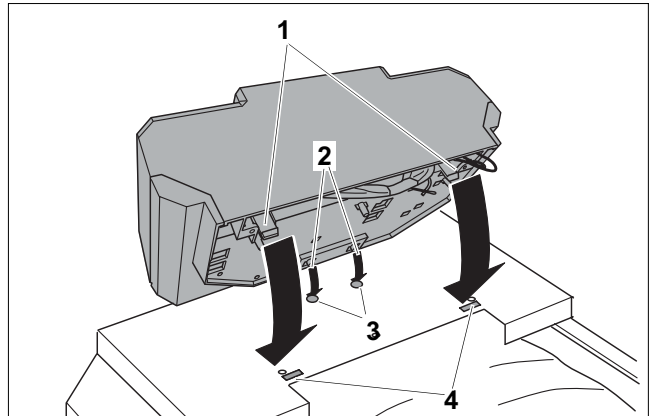


Fig. 30 Installation of control

- 1 Plastic snap tabs
- 2 Plastic front tabs
- 3 Oval knock-outs
- 4 Square knock-outs

- Remove top cover of control panel. Remove cover screws.
- Secure control to top cover using small sheet metal screws.

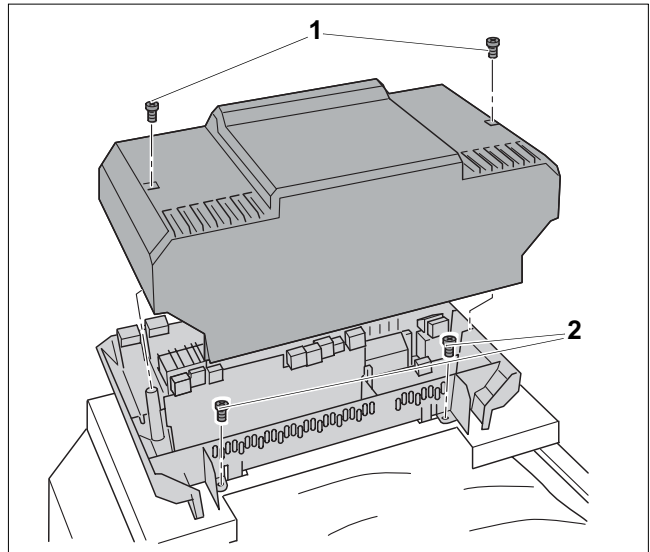


Fig. 31 Removal of top cover

- 1 Top cover screws
- 2 Sheet metal screws

### 7.6.3 Installation of Temperature Sensor and Burner Cables



#### NOTICE

When installing a Logamatic control, you must replace the installed brass well with the chrome well supplied with the Logamatic control.

- Remove factory installed sensor well.
- Apply sealant to Logamatic well and screw into tapping.
- Remove plug.



CAUTION!

#### SYSTEM DAMAGE

Be careful not to kink or have the capillary tubes come in contact with sharp surfaces.

- Route the capillary tubing carefully and avoid kinking. Route capillaries and sensor wiring to the immersion well.

- Strap excess tubing and wiring together and place on top of insulation.
- Plug the burner cable into the designated location of the Logamatic control (Fig. 63, page 68).
- Burner wiring can be routed down towards the front of the boiler. If burner is supplied with a wiring harness, route harness between jacket panels and boiler insulation.
- Connect end of burner cable into green plug to Logamatic control panel.
- Bring the sensor bundle to the installed chrome well and slide bundle into the well. The plastic holding clip will slide back.
- Insert all sensing elements fully into the well and secure tubing with furnished metal holding clip.



#### NOTICE

Ensure all sensing elements are all fully inserted into the well and make good contact with well inner surface. Use the tension clip in the middle of sensing elements.

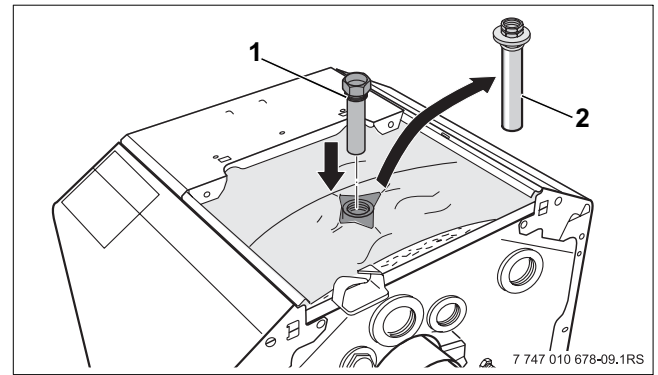


Fig. 32 Changing out the well

- 1 Logamatic well
- 2 Supplied well

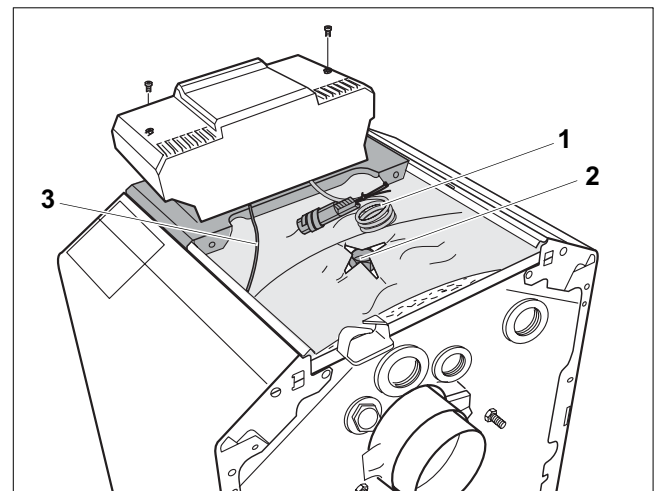


Fig. 33 Routing and connecting of capillary, sensor and electrical wiring

- 1 Capillary and sensor wiring
- 2 Well location
- 3 Burner cable/wiring

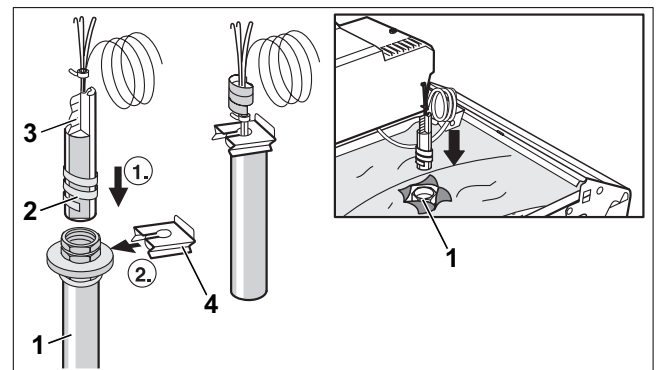


Fig. 34 Routing and connecting of capillary, sensor and electrical wiring

- 1 Cable raceway opening in top front cover
- 2 Capillary tubing and sensor wiring
- 3 Well location
- 4 Burner cable/wiring

### 7.6.4 Electrical Connections

Install a power supply point near the boiler in accordance with local and state code.



**WARNING!**

#### **DANGER OF FIRE**

Electrical wiring can be damaged by hot boiler parts.

- Make sure that all tubing and wiring components are all placed on top of the boiler insulation.
- Ensure that the unit is properly grounded.

- Route all electrical wiring through the top cover race way and install wiring per electrical schematics in Logomatic manuals (→ Chapter 14, page 67).

### 7.6.5 Strain Relief Installation

Secure all electrical wiring near the Logomatic using the furnished plastic cable ties.

- Install cable clips with the tab facing up into the rear of the Logomatic (step 1).
- Slide cable clips down and lock them in (step 2).
- Push cable clips in (step 3).
- Push hinging tab down to secure cable (step 4).

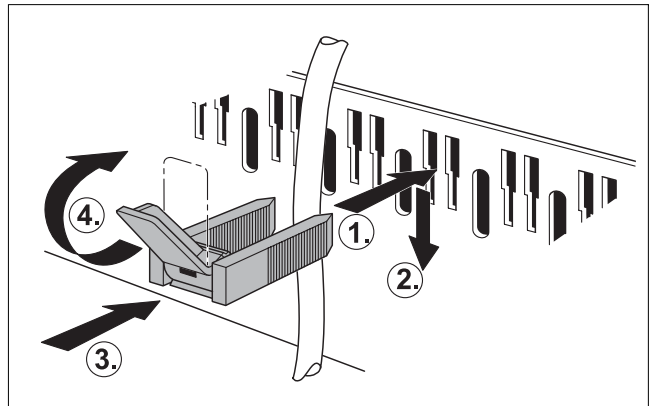


Fig. 35 Secure wiring with cable clips

### 7.6.6 Top Rear Panel Installation

- Put control top cover back and secure.
- Install rear top panel on boiler.

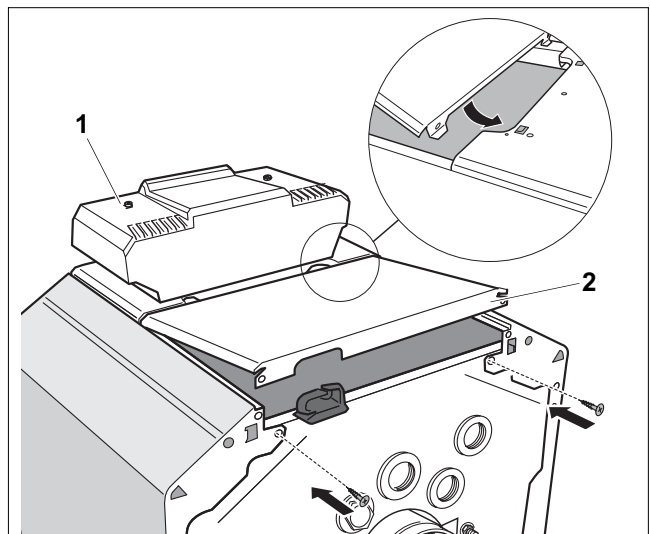


Fig. 36 Installation of rear top cover

- 1 Control top cover
- 2 Rear top panel

## 8 Placing the Boiler in Operation

This chapter describes the initial start-up procedure for the G125 BE boiler irrespective of the employed control system.

- Please fill out the start-up protocol during this process (→ Chapter 8.11, page 46).

Further information regarding boiler room lay-out and clearances, combustion air requirements and venting system as well as boiler operational requirements, refer back to → Chapter 3.2, page 8.



**CAUTION!**

### BOILER DAMAGE

from excessive dust and air contamination.

- Do not operate the boiler under high dust conditions, such as sheet rock dust and construction dust. Make sure to provide clean combustion air if the boiler needs to operate under such conditions.
- Install an air filter, or other means to ensure clean combustion air. Dust can originate from within during construction, but also from outside when the installation is in close vicinity of chemical plants, shop or dusty outside conditions.

### 8.1 Setting the Initial System Pressure

Set the system for regular operation during the initial start-up procedure.



**CAUTION!**

### SYSTEM DAMAGE

from material stresses as a result of temperature differences.

- Use cold water for the initial fill (Limit the fill water temperature to 100 °F maximum).
- Add additional make-up water until the desired pressure is achieved; at least 12 - 15 psi, but no more than 30 psi. (Actual settings are dependent on the pressure rating of the relief valve).

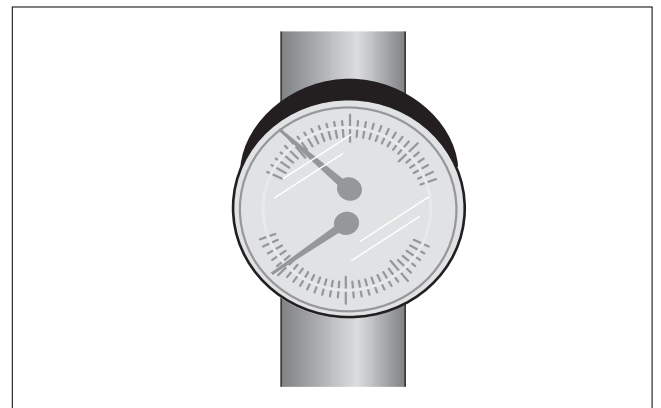


Fig.38 Pressure and temperature gauge

**HEALTH DANGER**

due to contamination of drinking water.

**CAUTION!**

- Please observe local and state requirements regarding avoidance of contamination of drinking water (e.g. due water from closed loop heating systems).

- Vent the system during the initial fill.

## 8.2 Checking the Relief Valve

- Make sure nobody is near the discharge of the relief valve.
- Lift up on the relief valve.

The relief valve has to open and relief water and pressure. Replace the relief valve immediately if it does not discharge. A defective relief valve can cause damage to the system.

## 8.3 Check Position of Flue Baffles (Room Air Operation)

Check to make sure that the flue baffle plates are in horizontal position before the initial start-up process:

- Remove burner cable from burner at disconnect point.
- Open the burner door by removing the two burner door bolts.
- Pull the baffle plates slightly out of the boiler.
- Bring the baffles in a fully horizontal position and push back into the boiler.
- Close the burner door and torque door bolts evenly with 90 lbs-inch torque using hex-head bolts.
- Reconnect burner cable back at burner.

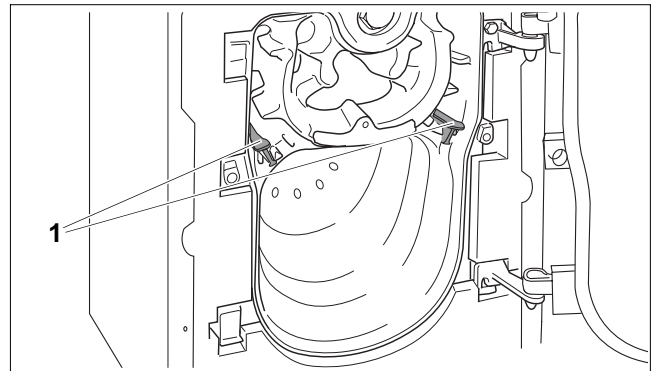


Fig.39 Opening the burner door

1 Flue baffles in secondary passages



## 8.4 Check Position of Flue baffle Plates (Outside Air Operation)



### NOTICE

In case of outside air operation, you must check the position of 8 flue baffles.

The check is identical as described in → Chapter 8.3.

- In addition, make sure to fully close the burner door and tighten the burner door bolts.

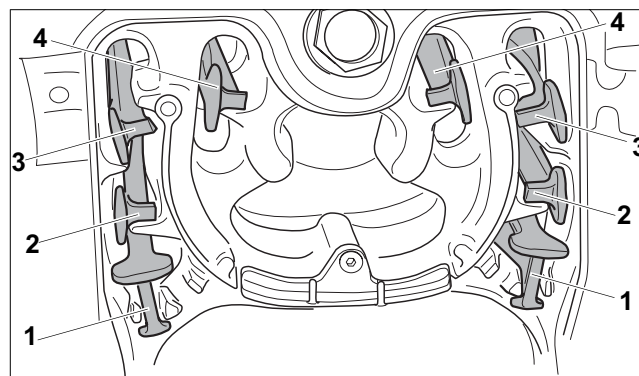


Fig.40 Blue baffle plates for fresh air operation

- 1 Flue baffle plates Nr. 1
- 2 Flue baffle plates Nr. 2
- 3 Flue baffle plates Nr. 3
- 4 Flue baffle plates Nr. 4

## 8.5 Prepare System for Operation

- Open fuel shut-off valve.
- Install burner cover on boiler.
- Turn on main system disconnect switch or turn on breaker in main breaker box.

## 8.6 Start-up of Control and Burner

Follow the burner start-up procedure per burner manufacturer's recommendations. Follow the → instructions furnished with the burner.

Turn on the main switch of the Logamatic control to activate the heating system. The burner comes on when the control is switched to a heat demand occurs or manual mode. Follow the instructions in the → Service Manual of the control.

- Select "manual" operation.
- Set the desired adjustable limit temperature on the control.
- Turn control on (Position "I").

## 8.7 Guidelines for Burner Start-up

Allow the burner to operate for 15 to 20 minutes prior to performing combustion test. Earlier combustion tests can lead to erroneous readings due to burning off of the sealing rope. We recommend to check the burner after a few weeks of operation.

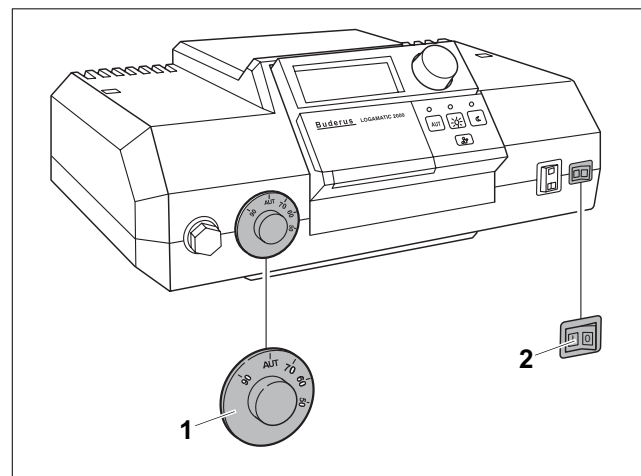


Fig.41 Switching control panel (Logamatic 2000 series controls)

- 1 Adjustable high limit dial
- 2 Main control switch

**NOTICE**

Improper burner adjustments can lead to improper combustion and sooting of the boiler. Burner lock-outs can also occur as a result.

- Always check the combustion with the following instruments.
- Never check and/or adjust burner operation by eye sight.

**Necessary instruments**

- CO<sub>2</sub> measuring equipment
- Draft measuring equipment
- Oil pressure gauge
- Stack thermometer
- Smoke tester
- Measure the over fire pressure at the measuring port on the burner door.
- Measure the breeching draft in the vent connector two vent pipe diameters away from the vent connections (Only on chimney vent models: refer to Direct Vent Manual for proper test location).

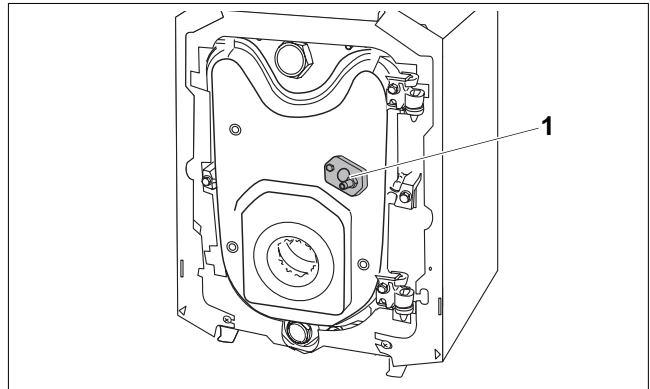


Fig.42 Pressure test port on burner door

1 Pressure test port

**8.8 Adjusting Stack Temperatures**

**CAUTION!**

**BURNER DAMAGE**

due to excessively high air inlet temperatures.

- You are only allowed to raise the stack temperature of the boiler in case of a dual pipe venting system. In case of complete concentric venting systems, one is not allowed to raise the stack temperature as it may lead to high inlet air temperatures.

When you determine that the stack temperature is too low, and condensate formation might take place in the chimney, the stack temperature can be increased by the following steps:

- Adjust the flue baffles
- Remove the flue baffles
- Remove flue blocking plates
- Shut-off the boiler (→ Chapter 9, page 47).



#### DANGER TO LIFE

from electric shock.

- WARNING!**
- Prior to opening the burner: Shut off power supply and prevent from accidental reactivation.

- Remove burner cover from boiler (→ Chapter 5.1, page 13).



#### BURNING DANGER

due to touching of hot surfaces.

- CAUTION!**
- Wear thermal protective gloves or use a set of pliers.

### 8.8.1 Adjusting/Removing Flue Baffles

Adjust or remove the flue baffles always in pairs.

- Remove burner cable from burner connector.
- For sealed combustion operation, remove hose from burner intake connection.
- Open burner door by removing the two hex head bolts.
- Close burner door and secure with burner door bolts (ca. 90 Lbs/inch). Tighten bolts evenly.

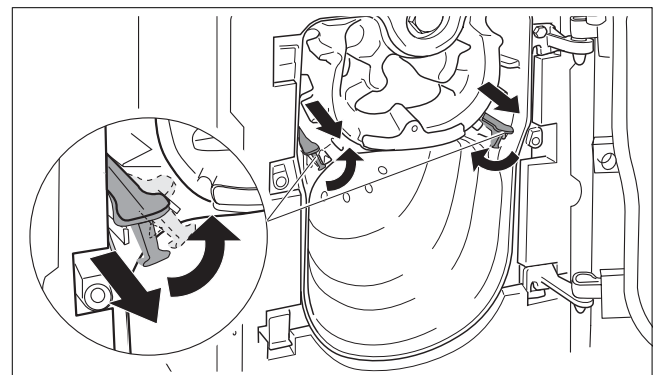


Fig.43 Adjusting the flue baffles

- Pull flue baffles slightly out of the flue passages.

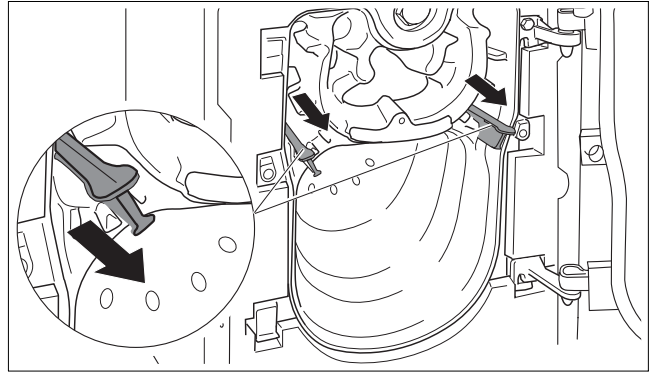


Fig.44 Removal of the flue baffles

When you need/want to remove flue baffles for fresh air operation, you can use the Table 13 below to estimate the effect on stack temperature.

Flue baffles	Increase in stack temperature
Removal of Nr. 4	about 40 °F
Additional Removal of Nr. 3	additional 40 °F
Additional Removal of Nr. 2	additional 40 °F

Table 12 Increase in Stack Temperatures

- Close burner door and secure with burner door bolts (ca 90 Lbs/inch). Tighten bolts evenly.
- Install burner cable back to burner disconnect.
- Recheck tightness of burner door after operation the burner for 10 minutes.
- Check stack temperature again.

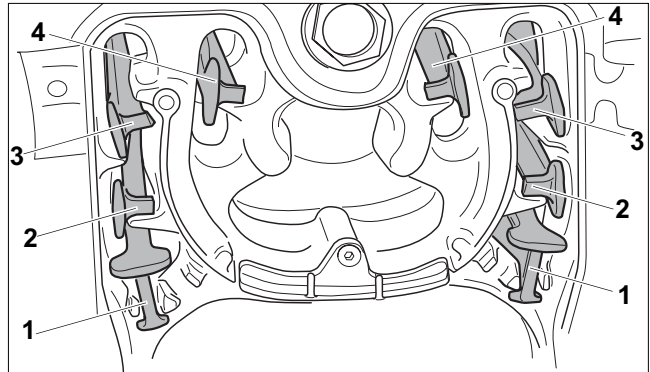


Fig.45 Blue baffle plates for fresh air operation

- 1 Flue baffle plates Nr. 1
- 2 Flue baffle plates Nr. 2
- 3 Flue baffle plates Nr. 3
- 4 Flue baffle plates Nr. 4

### 8.8.2 Removing Flue Blocking Plate

When the stack temperature after removal of flue baffles is still too low, you can also remove the front section blocking plate to increase the stack temperature.

The opening of the burner door is described in → Chapter 8.8.1.

- Remove blocking plate by removing set screw from the front section.
- Measure the stack temperature again → Chapter 8.8.1.

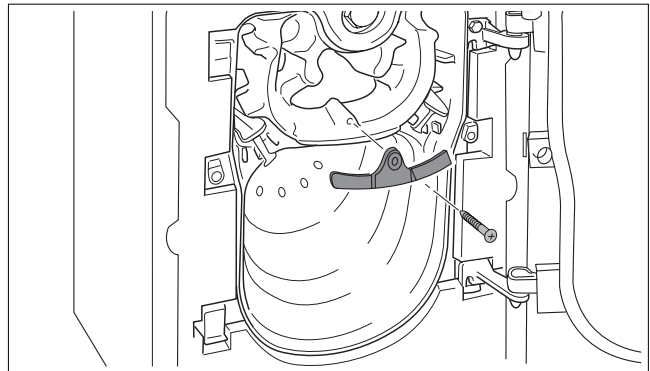


Fig.46 Removal of flue blocking plate

## 8.9 Testing of the Manual Reset High Limit (STB) of Logamatic controls

The manual reset high limit will permanently interrupt burner operation once its limit (230 °F) is exceeded. To restore operation, it is required to reset this control and lower the water temperature well below its fixed setting.

- Refer to → Logamatic Service Manual to check operation of manual reset high limit.

## 8.10 Installation of Front Burner Cover

- Hang burner cover into the hooks of the boiler jacket.
- Secure burner cover with screws into the side panels.



### DANGER TO LIFE

from electric shock.

#### WARNING!

- Operate the boiler only with an installed burner cover.

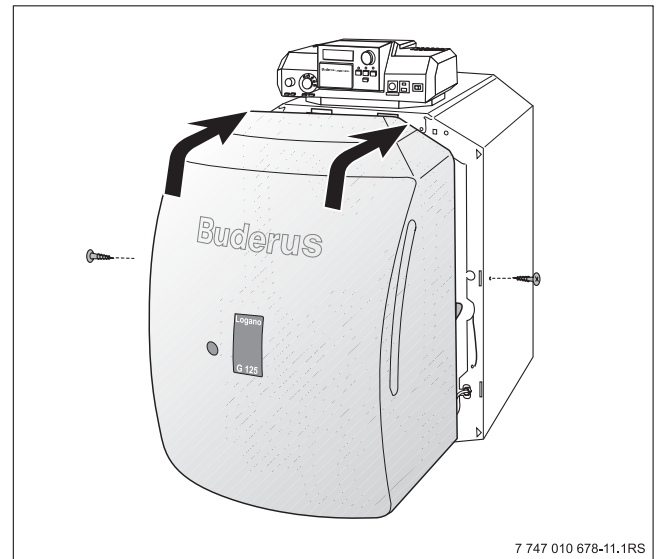


Fig.47 Installation of burner cover

## 8.11 Detailed Start-up Procedure

- Check off performed start-up steps, sign and date.

Start-up Procedure	Page	Value Measured	Comments
1. Filling of system and check for leaks	33	<input type="checkbox"/> _____ psi	
2. Set operating pressure Vent heating system Check operation of relief valve Pre-set expansion tank pressure (→ see expansion tank manufacturer instructions)	39	<input type="checkbox"/> _____ psi	
3. Check combustion air and venting system		<input type="checkbox"/>	
4. Check position of flue baffles	40	<input type="checkbox"/>	
5. Turn on control (→ Refer to control Service Manual)	41	<input type="checkbox"/>	
6. Turn on burner (→ Refer to burner Service Manual)	41	<input type="checkbox"/>	
7. Measure stack temperature (Adjust if needed)	42	<input type="checkbox"/> _____ °F	
8. Check manual reset high limit (STB)	44	<input type="checkbox"/>	
9. Adjust control settings based on requirements (→ Refer to control Service Manual)		<input type="checkbox"/>	
10. Inform end user and hand over instructions		<input type="checkbox"/>	
Confirm start-up procedure			
Company stamp/signature/date			



### NOTICE

- Always inform your customer regarding proper fuel source and record in → Operating Manual.

## 9 Taking the Boiler Out of Operation

### 9.1 Normal Boiler Shut-down

- With Buderus Logamatic controls: Turn the main switch to "0" position. This shuts off power to components wired directly to the control panel.

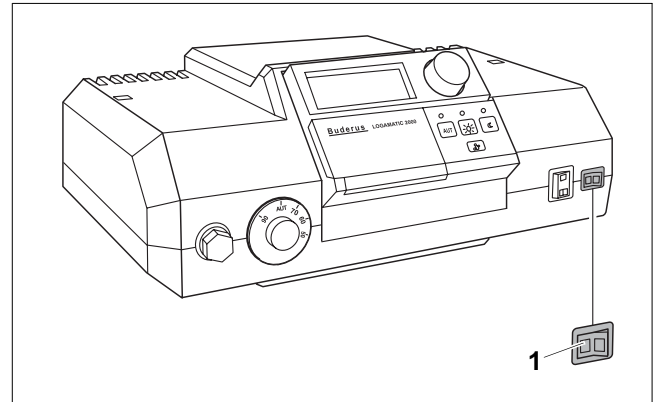


Fig. 48 Shutting down heating system (Logamatic 2000)

1 ON/OFF switch

- With Honeywell aquastat control: Shut off main heating system switch. (Position "OFF") This shuts off power to all components wired through this switch.
- Further shut-down procedure → refer to aquastat documentation.
- Close off fuel supply with oil shut off.



**CAUTION!**

#### SYSTEM DAMAGE

from freezing.

When the system is shut off, the system could potentially freeze up.

- Keep the system operational as long as possible.
- Protect the systems against freeze-up by draining the entire system at its lowest point.

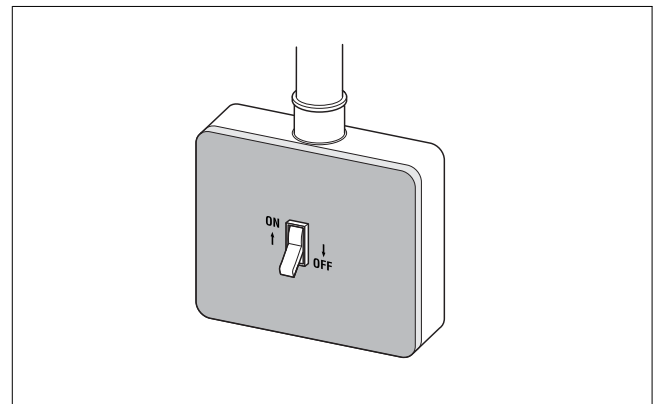


Fig. 49 Heating system shut down (with aquastat)

### 9.2 Emergency Shut-down

Explain to customer and homeowner what to do in case of emergency, such as fire:

- Safety first! Never put your life or your health at risk!
- Shut off fuel supply by closing main valve.
- Shut down the heating system electrically either using the main emergency switch or the suitable electrical breaker.

## 10 Boiler Maintenance

### 10.1 Why do maintenance?

Regular maintenance is required for the following reasons:

- To maintain high efficiency operation and minimize fuel usage.
- To sustain reliable operation.
- To maintain clean combustion and reduce pollutant emissions.

Please offer your customer an annual service and maintenance plan. You can review the service and maintenance protocol regarding precise description of suitable services (→ Chapter 10.6, page 52).



#### NOTICE

Spare parts can be ordered by contacting your Buderus wholesaler.

### 10.2 Prepare Boiler for Cleaning

- Shut down the heating system (→ Chapter 9.1, page 47).



#### DANGER

due to electricity.

#### WARNING!

- Prior to opening control panel: Shut down electricity supply and padlock shut to protect against accidental operation.

- Remove burner cover from boiler (→ Chapter 5.1, page 13).
- Remove burner cable from burner disconnect.
- In case of connection of direct fresh air connection to burner, disconnect from burner.



#### BURNING DANGER

due to touching of hot surfaces.

#### CAUTION!

- Wear thermal protective gloves or use a set of pliers.

- In order to open the burner door, remove the 2 hex head burner door bolts.



## 10.3 Boiler Cleaning

The boiler can be cleaned using boiler brushes and/or by a wet cleaning. Boiler brushes are available from your Buderus wholesaler.

### 10.3.1 Cleaning the Boiler with Brushes

- Record the position of the flue baffles so they can be placed back in their original position.
- Remove blue baffles from passages.
- Clean flue fire baffles using a hard bristled brush.

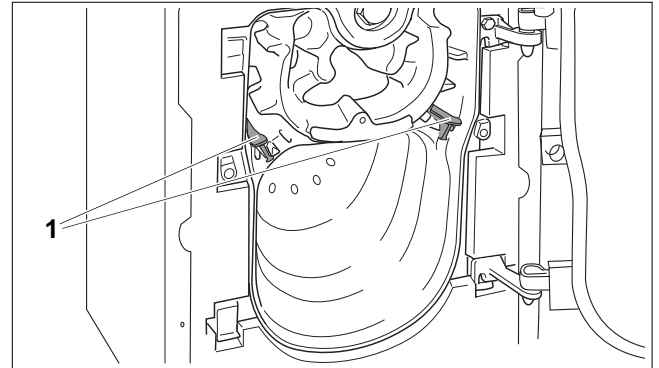


Fig. 50 Opening of burner door

#### 1 Flue baffles in secondary flue passages

- Brush out flue passages by rotating the round brush.

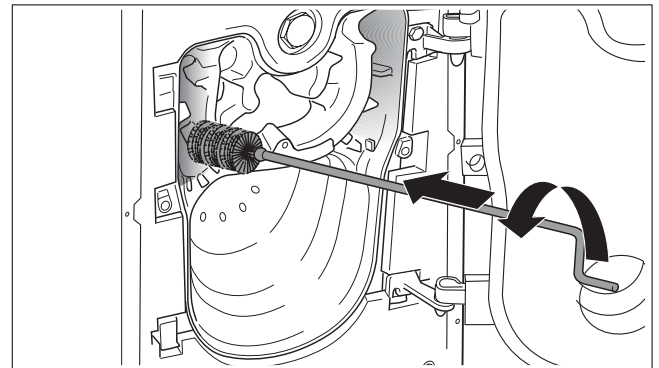


Fig. 51 Brushing out of flue passages

- Clean the combustion chamber with a flat brush. Remove the loosened debris from combustion chamber, flue passages and breaching connection areas.
- Insert the flue baffles into the boiler in their original position.
- Check burner door sealing rope. Replace damaged or hardened sealing rope.



#### NOTICE

Burner door sealing rope is available through your local Buderus wholesaler.

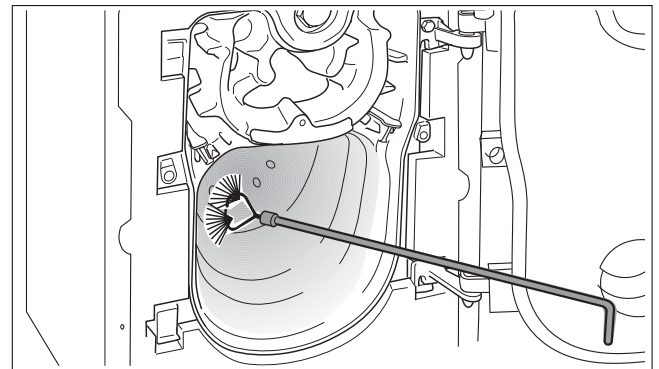


Fig. 52 Brushing out the combustion chamber

- Close burner door by tightening the burner door bolts (Torque to 90 Lbs-in ). Torque burner door evenly for proper door closure.
- Reinstall burner cable to burner disconnect.
- For fresh air operation, make double sure to tighten burner door sufficiently.
- Place system back in operation.

### 10.3.2 Wet Cleaning

Use for the wet cleaning a suitable cleaning agent designed to dissolve the internal build-up or clean the soot.

Following the wet cleaning, proceed with the brushing steps outlined in → Chapter 10.3.1, page 49.



#### NOTICE

Observe and follow recommendations of the cleaning agent's manufacturer. Under certain conditions you may need to deviate from the guidelines below.

- Cover control with plastic to prevent water damage.
- Spray heating surfaces evenly with cleaning agent.
- The closing of the burner door is described in → Chapter 10.3.1, page 49.
- Close burner door and turn on heating system.
- Heat the boiler to a minimum temperature of 160 °F.
- Turn the system off.
- Brush out heating surfaces.

### 10.3.3 Inspecting the combustion air hose (sealed combustion only)

- Loosen hose clamp from the burner attenuator and remove hose. Inspect for debris and contamination.
- For cleaning the hose must be removed from the boiler. Remove right side panel to gain access.

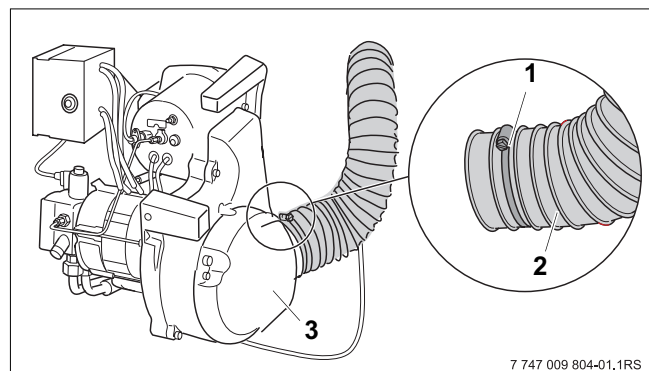


Fig. 53 Check for flexible combustion air hose

- 1 Hose clamp
- 2 Flexible combustion air hose
- 3 Burner attenuator

## 10.4 Testing System Pressure

The system pressure should be 12 to 30 psi for a closed system.

- Check system pressure.
- When the pressure gauge shows less than 15 psi, the pressure is too low. Add fill water as described in → Chapter 8.1, page 39 and check system pressure once again.



### CAUTION!

#### SYSTEM DAMAGE

due to frequent make up water.

When you frequently add make up water to the system, this can lead to corrosion and lime build-up in the system.

- Make sure that the heating system is equipped with automatic air elimination.
- Verify that the system has no leaks and check the expansion tank for proper operation.

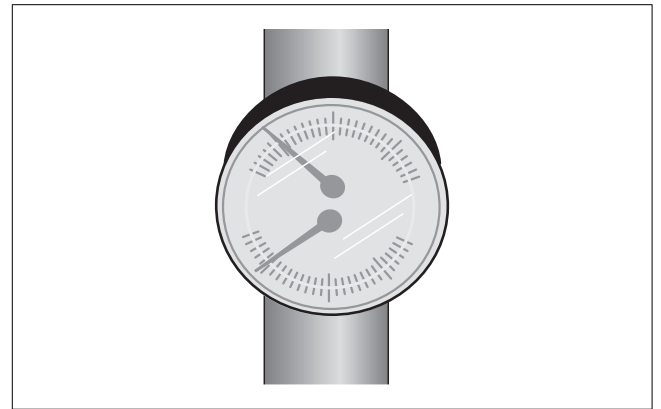


Fig. 54 Pressure/temperature gauge to display system pressure and supply temperature

## 10.5 Testing Relief Valve

Check the functioning of the relief valve every 1 to 3 years as required per local code.

- Make sure nobody is near the discharge of the relief valve.
- Lift up on the relief valve.

The relief valve must open and discharge water. If the valve does not discharge, replace the valve and re-check. If the defective valve is not replaced, it can lead to damage to certain system components due to excessive high pressures.

## 10.6 Inspection and Maintenance Procedure

- Sign off and date performed service work.

This service and maintenance protocol can also be copied for further use.

	Service Work	Page	Date: _____	Date: _____	Date: _____
1.	Check general status of system		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.	Do visual performance test on system		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3.	Check fuel and water components for: Leaks during operation Hydrostatic water test Visual corrosion Exterior system changes		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4.	Check flue passages for soot, shut off system	48	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5.	Check burner operation (→ See burner manual)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.	Check combustion air inlets and vent system		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7.	Check system pressure, relief valve and expansion tank	51	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8.	Check DHW tank anode status (→ See DHW tank manual)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9.	Check control settings (→ See manual)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10.	Final check, record combustion test results		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Confirm service work				
			Sign/Date	Sign/Date	Sign/Date

	Date: _____	Date: _____	Date: _____	Date: _____	Date: _____	Date: _____	Date: _____
1.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Sign/Date	Sign/Date	Sign/Date	Sign/Date	Sign/Date	Sign/Date	Sign/Date



**NOTICE**

When you find conditions during the annual service/maintenance work that require attention, please perform the necessary remedial steps.

	<b>Maintenance Procedure</b>	<b>Page</b>	<b>Date: _____</b>	<b>Date: _____</b>	<b>Date: _____</b>
1.	Take the boiler out of operation	47	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.	Remove flue baffles from passages and clean flue fire baffles	49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3.	Clean flue passages and the combustion chamber, Insert the flue baffles into the boiler in their original position	49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4.	Check burner door sealing rope. Replace damaged or hardened sealing rope. Close burner door by tightening the burner door bolts.	49	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5.	Take the boiler in operatio	39	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.	Final check at the system after maintenance and service inspection		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7.	Check boiler in operation		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Confirm service and maintenance work				
			Sign/Date	Sign/Date	Sign/Date

	Date: _____	Date: _____	Date: _____	Date: _____	Date: _____	Date: _____	Date: _____
1.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	Sign/Date	Sign/Date	Sign/Date	Sign/Date	Sign/Date	Sign/Date	Sign/Date

## 11 Restoring System Lock-outs

One can identify two different types of lock-outs:

- Burner lock-outs.
- Control and system lock-outs.

A lock-out light will typically be lit on the burner (→ see burner manual) during its lock-out. Press the burner reset button once to restart the burner. Call your service company immediately if the burner locks out again. Do NOT continue to reset the burner.

Error conditions on the control or in the system are typically displayed on the control display, if so equipped. Further information can be found in the → Control Service Manual.

### Correct burner lock-outs

- Remove burner cover, when the burner is so equipped. Press the burner reset button once.



**CAUTION!**

#### SYSTEM DAMAGE

Due to frequent pressing of burner reset button, one can damage the ignition transformer.

- Do not press the burner reset more than three times. If the burner does not restore itself after three resets, review the Burner Operating Manual. Contact your service company for assistance.



**CAUTION!**

#### SYSTEM DAMAGE

due to frost.

- When the entire system is shut off, it can cause a freeze-up condition.
- Have any lock-out condition corrected immediately and restart the heating system.
  - If this is not possible, protect the system for freeze-up by draining the heating system and domestic hot water system at their respective lowest points.

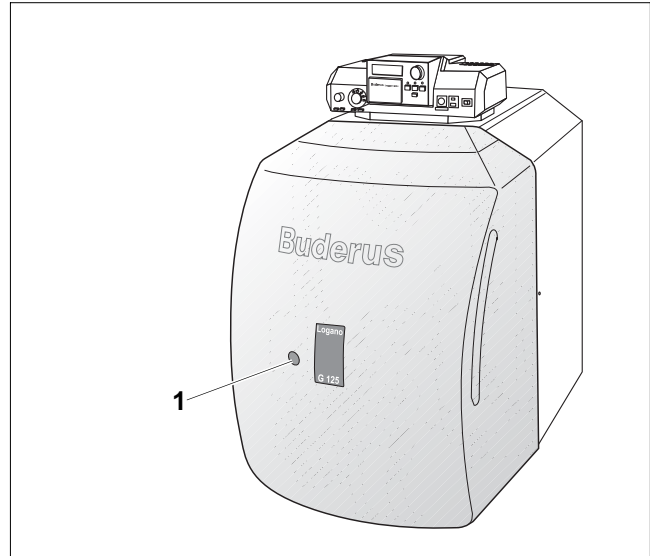


Fig. 55 Resetting burner lock-outs (boiler with built-in burner)

1 Burner reset button



## 12 Piping Diagrams

### Explanation of the abbreviations

KR	Flow Check	SH	2-way motorized valve
MAG	Expansion tank	WH	Boiler bypass
PH	Heating pump	SV	Relief valve/ Air elimination
PW	DHW charging pump	THV	Zone valve

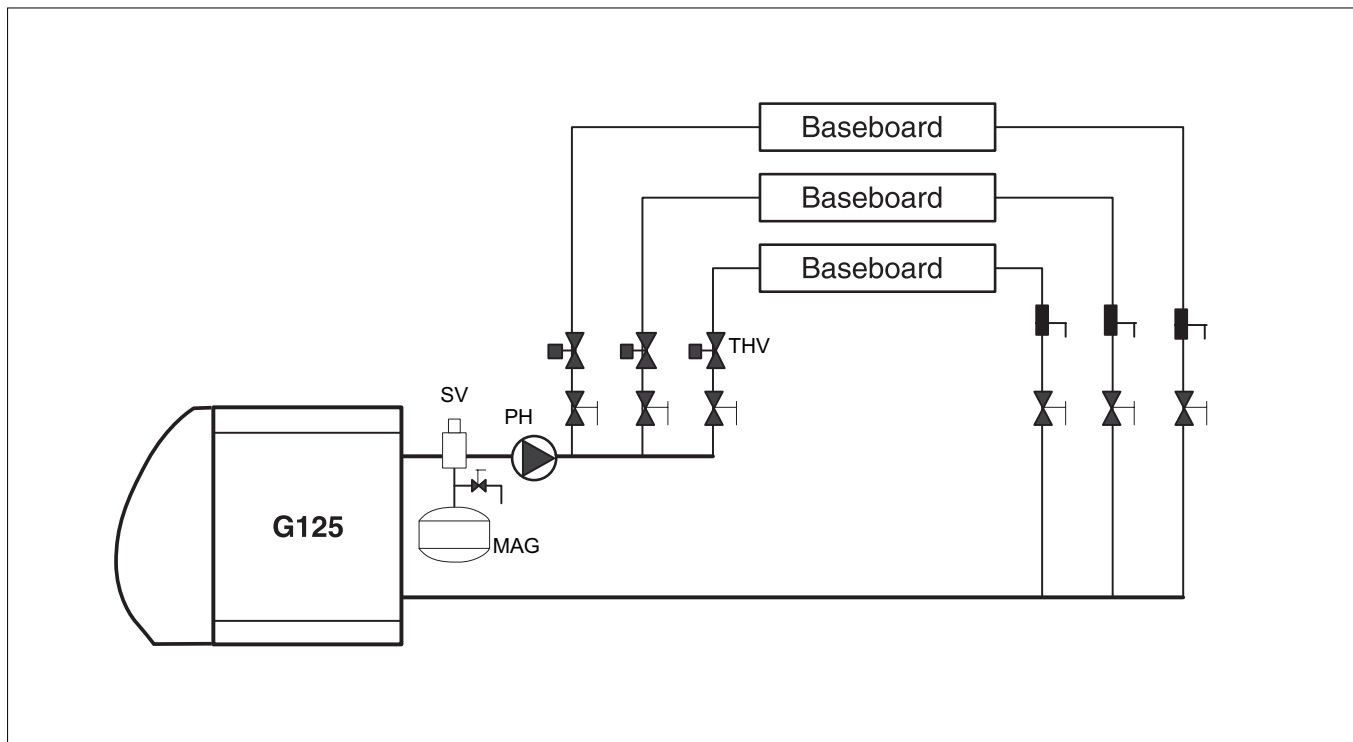


Fig. 56 Zoning with zone valve

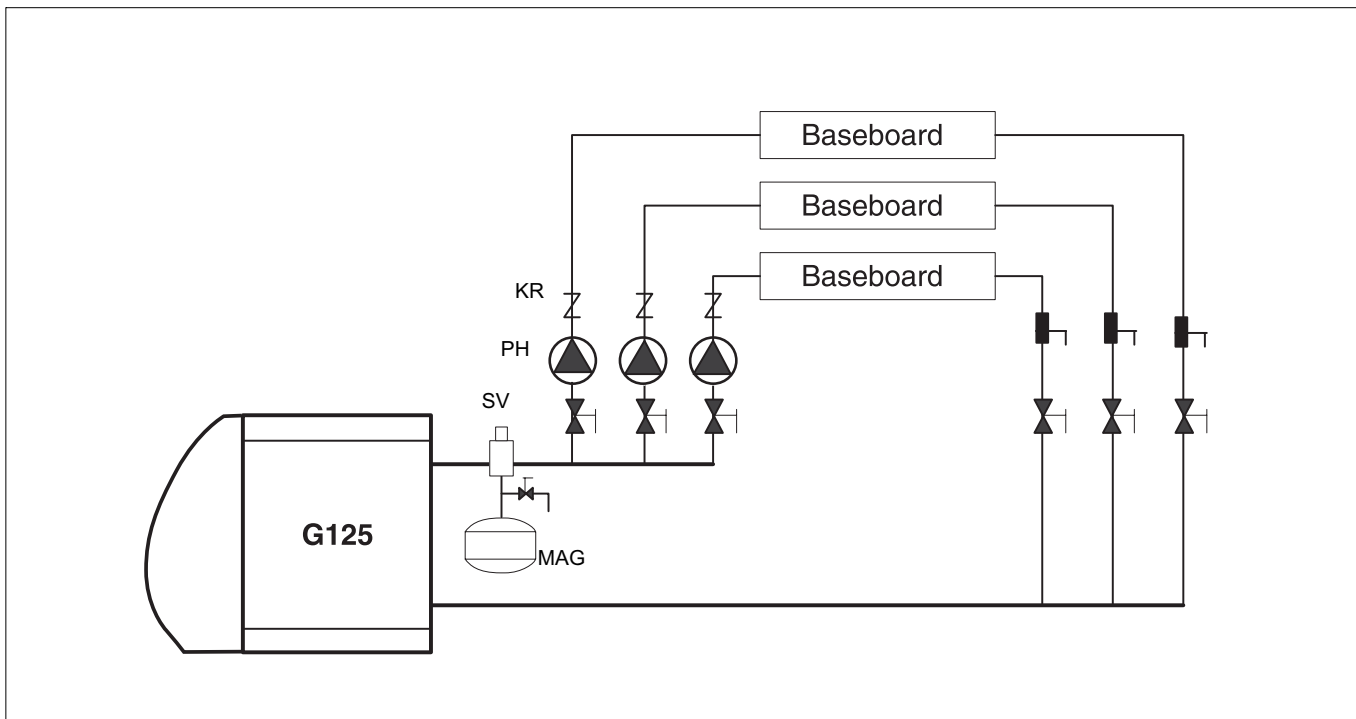


Fig. 57 Zoning with pumps

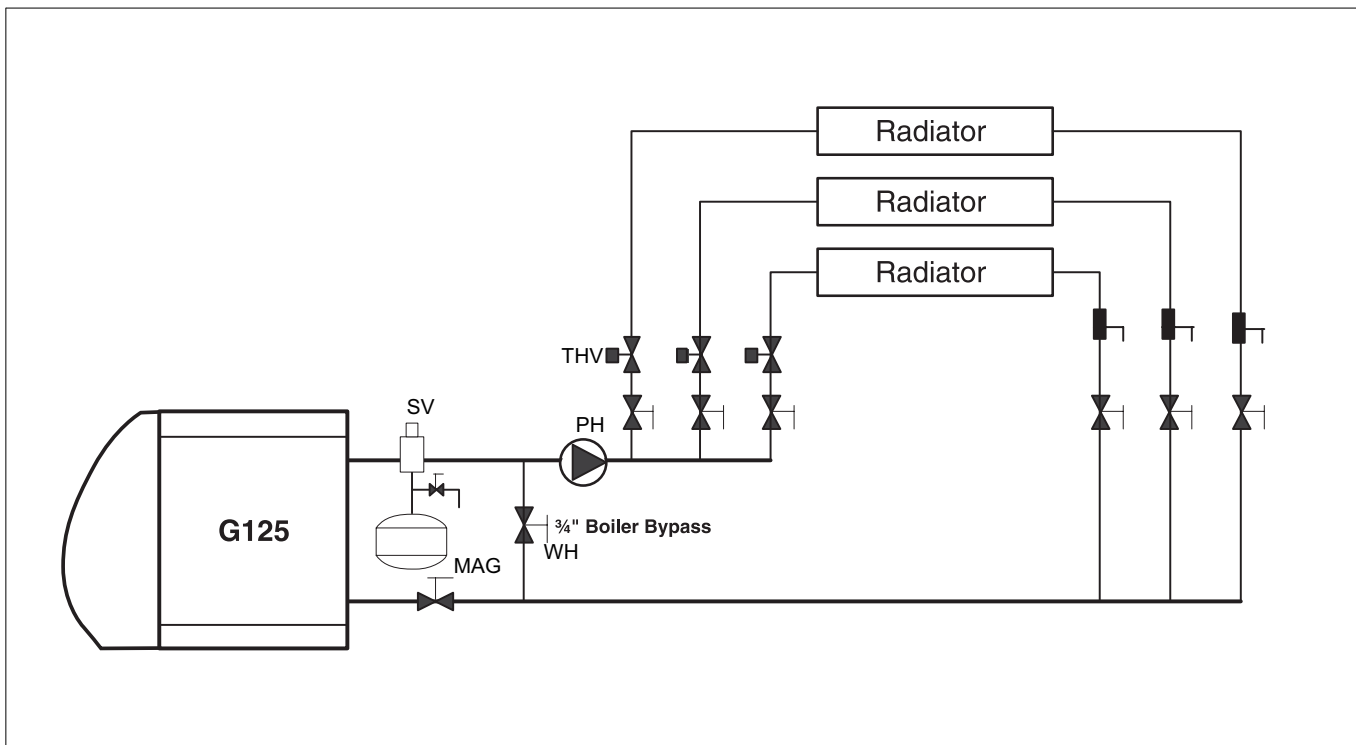


Fig. 58 Zoning with zone valves and built in bypass for larger water volume systems

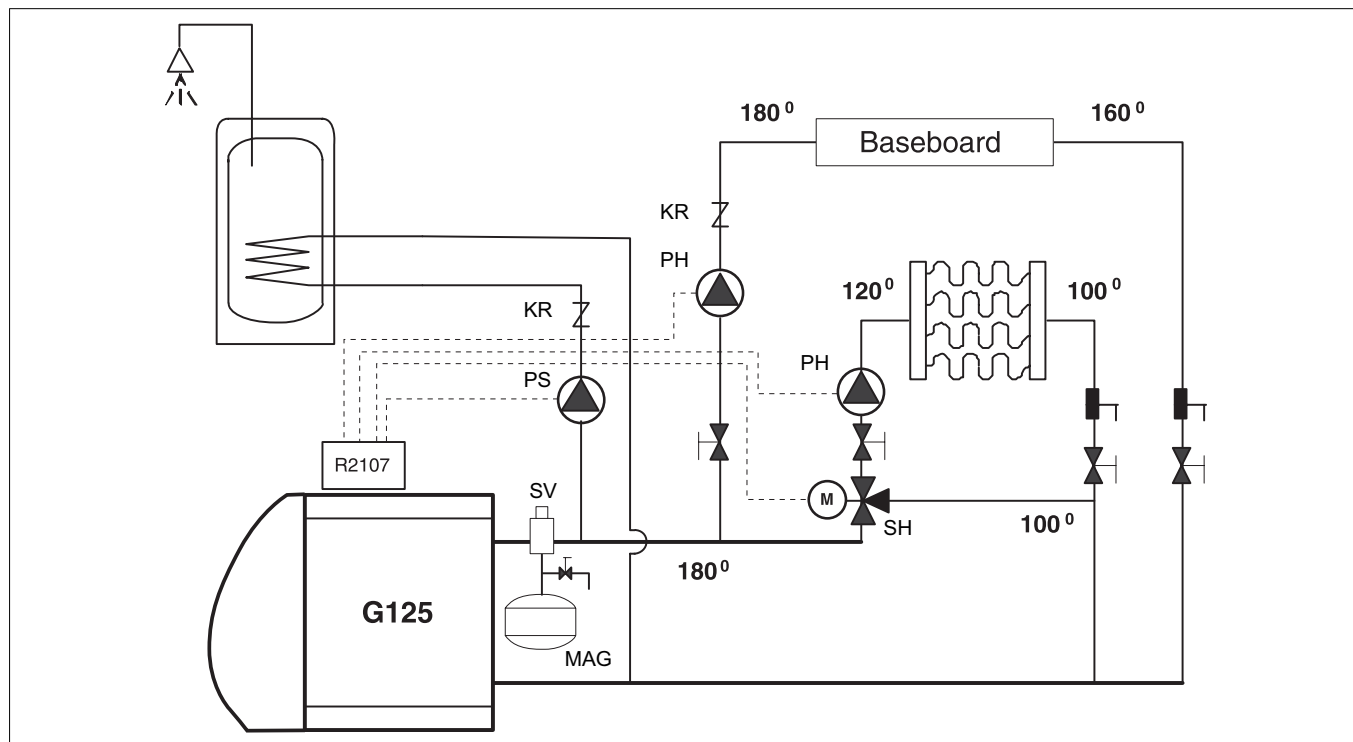


Fig. 59 Multiple zones with DHW, high temperature and low temperature circuits with a motorized 3-way valve

## 13 Spare Parts

The following parts are available through Buderus Hydronic Systems. Model specific part numbers are listed under the various models. In other cases the table shows the number of components for each model.

Legend for Table 13 and 14:

x = no spare part

(x) = not available as individual part, only as a kit

0 = no image

### Boiler block and burner door (Fig. 60)

Item	Description	Part Number		
		G125/21-BE 3 Section	G125/28-BE 4 Section	G125/34-BE 5 Section
10	Boiler block G125	63036027	-	-
10	Boiler block G125	-	63036028	-
10	Boiler block G125	-	-	63036029
<b>Spare parts for boiler replacement</b>				
Front section components:				
21	Plug G1 1 1/4" right		86055310	
22	Gasket for plug D41, 7x55x1, 5mm AFM 34, white		86159710	
23	Blocking plate with screw M8x16		63015342	
24	Screw DIN7991 M8x16 Ms	(x)	(x)	(x)
Rear section components:				
50	Seal D33x44x2		63005462	
51	Plug DIN2950 291 1"		05317712	
52	Threaded stud M10x65 5.6		05555070	
53	Distance sleeve R3/8"x39	(x)	(x)	(x)
54	Hex. head nut ISO4032-M10-8-A3K	(x)	(x)	(x)
55	Washer DIN125-A10,5-A3K	(x)	(x)	(x)
57	Reducing Nipple		63027607	
60	Immersion well Pmw-3See (4 1/2)"US"		00472887	
70	Tie bar - Set M8x310mm	05127574	-	-
70	Tie bar - Set M8x440mm	-	05127578	-
70	Tie bar - Set M8x555mm	-	-	05127580
80	Flue collector G115/125		05354074	
81	Sealing rope 8x1050 GP		63020961	
	Glue for securing rope (a 310ml)		63014361	
90	Return diffuser 1 1/4-NPT1 compl. G125"US" for 3-4 section	63028062	63028062	-
90	Return diffuser 1 1/4-NPT1 compl. G125"US" for 5 section	-	-	63028061
91	Gasket 55x41,7x1,5mm		05752540	
Spare parts for diffuser				
<b>Spare parts which are not furnished with the spare boiler block:</b>				
120	Flue baffle 3-section	05347085	-	-
120	Flue baffle 4-section	-	05347087	-
120	Flue baffle 5-section	-	-	05347089
121	Flue baffle 3-section	63028999		
121	Flue baffle 4-section		63029001	
121	Flue baffle 5-section			63029003
130	Boiler rail 420mm long	05198102	-	-
130	Boiler rail 540mm long	-	05198104	-
130	Boiler rail 660mm long	-	-	67900117
131	Washer DIN126-9	(x)	(x)	(x)
132	Hex. head screw ISO4017-M8x25-8.8	(x)	(x)	(x)
133	Hex. head nut DIN6923-M8-8.8-A3K	(x)	(x)	(x)

Table 13 Boiler block and Burner door


Item	Description	Part Number		
		G125/21-BE 3 Section	G125/28-BE 4 Section	G125/34-BE 5 Section
140	Door hinge G105/G115	05327033		
141	Gasket DIN125-A10.5-A3K	(x)	(x)	(x)
142	Hex. head bolt ISO4017-M10x25-8.8	(x)	(x)	(x)
150	Hex. head bolt ISO4014-M10x65-8.8	(x)	(x)	(x)
160	Washer DIN125-A10.5-A3K	(x)	(x)	(x)
180	Boiler feet M10x51mm complete	05236440		
190	Gasket for flue collar DN130 complete	05354010		
200 or 210	Flue silencer DN130 complete, without condensate drain; higher sound absorption	05074020		
	Flue silencer D130 with adapter 100mm long, with con- densate drain, lower sound absorption	05074022		
<b>Flue silencer components:</b>				
190	Flue collar DN130 complete	05354010		
220	Flue collar DN130 complete (step cuff)	05354030		
230	Sealing rope10x2000 GP	63020963		
250	Burner door complete	63015200		
<b>Burner door components:</b>				
260	Door hinge	05327020		
270	Washer DIN125 A10.5 A3K	(x)	(x)	(x)
280	Hex. head screw ISO4017 M10x25 8.8	(x)	(x)	(x)
290	Observation port cover complete G115/G125/G135	63023634		
<b>Observation port cover components:</b>				
300	Gasket 30x30x3	63014382		
310	Sight glass Tempax 30x30x3.3mm	05447620		
320	Sight glass cover plate	(x)	(x)	(x)
330	Hex. head screw ISO4017 M6x12 8.8 A3K	(x)	(x)	(x)
340	Pressure measuring port M6 SW10 V2	(x)	(x)	(x)
350	Burner door insulation G125 W607	63002401		
<b>Burner door insulation components:</b>				
360	Insulating plate for burner door 24mm	63004169		
370	Insulating ring for burner door 10mm	63004170		
380	Washer DIN9021 A6,4 A3K	(x)	(x)	(x)
390	Sheet metal screw DIN7981 C ST6.3x25 A3T	(x)	(x)	(x)
400	Sealing rope14x1650 GP	63020965		
	Glue for securing sealing rope to burner door (a 310ml)	63014361		
	<b>Mounting material for boiler block G125 "US"</b>	63031288		
	Components:			
	1 Hex. head screw M8x16 Ms			
	2 Distance sleeve R3/8"x39			
	2 Hex. head nut ISO4032 M10 8 A3K			
	8 Washer DIN125 A10,5 A3K			
	4 Washer DIN126 9			
	4 Hex. head screw ISO4017 M8x25 8.8			
	4 Hex. head nut DIN6923 M8 8.8 A3K			
	4 Hex. head screw ISO4017 M10x25 8.8			
	2 Hex. head screw DIN6921 M10x65 8.8			
	1 Hex. head screw ISO4017 M6x12 8.8A3K			
	2 Washer DIN9021 A6.4 A3K			
	2 Sheet metal screw DIN7981 C ST6.3x25 A3T			

Table 13 Boiler block and Burner door

**13 Spare Parts**

Item	Description	Part Number		
		G125/21-BE 3 Section	G125/28-BE 4 Section	G125/34-BE 5 Section
	<b>B-KIT G125"US"</b>	63029762		
	Components:			
	1 Supply manifold G115"US"			
	1 90 degree 1 1/4 NPT elbow			
	1 90 degree 3/4 NPT elbow			
	1 Conversion nipple R11/4-11/4NPTx75			
	1 Boiler drain valve 3/4			
	1 Relief valve 3/4Mx3/4F 30PSI			
	1 Pressure / Temperature gauge 1/4NPT			
	1 Screw-Set B-Kit G115"US"			
	4 Boiler feet set M10x51			

Table 13 Boiler block and Burner door

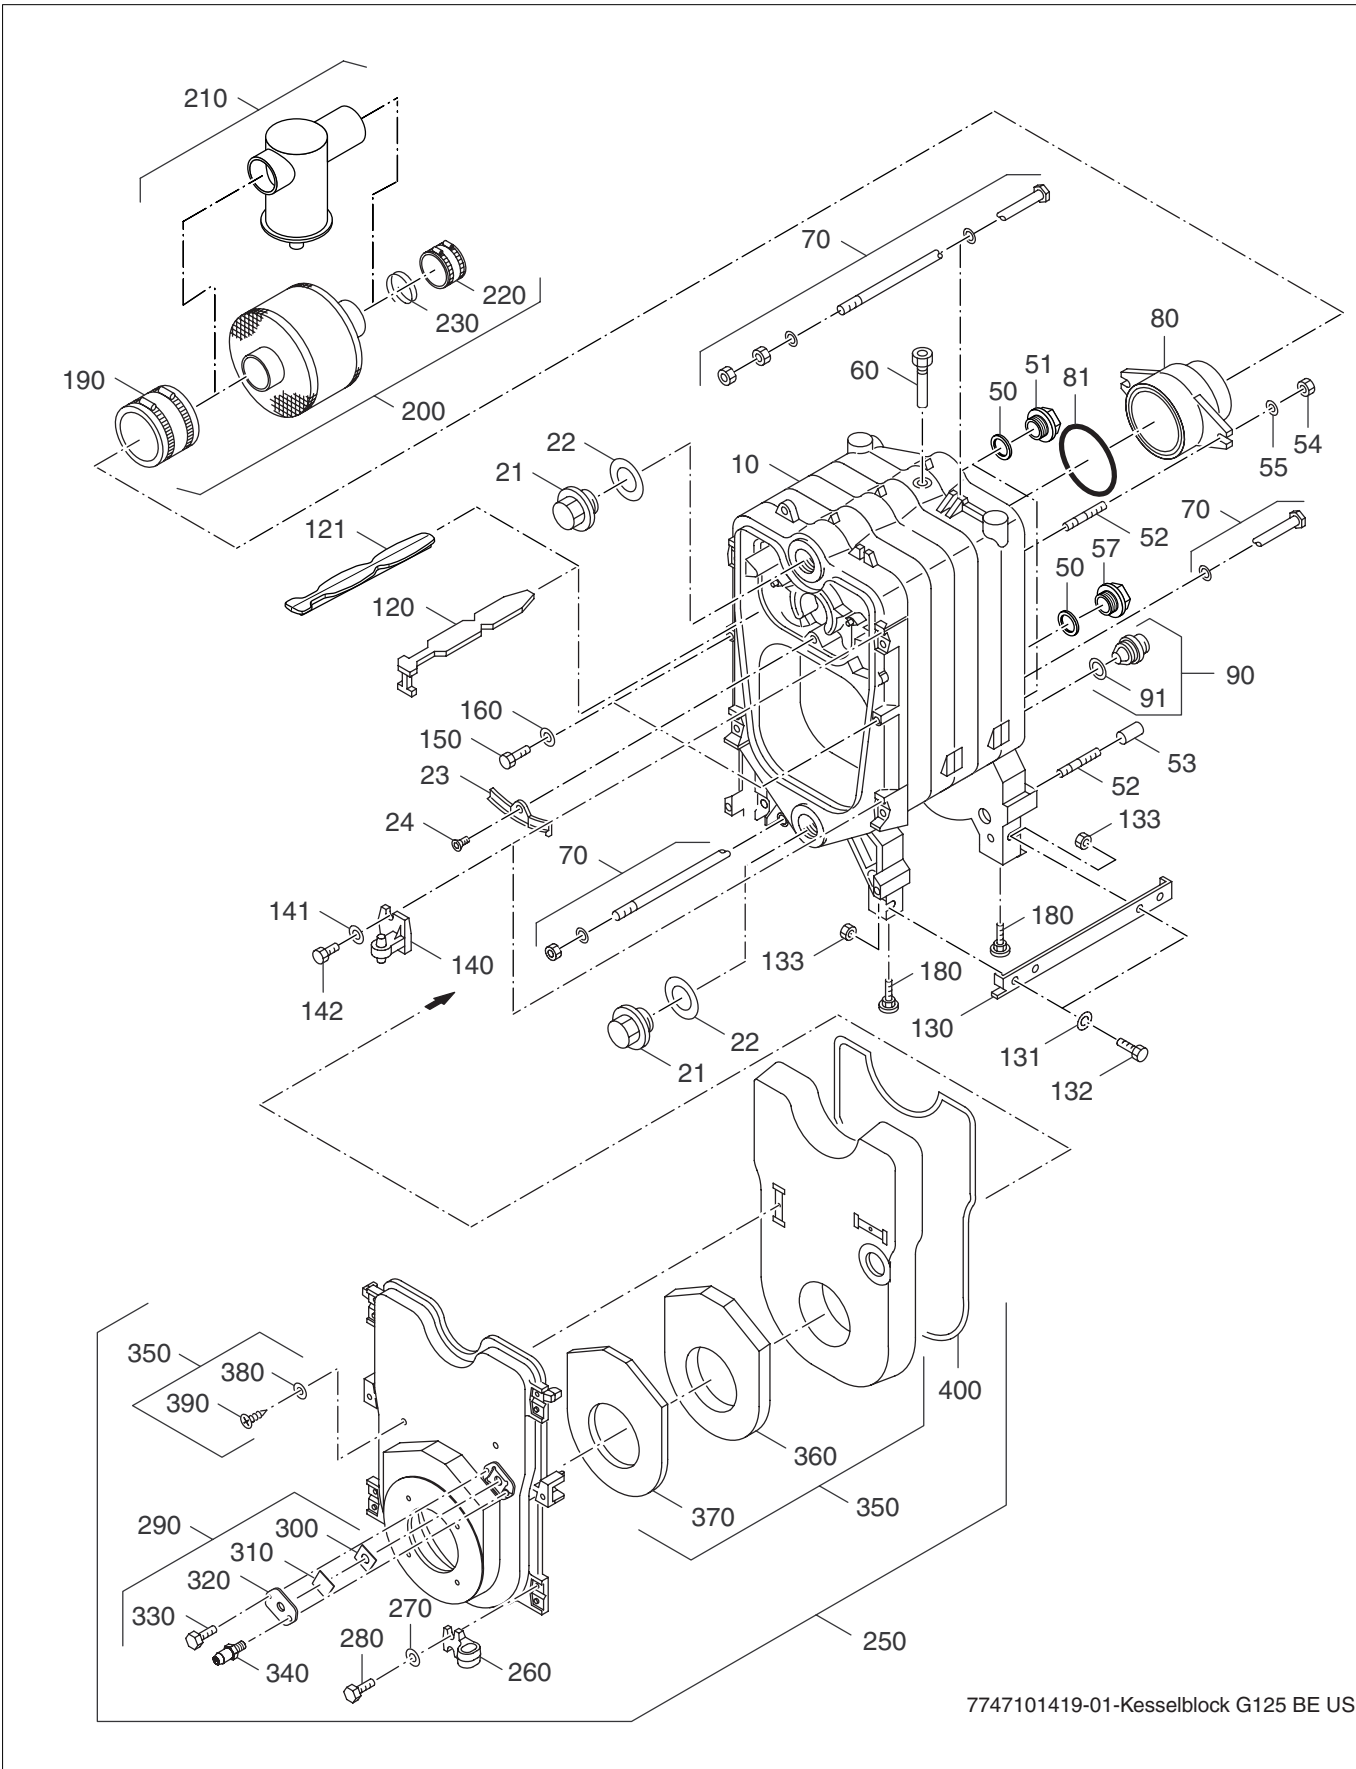

7747101419-01-Kesselblock G125 BE US

Fig. 60 Boiler block and burner door

## Boiler Jacket Component (Fig. 61)


Item	Description	Part Number		
		G125/21-BE 3 Section	G125/28-BE 4 Section	G125/34-BE 5 Section
	The complete boiler jacket for a G125 boiler contains the following components: Front panel, name plate, front insulation, top gross bracket, 2 side panels, boiler block insulation, holding clips, top front cover, top rear cover, rear panel and mounting material set.			
<b>Boiler jacket components:</b>				
10	Burner cover G125	63029954		
16	Name plate Logano G125	67902123		
20	Front insulation G125	63025265		
40	Hex. head screw ISO4017-M8x12-8.8	(x)	(x)	(x)
50	Top cross bracket G115/G125	63029209		
60	Hex. head nut DIN555 M8 5	(x)	(x)	(x)
70	Washer DIN126 9	(x)	(x)	(x)
80	Side panel 445mm long	63029945		
80	Side panel 565mm long		63029946	
80	Side panel 685mm long			63029947
85	Sheet metal screw C ST3,9x13 A3T	(x)	(x)	(x)
90	Screw 3,9x9,5 A3T	(x)	(x)	(x)
100	Boiler block insulation G125	05670040	-	-
100	Boiler block insulation G125	-	05670045	-
100	Boiler block insulation G125	-	-	05670046
110	Holding clips for boiler block insulation	00476378		
120	Top front cover G115U/S105/S105U	63029222		
125	Cover plate 300x160	63021497		
130	Top rear cover complete G125 "US"	05198112	-	-
130	Top rear cover complete G125 "US"	-	05198114	-
130	Top rear cover complete G125 "US"	-	-	05198176
140	Rear panel complete G125 RLU	63029952		
145	Rear panel insulation for G125	63025264		
150	Cable rail way	07060754		
160	Washer DIN432 10,5 St A3E	(x)	(x)	(x)
170	Hex. head nut DIN555 M10 5	(x)	(x)	(x)
180	Burner cable with strain relief	7747007984		
<b>Spare parts for burner cable</b>				
181	7 Pole green connecting plug	07079220		
182	7 Pole silver colored plug	67903164		
190	Side insulation	63020896		
200	Strain relief for flat cable	Refer to assembly material: 63031847		
201	Strain relieve for round cable	Refer to assembly material: 63031847		
210	Burner BE 1.2/1.3 – 2.2/2.3 For spare parts, refer to Installation and Maintenance manual 7747009804			
220	Fresh air duct SLDN63 L1450	63024885		

Table 14 Boiler jacket



Item	Description	Part Number		
		G125/21-BE 3 Section	G125/28-BE 4 Section	G125/34-BE 5 Section
230	Clamp 60/80 mm	63024917		
240	Adapter RLU 60 mm/ 4"	7747013576		
<b>Mounting material for boiler jacket G115, GC115, G125, G134</b>		63031847		
	Components:			
	17 Screw St3,9x9,5-A3T05180842			
	3 Sheet metal screw C-St3,9x13-A3T			
	1 Screw DIN7985-M6x16-4.8-A3T			
	2 Clip			
	4 Hex. head screw ISO4017-M8x12-8.8			
	1 Hex. head nut DIN555 M8 5			
	4 Washer DIN126 9			
	4 Washer DIN432 10,5 St A3E			
	4 Hex. head nut DIN555 M10 5			

Table 14 Boiler jacket

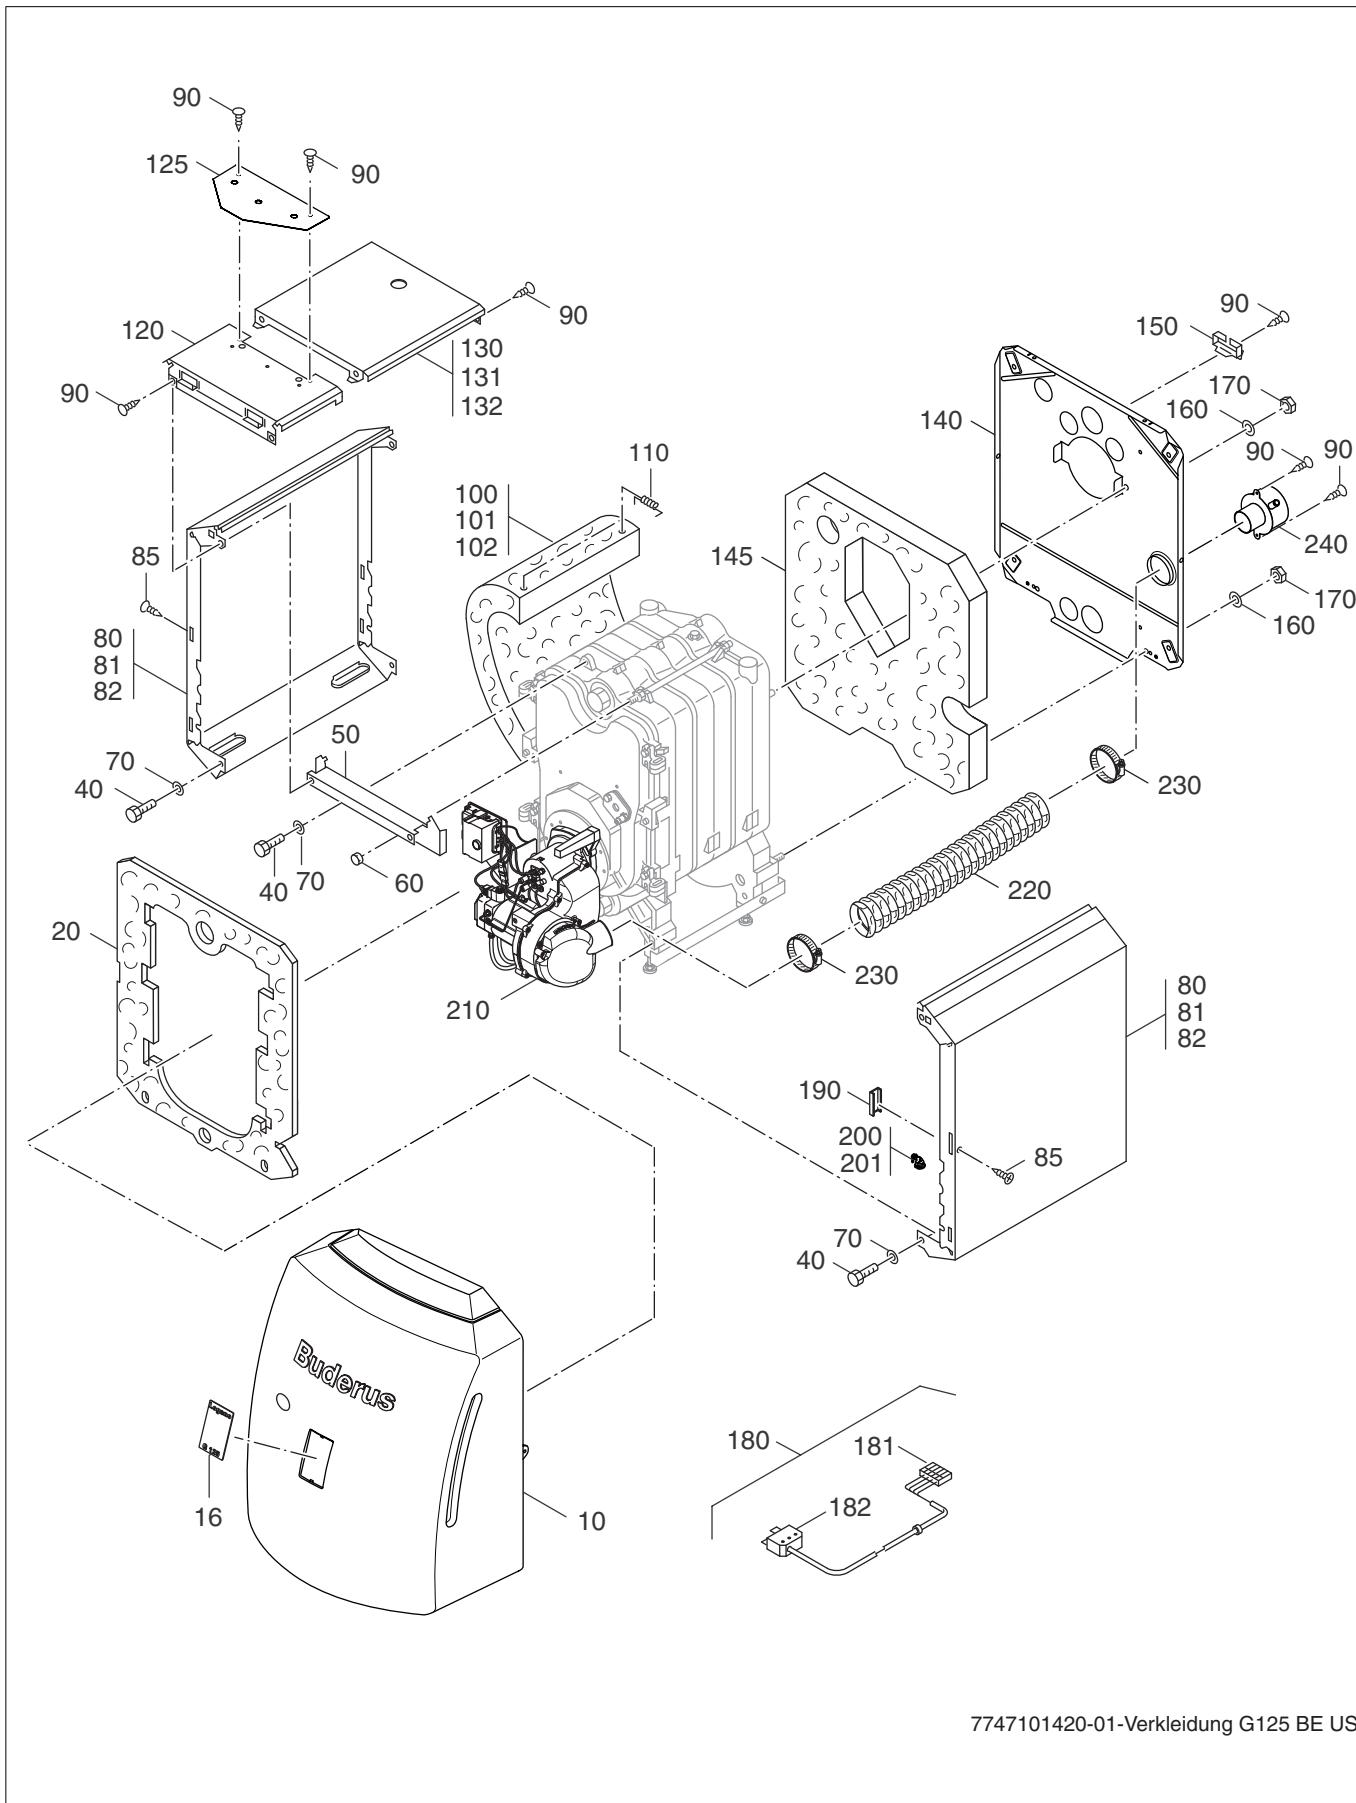


7747101420-01-Verkleidung G125 BE US

Fig. 61 Boiler jacket

# 14 Burner Wiring Examples

Buderus G125BE and GB125BE Oil Fired Burner Wiring

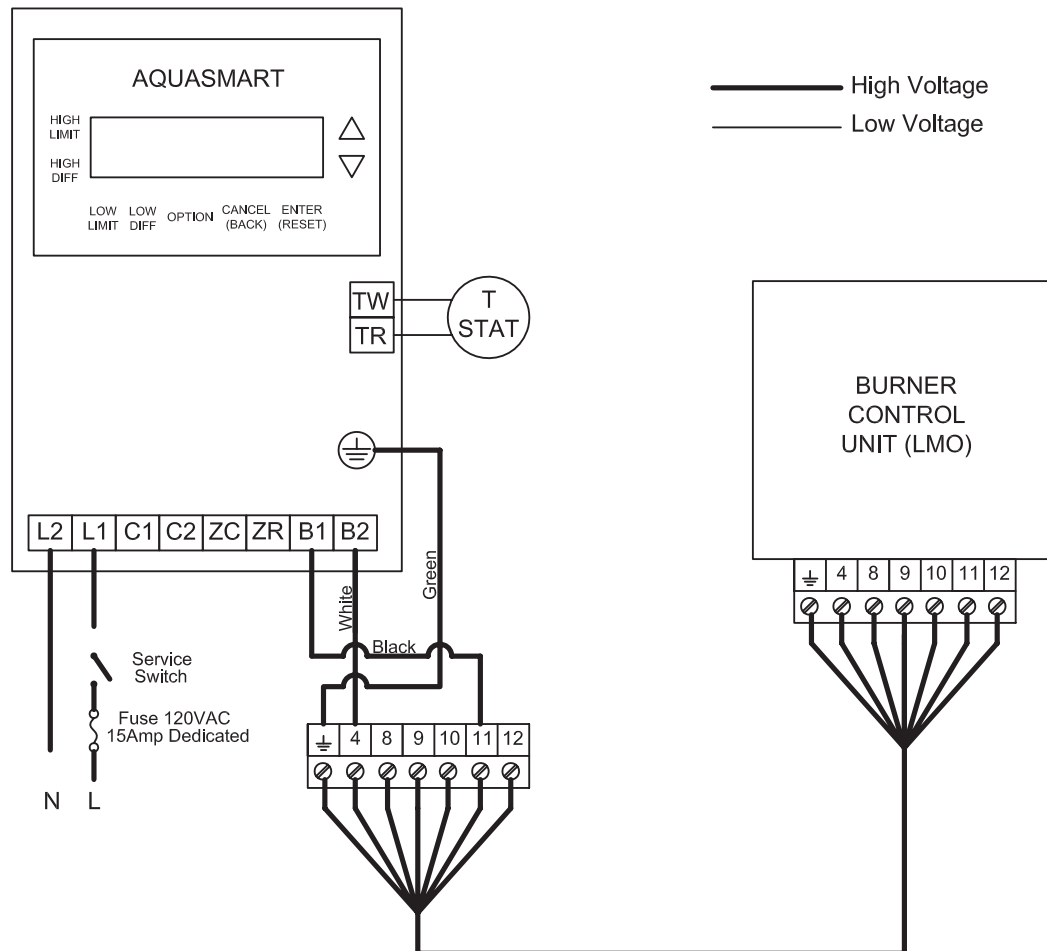

Buderus G125BE and GB125BE Oil Fired Burner

Using a Beckett Aquasmart Aquastat -

- 1) Connect room thermostat or end switch to the TW and TR terminals of the AQUASMART.
- 2) Connect incoming 120VAC power source to L1 on the AQUASMART
- 3) Connect incoming neutral to L2 on the AQUASMART
- 4) Remove connector from cable.
- 5) Connect White wire to B2 on the AQUASMART to the wire on Terminal 4 on the connector.
- 6) Connect Black wire to B1 on the AQUASMART to the wire on terminal 11 on the connector.
- 7) Connect Green wire to the Ground screw on the AQUASMART to the Ground wire on the connector.
- 8) Protect all other wires from accidental shorting.

Fig. 62 Wiring diagram 1

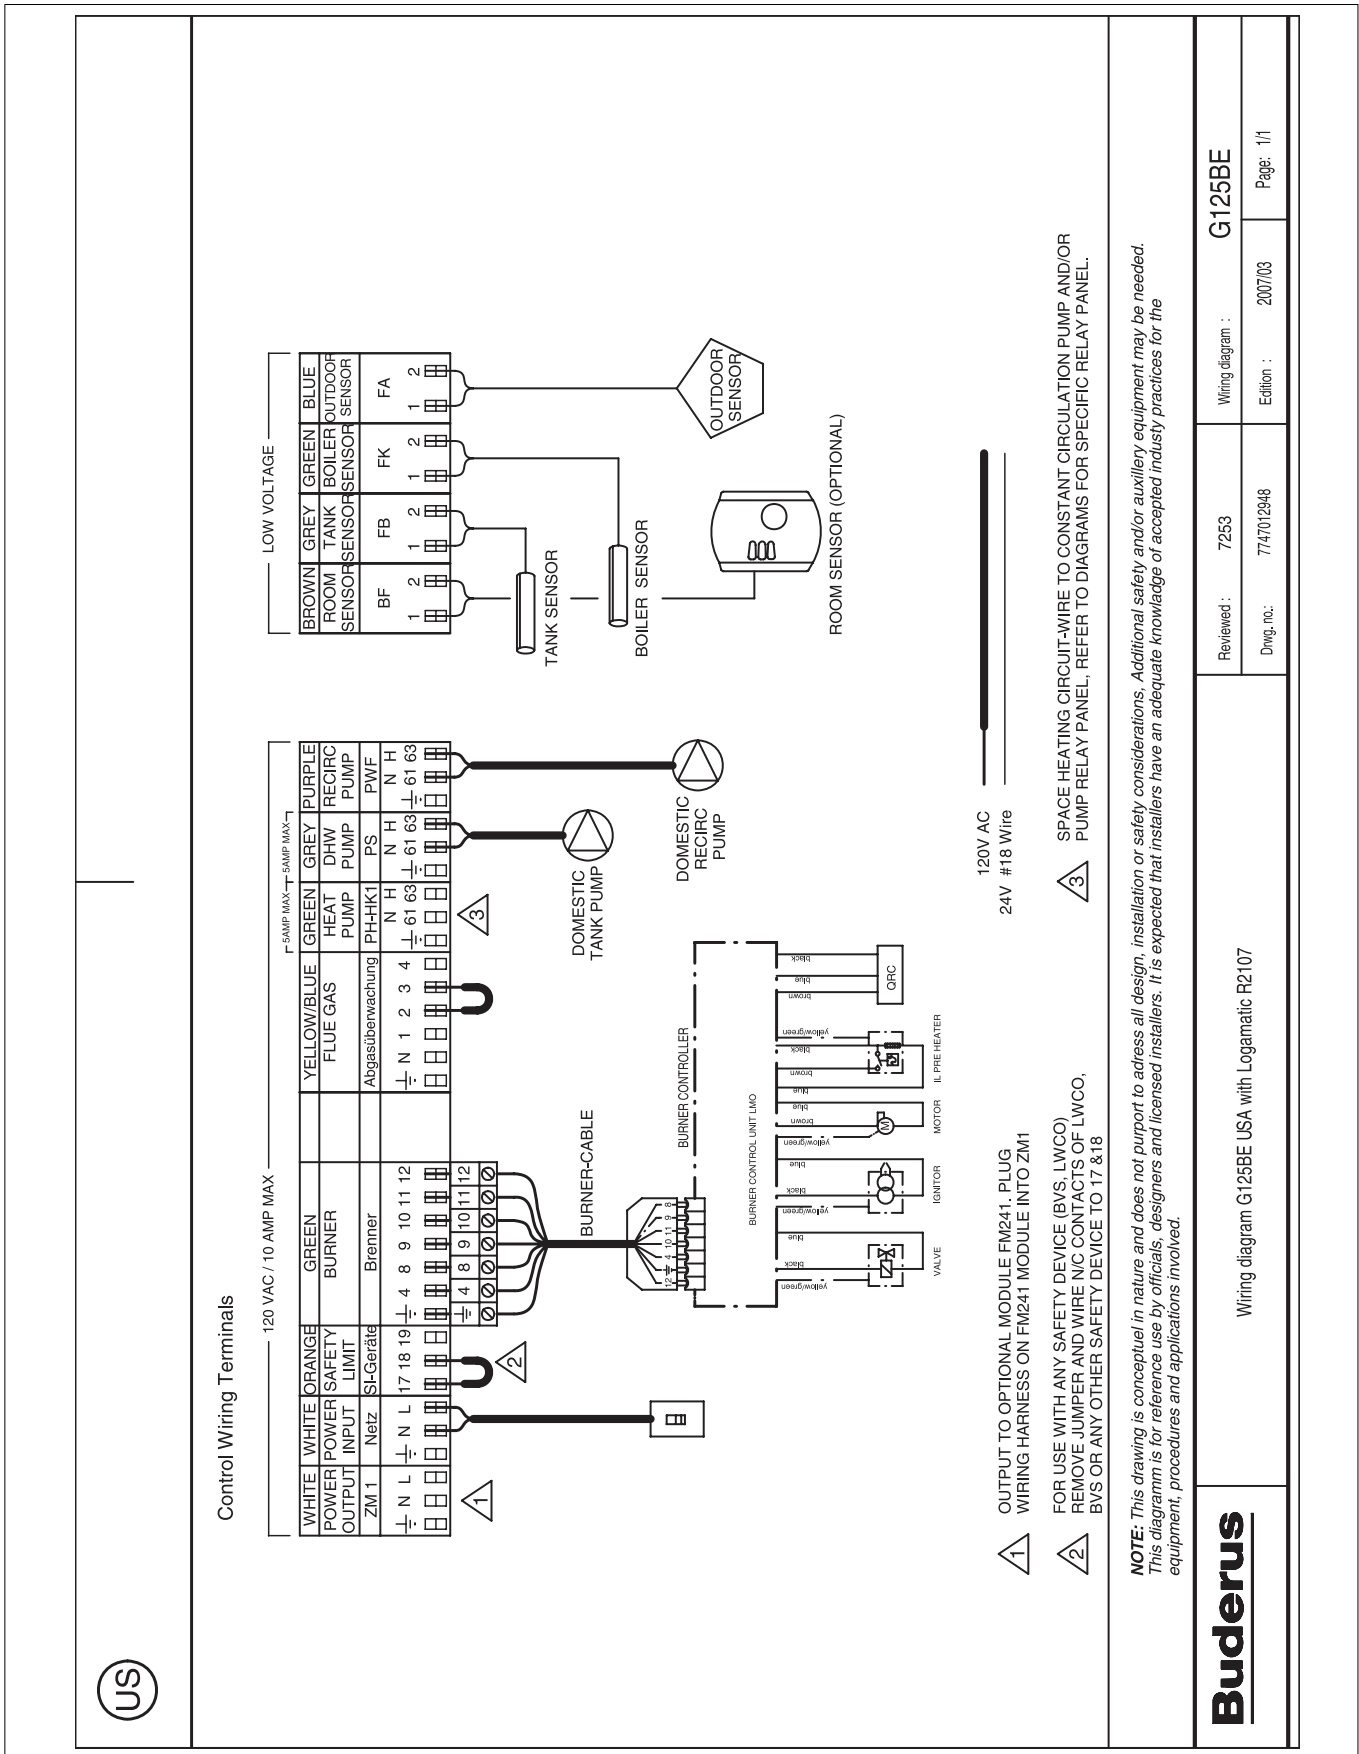


Fig. 63 Wiring diagram 2

## 15 Glossary

### A

Air inlet temperature . . . . .	42
Aquasmart . . . . .	35

### B

B-Kit Component . . . . .	32
B-Kit installieren . . . . .	31
Boiler block . . . . .	.6
Boiler jacket . . . . .	.6
Boiler Model . . . . .	.7
Boiler Room . . . . .	.5, 10
Boiler supply temperature . . . . .	.7
Brenntürverkleidung abnehmen . . . . .	13
Brennstoff, Betriebsbedingungen . . . . .	10
Brennstoffversorgung herstellen . . . . .	34
Burner door . . . . .	.6, 12
Burner Operating . . . . .	56

### C

Checking position of flue baffle plates . . . . .	16, 40
Cleaning of flue passages . . . . .	49
Cleaning the Boiler . . . . .	49
Clearances . . . . .	15
Control System Installation . . . . .	36

### D

Dirt collection system . . . . .	31
Disposal . . . . .	.5

### E

Electrical diagrams . . . . .	67, 68
Electrical power supply . . . . .	38

### G

Galvanized Vent Pipe . . . . .	27
--------------------------------	----

### H

Heating circuits . . . . .	59
Heating system emergency switch . . . . .	47
Horizontal Venting . . . . .	22

### I

Increasing flue gas temperature . . . . .	27
Input rating of boiler . . . . .	.7
Installation Diagram . . . . .	32
Installation example . . . . .	57
Installation of Boiler Drain . . . . .	32
Installation of boiler feet . . . . .	17
Installation of burner cover . . . . .	45
Installation of Combustion Air Supply System . . . . .	28
Installation of control panel . . . . .	36
Installation of Front Burner Cove . . . . .	45
Installation of Insulated Flexible Oil Vent . . . . .	26
Installation of Temperature Sensor . . . . .	37

### L

Lifting and Carrying the Boiler . . . . .	14
---	----

### M

Main electrical switch . . . . .	41, 47
Materials and Accessories . . . . .	.5

### O

ON/OFF switch controller . . . . .	47
Operating Conditions . . . . .	.9

Operating conditions . . . . .	8
Original spare parts . . . . .	4, 48
Over fire pressure . . . . .	42

**P**

Piping Diagrams . . . . .	57
Placement of burner cable . . . . .	13
Pressure and temperature gauge . . . . .	39
Pressure/temperature gauge . . . . .	12, 31, 51
pressure/temperature gauge . . . . .	31

**R**

Relief valve . . . . .	31, 32, 33
Resetting burner error . . . . .	56

**S**

Shut-off valve . . . . .	41
Spare Parts . . . . .	60
Spare Parts list . . . . .	60
Start-up procedure . . . . .	39
Supply temperature . . . . .	35

**T**

Technical Data . . . . .	7
Test pressure . . . . .	11, 33
Testing of the Manual Reset High Limit (STB) . . . . .	44
Tools . . . . .	5
Transportation with boiler cart . . . . .	14

**W**

Water connection . . . . .	7
Water quality . . . . .	11, 33



BBT North America Corporation  
50 Wentworth Avenue  
Londonderry, NH 03053  
Tel. 603-552-1100  
Fax 603-584-1681  
[www.buderus.net](http://www.buderus.net)

Products manufactured by  
BBT Thermotechnik GmbH  
D-35573 Wetzlar  
[www.buderus.de](http://www.buderus.de)

BBT North America Corporation reserves the right  
to make changes without notice due to continuing  
engineering and technological advances.

**Buderus**