




7 Balcony Door Sill at Deck  
3' = 1'-0"

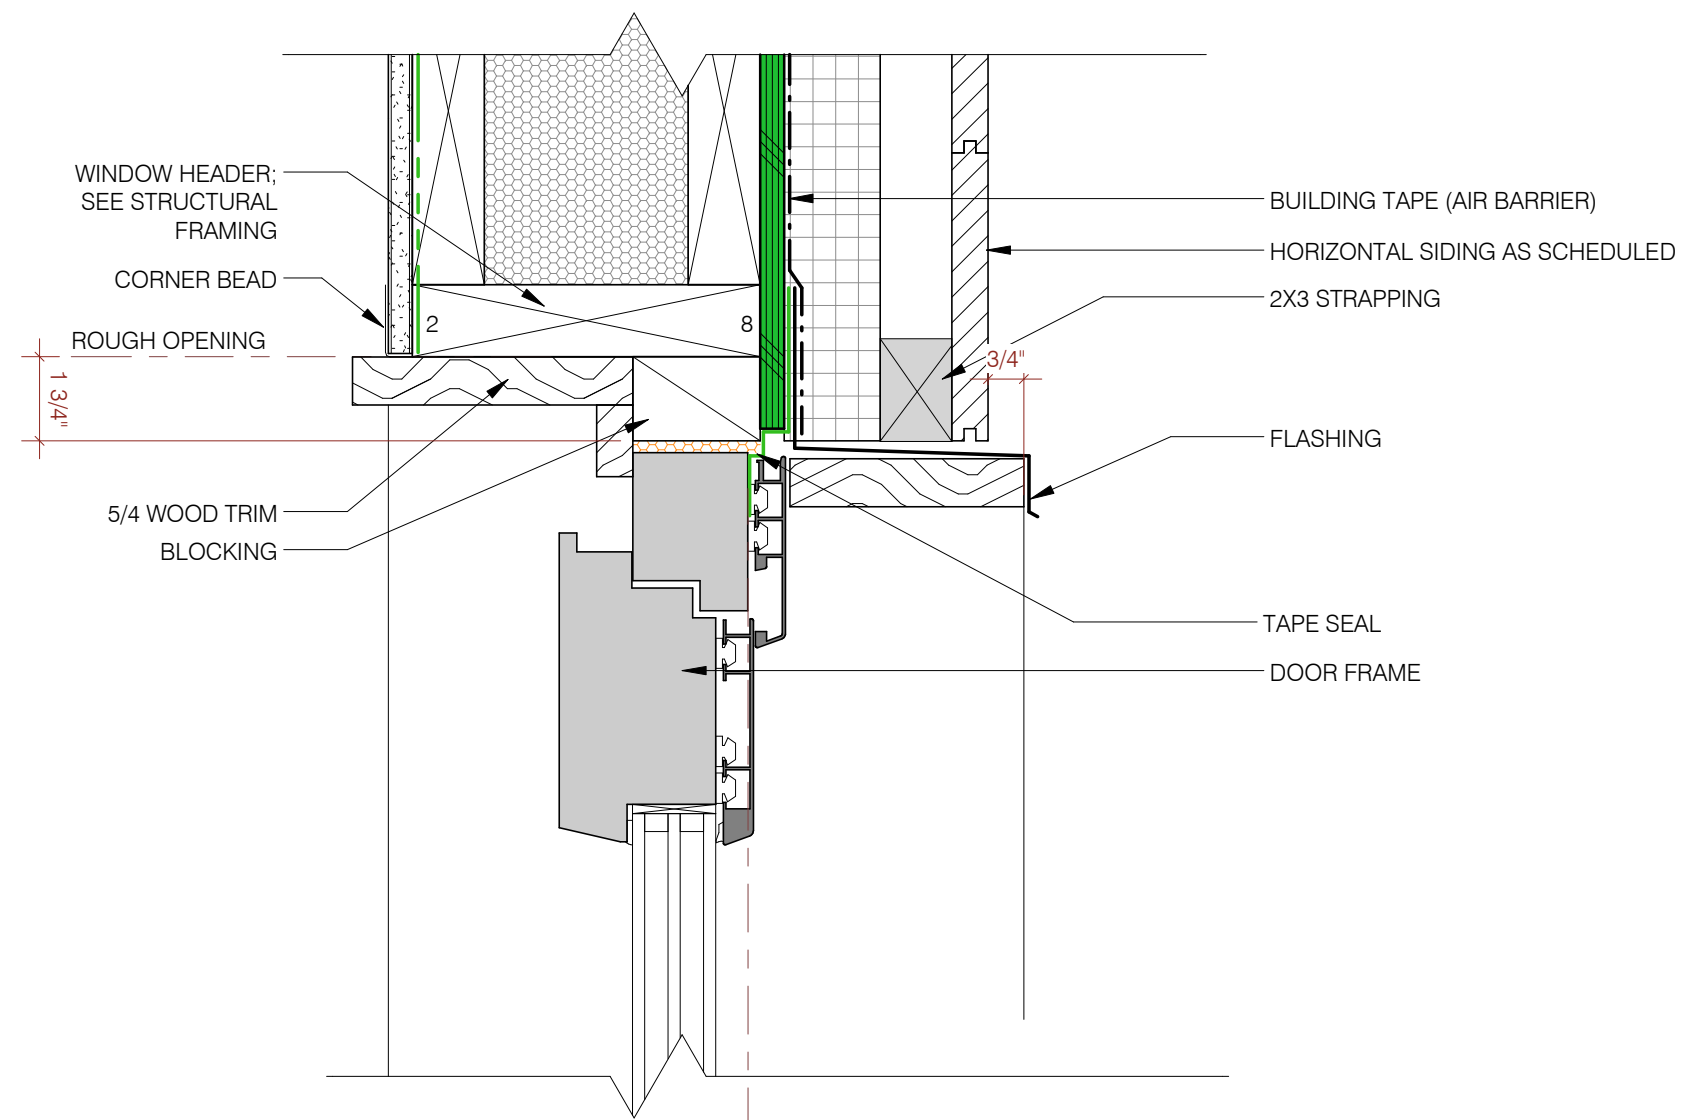


4 Exterior Prefab Door Head  
3' = 1'-0"

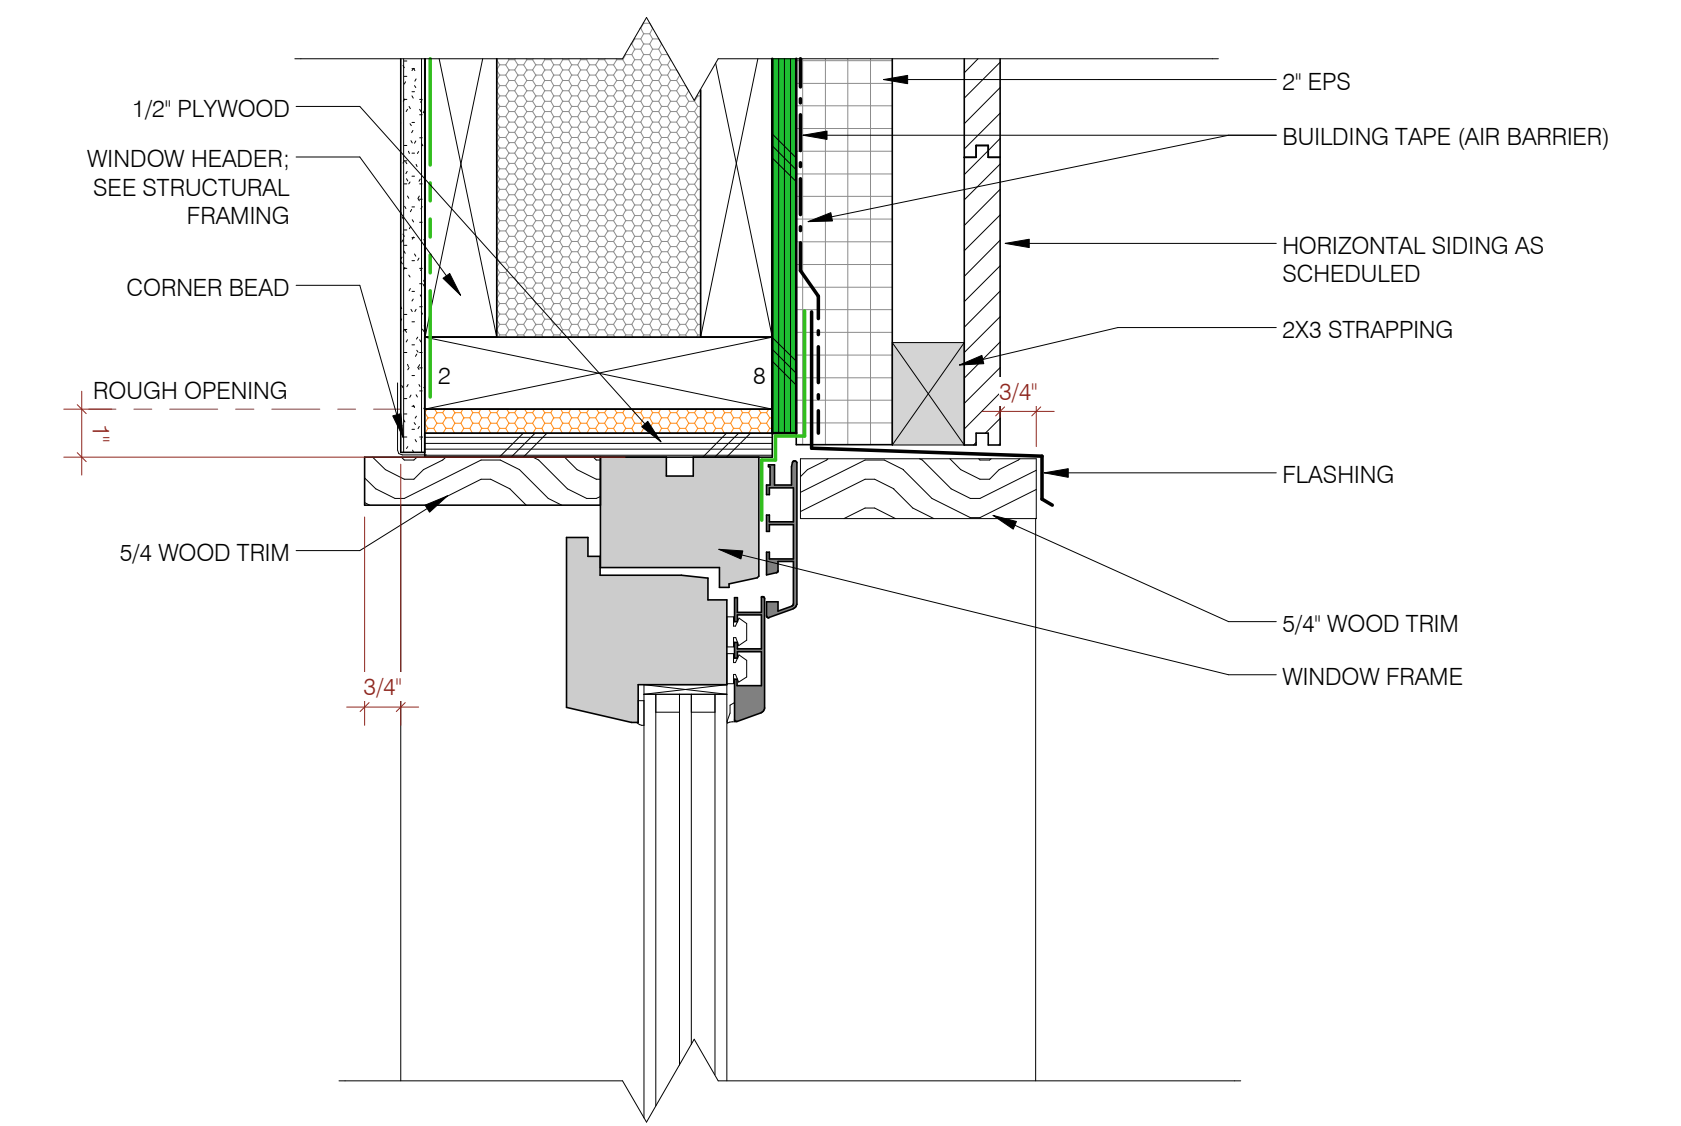


1 Typical Window Head  
3' = 1'-0"

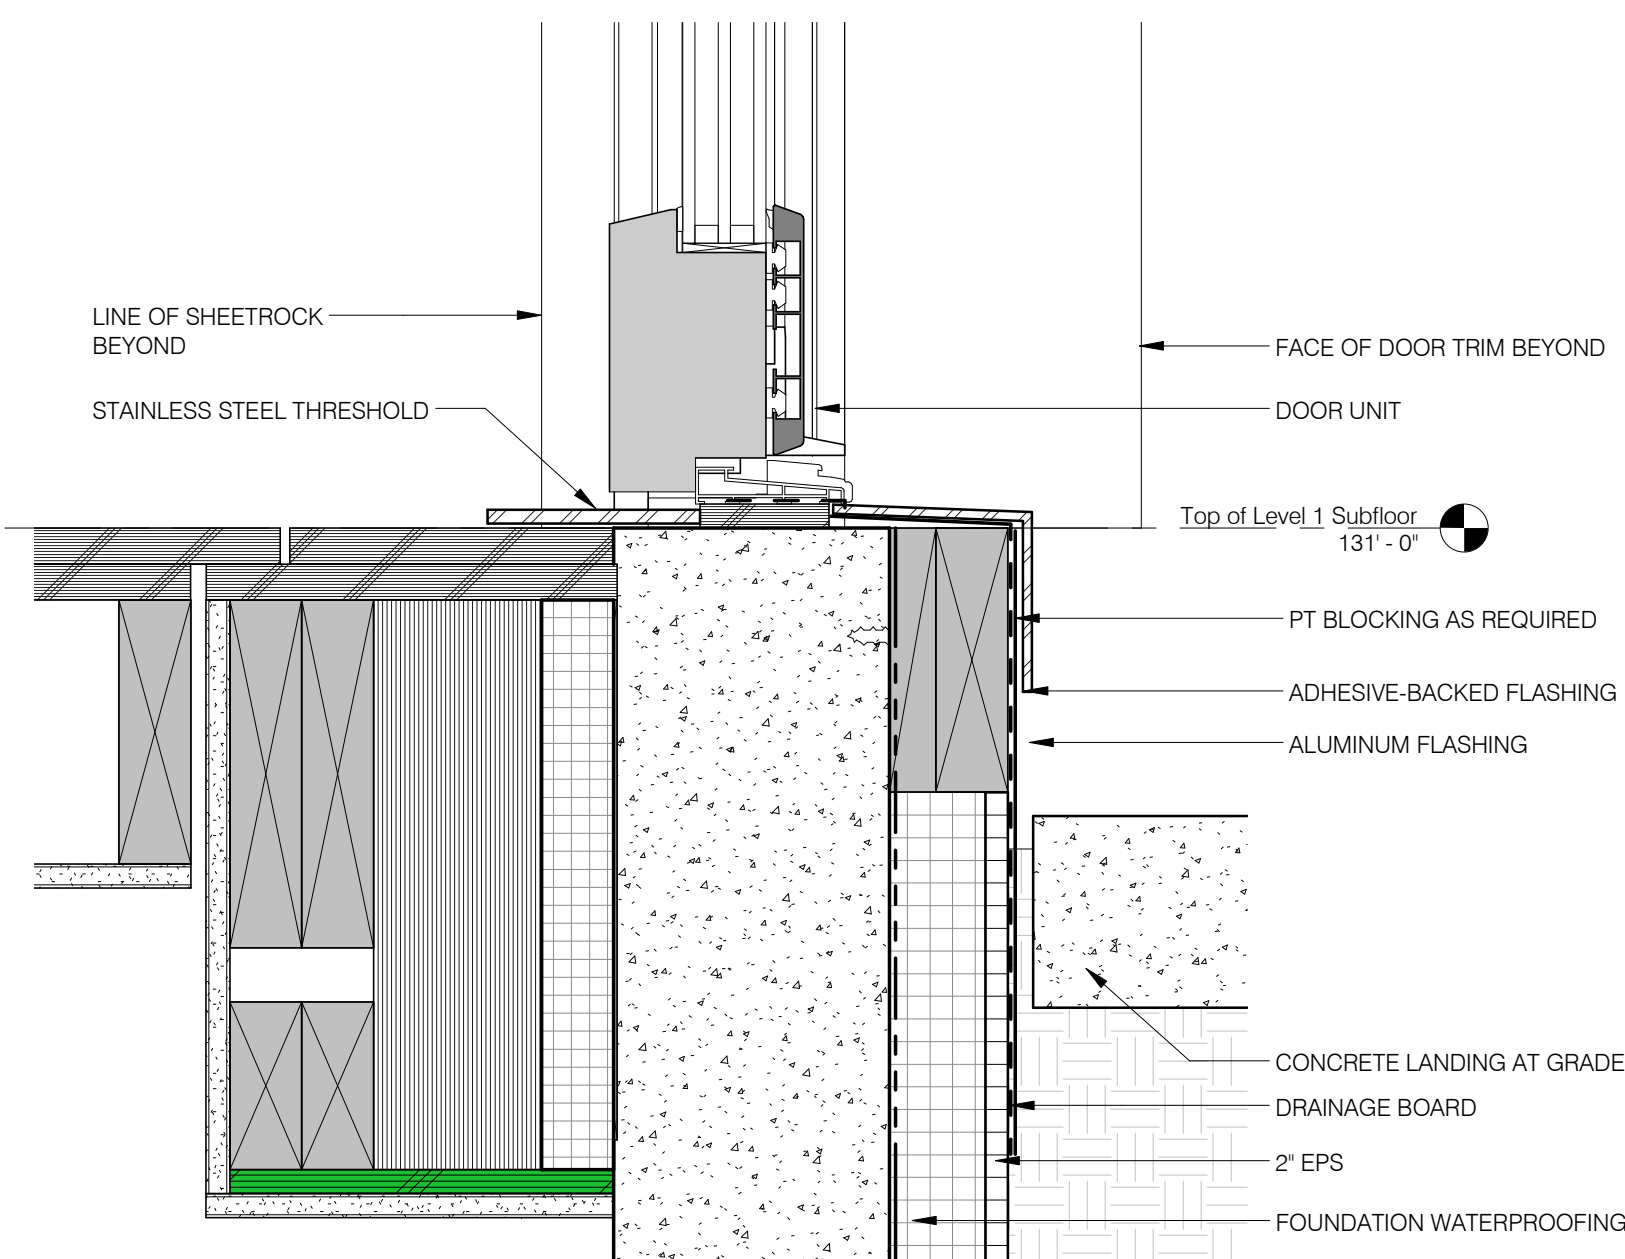


8 Exterior Garage Door Sill  
3' = 1'-0"

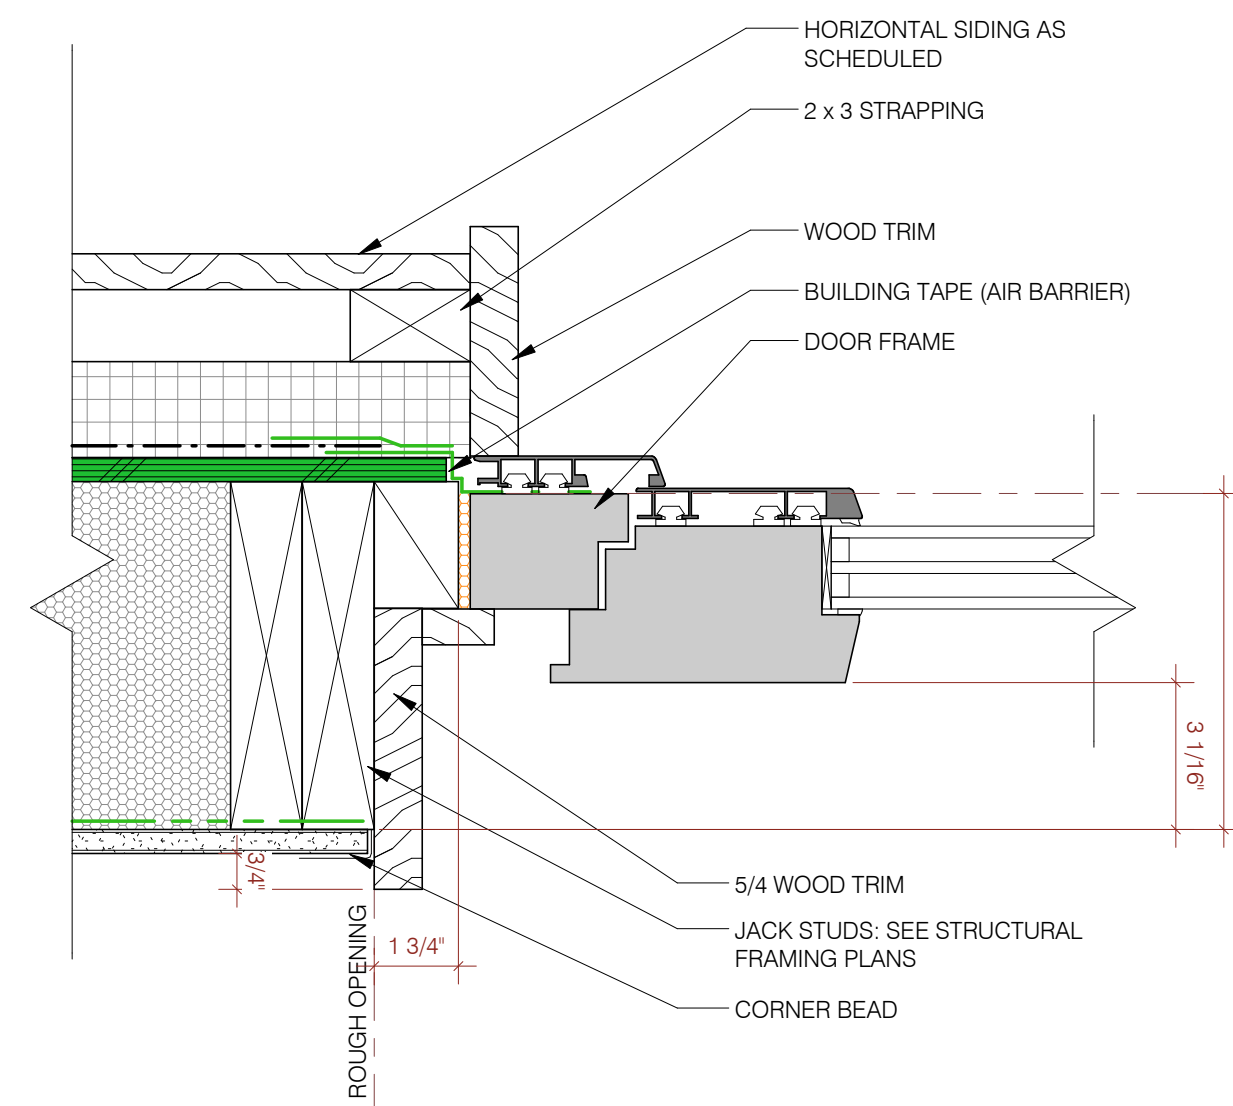

5 Exterior Prefab Door Jamb  
3' = 1'-0"

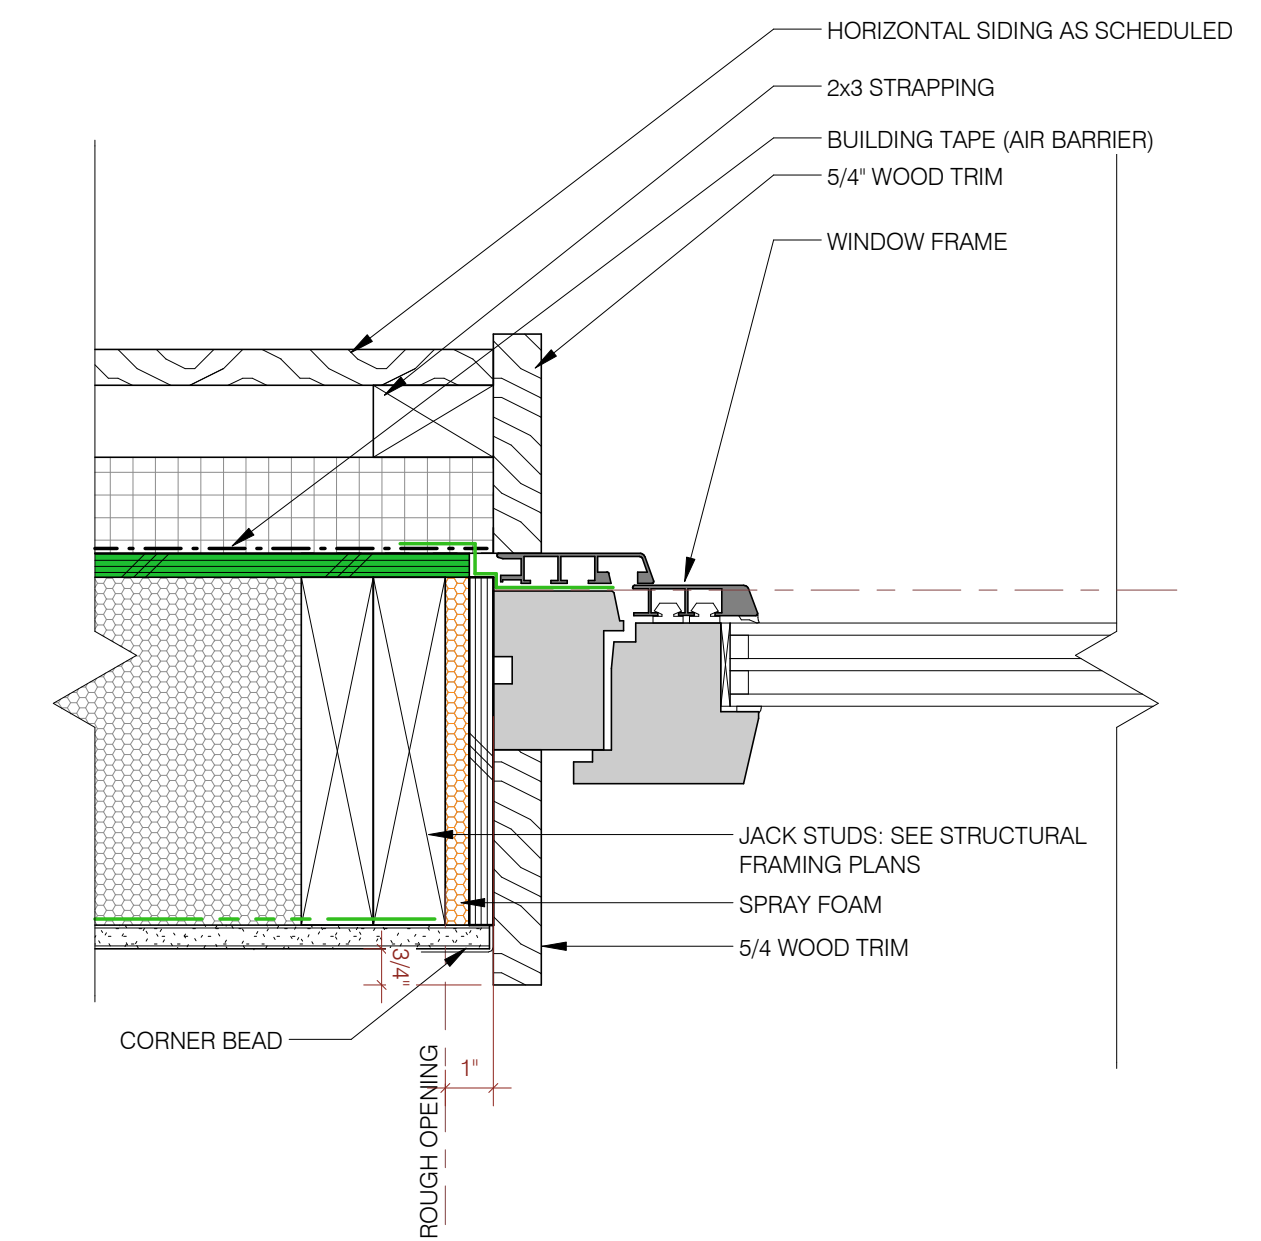

2 Typical Window Jamb  
3' = 1'-0"

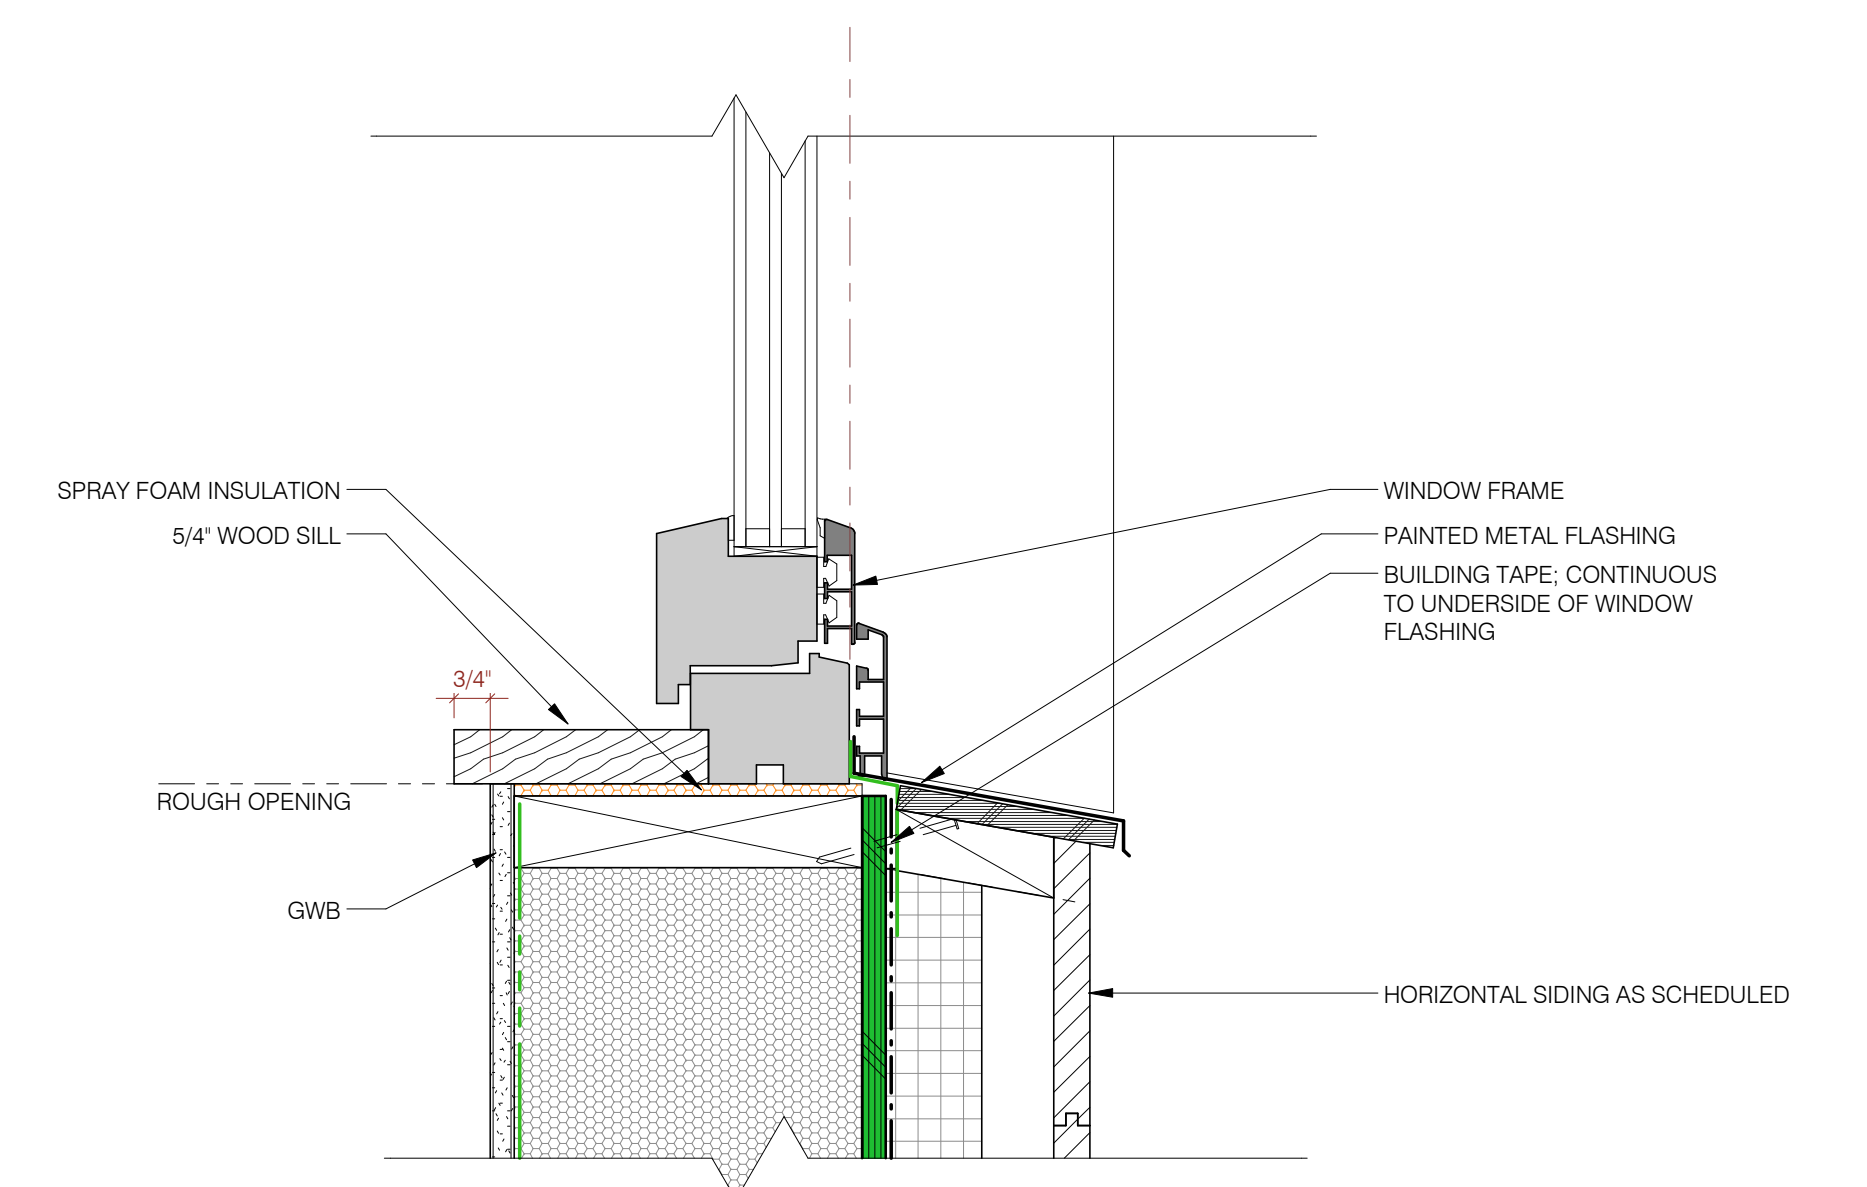

3 Typical Window Sill  
3' = 1'-0"