


- SHEAR WALL NOTES:**
1. Use 5/8" CDX plywood on each face of wall and nail with 10d nails at 4" o.c. at all edges and 12" o.c. at intermediate locations. All edges shall be blocked using 2 x material.
 2. Use 1/2" CDX plywood on each face of wall and nail with 10d nails at 6" o.c. at all edges and 12" o.c. at intermediate locations. All edges shall be blocked using 2 x material.
 3. Use 1/2" CDX plywood on one face of wall and nail with 8d nails at 6" o.c. at all edges and 12" o.c. at intermediate locations. All edges shall be blocked using 2 x material.
 4. All plywood walls shall extend from floor to ceiling and gyp board shall cover plywood.
 5. Provide triple studs at metal straps and holdowns.
 6. Nail bottom plate of wall to floor sheathing w/ 12d nails @ 8" o.c. Typical

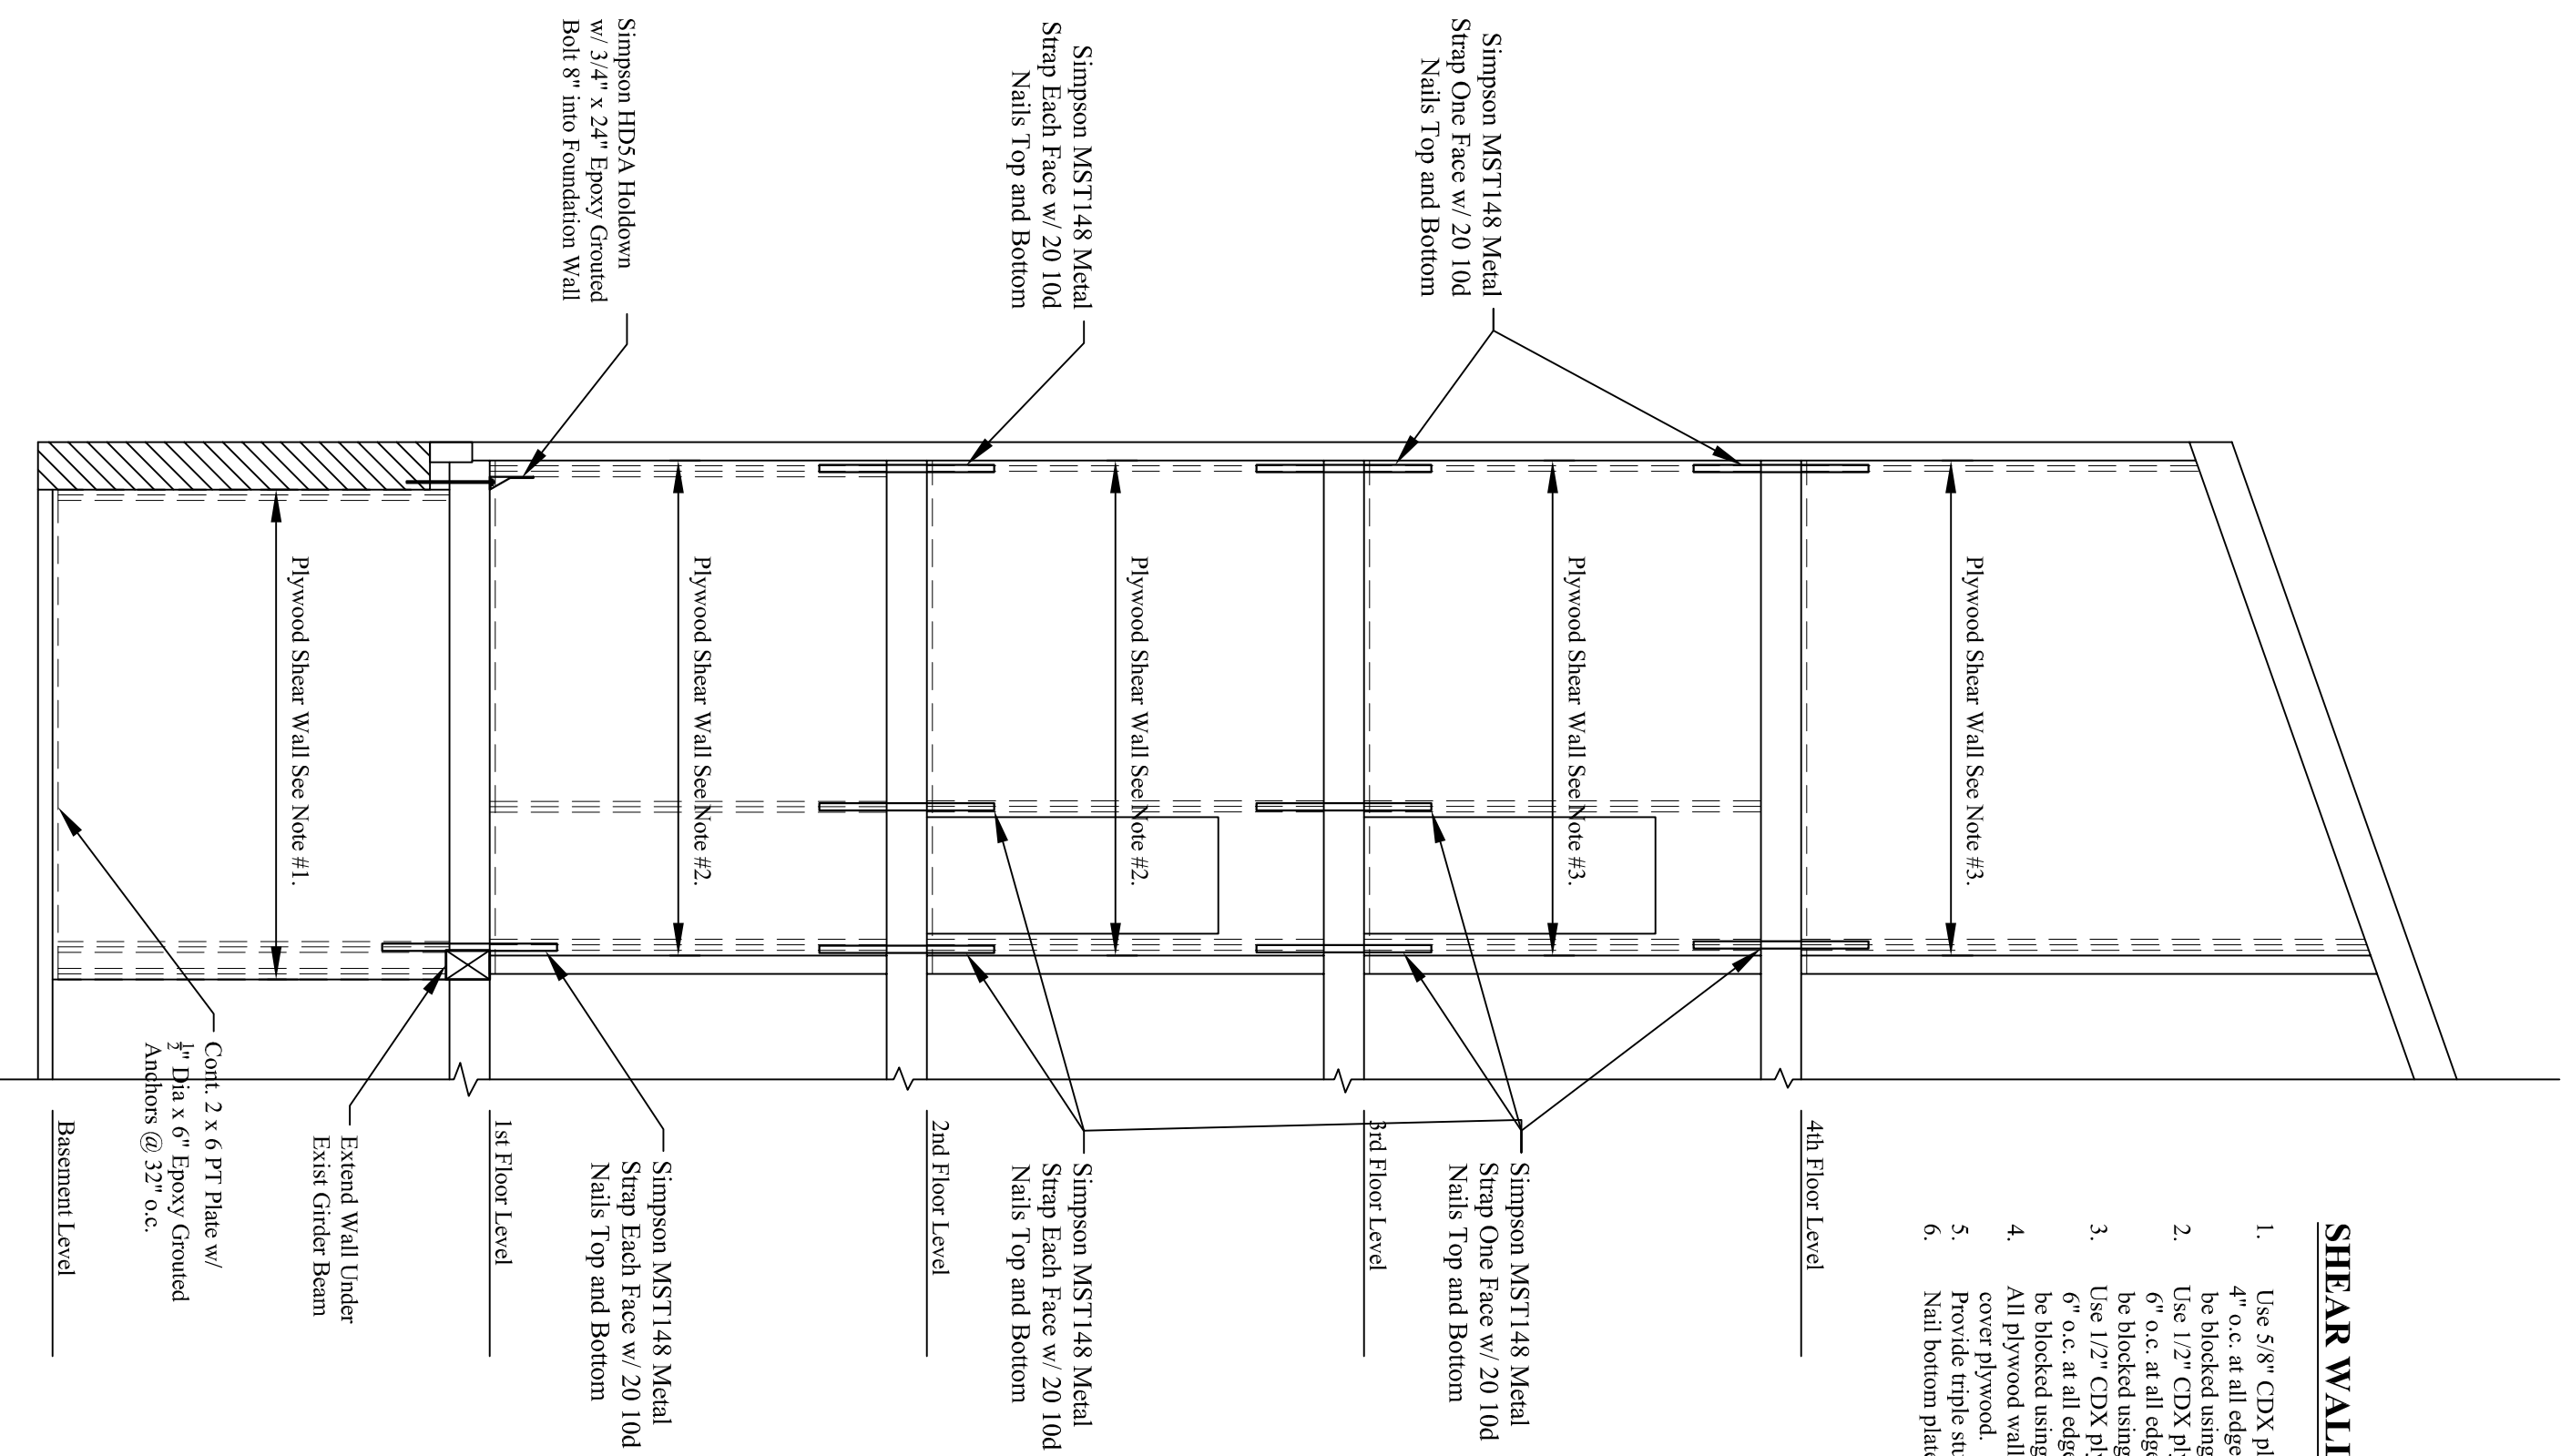

A
SS8
SHEAR WALL ELEVATION
Scale: 1/4" = 1'-0"

3-Unit Renovation
133 Morning Street * Portland, Maine

SHEAR WALL DETAIL SHEET



ENGINEERING DESIGN PROFESSIONALS
Consulting Engineers
P.O. BOX 575, FREEPORT, MAINE 04032 (207) 865-9505

DESIGNED BY:
Larry Wichroski, P.E.

DRAWN BY:
LAW

JOB NO.:
03006

DATE:
11-01-06

REVISIONS:
11-06-06

07-03-07

SHEET:
S9