




7 | ROOFTOP ACCESS - VERT. JNT - ADD ALT
3" = 1'-0"

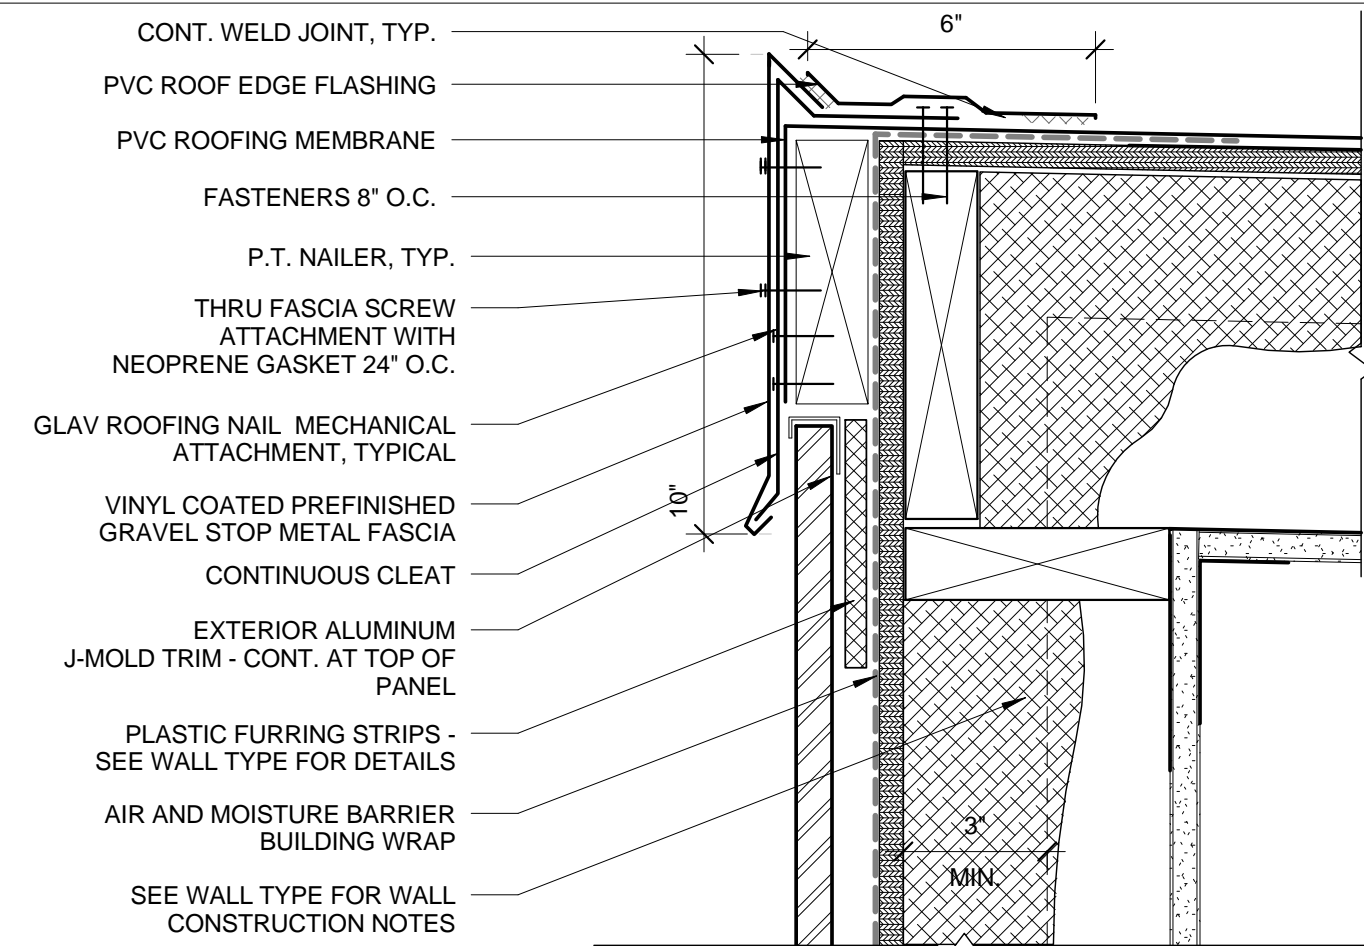


4 | ROOFTOP ACCESS - HIGH EAVE - ADD ALT
3" = 1'-0"

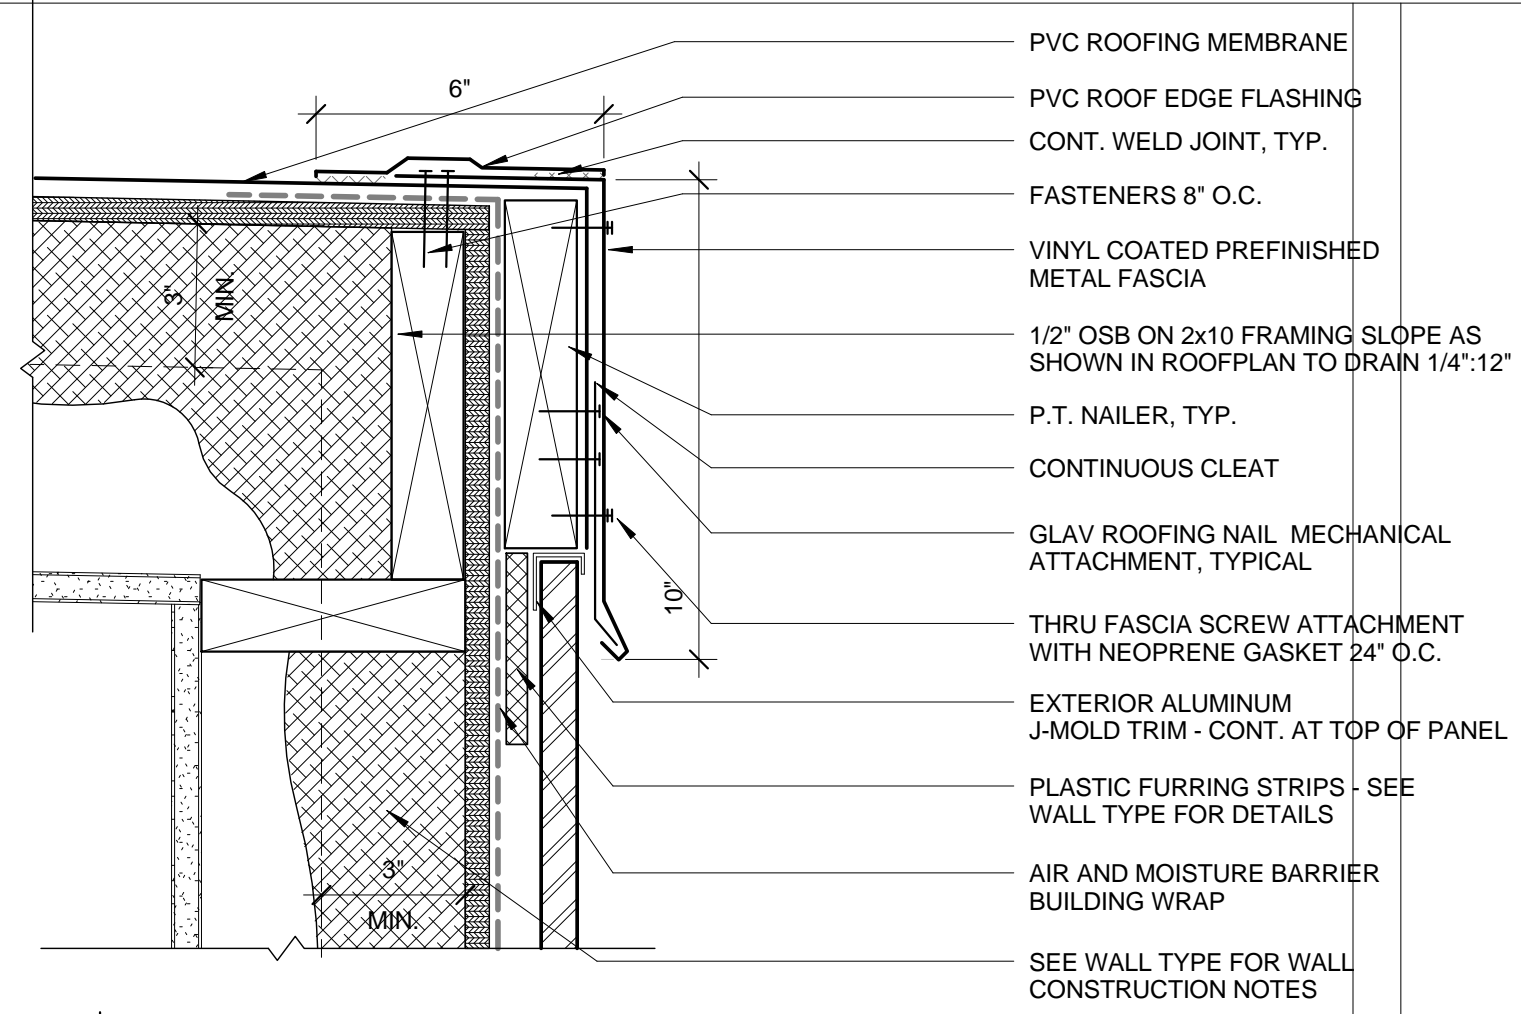


3 | ROOFTOP ACCESS - LOW EAVE - ADD ALT
3" = 1'-0"

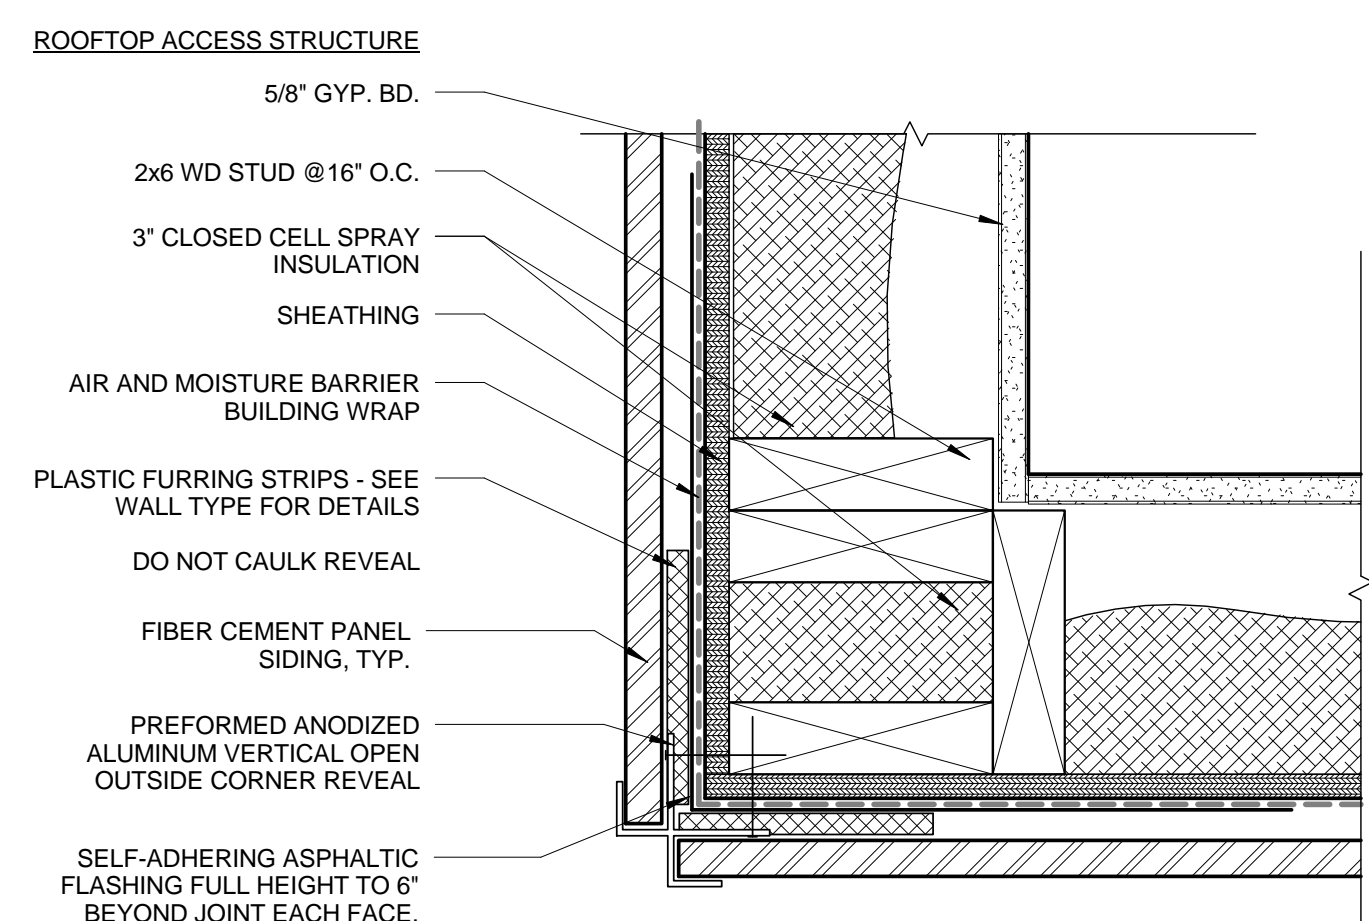


6 | ROOFTOP ACCESS - OUTSIDE CORNER - ADD ALT
3" = 1'-0"

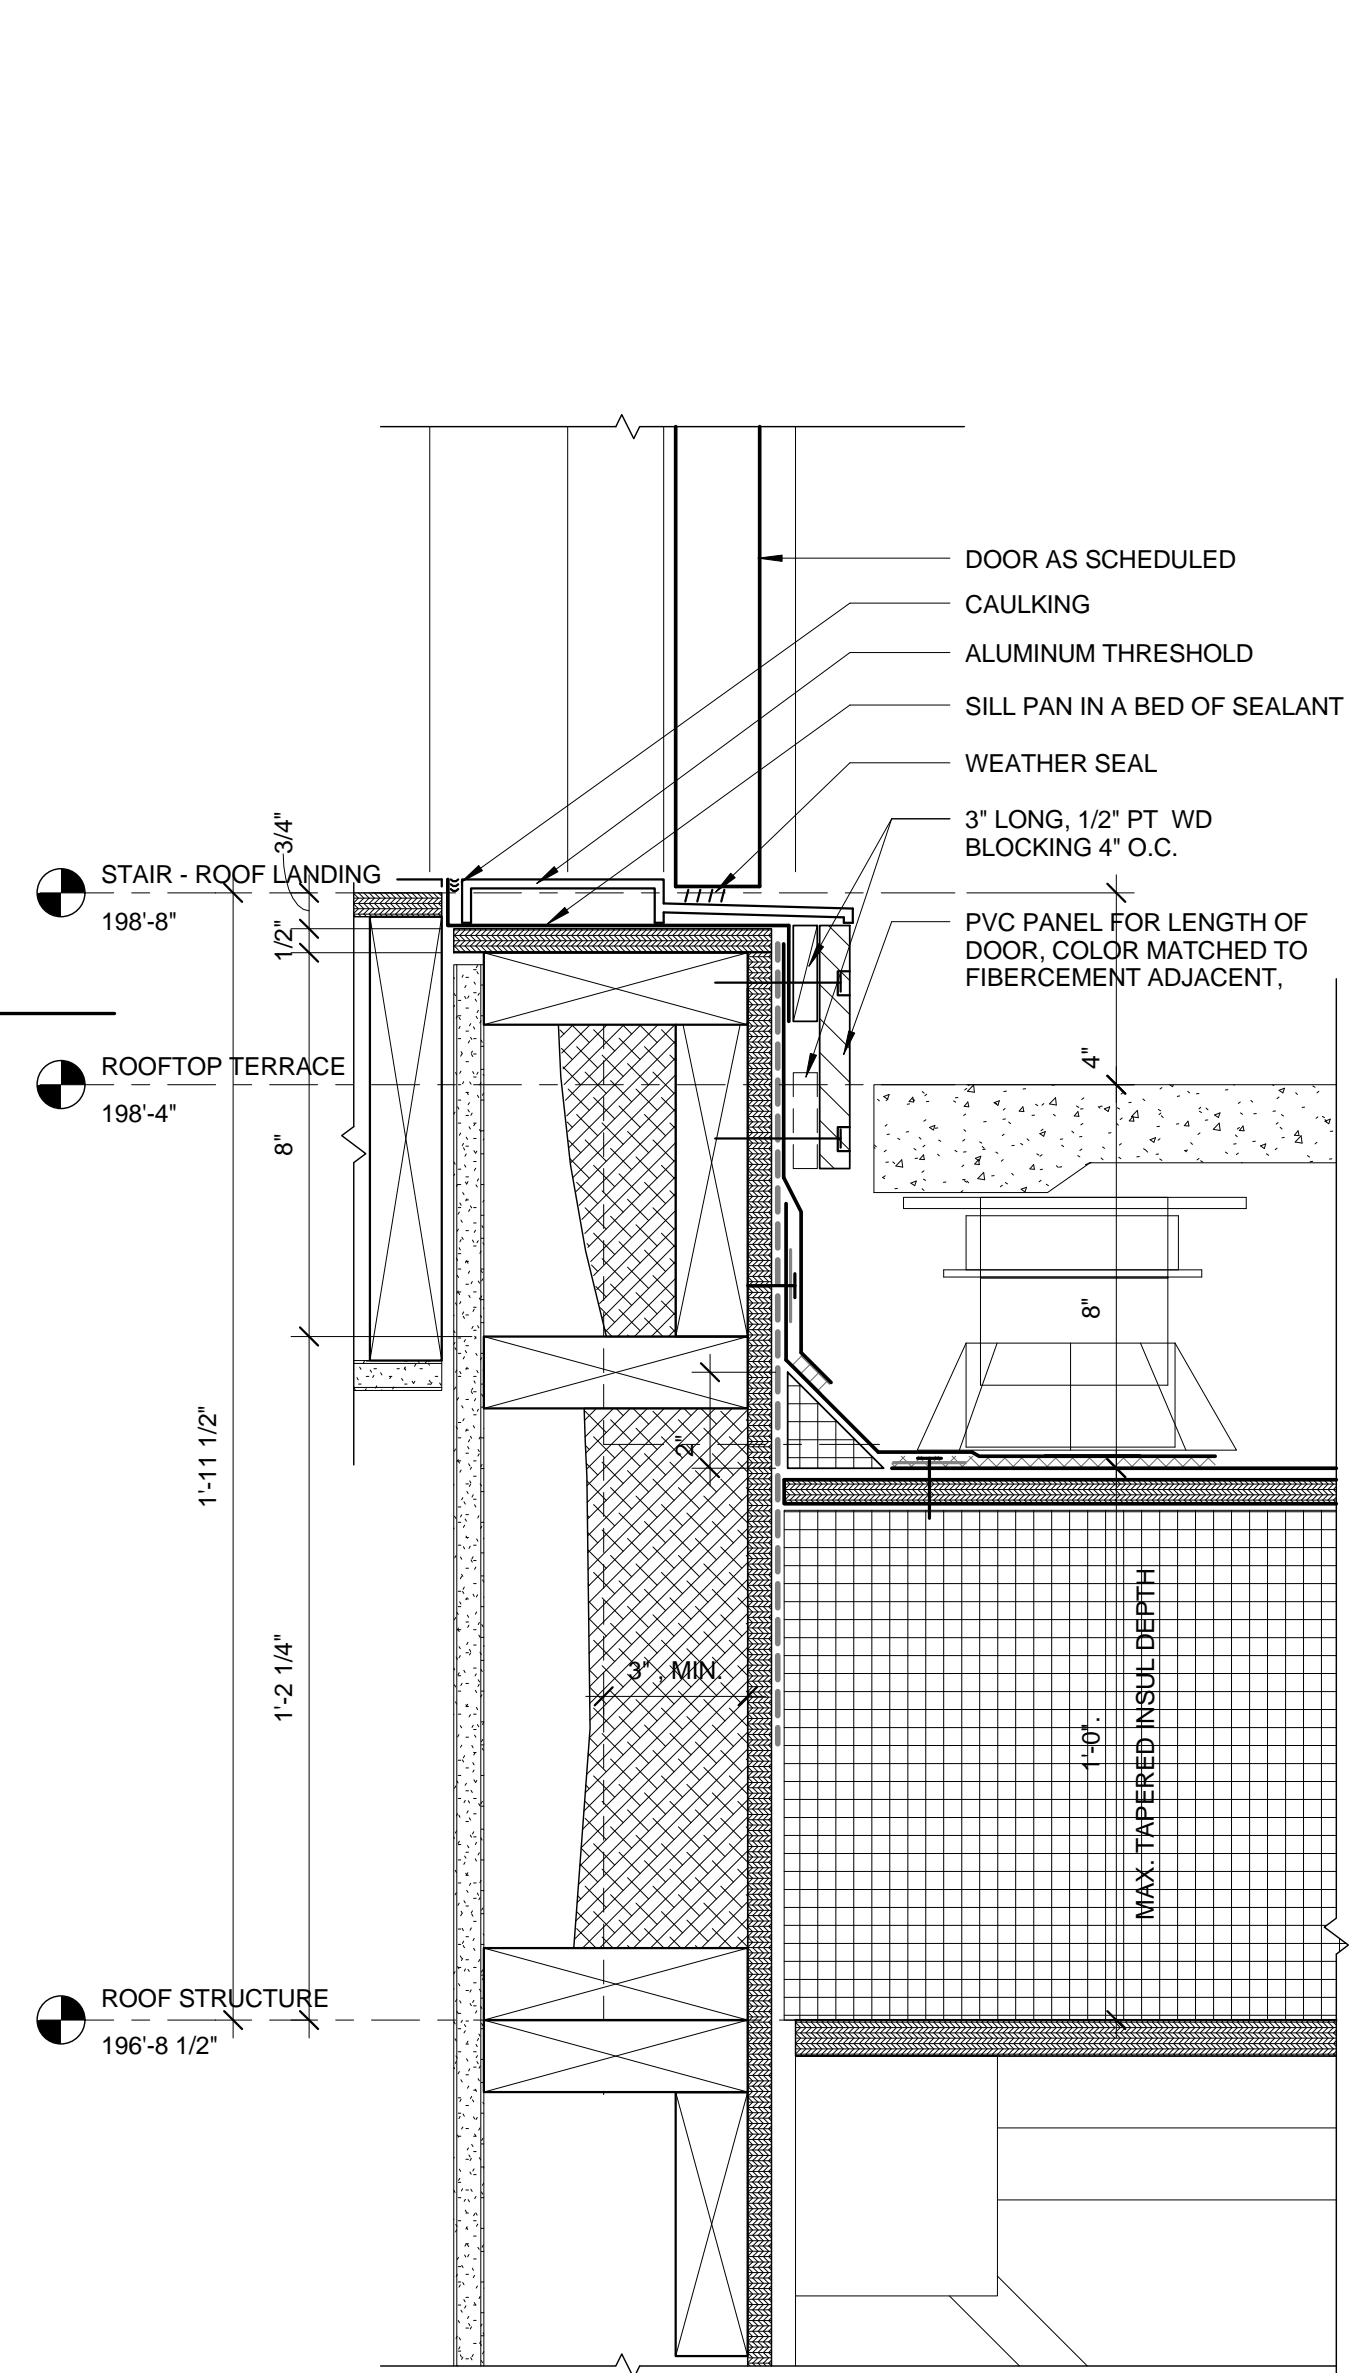


2A | ROOFTOP ACCESS - DOOR DETAIL - ADD ALT
3" = 1'-0"

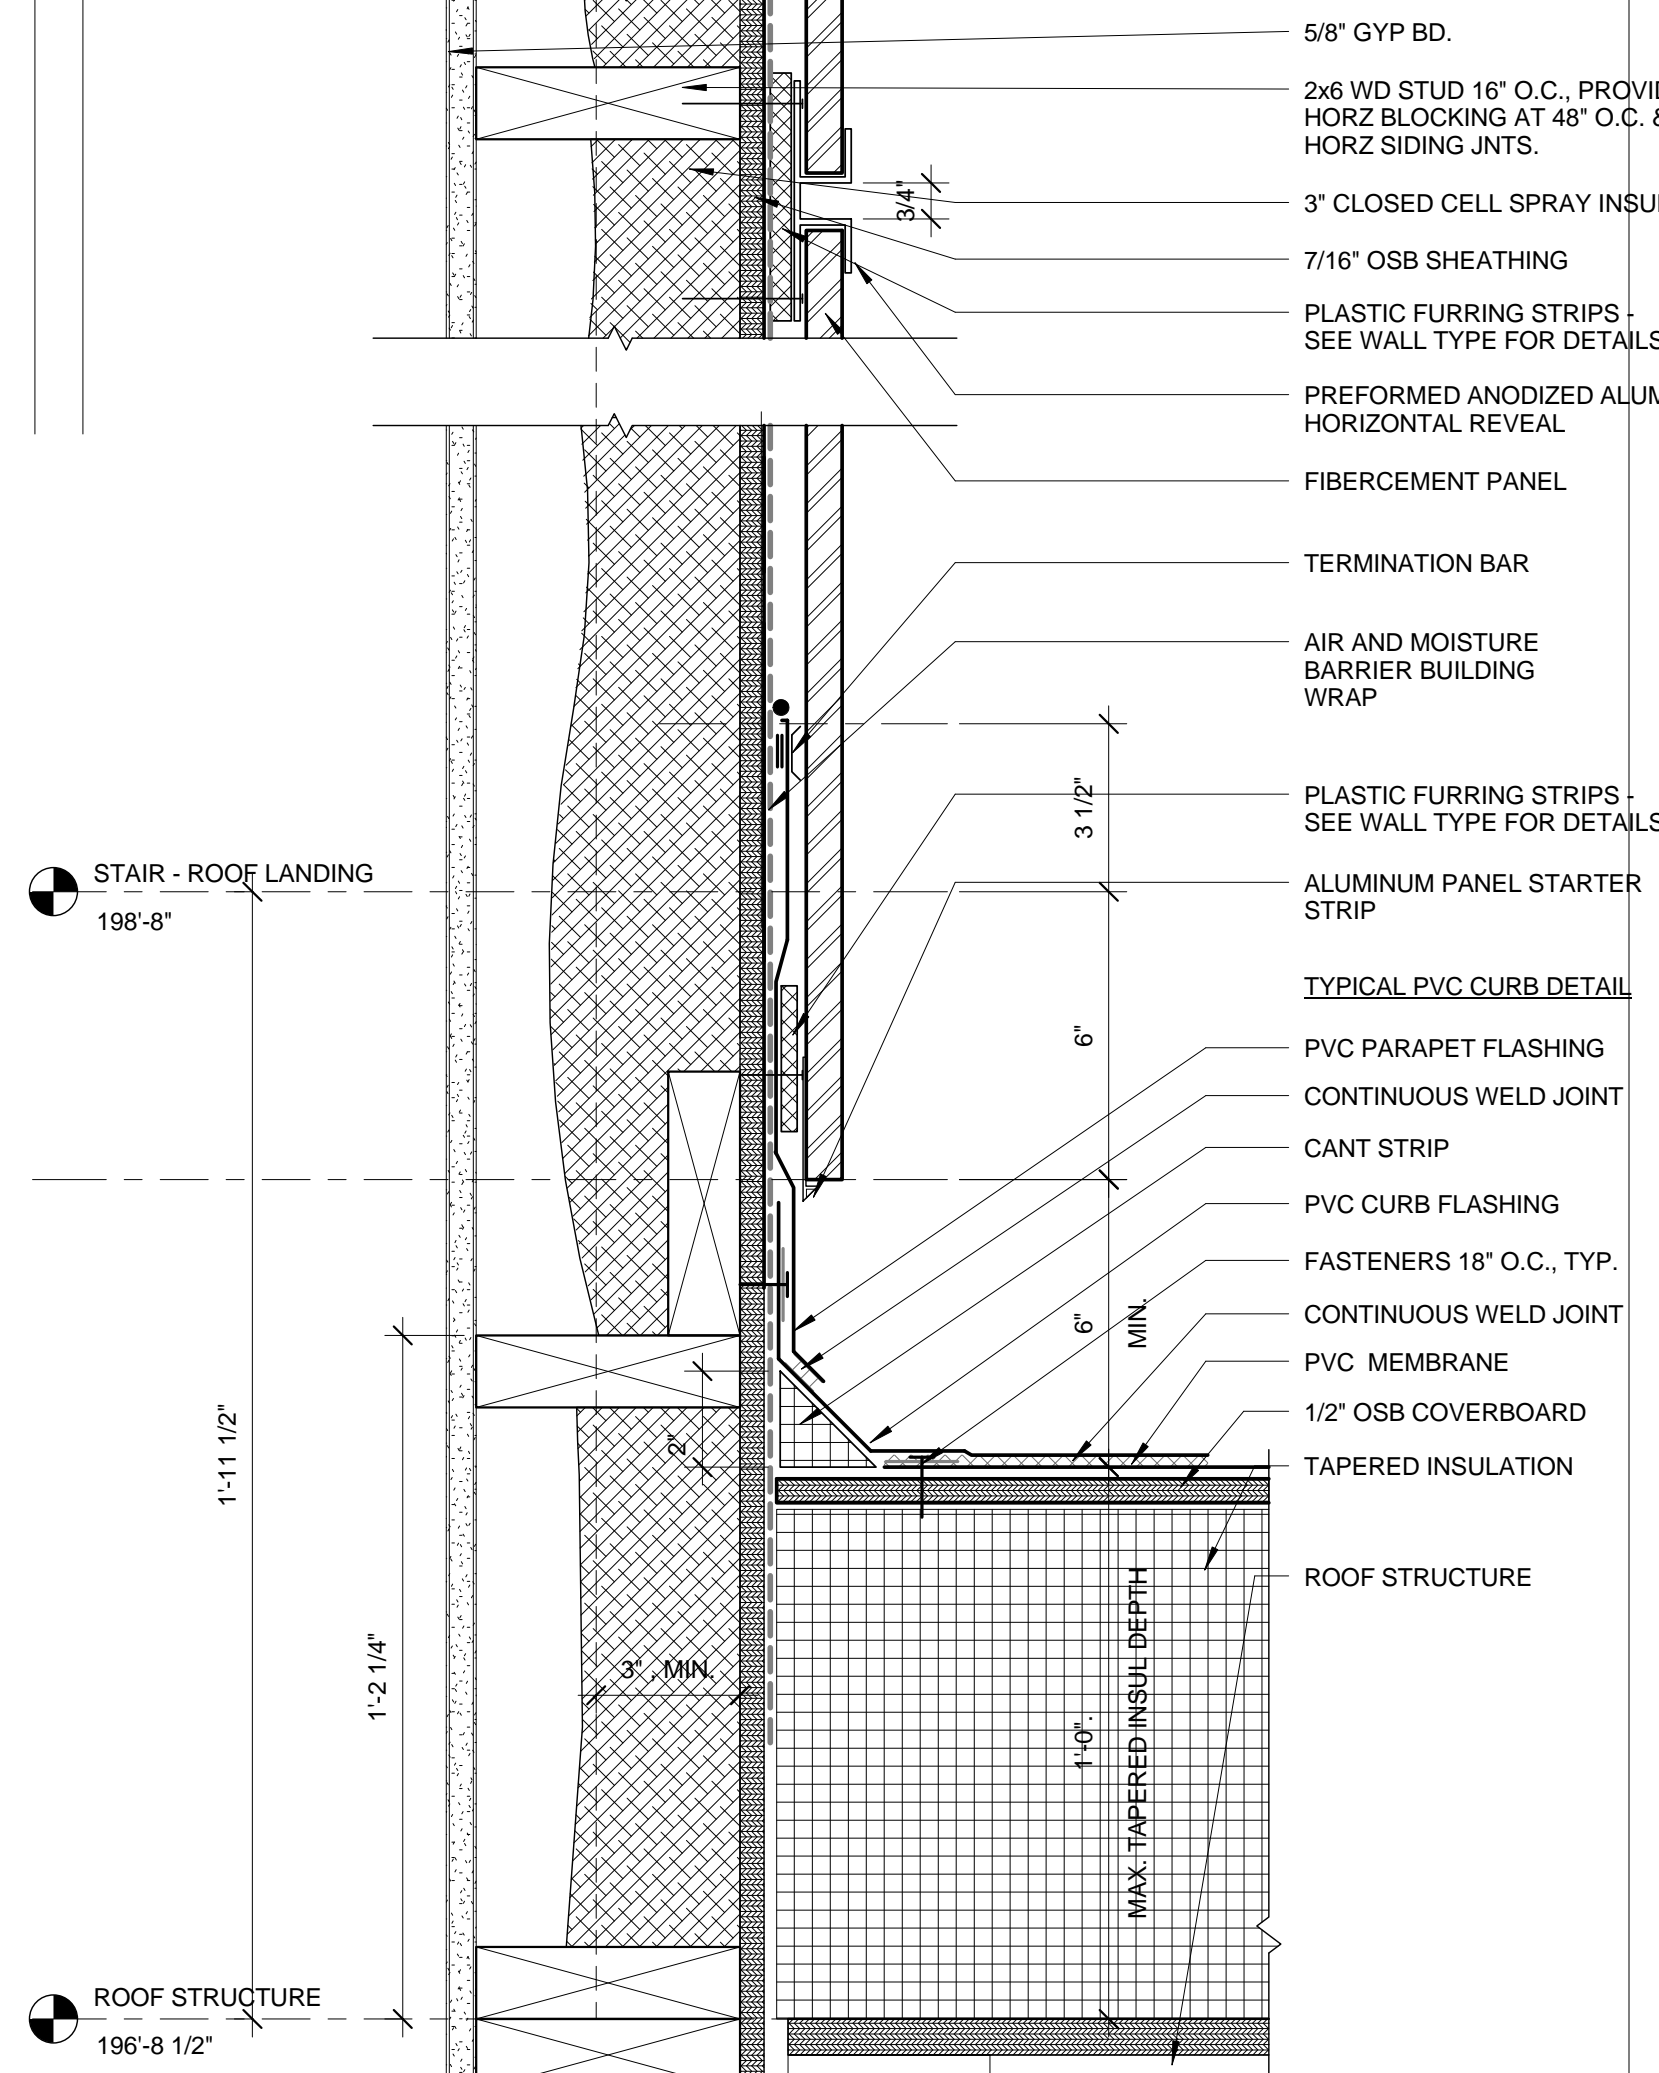

2 | ROOFTOP ACCESS - BASE OF WALL - ADD ALT
3" = 1'-0"

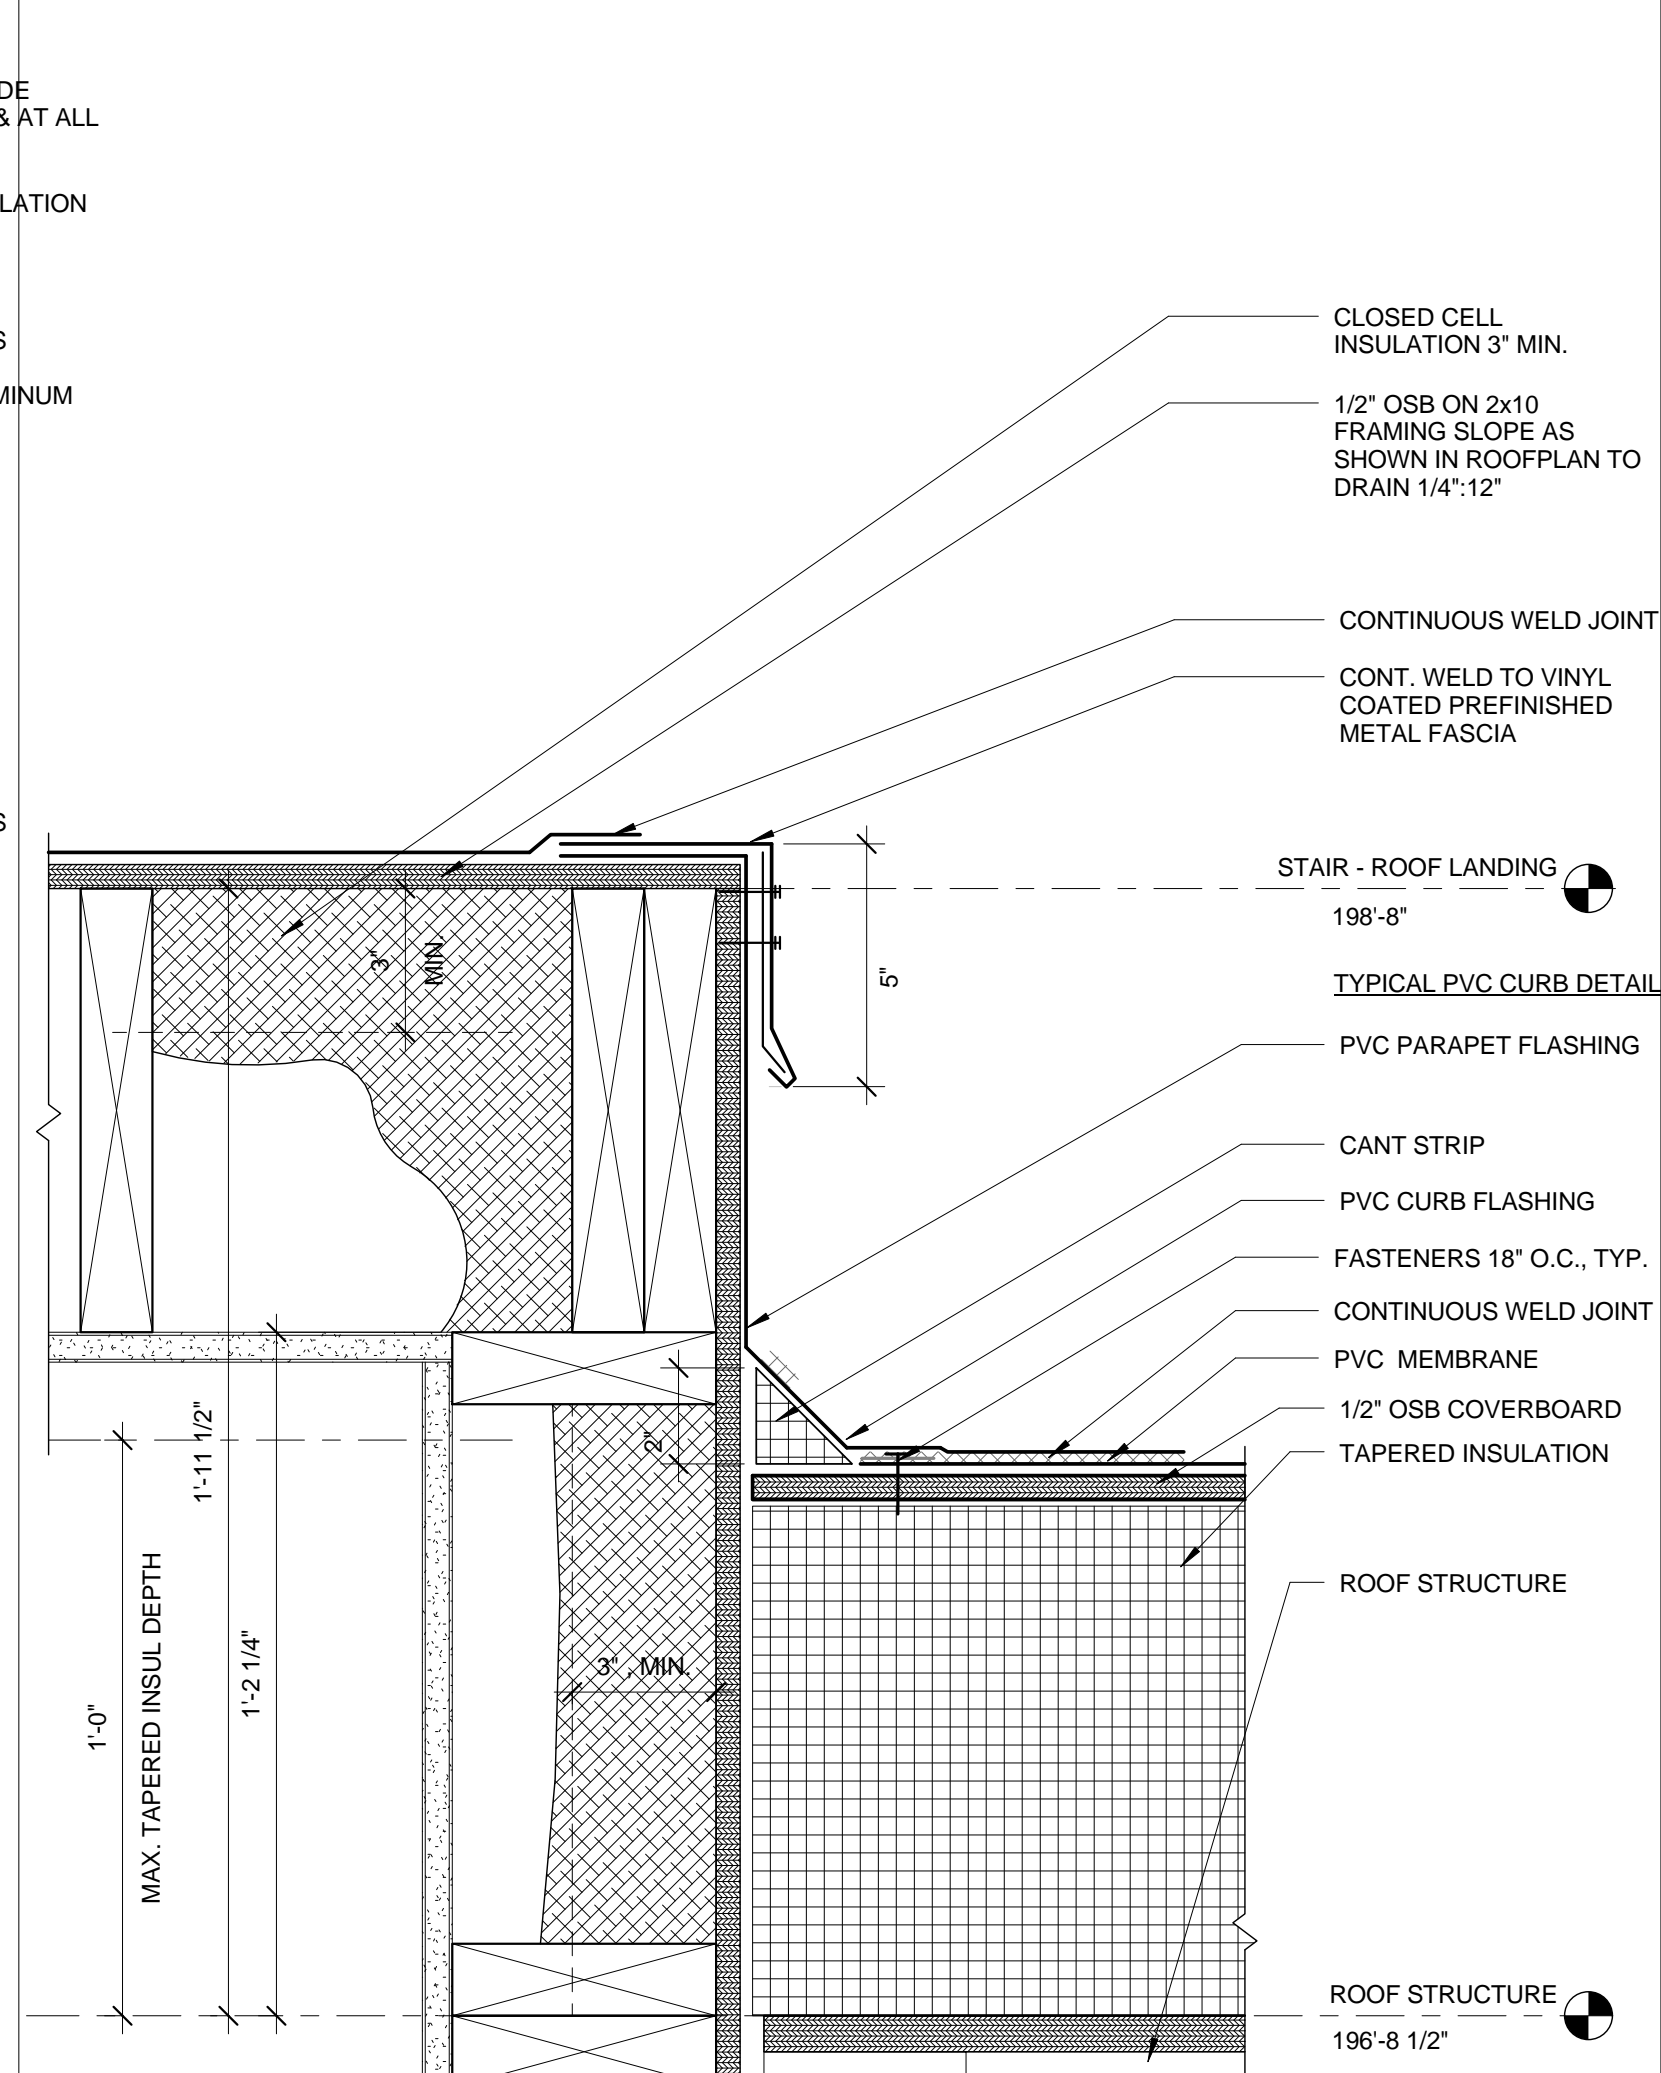

1 | ROOFTOP ACCESS - BASE OF WALL - BASE BID
3" = 1'-0"

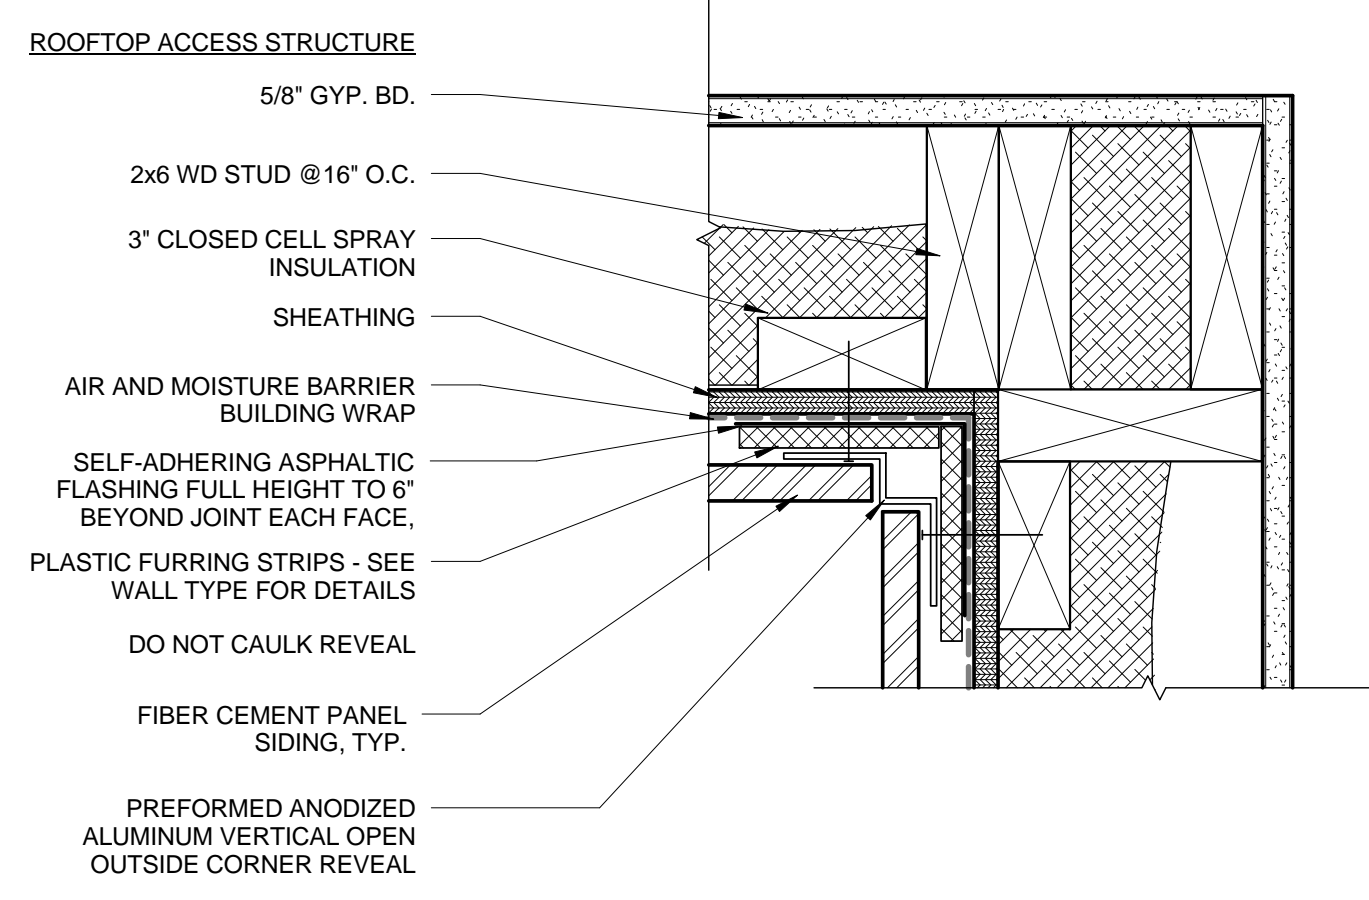

5 | VERTICAL JOINT AT INSIDE CORNER - ADD ALT
3" = 1'-0"