


Steel Angle Fasteners = 4 2 1/2" T-locks into 2x8
= 4 4" T-locks into columns. Total 8 angles
per post

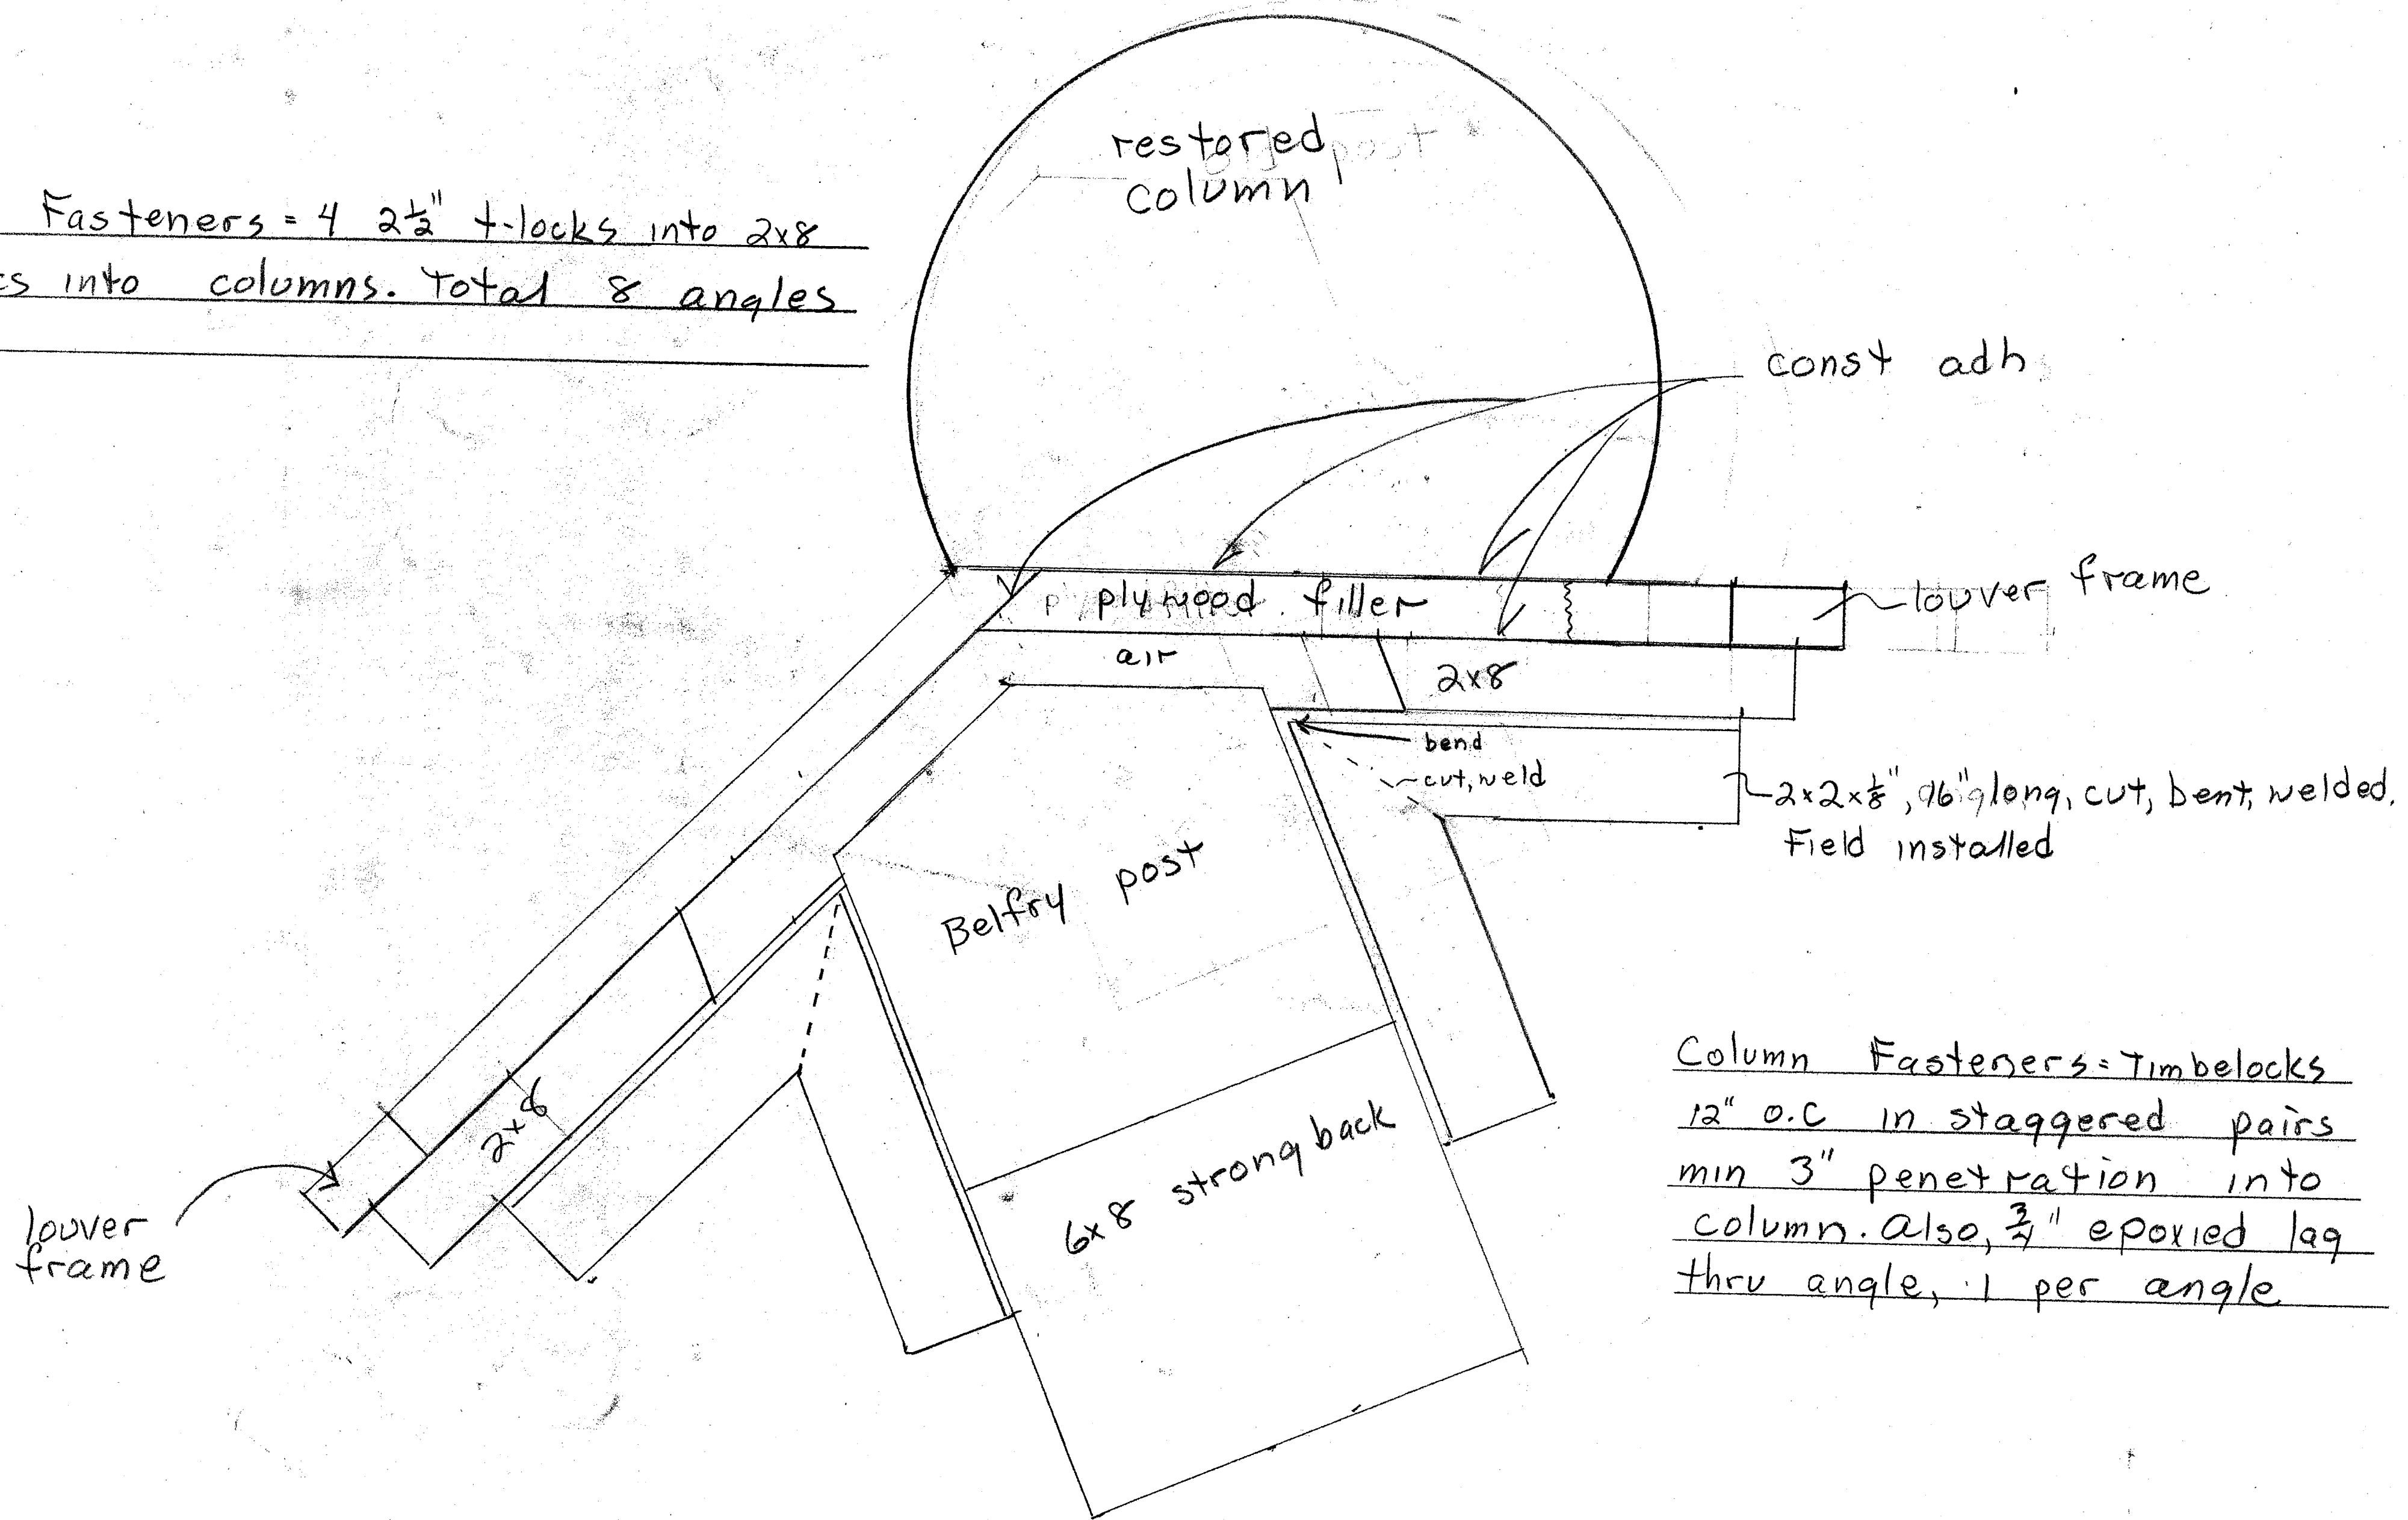

Column Fasteners = Timberlocks
12" o.c. in staggered pairs
min 3" penetration into
column. Also, 3/4" epoxied lag
thru angle, 1 per angle

Column & Belfry nail to Post connection 6" = 1'