

3. BUILD UP LAYERS OF SUBFLOOR AND UNDERLAYMENT SO THAT ENTIRE WORK AREA FLOOR IS LEVEL AND UNIFORM. REFER TO FLOOR ASSEMBLY F-1.





**Bild Arch**PO Box 8235
Portland, ME
04104
207.408.0168
evan@bildarchi

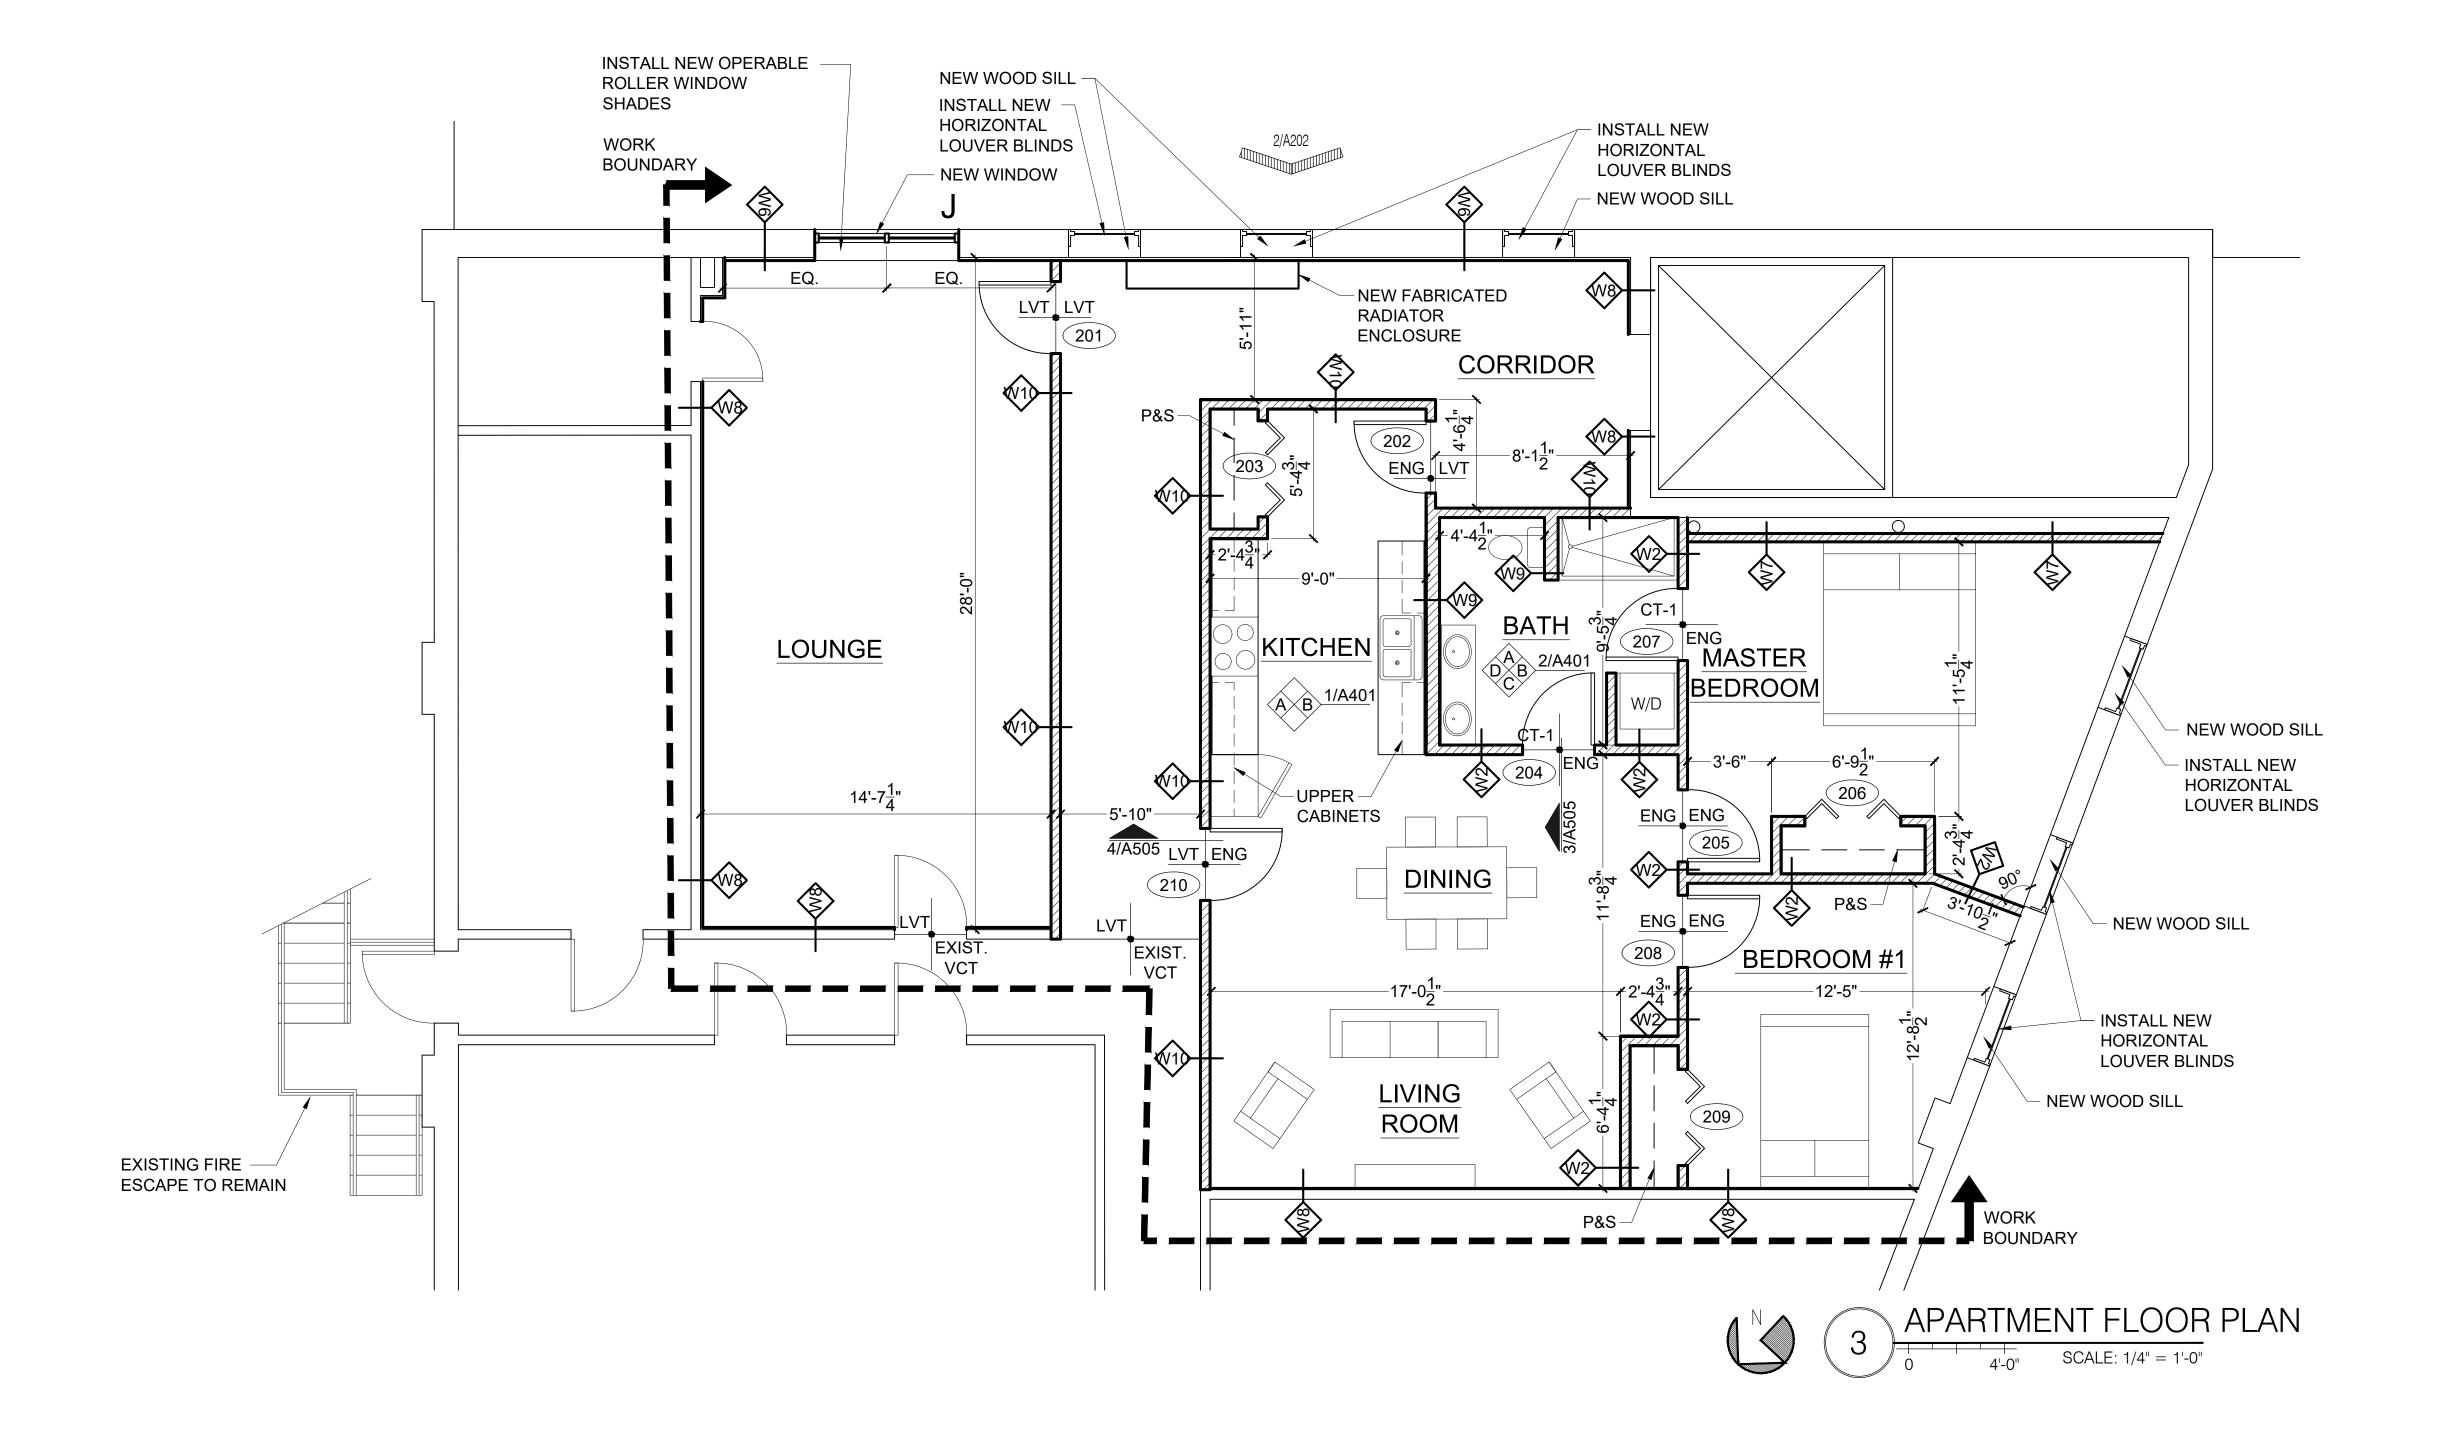

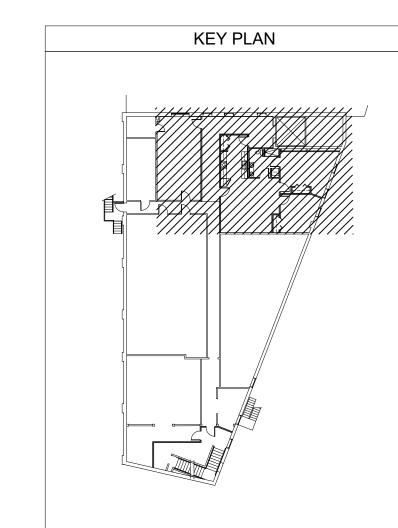


REVISI 2 -2 -3 -5 -5 -

CONSTRUCTION DOCUMENTS FLOOR **APARTMENT** 

DRAWN **AEW** SHEET T

10/25/16 10/25/16 SHEET SCALE 1/4" = 1'-0"

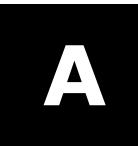

101