


THIS AREA ASSUMED TO HAVE WOOD SUBFLOOR
REMAINING AREAS ASSUMED CONCRETE SUBFLOOR
ADJUSTABLE TRANSITION AT FLOORING AT LOCATION OF BUILDING MOVEMENT JOINT

1 FLOORING REPLACEMENT PLAN
3/32" = 1'-0"


- FLOORING NOTES**
- 1.) AT LOCATIONS OF EXISTING VCT INDICATED TO BE REMOVED ON CONCRETE SUBSTRATE, MECHANICALLY REMOVE TILE AND ALL ADHESIVE MATERIALS DOWN TO CONCRETE BASE UTILIZE DUSTLESS MACHINE.
 - 2.) GRIND CONCRETE HIGH POINTS AND RIDGES AS REQUIRED TO MINIMIZE FLOOR UNDULATIONS
 - 3.) APPLY SELF LEVELING MATERIAL TO CLEAN CONCRETE SURFACE (MAPEI ULTRAPAN M20 PLUS) TO ENTIRE FLOOR SURFACE TO PROVIDE SMOOTH SURFACE. INSTALL PER MANUFACTURERS INSTRUCTIONS
 - 4.) AT DOOR THRESHOLDS TO ROOMS WITH CARPET TILE ADJACENT TO NEW SELF LEVELED FLOORS, REMOVE FIRST COURSE OF CARPET TILE FEATHER (ARDEX FEATHERING MATERIAL) FROM SELF LEVELING INTO ROOM AND REINSTALL CARPET TILE. INSTALL NEW VINYL THRESHOLDS
 - 5.) ALL LOCATIONS OF EXISTING VCT INDICATED TO BE REMOVED ON WOOD SUBSTRATE. REMOVE TILE AND ADHESIVES. REPLACE AND REPAIR ANY DAMAGED SUBFLOOR, SKIM UNEVEN SURFACES WITH SELF LEVELING COMPOUND. INSTALL NEW 1/4" LAYER OF PLYWOOD, PREP FOR NEW VCT FLOOR TILE
 - 6.) PROVIDE NEW TRANSITIONS AT ALL DOORWAY LOCATIONS OF NEW FLOORING AND EXISTING FLOORING.

FLOORING LEGEND

SYMBOL	DESCRIPTION
[Symbol]	VCT COLOR #1
[Symbol]	VCT COLOR #2
[Symbol]	VCT COLOR #3
[Symbol]	12"X12" CERAMIC TILE
[Symbol]	6"X6" CERAMIC TILE
[Symbol]	CARPET TILE

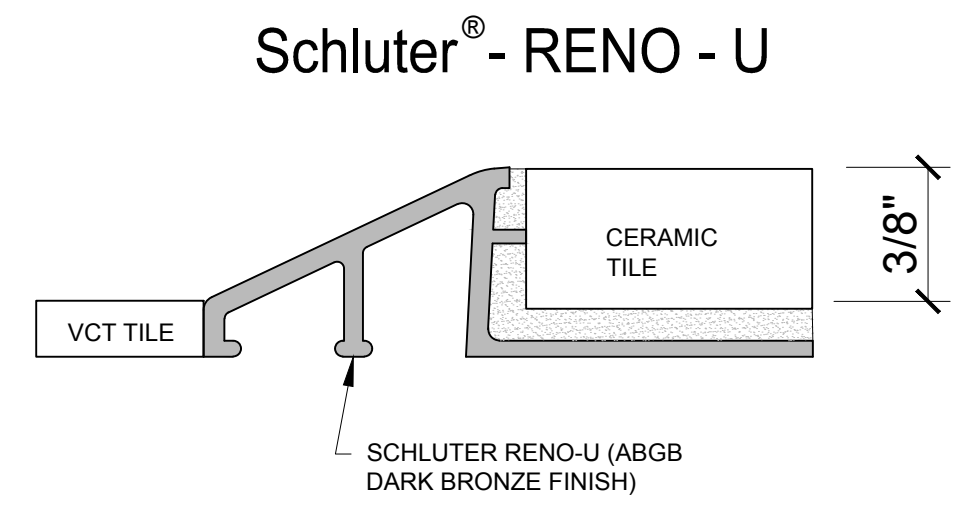

3 THRESHOLD AT CERAMIC TILE AND VCT TILE FLOORING
NTS

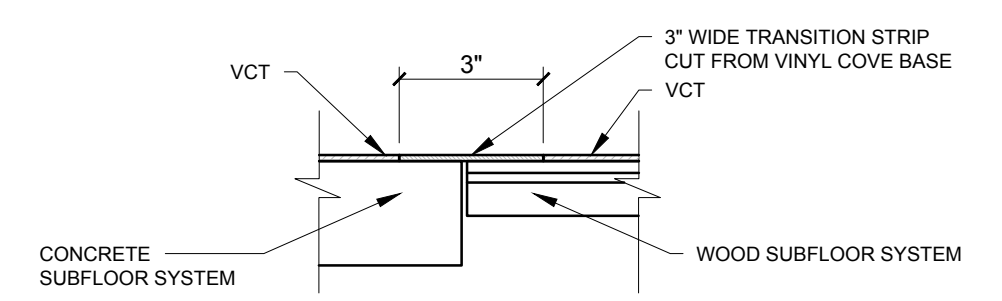

2 THRESHOLD AT CONCRETE AND WOOD SUBFLOOR TRANSITION
3" = 1'-0"

RSA
RYAN SENATORE ARCHITECTURE
565 CONGRESS STREET
SUITE 304
PORTLAND, MAINE 04101
207-650-6414
senatorearchitecture.com

CONSULTANTS:

REVISIONS:

DATE: AUGUST 29, 2014

PROJECT No.

DRAWN BY: RRT / RJS

CHECKED BY: RJS

SCALE: AS NOTED

SHEET TITLE:
FLOORING REPLACEMENT PLAN