




10 PRECAST DOUBLE TEE EDGE AT RETAINING WALL
1/2" = 1'-0"

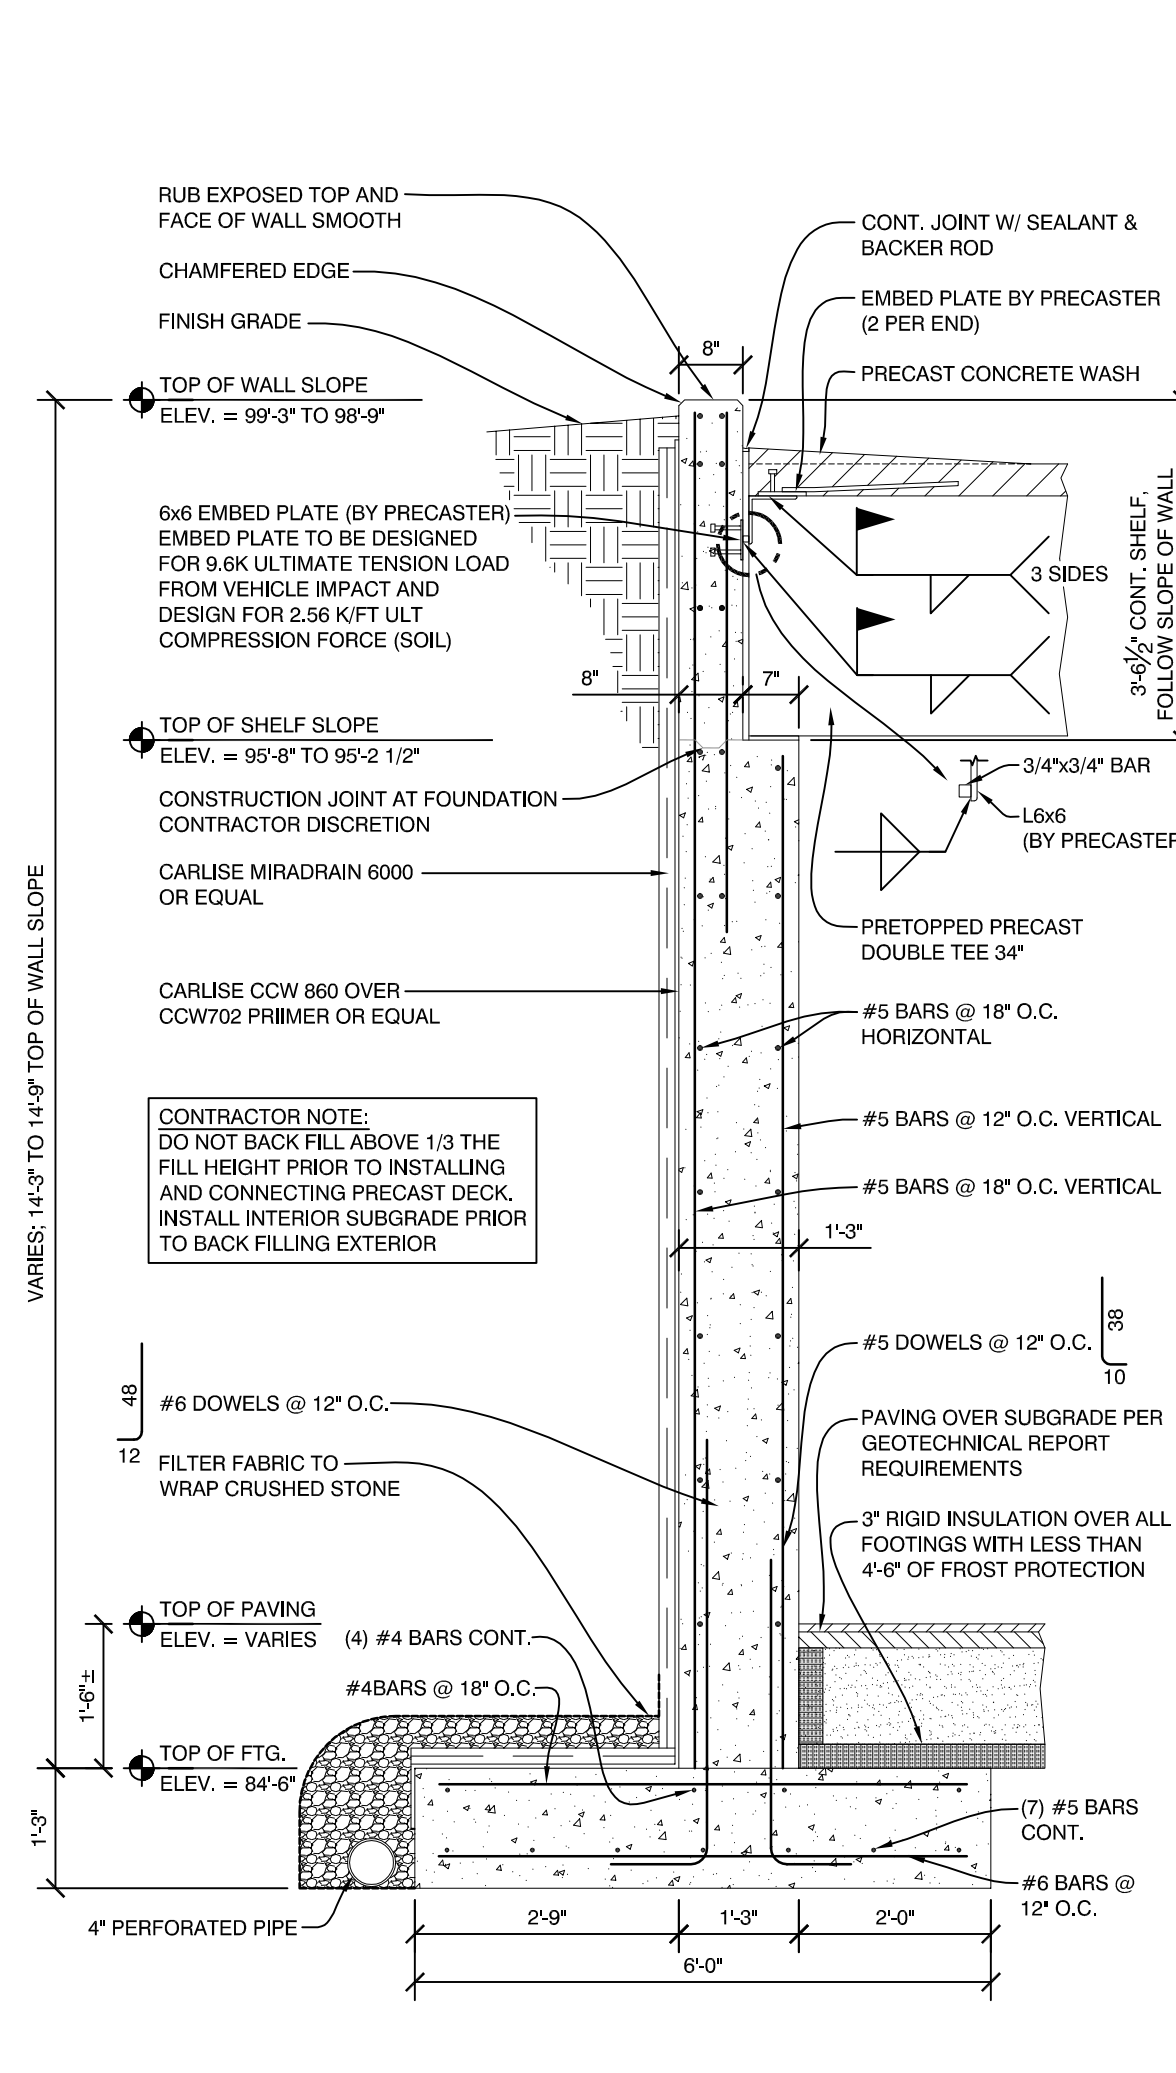


9 PRECAST DOUBLE TEE BEARING AT RETAINING WALL
1/2" = 1'-0"

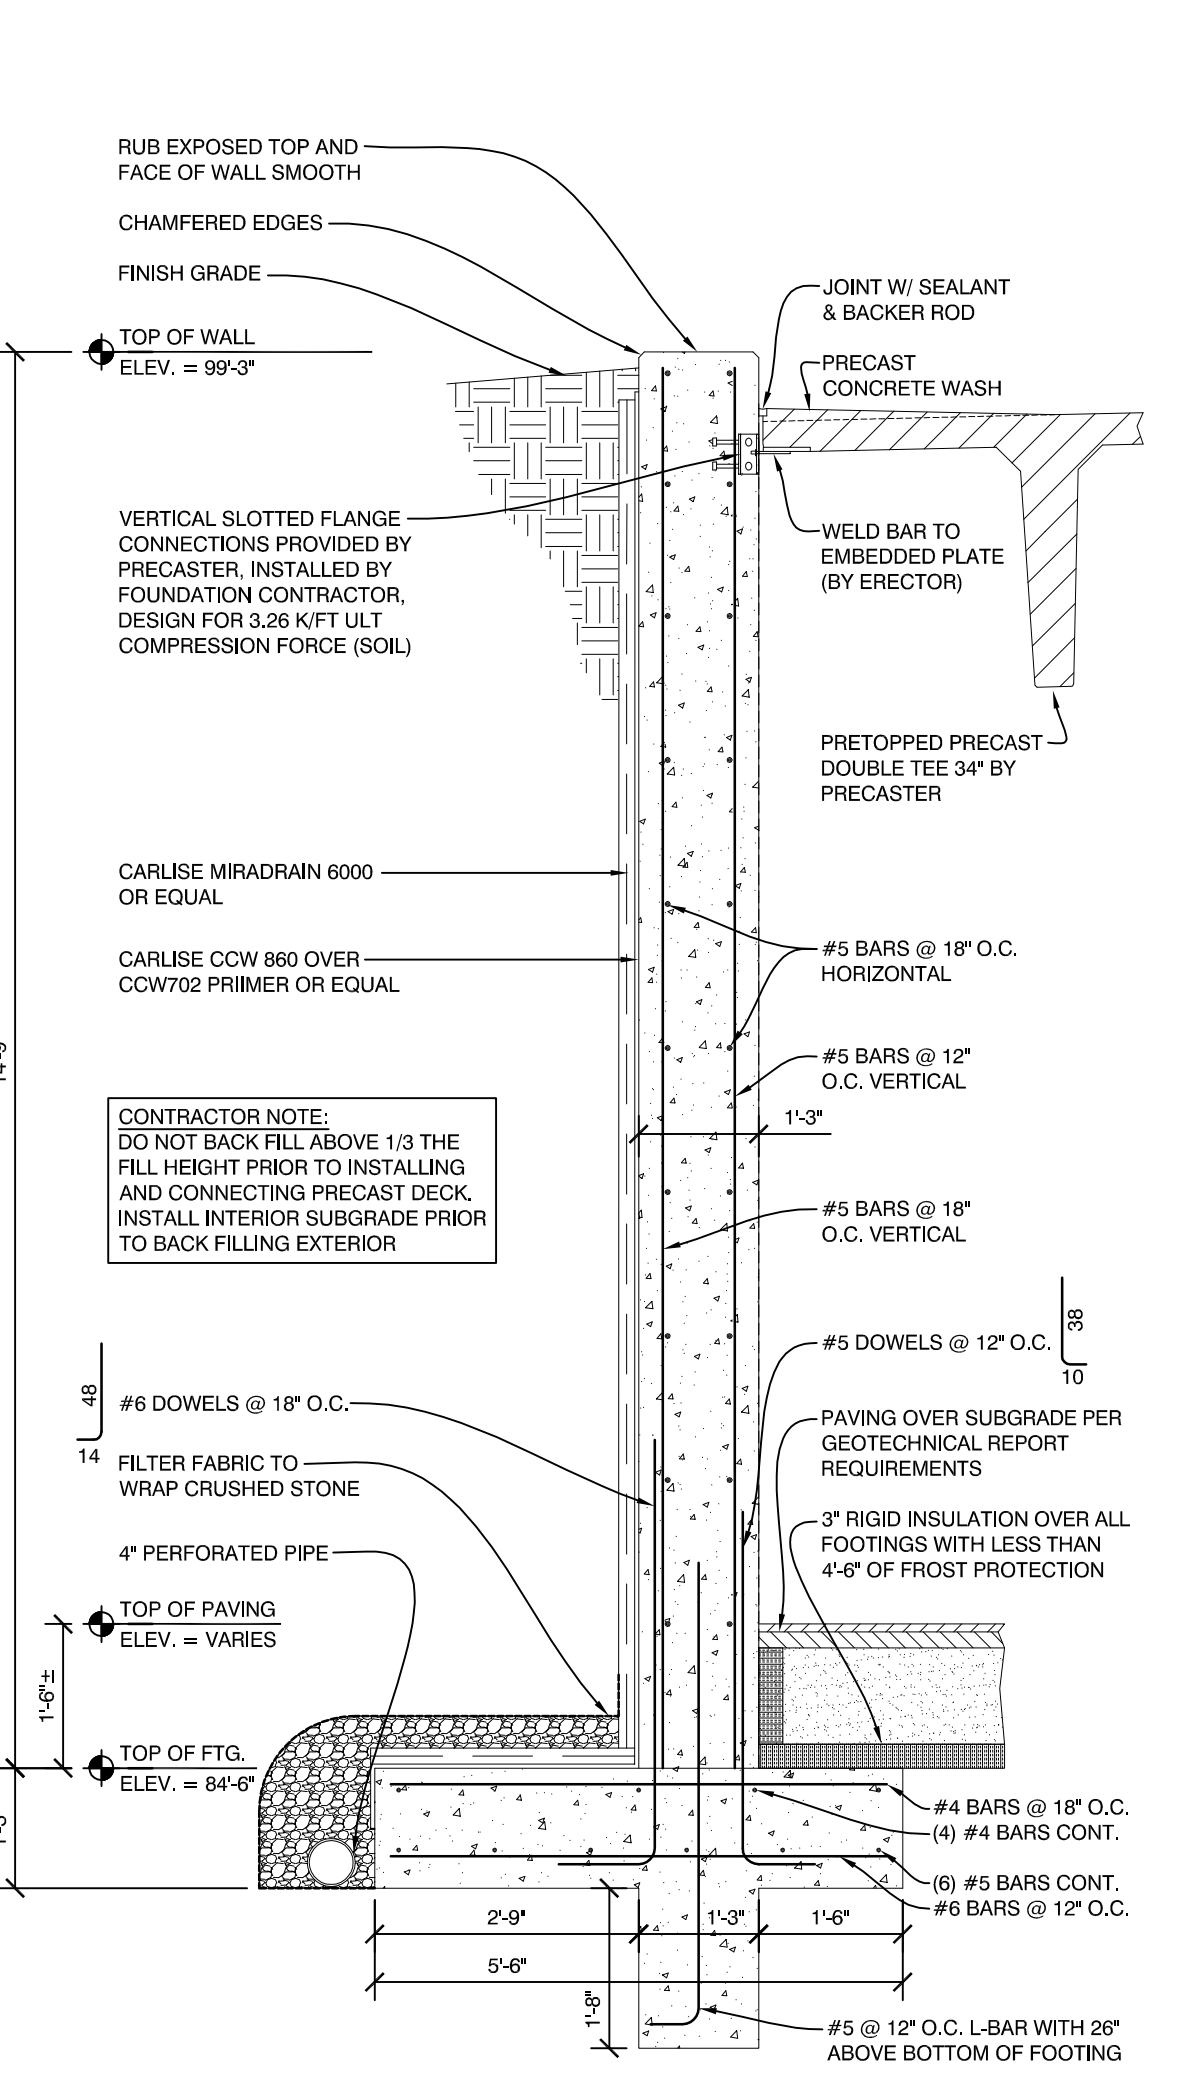


8 PRECAST DOUBLE TEE EDGE AT RETAINING WALL
1/2" = 1'-0"

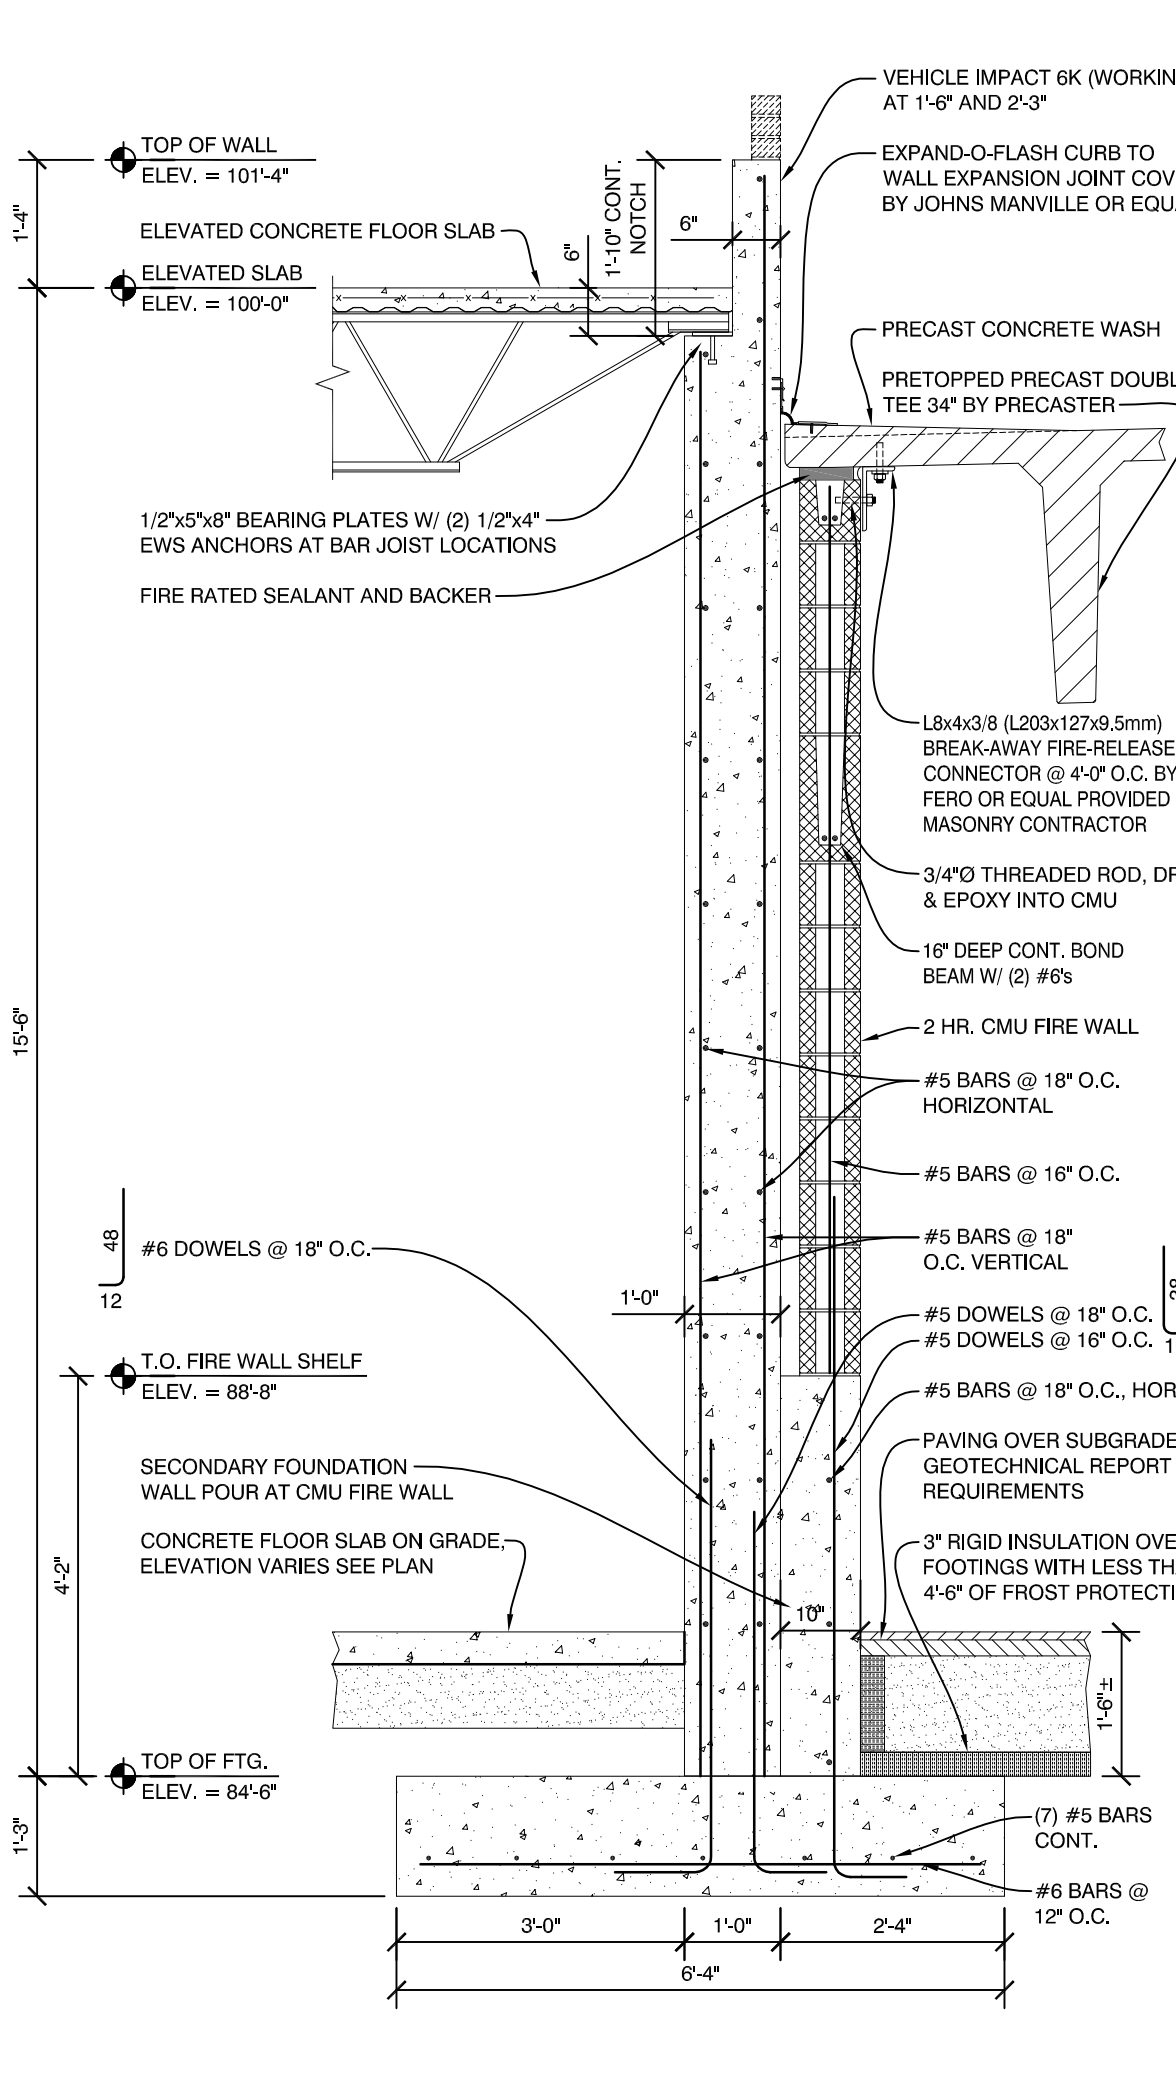


7 PRECAST DOUBLE TEE EDGE AT FIRE WALL
1/2" = 1'-0"

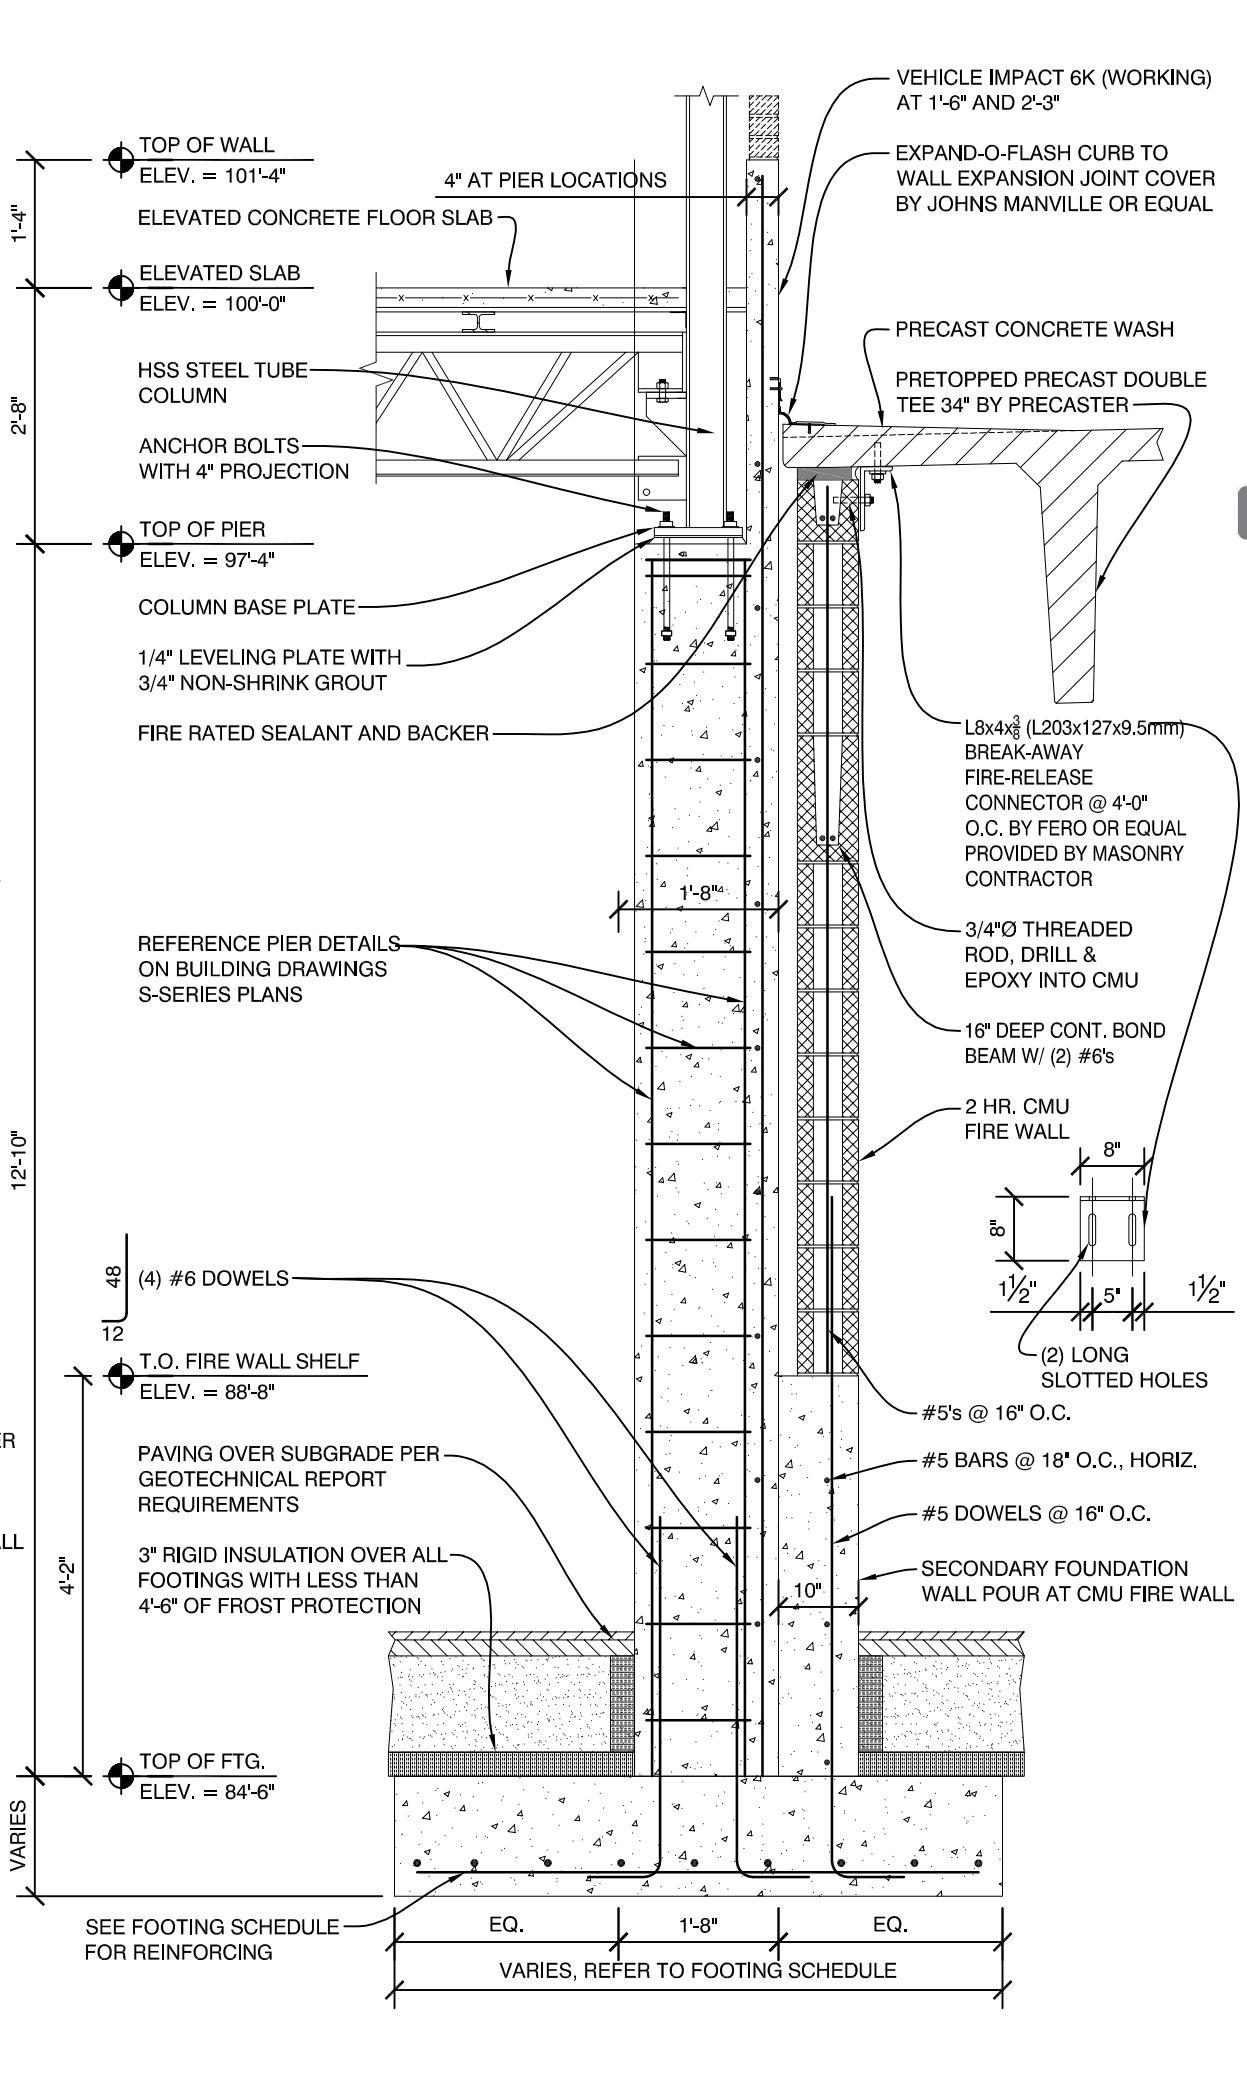


6 PIER BETWEEN O.H. DOORS AT FUTURE FIRE WALL
1/2" = 1'-0"

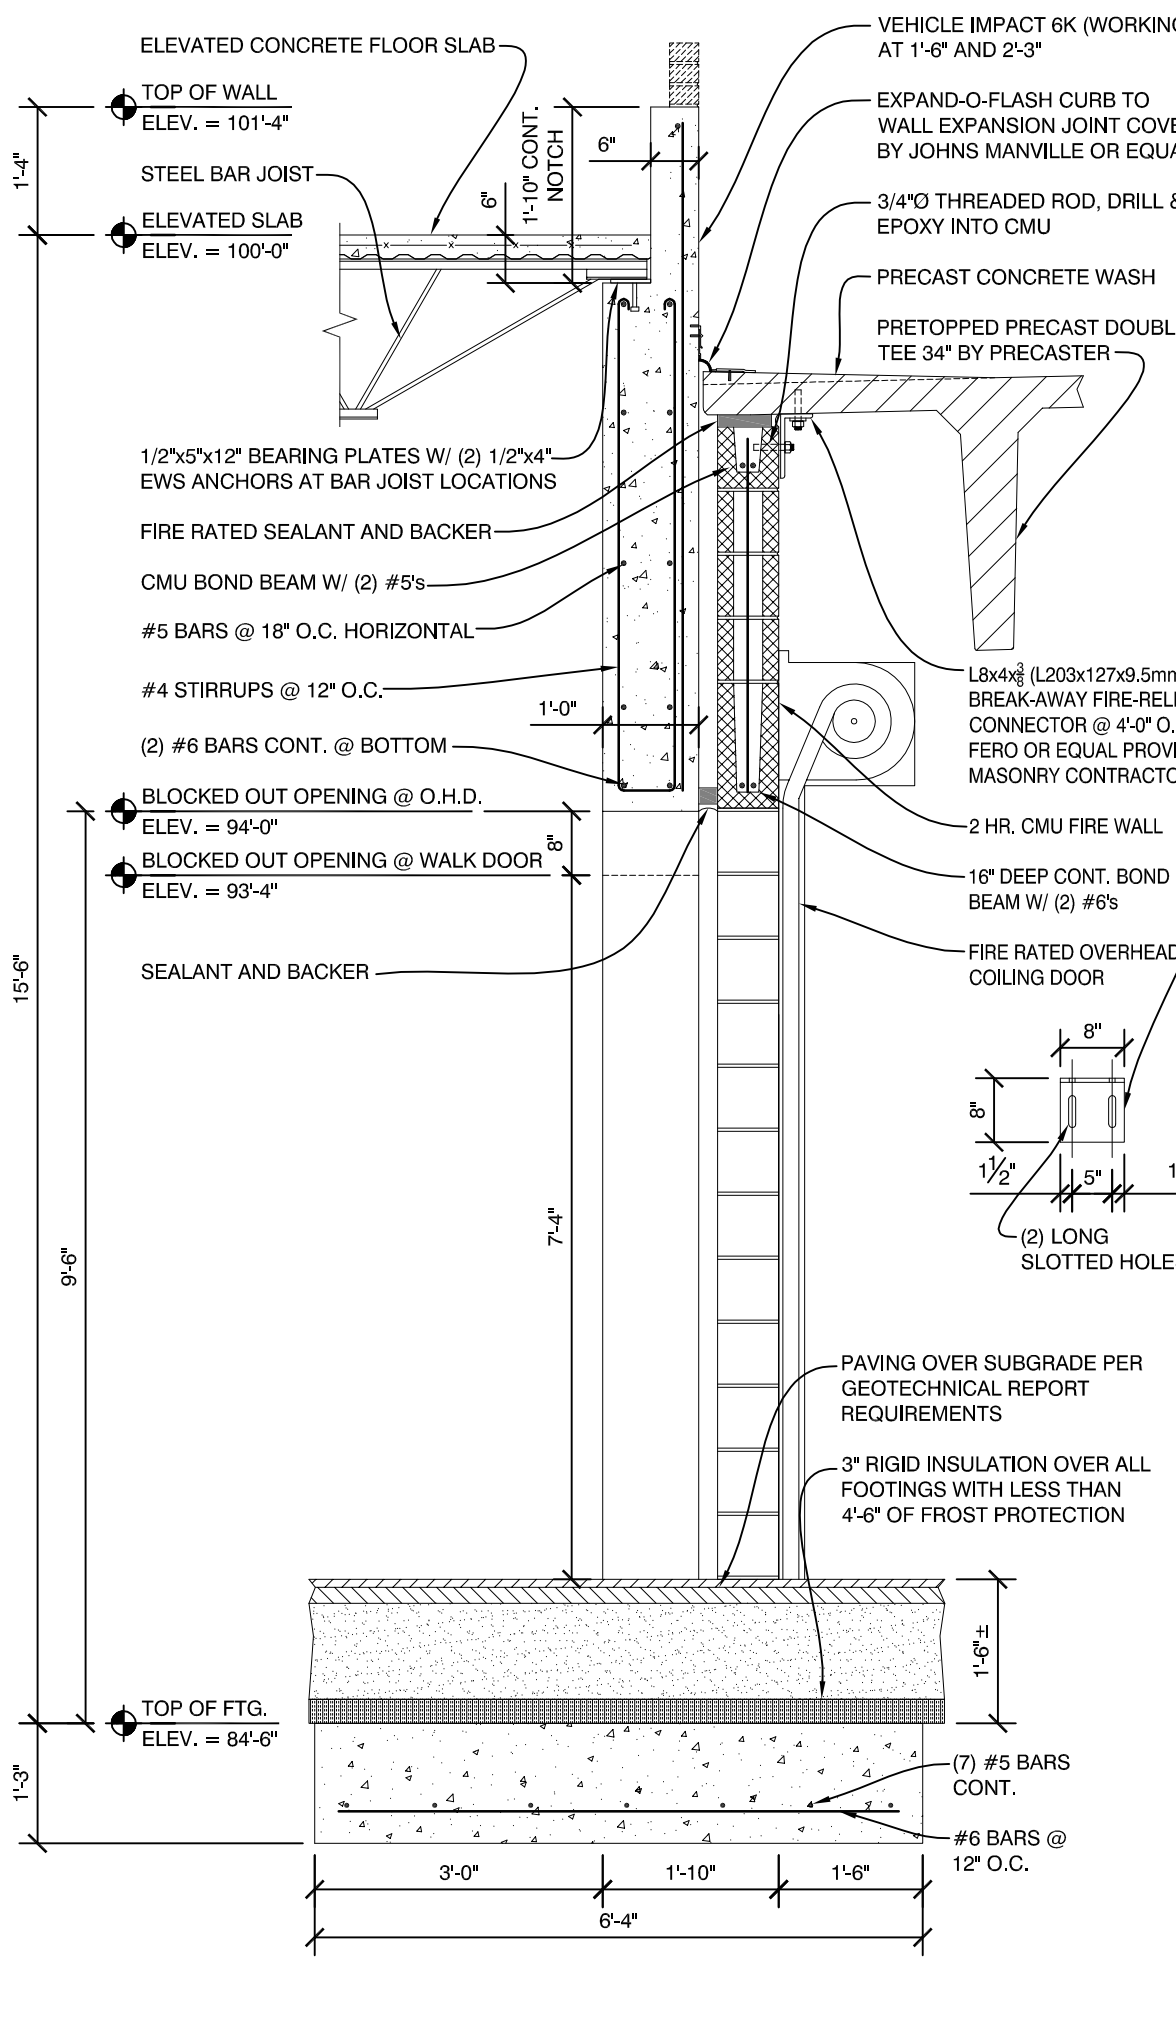


5 DOOR OPENINGS AT FUTURE FIRE WALL OPENING
1/2" = 1'-0"

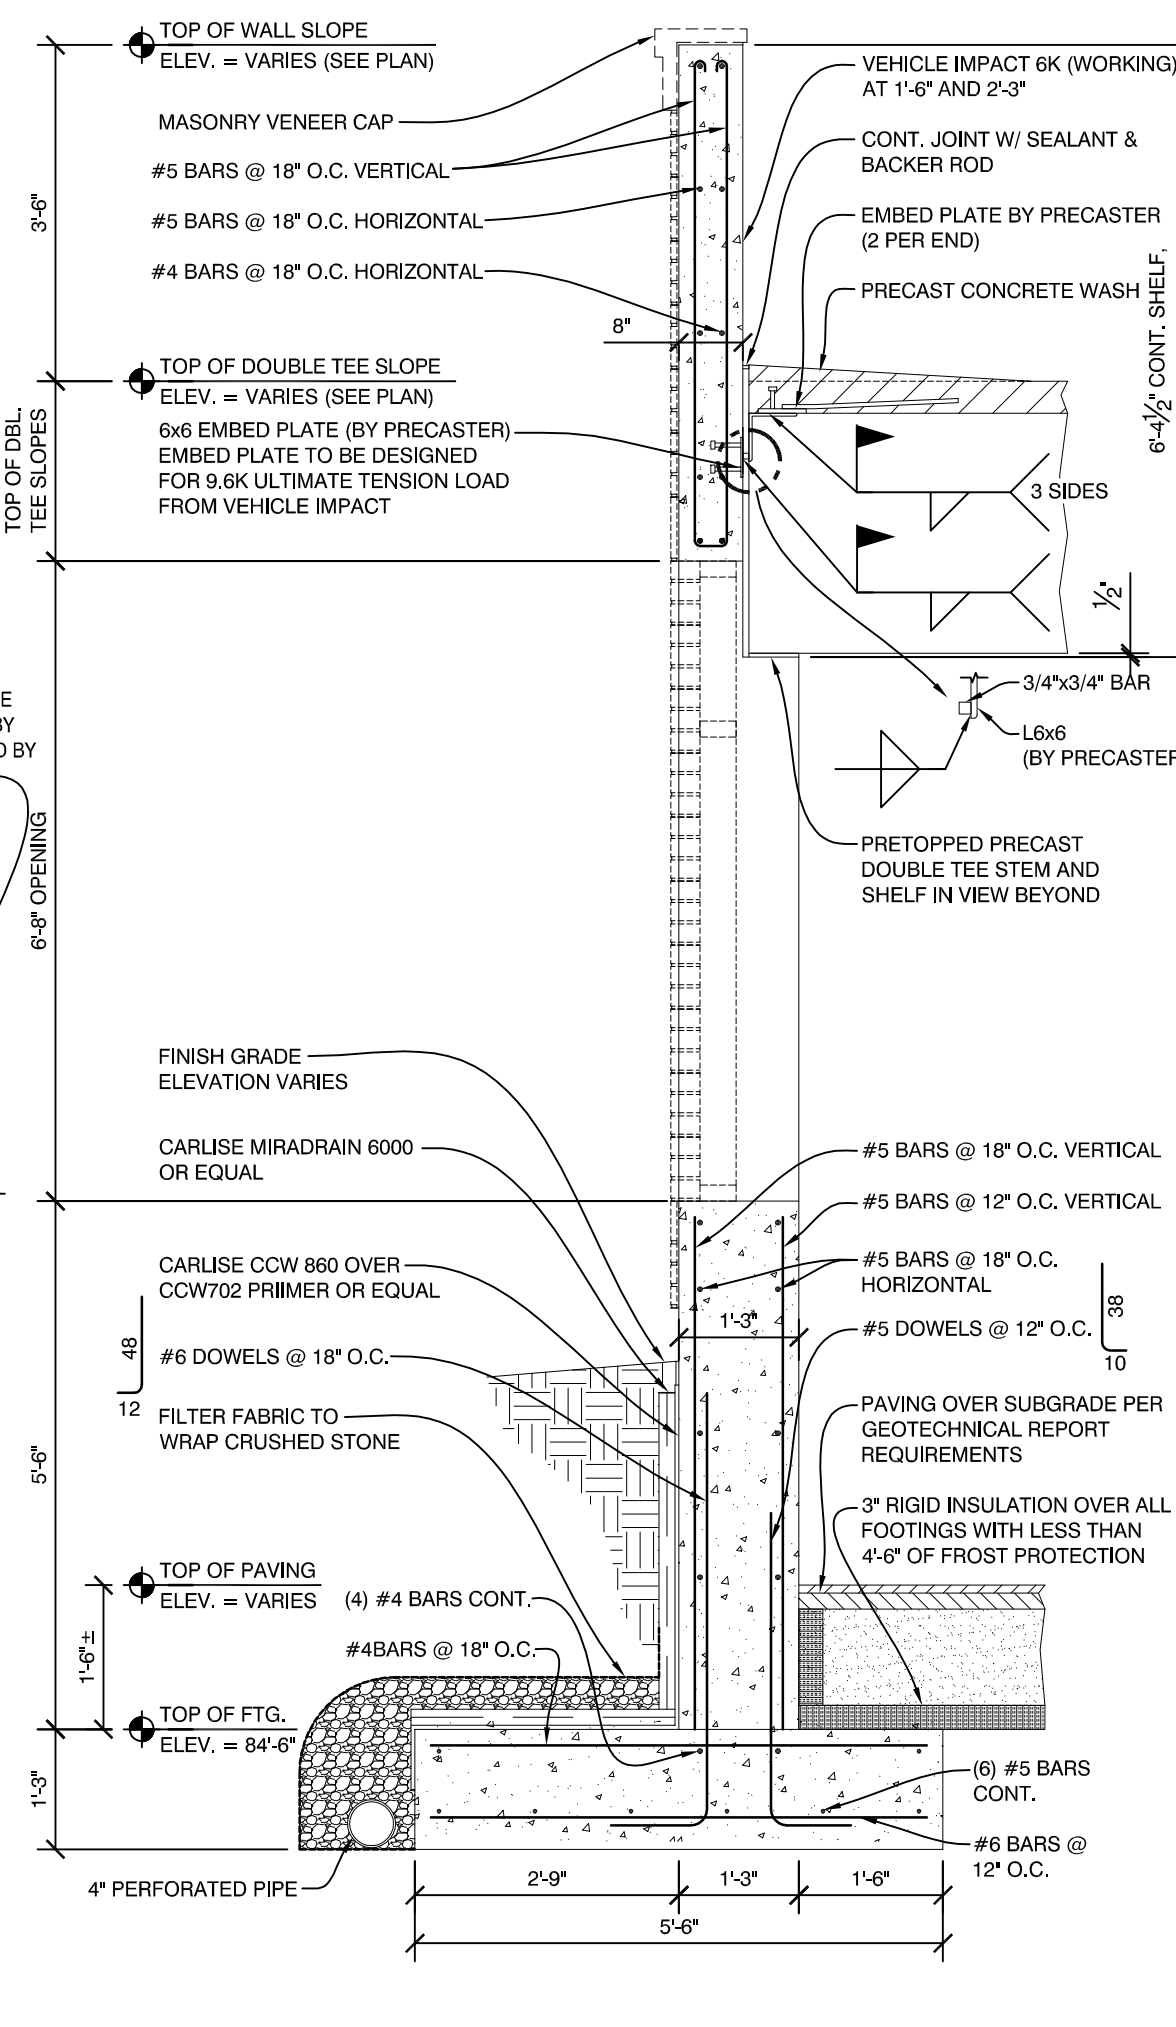


4 PRECAST DOUBLE TEE BEARING AT WINDOW OPENINGS
1/2" = 1'-0"

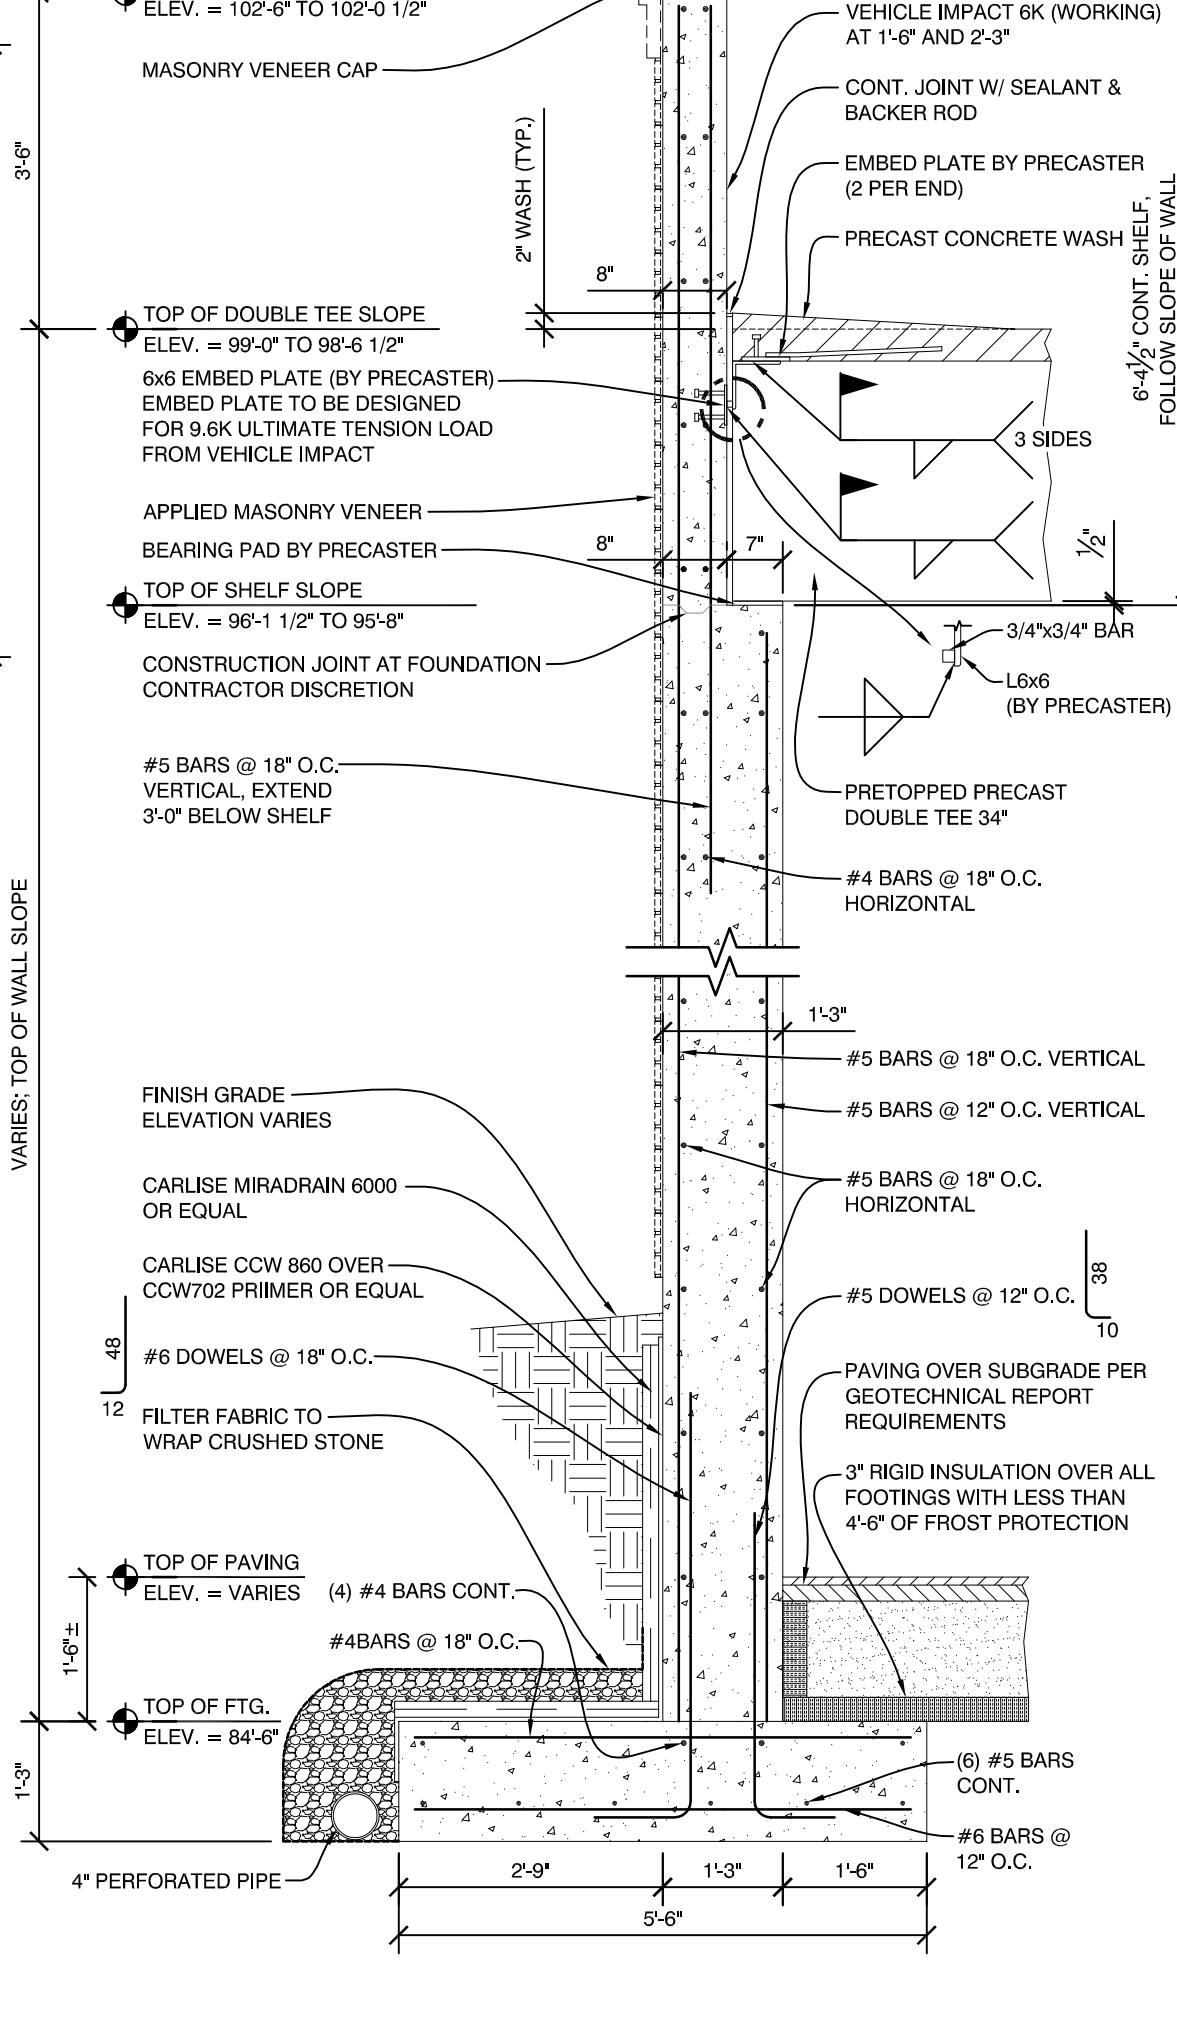

3 PRECAST DOUBLE TEE BEARING AT RETAINING WALL
1/2" = 1'-0"

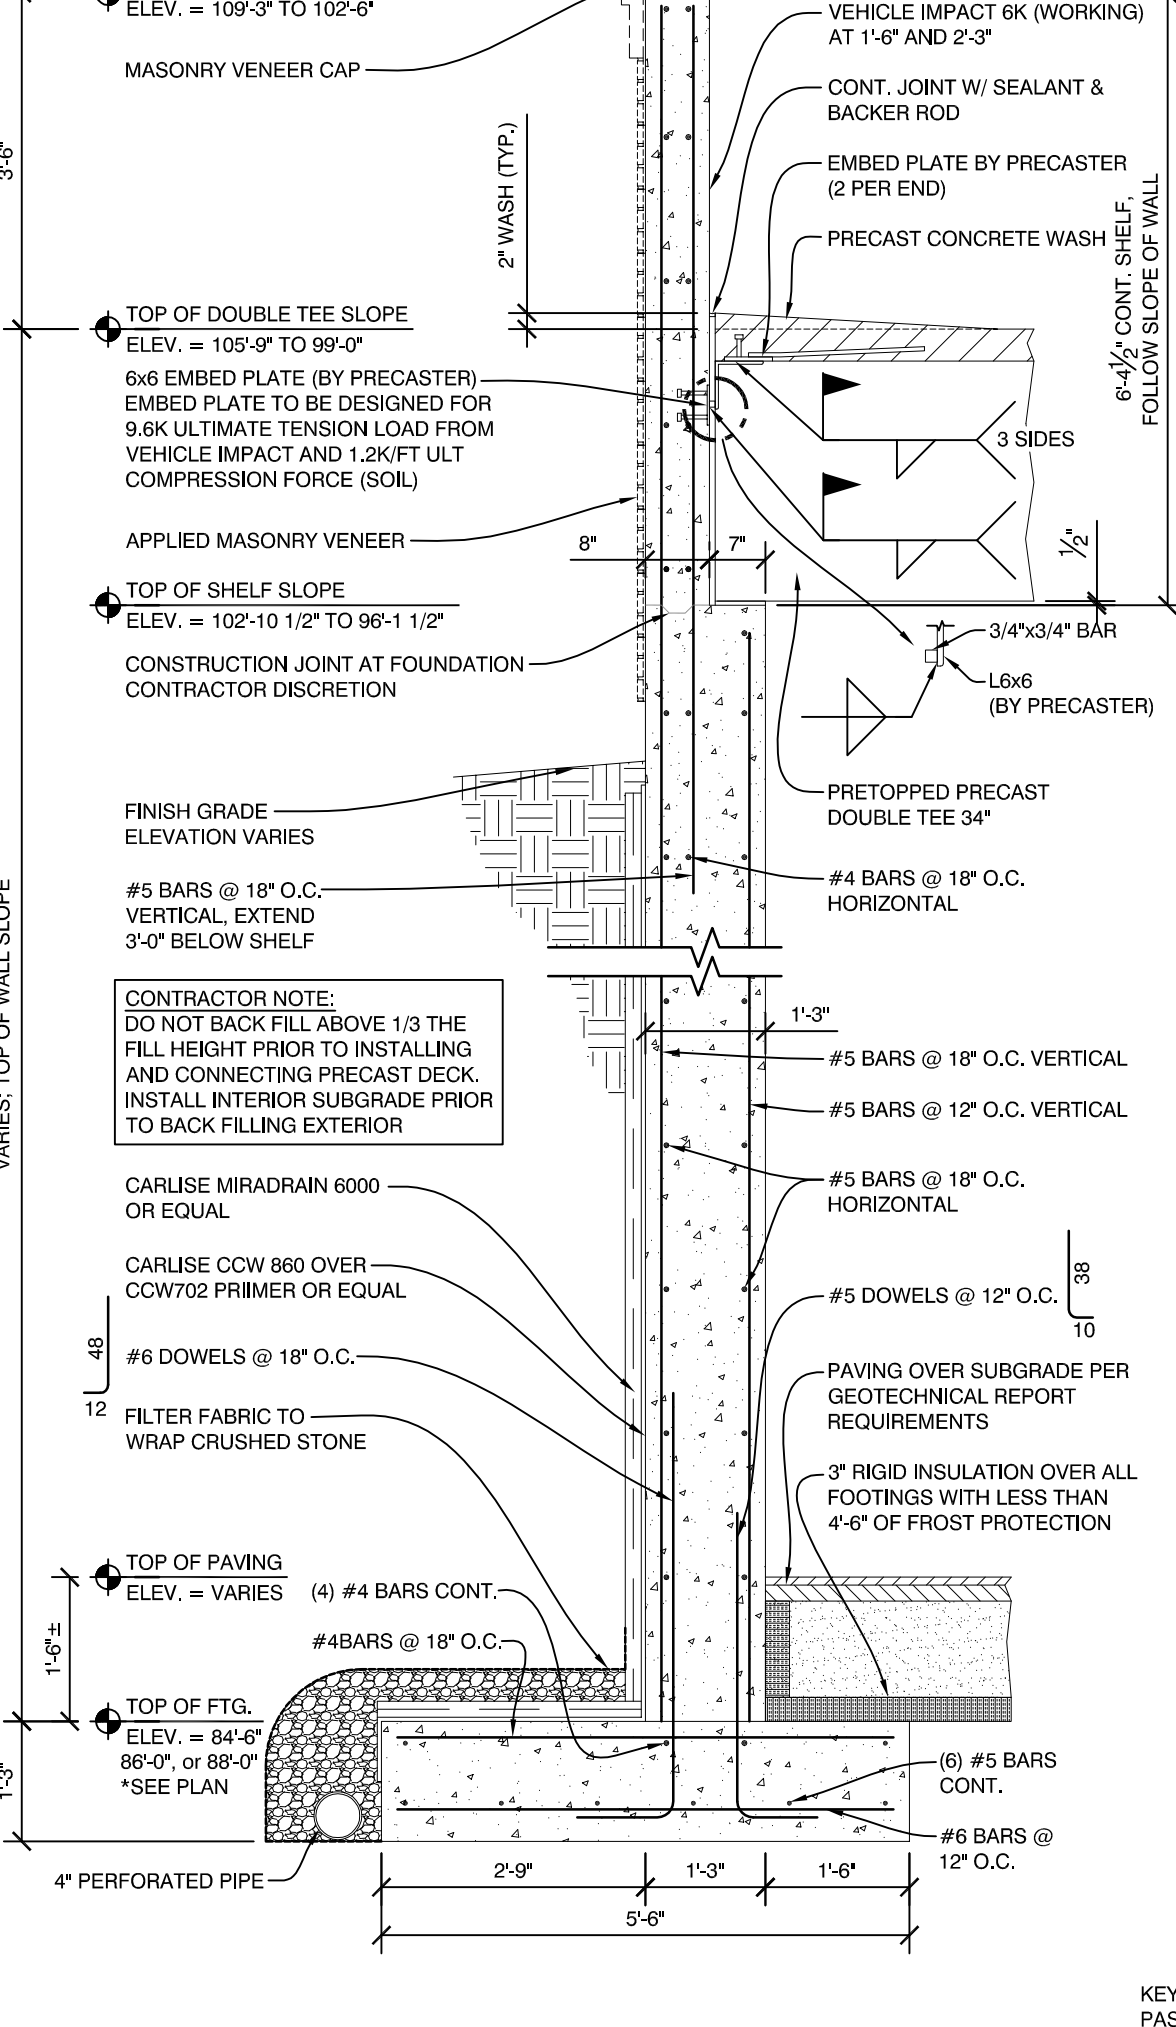

2 PRECAST DOUBLE TEE BEARING AT RETAINING WALL
1/2" = 1'-0"

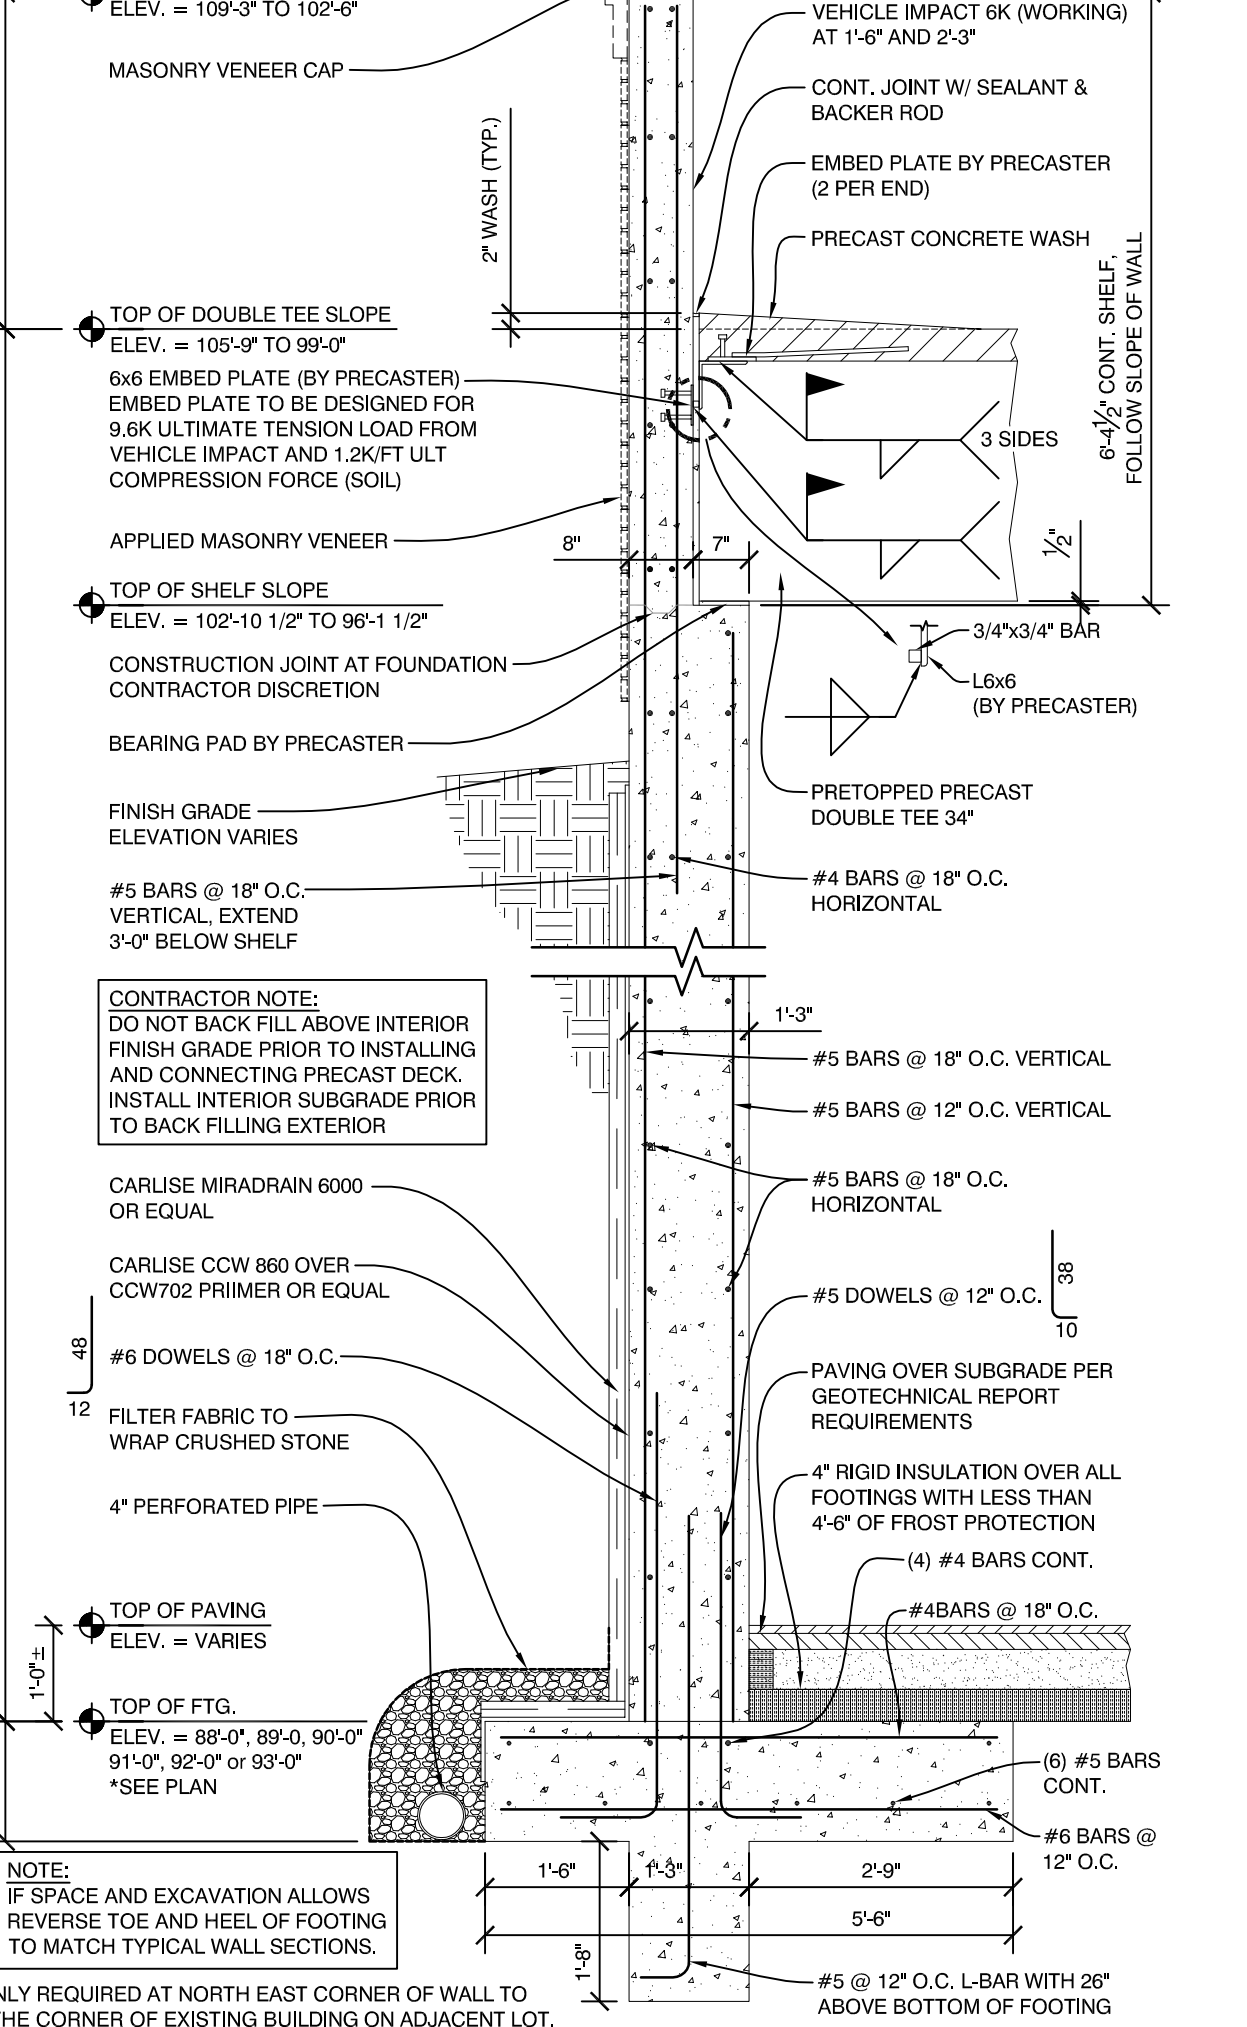

1 PRECAST DOUBLE TEE BEARING AT RETAINING WALL
1/2" = 1'-0"