
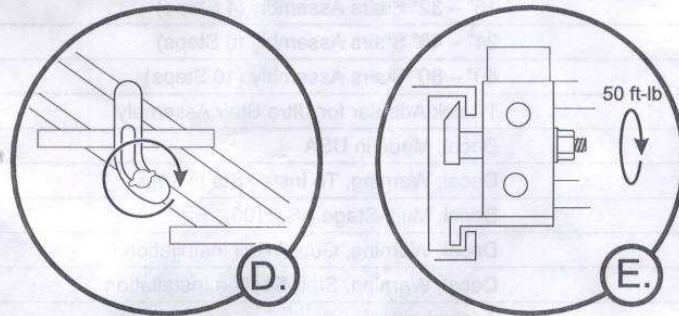


Step 10 Stairs

Each set of stairs requires a T-Lock adapter to secure the stairs to the Multi-Stage. To begin, attach the T-Lock adapter to the stair assembly using the bolts provided.

To install stairs:

- Set the lower lip of the lock inside the C-Channel along the perimeter of the Multi-Stage.
- Swing the stairs assembly up until the T-Lock is fully seated within the C-Channel of the stage. Press down on plunger if necessary to seat T-Lock.
- Extend the stairs section so that the end opposite the stage is touching the ground.

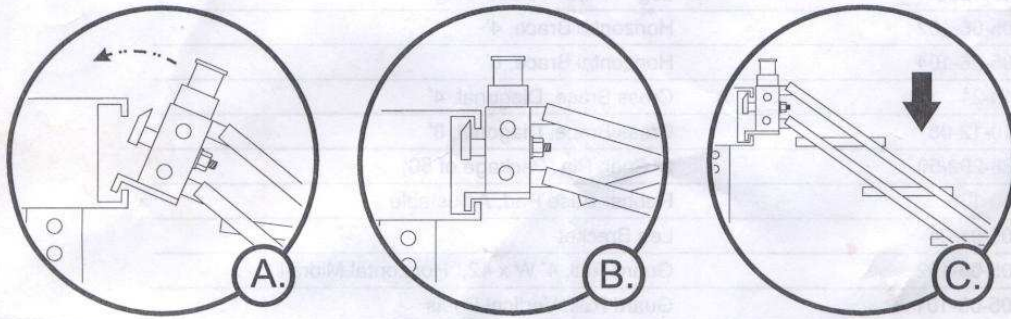

- Fully tighten the wing nut attached to the banana clip on each side of the stairs.
- Tighten the hex nut attached to each T-Lock to 50 ft-lb.
- Install handrails.
- To remove stairs section, loosen the wing nut attached to the banana clip, loosen the hex nut and depress plunger to release T-Lock.

⚠ WARNING

Failure to correctly install stairs could result in serious injury or death. Verify that each T-Lock is fully seated inside the Multi-Stage, as shown in Figure B, and stair section is secure. T-Lock will click audibly when it is installed.