

FINISH FLOORING PLAN

3/16"=1'-0"

LEGEND


- (A)** EPOXY PAINT SYSTEM OVER EXISTING CONCRETE. REMOVE FORMER EQUIPMENT PADS, INFILL DROPPED AREA W/ CONCRETE. UTILIZE CEMENTITIOUS LEVELING COMPOUND TO PROVIDE SMOOTH SLAB SURFACE PRIOR TO APPLYING EPOXY COATING.
- (B)** PATCH/REPAIR EXIST'G FLOOR DECK. INSTALL NEW FRAMING @ 16" O.C. OVER EXISTING W/ (2) LAYERS 5/8" PLYWOOD DECK. INSTALL ROSIN PAPER AND WOOD STRIP FLOORING ON TOP OF PLYWOOD. INTENT IS FOR FINISH FLOOR TO BE FLUSH WITH ADJACENT FINISH FLOORS.
- (C)** PATCH/REPAIR EXIST'G FLOOR DECK. INSTALL NEW FRAMING @ 16" O.C. OVER EXISTING W/ (2) LAYERS 5/8" PLYWOOD DECK. INSTALL CERAMIC TILE FLOORING AND BASE. INTENT IS FOR FINISH FLOOR TO BE FLUSH WITH ADJACENT FINISH FLOORS.
- (D)** SAME AS 'B' EXCEPT DELETE FINISH FLOORING.
- (E)** EPOXY PAINT SYSTEM OVER EXISTING CONCRETE. UTILIZE CEMENTITIOUS LEVELING COMPOUND TO PROVIDE SMOOTH SLAB SURFACE PRIOR TO APPLYING EPOXY COATING.

LEGEND

- (F)** INSTALL (2) LAYERS 5/8" PLYWOOD OVER EXISTING CONCRETE SLAB. INSTALL POLY VAPOR BARRIER AND WOOD STRIP FLOORING ON TOP OF PLYWOOD. USE CEMENTITIOUS LEVELING COMPOUND TO FILL SIGNIFICANT "DIPS" IN SLAB PRIOR TO PLYWOOD INSTALLATION
- (G)** INSTALL NEW 2X FRAMING @ 16" O.C. W/ (2) LAYERS 5/8" PLYWOOD DECK OVER EXISTING CONCRETE SLAB. INSTALL ROSIN PAPER AND WOOD STRIP FLOORING ON TOP OF PLYWOOD. INTENT IS FOR FINISH FLOOR TO BE FLUSH WITH NEW EXIT DOOR TO SIDEWALK.
- (H)** INSTALL (2) LAYERS 5/8" PLYWOOD DECK OVER EXISTING WOOD DECKING. INSTALL CARPET

WSA
WINTON SCOTT
ARCHITECTS

5 Milk Street
Portland, Maine 04101
207 774 4811
www.wintonscott.com

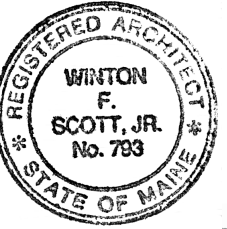

Winton Scott

KING'S HEAD
Tenant Fit Up

Merrill's Wharf
Portland, Maine

REVISIONS

5/9/13
6/8/13

PERMIT DOCUMENTS
JUNE 8, 2013

Finish Flooring Plan

Scale: As Noted

A 401