


1 WINDOW TYPES
1/4" = 1'-0"

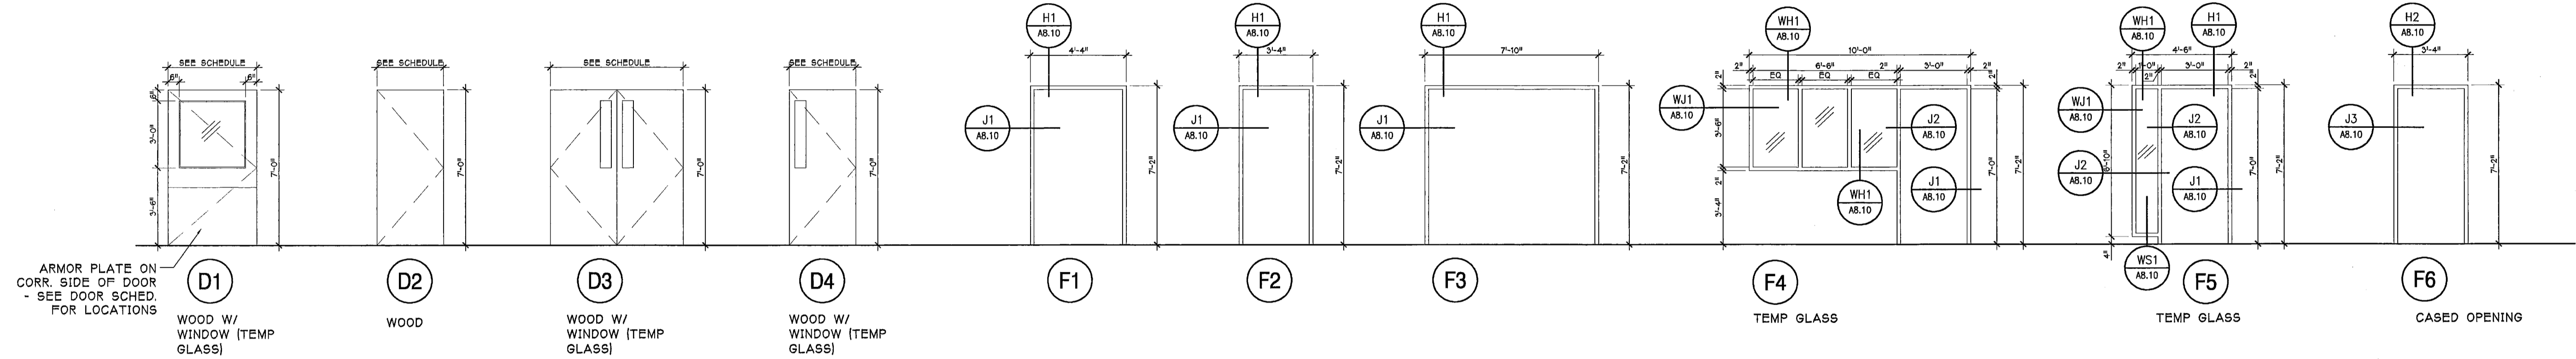

2 DOOR TYPES
1/4" = 1'-0"

3 FRAME TYPES
1/4" = 1'-0"

H2 DOOR HEAD 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\7-door\P103A-DR02H	WJ2 WINDOW MULLION 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\9-window\P103A-WN02J	WJ1 TYPICAL WINDOW JAMB 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\9-window\P103A-WN01J	WH1 WINDOW HEAD/SILL 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\9-window\P103A-WN01H
J3 DOOR JAMB 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\7-door\P103A-DR03J	WS1 WINDOW SILL 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\9-window\P103A-WN05I	J2 TYPICAL DOOR & WINDOW JAMB 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\7-door\P103A-DR02J	J1 TYPICAL DOOR JAMB 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\7-door\P103A-DR01J
H1 TYPICAL DOOR HEAD 3" = 1'-0" t:\acad\proj\p103\0-base\4-detail\7-door\P103A-DR01H			

DOOR, WINDOW & FRAME TYPES AND DETAILS

F:\acad\proj\p103\0-base\4-detail\7-door\P103A-DR01.dwg May 24, 2004 - 8:12am