


260 Bracket St - FRONT PORCH - Nailing Schedule

- > 5/4 x 6 Cedar Deck boards to joists - 2 1/2" Deck Mate #10 flat head wood screws - 2 per joint

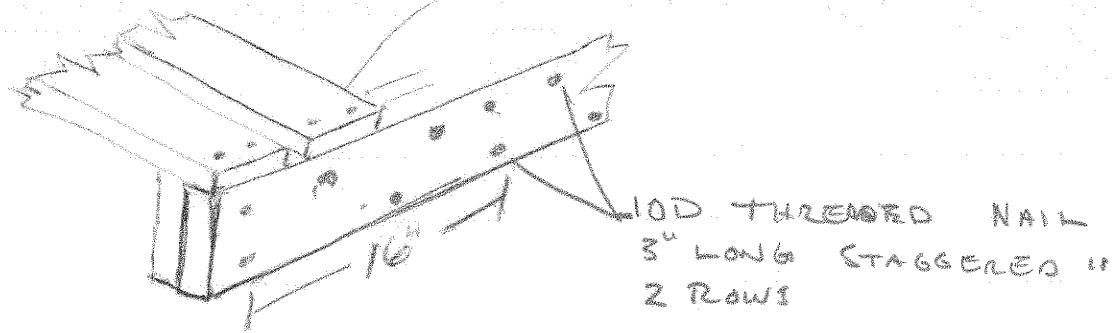

- > Laminated double rim joist - construction adhesive plus "spar" 1/4" x 2 1/2" lag screws 16" OC
- > Lattice boards - 1" ss. nails, 2 per board each end
- > Balusters - construction adhesive and 3" all-weather screws thru bottom rail and 1 1/2" all-weather screws thru top rail insert. Insert secured to top rail with const. adhes. and 1" all-weather screws.

