


216 Brighton ave

First Floor left side

new tub surround on existing tub. Install 4 new doors & frames

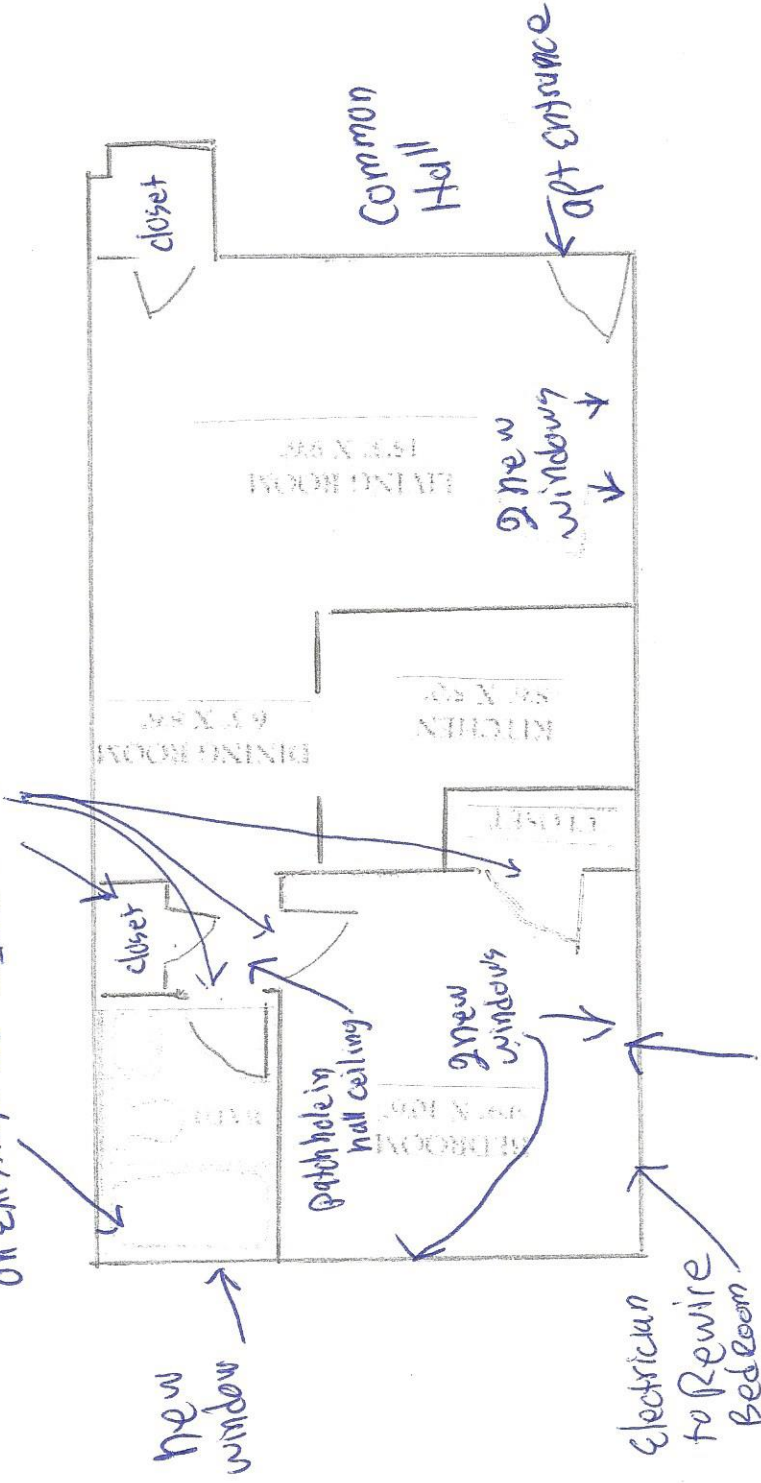

Fire in Bedroom

- insulate the outside walls with 3/2 inches OF Fiberglass insulation. Install a vapor barrier, Remove Buckled hard wood floor
- install 3/4 ply wood on the floor
- insulate the ceiling for sound
- Sheet Rock walls & ceiling in Bedroom with 5/8 sheet Rock new Flooring and paint