



NOTES:
 1. SEE SHEET F101 FOR LEGEND AND ABBREVIATIONS.
 2. REFER TO DRAWING A-101 FOR DEFINITION OF ALTERNATES.

KEYED NOTES:
 ① REMOVE FIRE DEPARTMENT VALVE, HOSE, BOX AND ALL ASSOCIATED TRIM.
 ② RELOCATE EXISTING FIRE DEPARTMENT VALVE TO THE LEFT IF NECESSARY (SEE ARCH.).
 ③ EXISTING FIRE DEPARTMENT VALVE, FLOOR CONTROL, ALL ASSOCIATED TRIM TO BE RELOCATED. REFER TO F101 FOR NEW LOCATION.

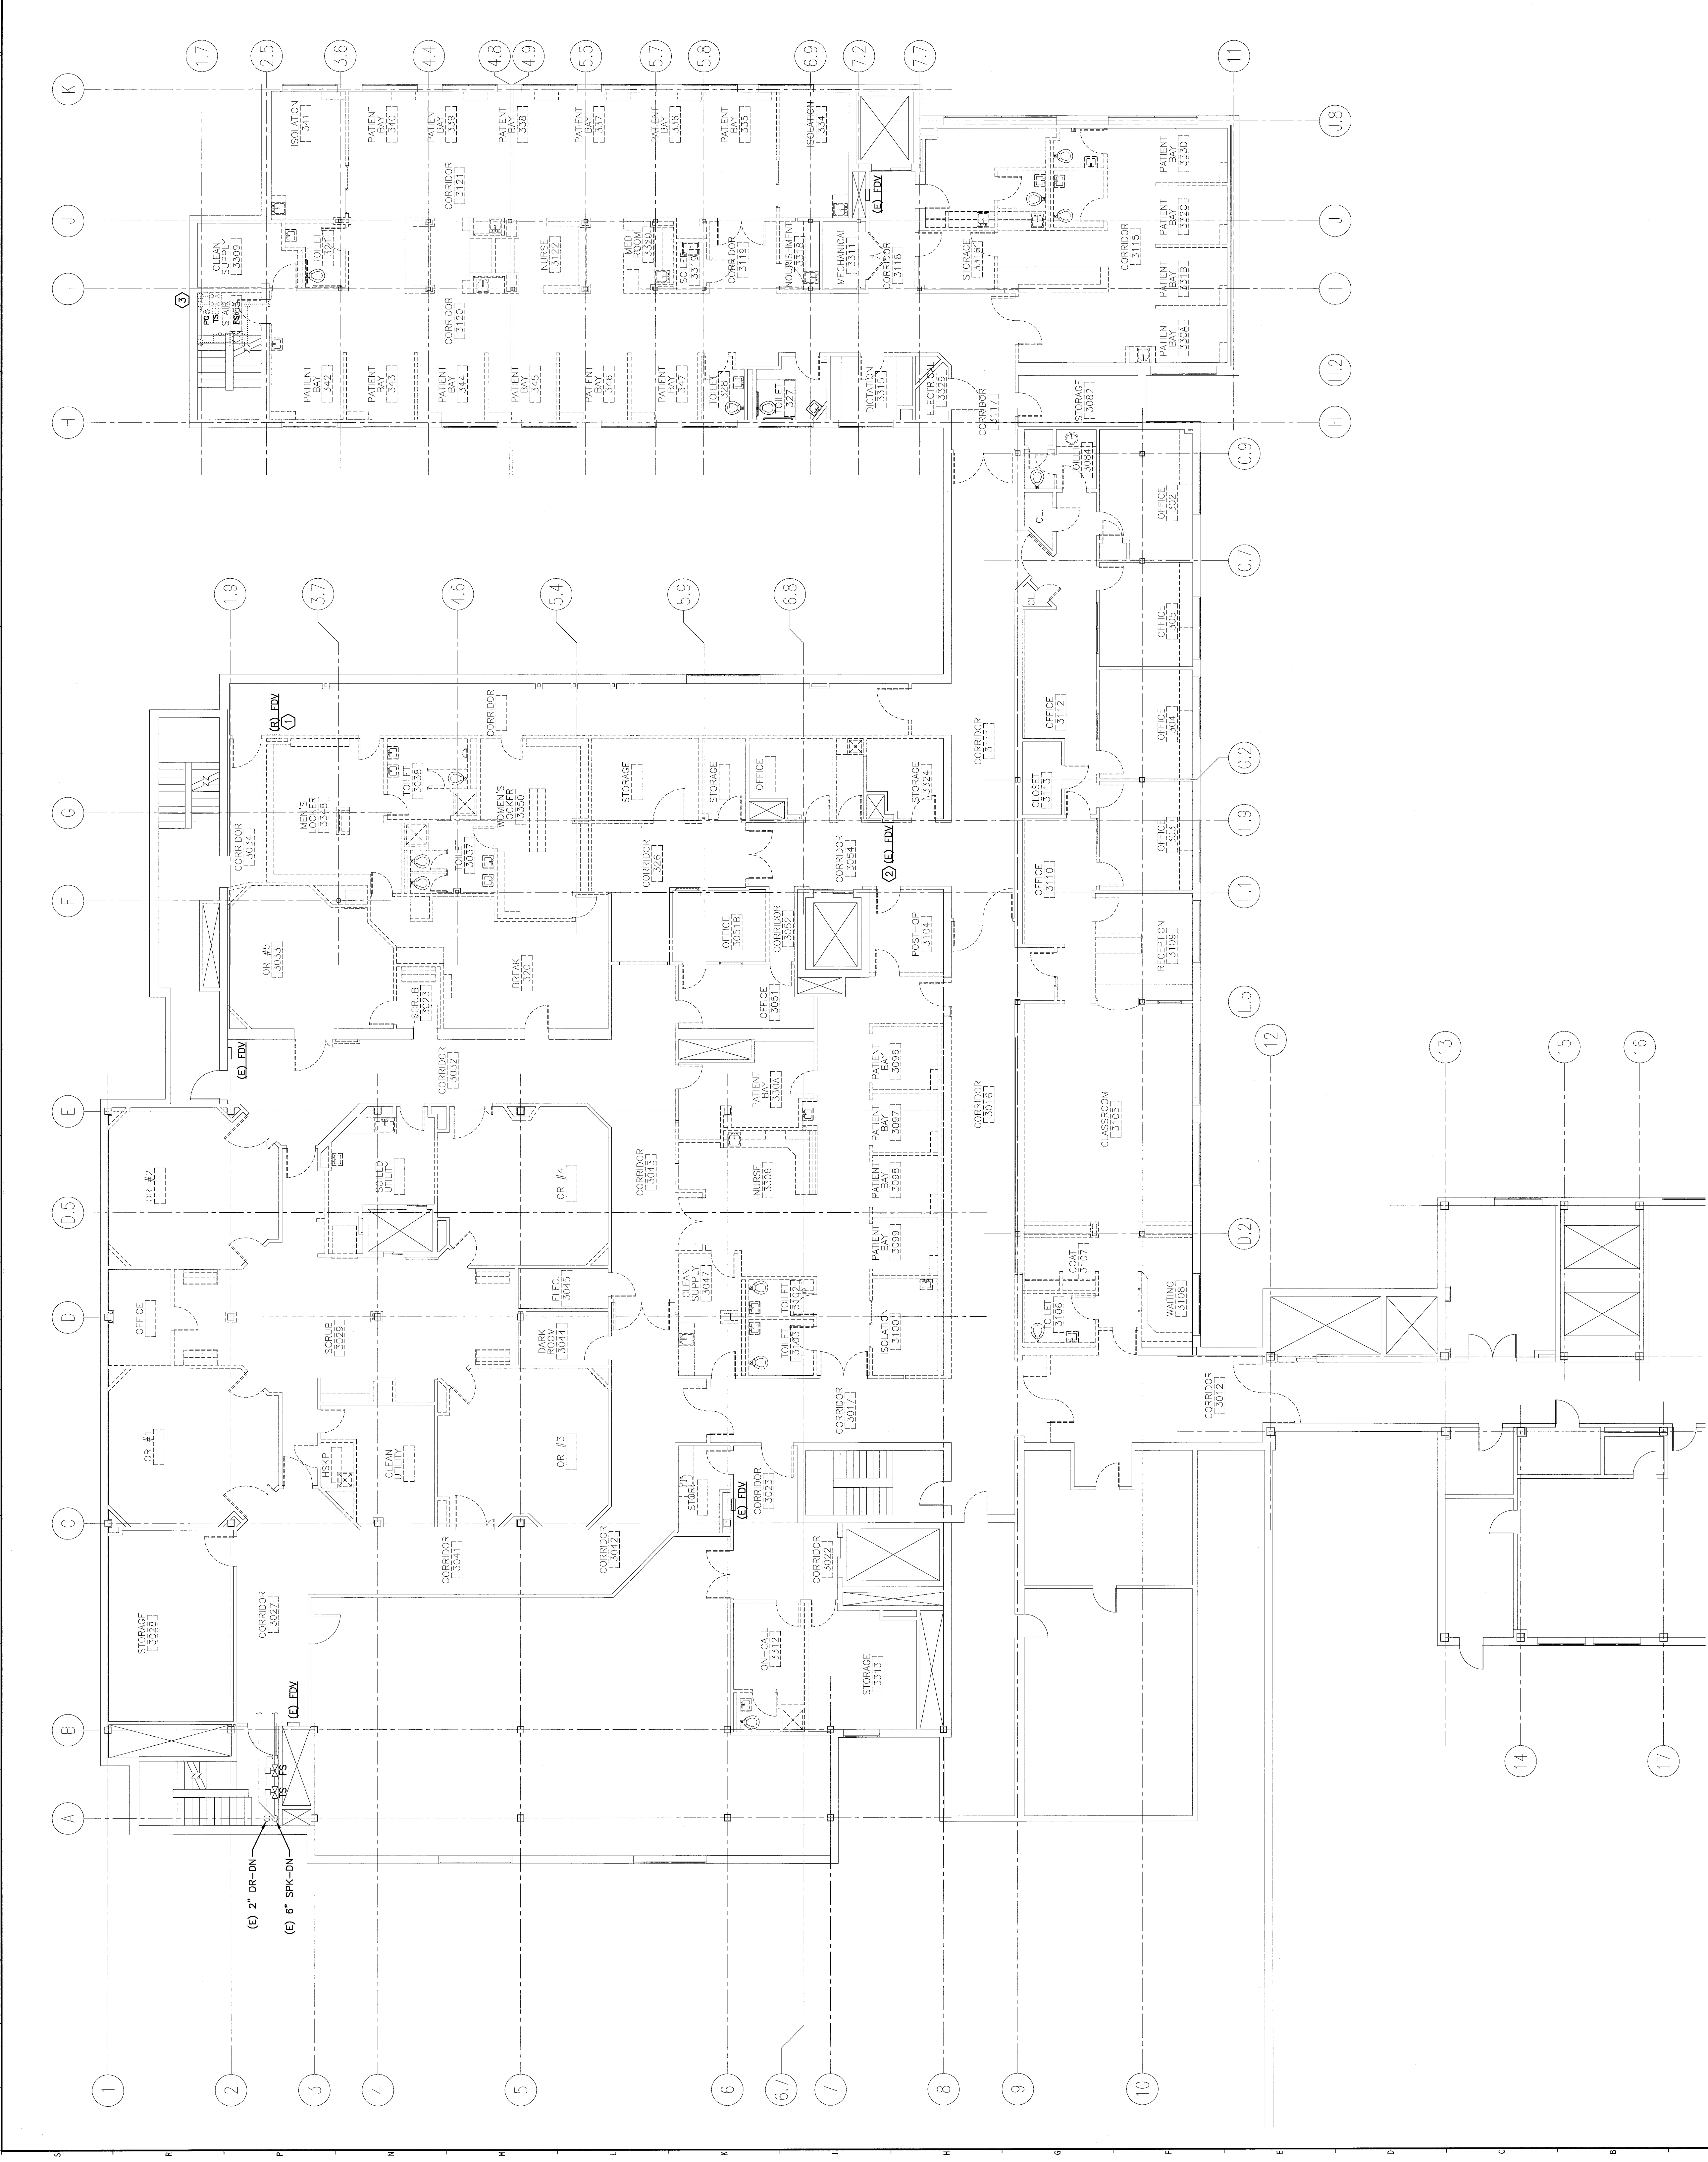

PROJECT NAME	ISSUED FOR CONSTRUCTION	4-24-09
DATE	DESCRIPTION	DATE
0		4-24-09
REV.		

ISSUED FOR CONSTRUCTION
 4-24-09

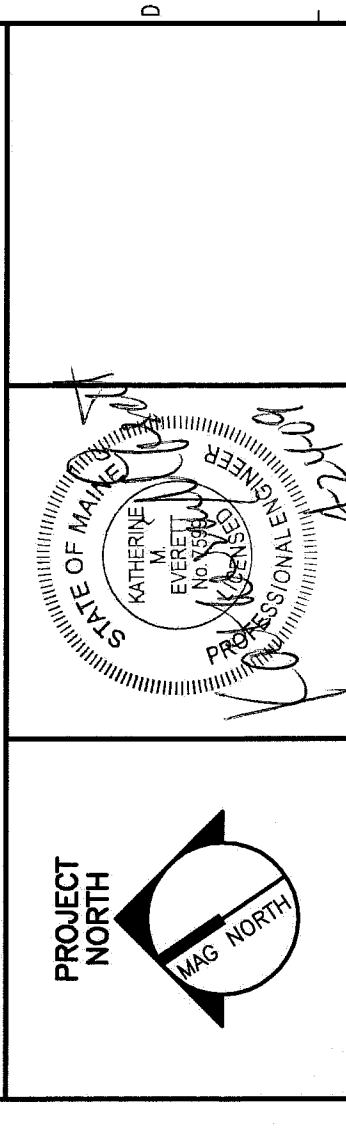

141 Free Street, Box 618
 Portland, Maine 04104
 Tel: (207) 753-8866
 Fax: (207) 753-8867
 www.smrtd.com

SMRT
 ARCHITECTURE
 ENGINEERING
 PLANNING
 INTERIOR DESIGN
 COMMISSIONING

MAINE MEDICAL CENTER
OFFICE OF MEDICAL EDUCATION
 PORTLAND, MAINE
THIRD FLOOR FIRE PROTECTION
DEMOLITION PLAN

SCALE	1/8" = 1'-0"	DATE	4-24-09
PROJECT MANAGER	CP	GRAPHIC SCALE	0' 1'
DD/COORDINATOR	BAL		
DATE OF RECORD	RHE	SHEET No.	
SHEET CODE FILE	FD10-08093		
PROJECT No.	08093-300		

A1 THIRD FLOOR FACILITY DEMOLITION PLAN

1/8" = 1'-0"