

NOTE:
1. SEE SHEET PL001 FOR LEGEND AND ABBREVIATIONS.

KEYED NOTES:


- 1 1/2" CW AND 1/2" HW UP IN WALL. 1-1/2" WASTE DOWN IN WALL. CORE DRILL TO PLAN FOR CONTINUATION. 1-1/2" VENT UP IN WALL. CORE DRILL EXISTING CONCRETE SLAB AS REQUIRED TO INSTALL NEW PIPING.
- 2 1/2" CW UP IN WALL. 2 VENT UP IN WALL. 4" SANITARY UP THRU FLOOR. CORE DRILL EXISTING CONCRETE SLAB AS REQUIRED TO INSTALL NEW PIPING.
- 3 2 VENT UP AND DOWN IN WALL. CORE DRILL EXISTING CONCRETE SLAB AS REQUIRED TO INSTALL.
- 4 2 VENT ABOVE CEILING. CONNECT TO EXISTING 2" VENT (FIELD VERIFY LOCATION).

KEYED NOTES:

- 1 CONNECT NEW 2 VENT TO EXISTING 4" SANITARY FROM EXISTING SANITARY CLOSET. MODIFY EXISTING SANITARY PIPING AS REQUIRED.

KEYED NOTES:

- 1 REMOVE EXISTING WATER CLOSET AND ASSOCIATED CW PIPING COMPLETE BACK TO ISOLATION VALVE ABOVE. CEILING AND CAP. REMOVE ASSOCIATED VENT PIPING AND CAP. REMOVE ASSOCIATED SANITARY PIPING TO BELOW SLAB AND INSTALL CAP.
- 2 REMOVE LAVATORY AND/OR SINK AND ASSOCIATED HW AND CW PIPING COMPLETE BACK TO TEE AT MAIN AT CEILING BELOW AND CAP. REMOVE ASSOCIATED VENT PIPING AND CAP. REMOVE ASSOCIATED SANITARY PIPING TO BELOW SLAB AND INSTALL CAP.
- 3 REMOVE SHOWER AND ASSOCIATED HW AND CW PIPING COMPLETE BACK TO TEE FITTING AT MAIN AT CEILING BELOW AND CAP. REMOVE ASSOCIATED VENT PIPING AND CAP. REMOVE ASSOCIATED SANITARY PIPING TO BELOW SLAB AND INSTALL CAP.

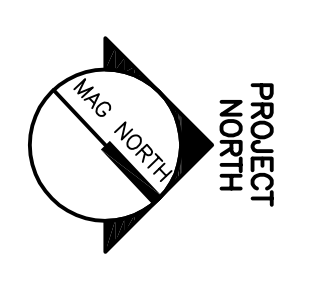

ARCHITECTURE
ENGINEERING
PLANNING
INTERIOR DESIGN
COMMISSIONING

SMRT

144 Fore Street/P.O. Box 618
Portland, Maine 04104
tel. (207) 772-3846
fax. (207) 772-1070
www.smrinc.com

UNIVERSITY OF SOUTHERN MAINE
RENOVATION 501 FOREST AVENUE
PORTLAND, MAINE

ISSUED FOR DESIGN DEVELOPMENT
4-12-10

CURRENT ISSUE STATUS:

REV	DESCRIPTION	DATE

GRAPHIC SCALE:
0' 1' 2'

SCALE: 1/8" = 1'-0"

PROJECT MANAGER: SLB
JC/DRAWN BY: KPB
A/E OF RECORD: RMW
CAD FILE: PL101-09148
PROJECT NO.: 09148
DATE: 09/14/8

SHEET TITLE:
PLUMBING PLANS

SHEET No.: **PL101**