

GENERAL NOTES

1. SEE SHEET M-001 FOR LEGEND AND ABBREVIATIONS.

KEYNOTE	KEYNOTE DESCRIPTION
1	REMOVE SUPPLY DIFFUSERS AND ASSOCIATED DUCTWORK
2	REMOVE VAV, CONTROLS AND ASSOCIATED DUCTWORK BACK TO EXTENTS SHOWN
3	REMOVE CABINET UNIT HEATER, ASSOCIATED PIPING, AND CONTROLS. PREPARE PIPING FOR CONNECTION OF NEW CUH IN SAME LOCATION.
4	PROVIDE PRE-CONSTRUCTION TAB ON DIFFUSERS DESIGNATED FOR RELOCATION.
5	REMOVE EXHAUST GRILLE. PREPARE DUCTWORK FOR NEW CONNECTION.

NOT FOR CONSTRUCTION

ARCHITECTURE 144 Fore Street P.O. Box 618
 Portland, Maine 04104
 ENGINEERING Tel: (207) 775-3646
 PLANNING Fax: (207) 775-1070
 INTERIORS www.smartinc.com
 ENERGY

SMART

PROJECT NO. 17033 PROJECT MGR JCDRAWN JAE OF RECORD
 DRL JC

REV.	BY	DATE	ISSUED FOR PERMIT STATUS
		12/21/17	

THIS PLAN SHALL NOT BE MODIFIED WITHOUT WRITTEN PERMISSION FROM SEBAGO TECHNICALS, INC. USER'S ASSUME RISK AND WITHOUT LIABILITY TO SEBAGO TECHNICALS, INC.

SEBAGO
 TECHNICALS


WWW.SEAGOTECHNICALS.COM
 75 John Roberts Rd., Suite 1A
 South Portland, ME 04086
 Tel: (207) 775-3646
 Fax: (207) 775-1070

PROJECT NO. FIELD BOOK DESIGN CHKD DRAWN


2ND FLOOR HVAC DUCTWORK DEMO PLAN
 OF:
 VERTICAL CIRCULATION IMPROVEMENTS
 1001 WESTBROOK STREET
 PORTLAND, MAINE 04102

DATE	SCALE
12/21/17	1/8" = 1'-0"

2.MD102

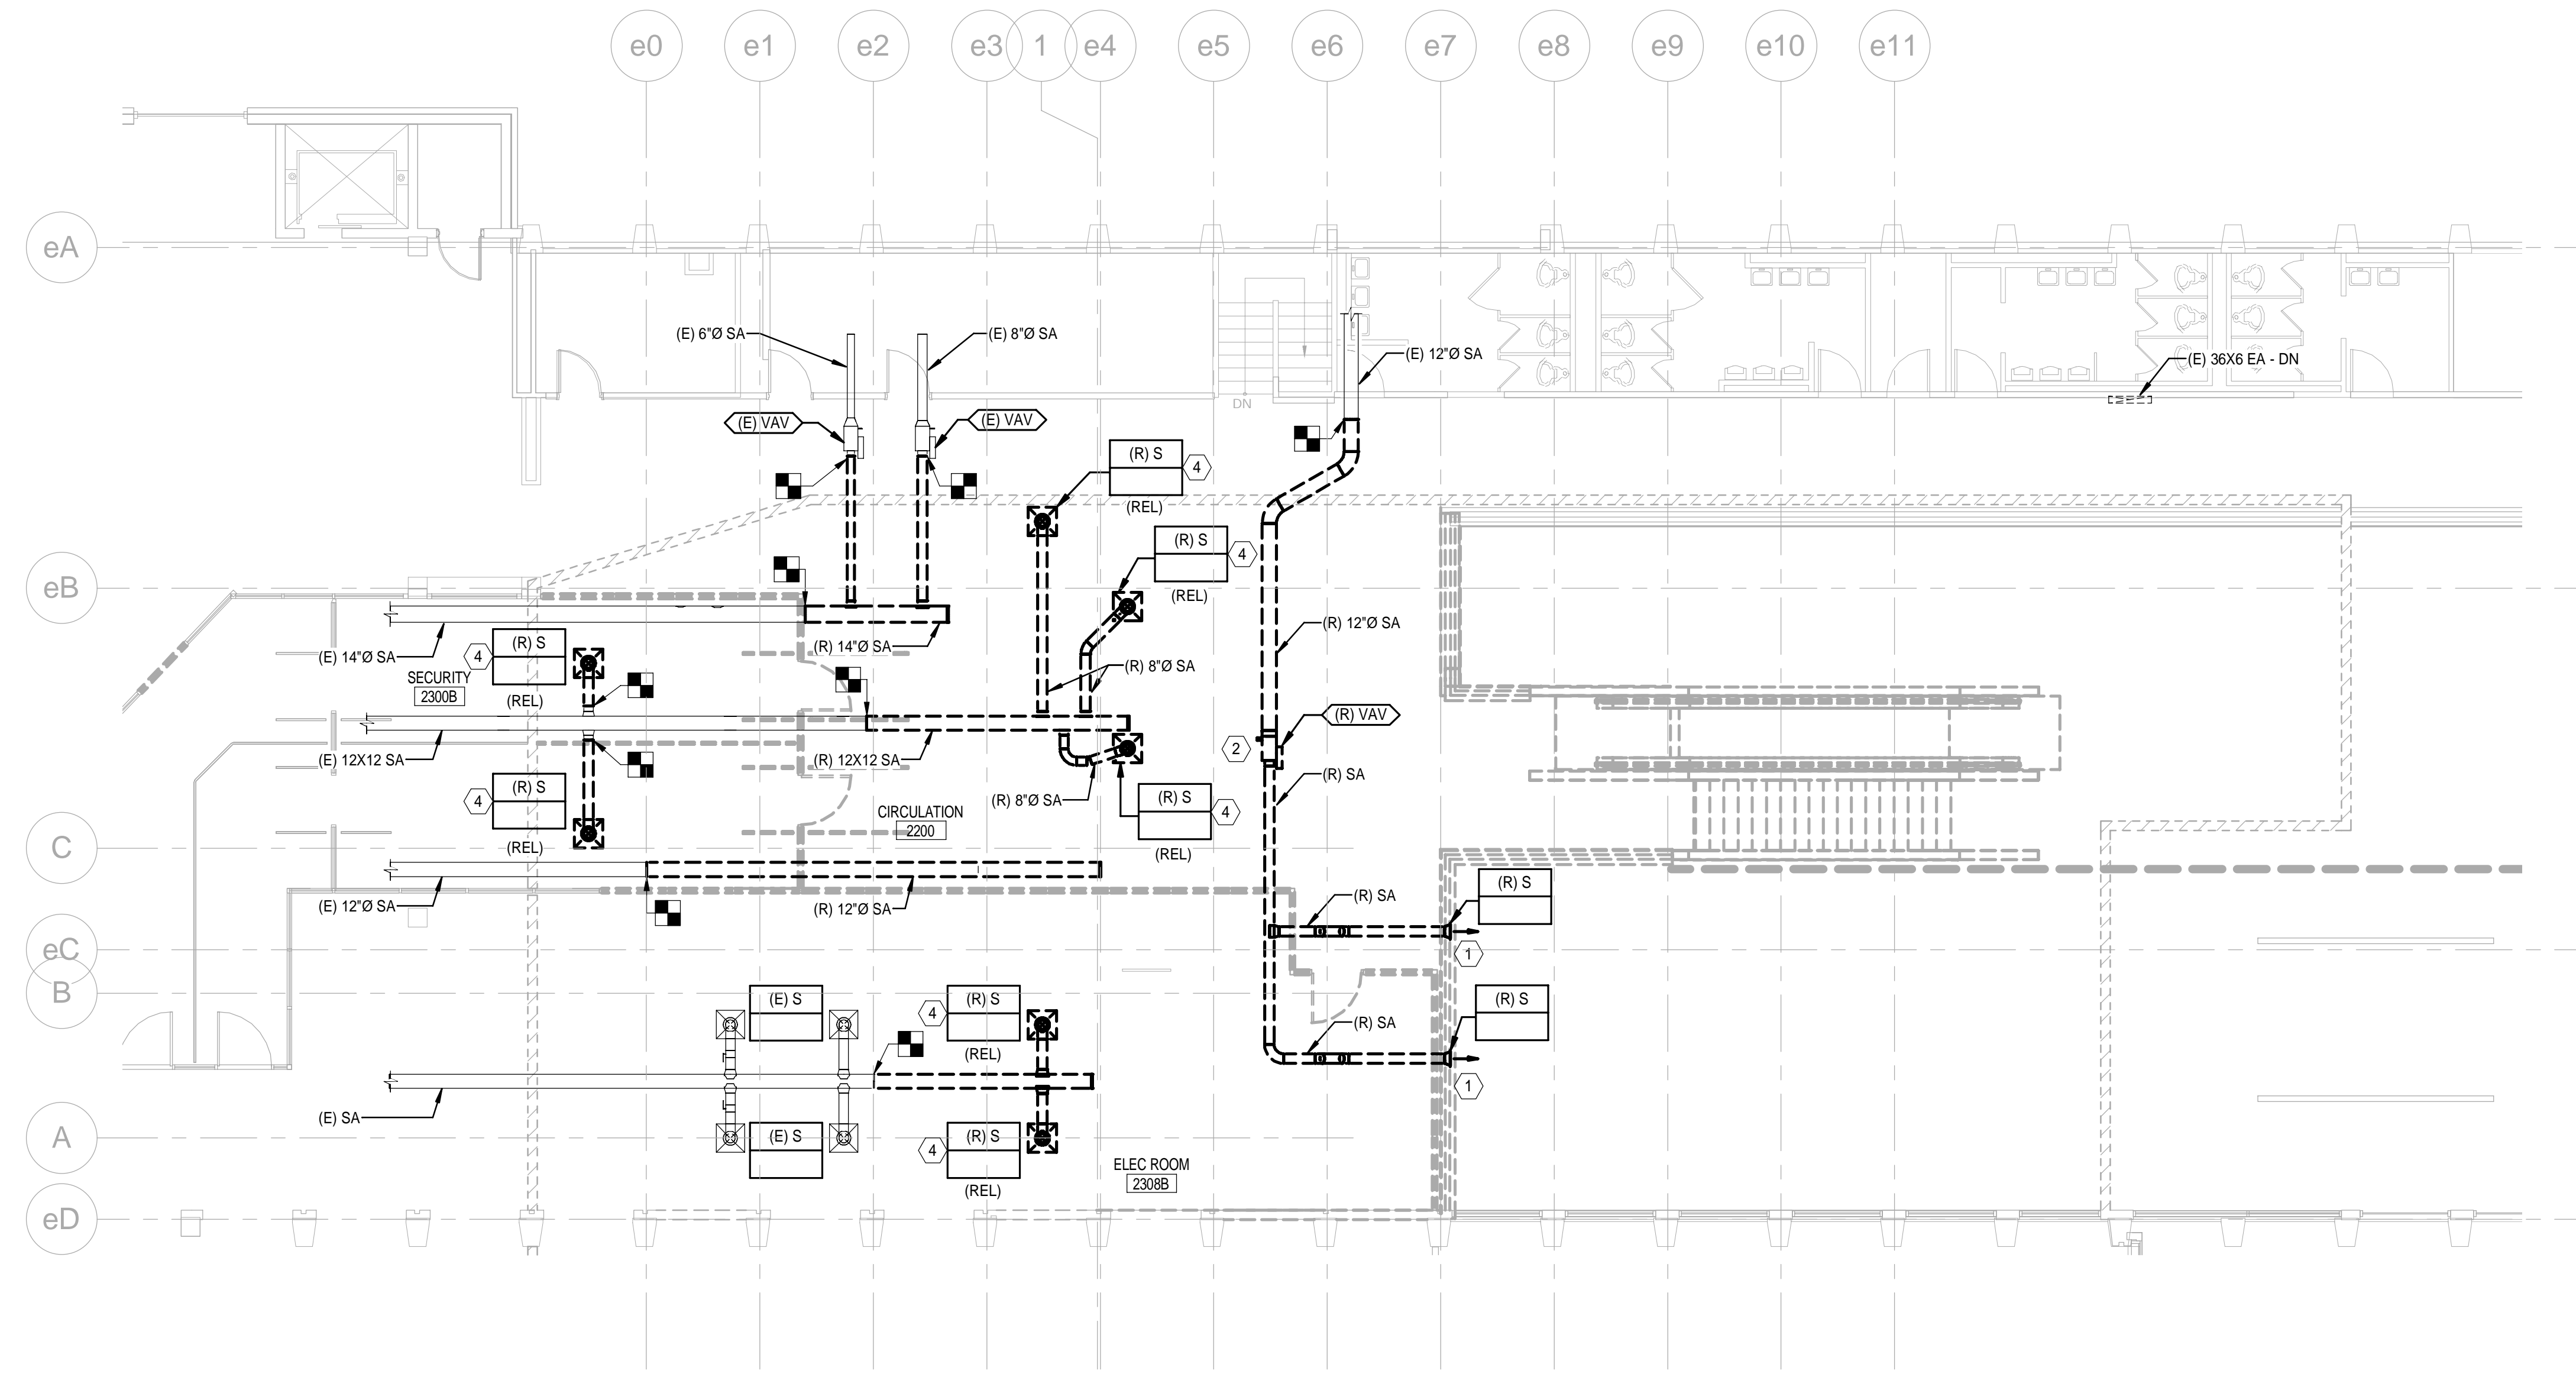

1 2ND FLOOR - HVAC DUCTWORK DEMOLITION PLAN
 1/8" = 1'-0"

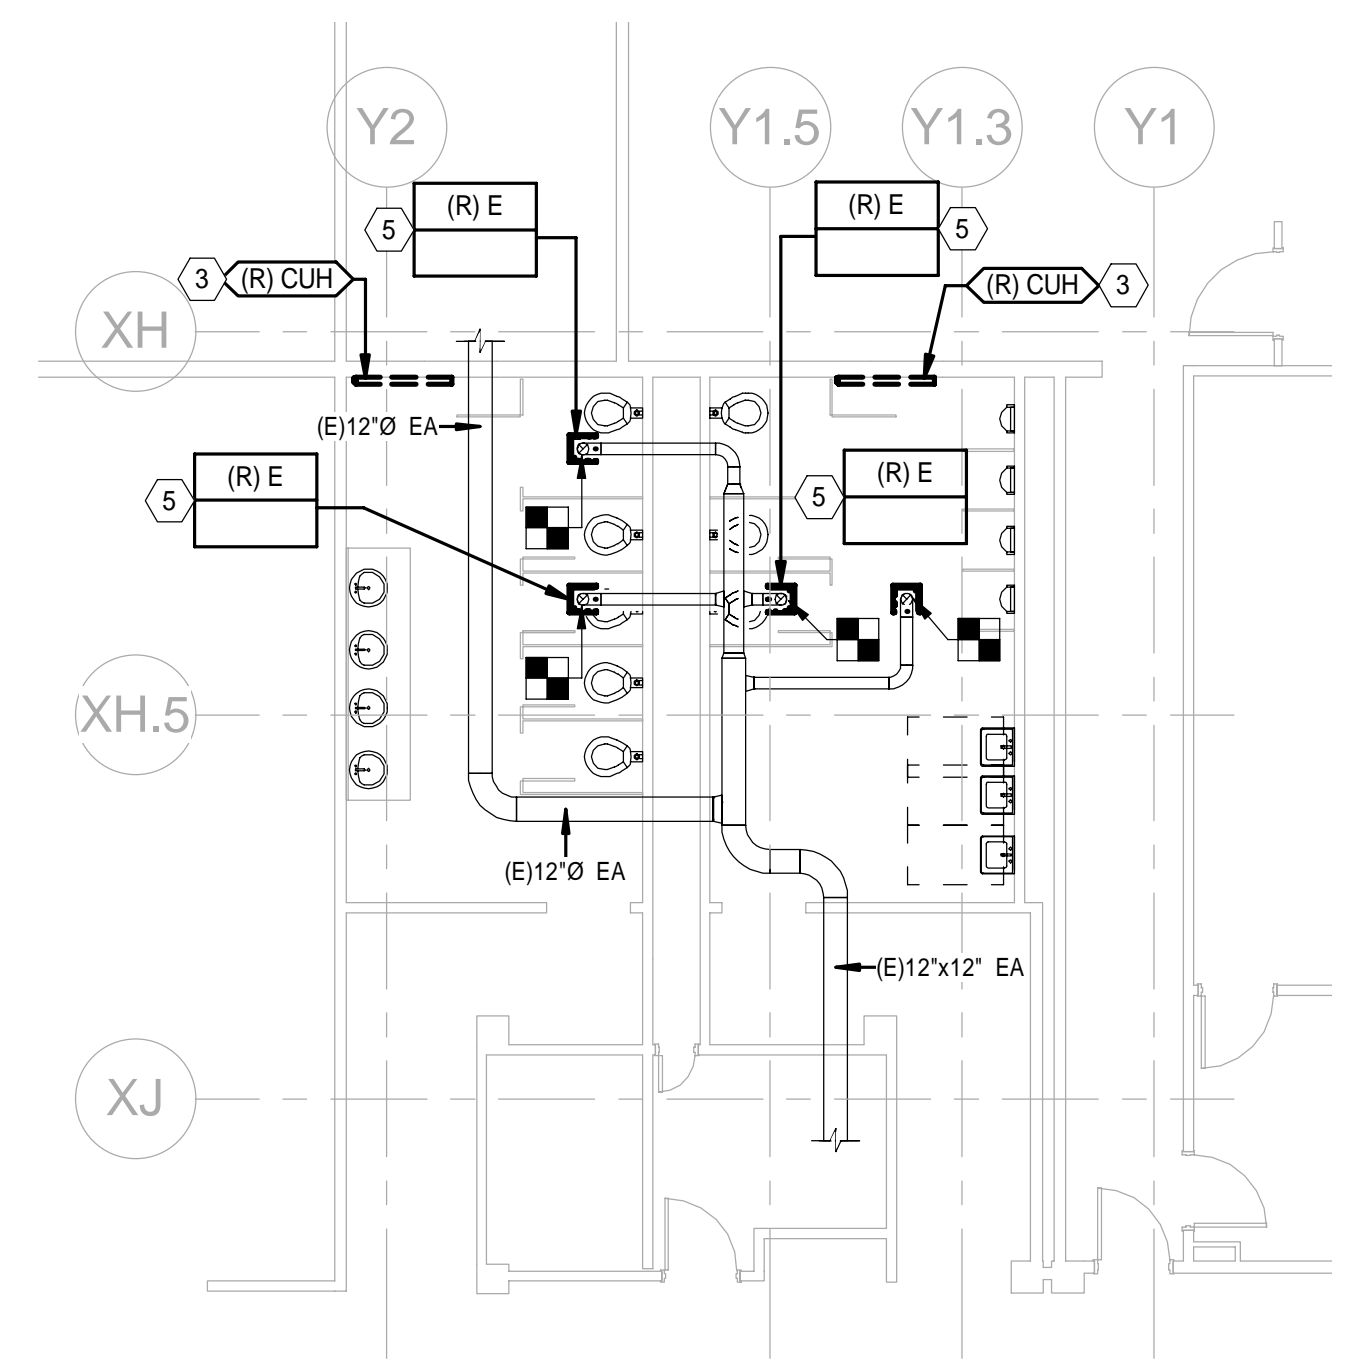

2 2ND FLOOR - HVAC DUCTWORK RESTROOM DEMOLITION PLAN
 1/8" = 1'-0"

