

GENERAL NOTES

1. SEE SHEET M-001 FOR LEGEND AND ABBREVIATIONS.

KEYNOTE	KEYNOTE DESCRIPTION
1	REMOVE SUPPLY DIFFUSERS AND ASSOCIATED DUCTWORK
2	REMOVE VAV, CONTROLS AND ASSOCIATED DUCTWORK BACK TO EXTENTS SHOWN
3	REMOVE CABINET UNIT HEATER, ASSOCIATED PIPING, AND CONTROLS. PREPARE PIPING FOR CONNECTION OF NEW CUH IN SAME LOCATION.
4	PROVIDE PRE-CONSTRUCTION TAB ON DIFFUSERS DESIGNATED FOR RELOCATION.
5	REMOVE EXHAUST GRILLE. PREPARE DUCTWORK FOR NEW CONNECTION.



ARCHITECTURE 144 Fore Street, P.O. Box 618
 Portland, Maine 04104
 TEL: (207) 775-3666
 FAX: (207) 775-1070
 WWW.SIMIFR.COM

SMART
 INTERIORS
 ENERGY

SMART PROJECT NO. 17033
 PROJECT MGR JCDRAWN
 JC
 DRL
 AE OF RECORD
 KOD

REV.	BY	DATE	ISSUED FOR CONSTRUCTION
0		12/21/17	STATUS: DATE: 12/21/17

THIS PLAN SHALL NOT BE MODIFIED WITHOUT WRITTEN PERMISSION FROM SEBAGO TECHNICALS, INC. USER'S ASSUME RISK AND WITHOUT LIABILITY TO SEBAGO TECHNICALS, INC.

SEBAGO
 TECHNICALS


WWW.SEAGOTECHNICALS.COM
 75 John Roberts Rd., Suite 1A
 South Portland, ME 04086
 TEL: (207) 775-3666
 FAX: (207) 775-1070

PROJECT NO. FIELD BOOK DESIGN CHKD DRAWN


2ND FLOOR HVAC DUCTWORK DEMO PLAN
 OF:
 VERTICAL CIRCULATION IMPROVEMENTS
 1001 WESTBROOK STREET
 PORTLAND, MAINE 04102

DATE: 12/21/17
 SCALE: 1/8" = 1'-0"

2.MD102

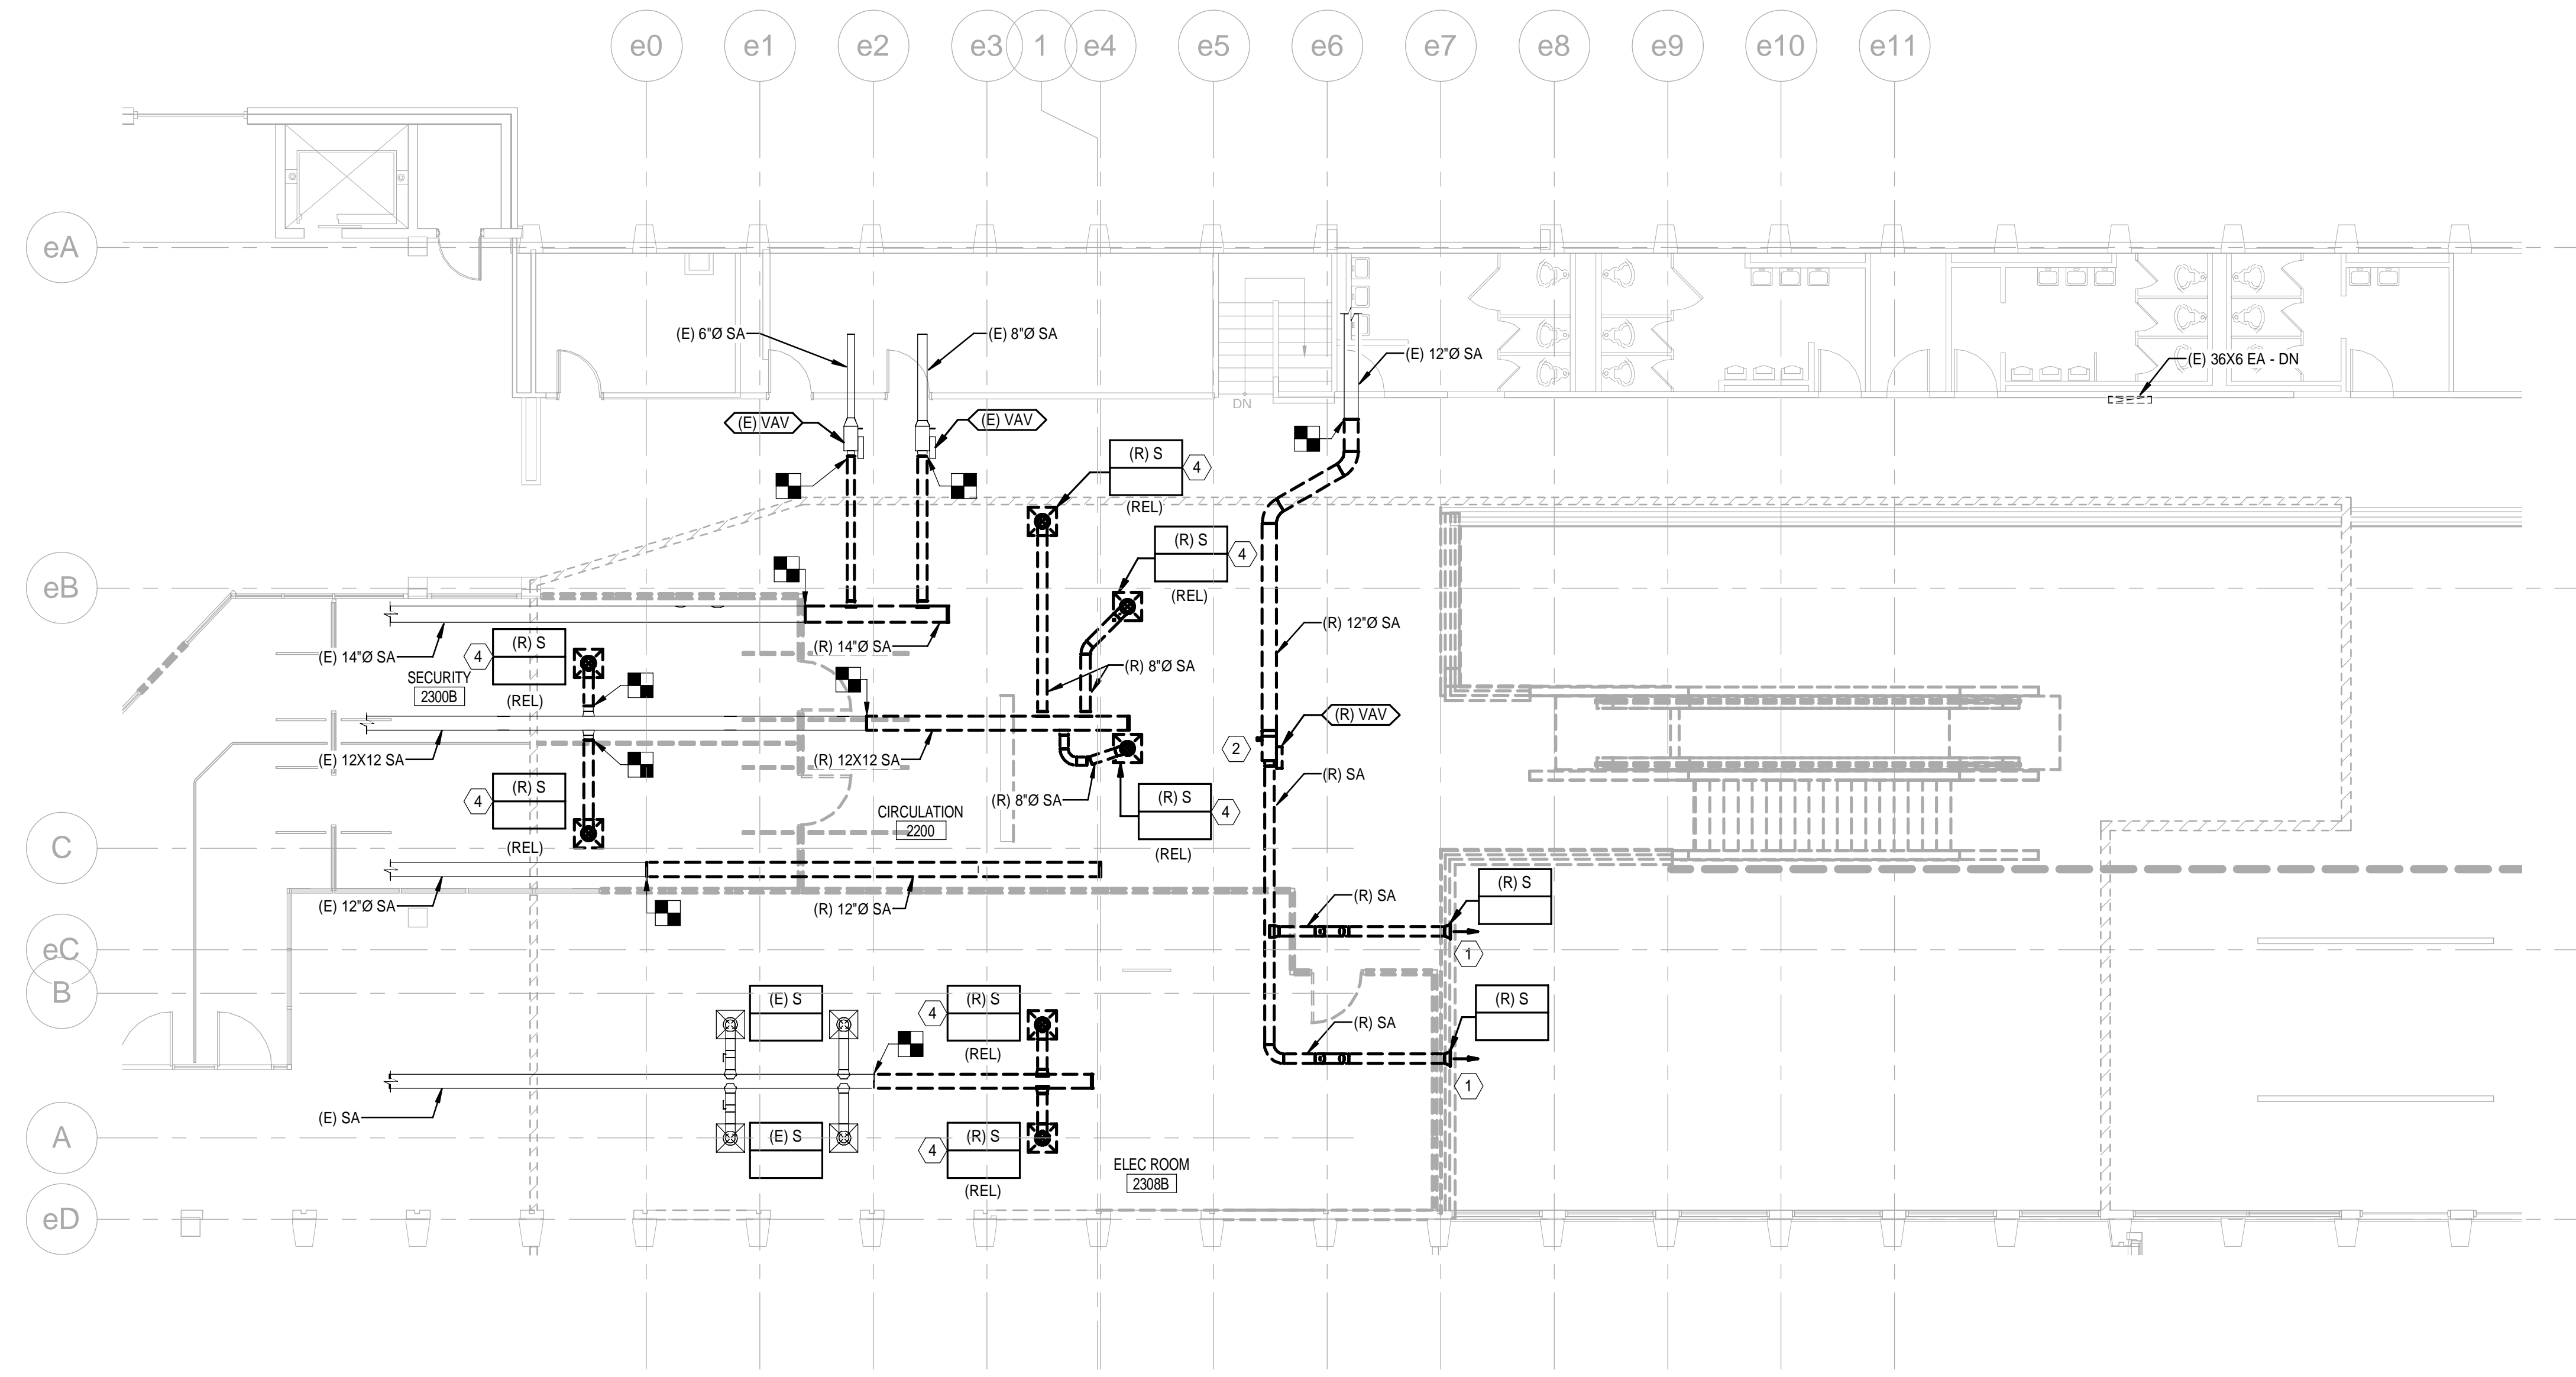

1 2ND FLOOR - HVAC DUCTWORK DEMOLITION PLAN
 1/8" = 1'-0"

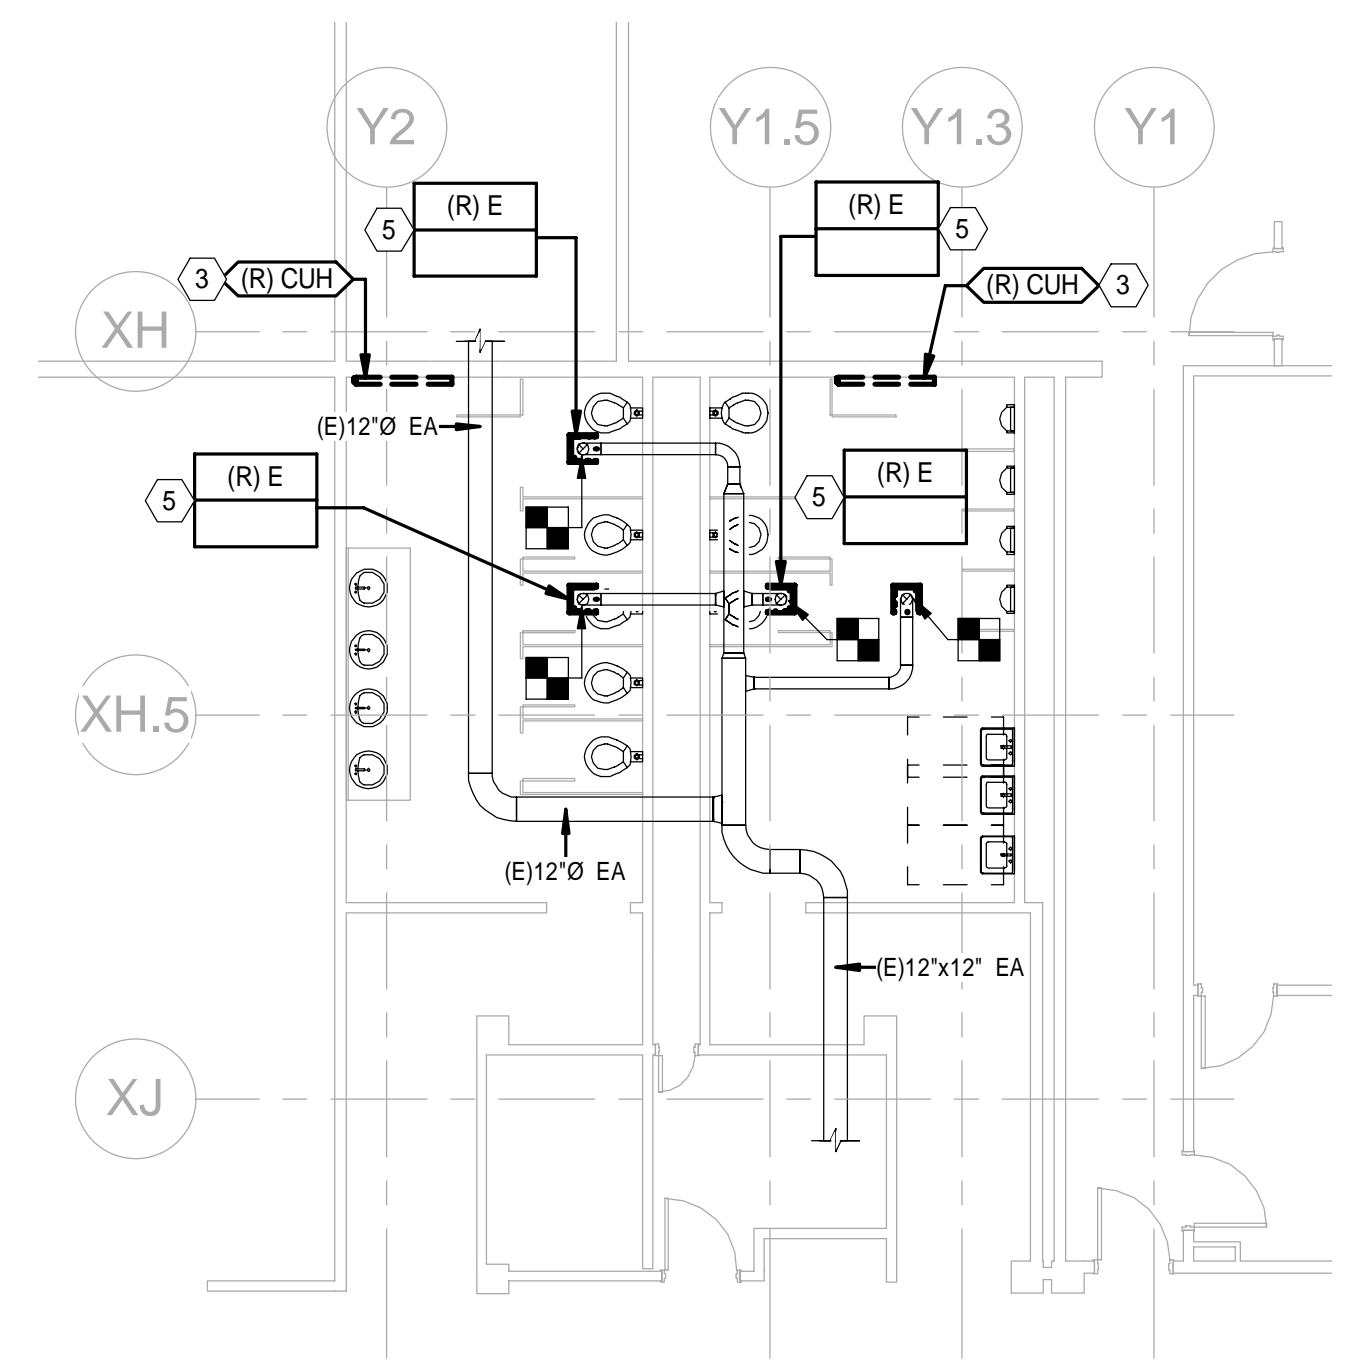

2 2ND FLOOR - HVAC DUCTWORK RESTROOM DEMOLITION PLAN
 1/8" = 1'-0"

