

**GENERAL NOTES**

1. SEE SHEET PL001 FOR LEGEND AND ABBREVIATIONS.


KEYNOTE	KEYNOTE DESCRIPTION
1	REMOVE FIXTURE SUPPORTS, AND ALL ASSOCIATED TRIM-COMPLETE. REMOVE CW, HW, V AND W PIPING TO A POINT WITHIN WALL/FLOOR AND PREPARE FOR CONNECTION OF NEW FIXTURE. PATCH WALL/FLOOR TO MATCH EXISTING (RE:ARCH).

NOT FOR CONSTRUCTION


ARCHITECTURE 144 Fore Street P.O. Box 618  
 Portland, Maine 04104  
 TEL: (207) 775-3646  
 FAX: (207) 775-1070  
 WWW.SMRTINC.COM

**SMART**  
 INTERIORS  
 ENERGY



PROJECT NO. 17033  
 PROJECT MGR. JCDRAWN  
 DRL JC  
 A/E OF RECORD

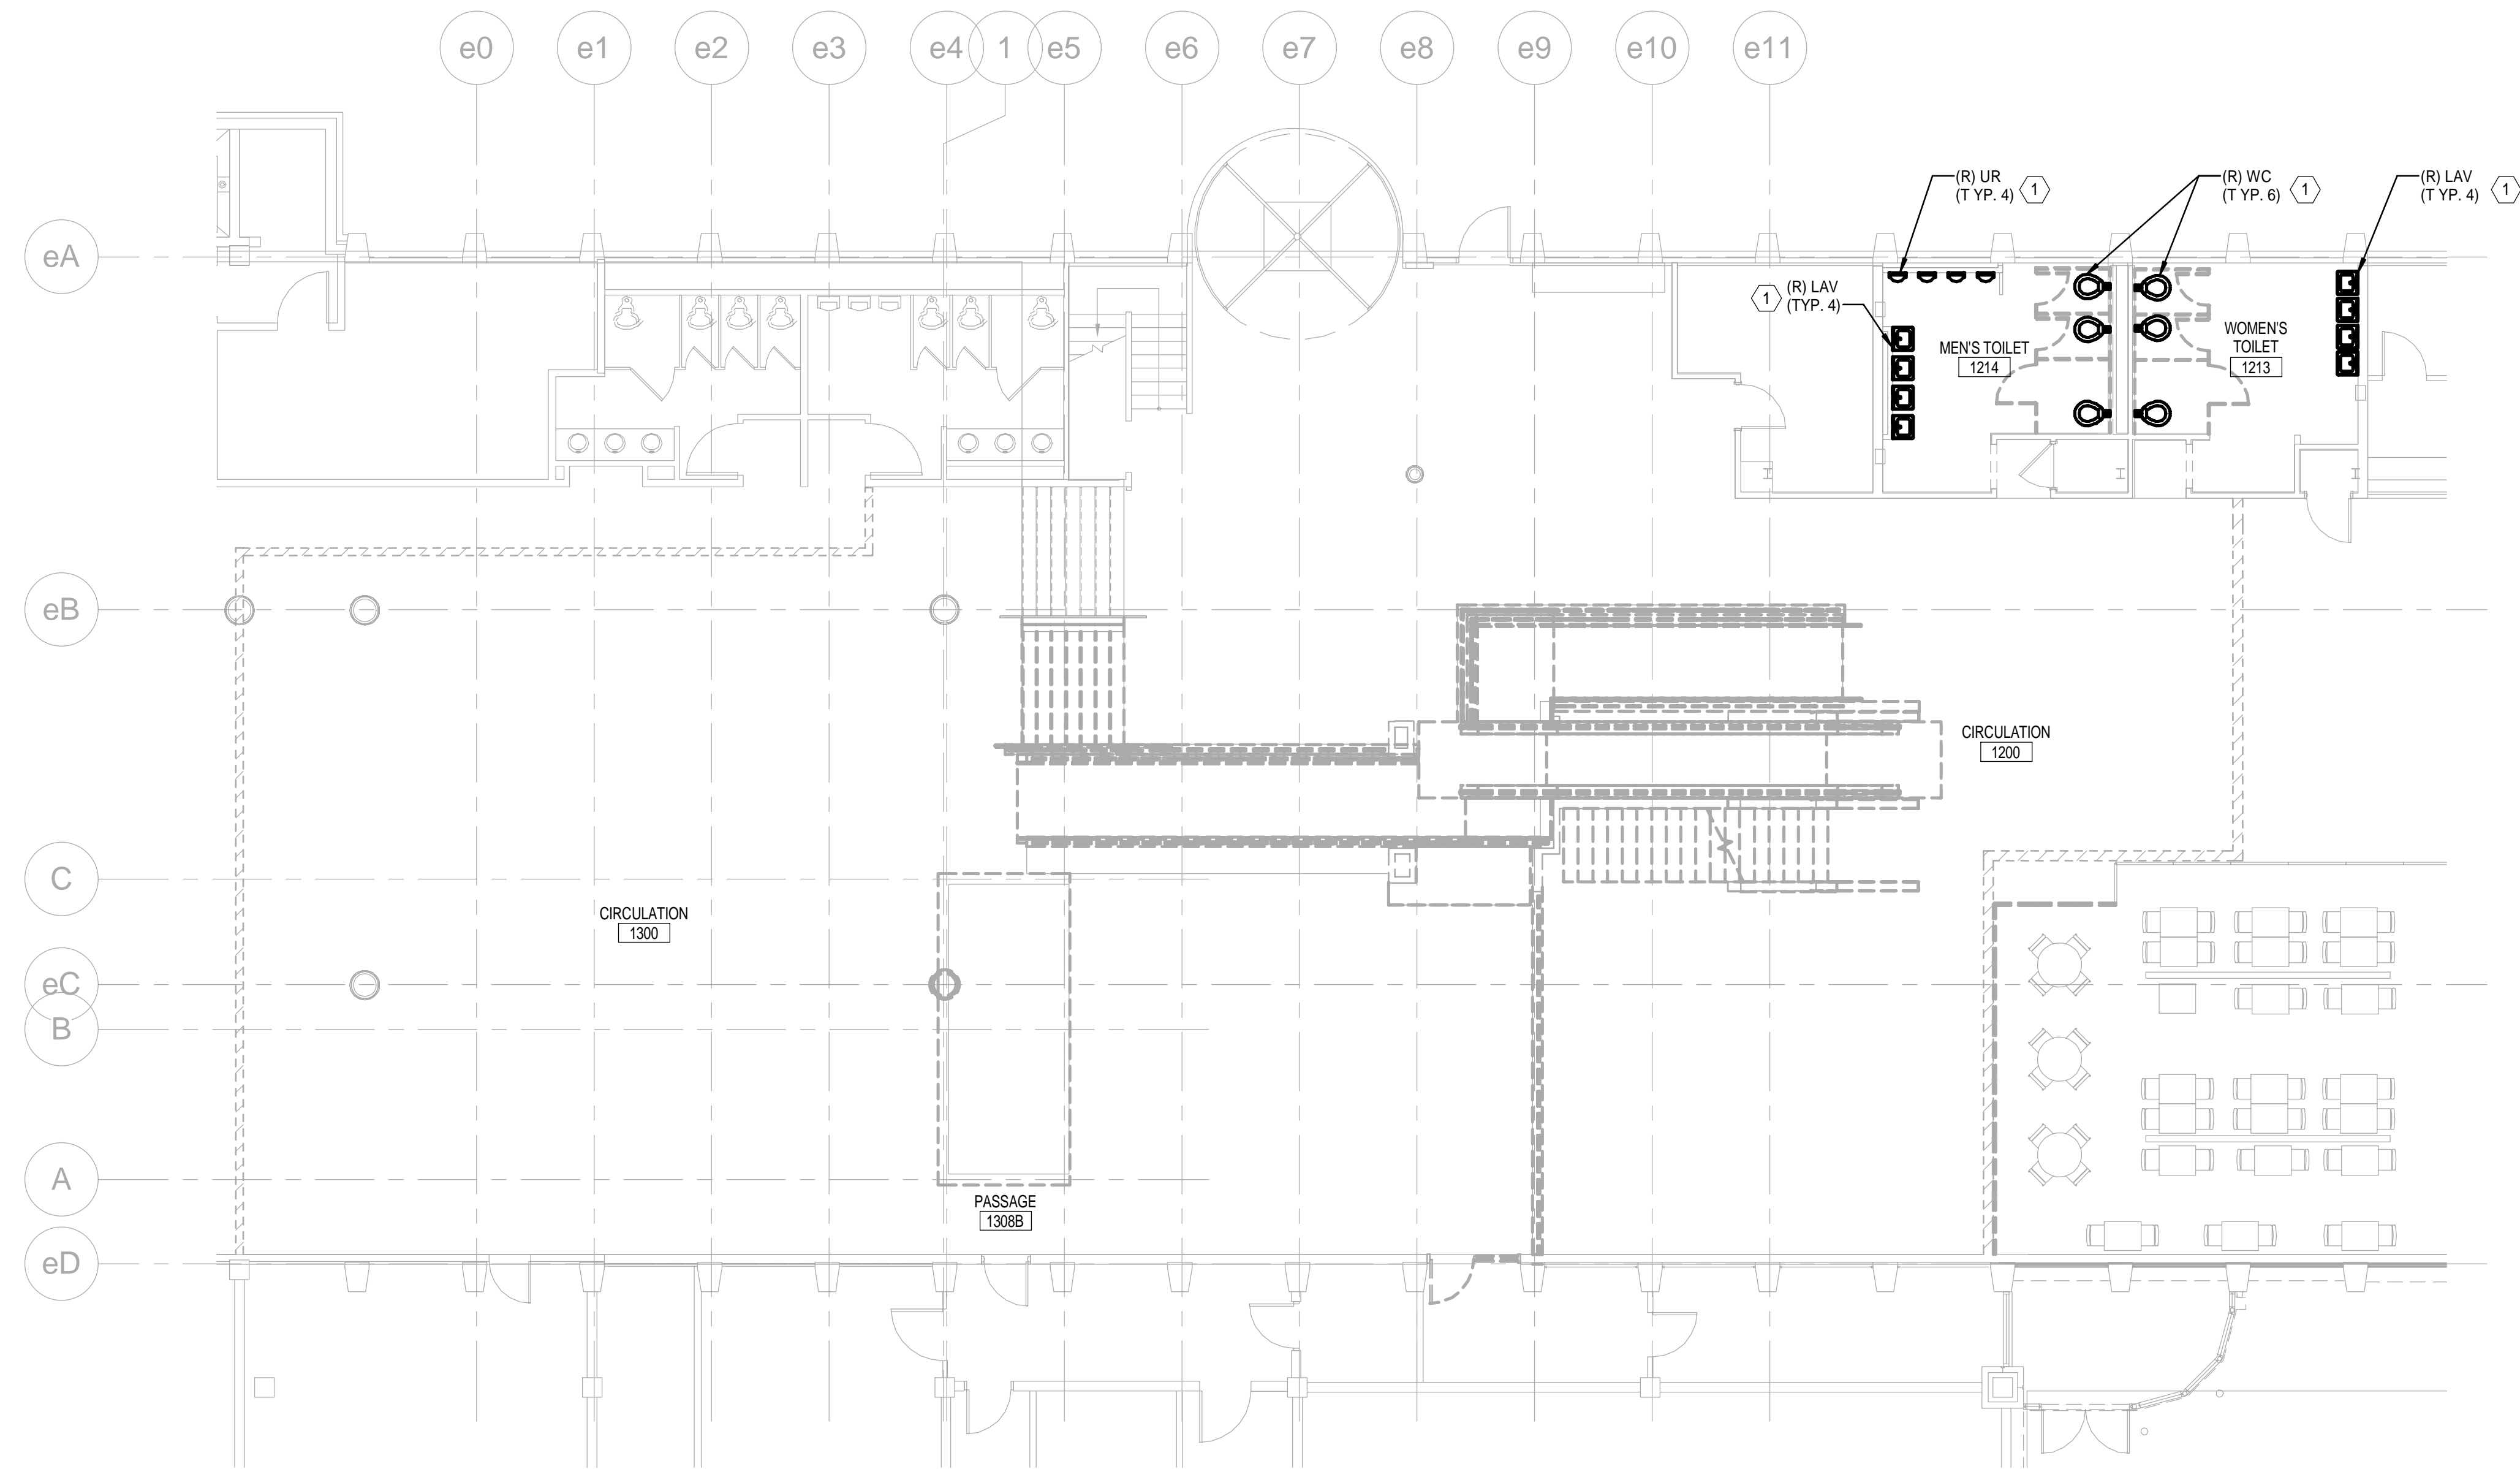

**1** 1ST FLOOR - PLUMBING DEMOLITION PLAN  
 1/8" = 1'-0"

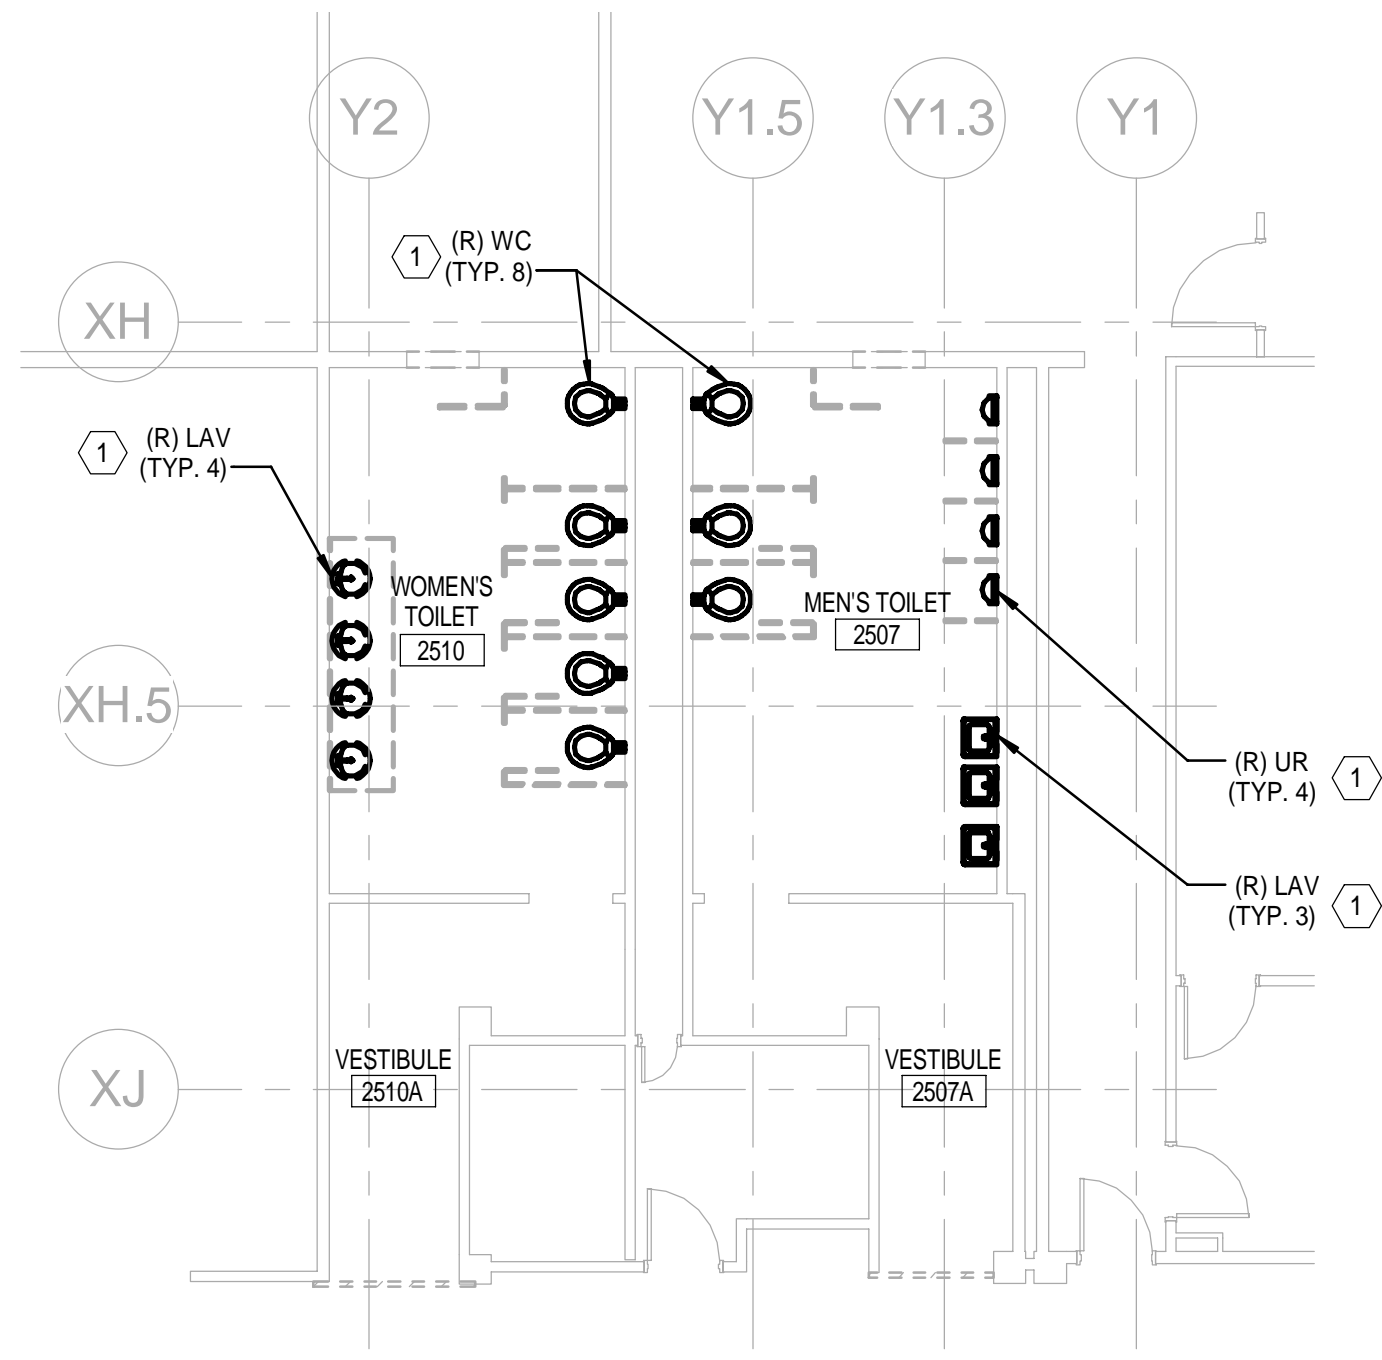

**2** 2ND FLOOR - PLUMBING RESTROOM DEMOLITION PLAN  
 1/8" = 1'-0"

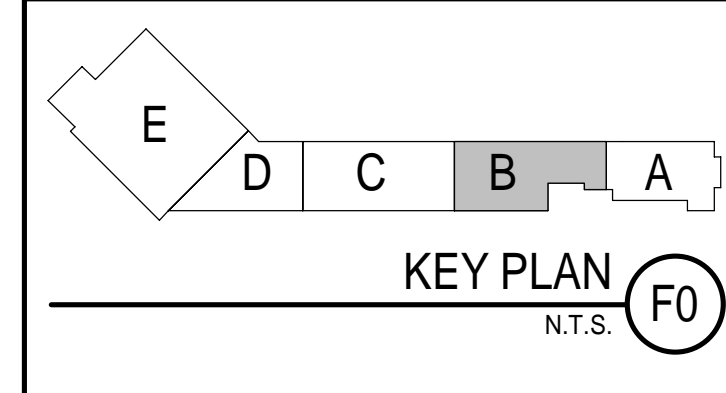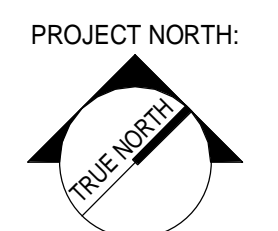

REV.	BY:	DATE:	ISSUED FOR PERMIT STATUS:
		12/21/17	

THIS PLAN SHALL NOT BE MODIFIED WITHOUT WRITTEN PERMISSION FROM SEBAGO TECHNICS, INC.  
 USERS ASSUME RISK AND WITHOUT LIABILITY TO SEBAGO TECHNICS, INC.

**SEBAGO**  
 TECHNICS

WWW.SEAGOTECHNICS.COM  
 75 John Roberts Rd., Suite 1A  
 South Portland, ME 04086  
 Tel: (207) 775-3646  
 Fax: (207) 775-1070

PROJECT NO. 17033  
 FIELD BOOK DESIGN CHKD DRAWN

1ST AND 2ND FLOOR PLUMBING DEMOLITION PLAN OF:  
 VERTICAL CIRCULATION IMPROVEMENTS  
 1001 WESTBROOK STREET  
 PORTLAND, MAINE 04102

DATE	SCALE
12/21/17	1/8" = 1'-0"

2.PD101