


SPECIFIC REMOVALS NOTES:

- 1 REMOVE PORTION OF GWB WALL ASSEMBLY TO ALLOW FOR NEW OPENING;
- REMOVE PORTION OF GWB WALL ASSEMBLY AS REQUIRED TO ALLOW FOR NEW DOOR INSTALLATION. REFERENCE NEW WORK FLOOR PLAN AND DOOR SCHEDULE FOR DOOR AND DOOR FRAME SIZE.
- REMOVE DOOR AND DOOR FRAME ASSEMBLY, COMPLETE.
- REMOVE AND SALVAGE DOOR, FRAME AND HARDWARE, COMPLETE FOR RELOCATION. REFERENCE NEW WORK PLAN FOR NEW LOCATION.
- REFERENCE DOOR SCHEDULE FOR MORE INFORMATION.
- 5 REMOVE WINDOW ASSEMBLY
- REMOVE WINDOW SILL AND PORTION OF EXTERIOR WALL ASSEMBLY TO ACCOMODATE NEW DOOR INSTALLATION. REFERENCE NEW WORK PLAN AND DOOR SCHEDULE FOR DOOR AND FRAME SIZE. RFERENCE DETAIL CWS-5 ON A2.7 FOR MORE INFORMATION
- 7 REMOVE BASE CABINETS, COUNTERTOP AND WALL CABINETS, COMPLETE.
- 8 REMOVE CARPET, FLOOR FINISH, AND WALL BASE THROUGHOUT SPACE,
- 9 REMOVE VCT, FLOOR FINISH, AND WALL BASE THROUGHOUT SPACE,
- REMOVE PORTION OF GWB WALL ASSEMBLY TO ALLOW FOR NEW OPENING WITH GWB SOFFIT. NEW OPENING SOFFIT HEIGHT TO BE 7'-6" AFF. EXISTING PORTION OF WALL ASSEMBLY TO REMAIN ABOVE NEW SOFFIT HEIGHT.
- 11 REMOVE GWB FROM TAGGED SIDE OF WALL FOR BLOCKING INSTALLATION

## GENERAL REMOVALS NOTES:

1. COORDINATE ALL REMOVALS WORK WITH ALL TRADES PRIOR TO COMMENCING ANY WORK.

- SAFELY STORE ALL ITEMS INDICATED TO BE SALVAGED AND REINSTALLED. REPLACE ANY DAMAGED ITEMS OR COMPONENTS AS REQUIRED.
- 3. PATCH AND REPAIR ALL ADJACENT SURFACES TO REMAIN THAT ARE DAMAGED DURING THE REMOVALS PROCESS.
- 4. PATCH AND REPAIR ALL REMAINING INTERIOR WALL SURFACES THROUGHOUT LIMITS OF WORK AREA. PREPARE WALL SURFACES FOR NEW FINISHES PER FINISH MANUFACTURER'S RECOMMENDATIONS. REFERENCE PARTITION AND ROOM FINISH SCHEDULES FOR MORE INFORMATION.
- 5. THE CONTRACTOR SHALL BE RESPONSIBLE FOR THE REMOVAL OF ALL MISC. EQUIPMENT, SHELVING, APPLIANCES, FURNITURE AND ACCESSORIES, WITHIN AND APPLIED TO, ANY WALL, CEILING OR FLOOR WITHIN ALL SPACES, TYPICAL WITHIN THE LIMIT OF WORK AREA. THE CONTRACTOR SHALL VERIFY SCOPE OF WORK IN FIELD PRIOR TO BID. REFERENCE ALL CONSTRUCTION DOCUMENTS FOR ADDITIONAL INFORMATION PERTAINING TO ALL TRADES.
- 6. THE CONTRACTOR SHALL PROVIDE TEMPORARY SUPPORT, BRACING AND SHORING AS REQUIRED FOR ANY AND ALL REMOVALS. TEMPORARY BRACING, SUPPORT AND SHORING SHALL BE IN PLACE PRIOR TO ANY AND ALL REMOVALS.
- 7. THE CONTRACTOR SHALL CUT, PATCH, AND REPAIR ANY AND ALL WALL SURFACES AS REQUIRED FOR INSTALLATION OF BLOCKING THAT IS REQUIRED BY THE INSTALLATION OF CABINETS, WALL CABINETS AND COUNTERTOPS. PROVIDE BLOCKING FOR ALL CABINETS, WALL CABINETS & COUNTERTOPS.

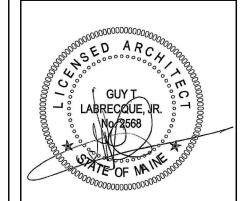




CWS Architects

> 434 Cumberland Avenue Portland, ME 04101 Phone: (207)774-4441 Fax: (207)774-4016 www.CWSarch.com

> > **ALYSIS**STREET
> > NE 04102

1600 CONGRESS STRE PORTLAND, MAINE 04

SOUTHERN

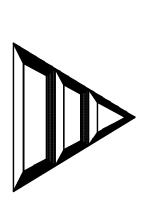

Drafted By: CWS ARCH

Checked By: CWS - GTL

Date Drawn: 03/06/12

BATE REVISION DESCRIPTION

S/14/2012 ISSUED FOR 100% CONSTRUCTION

DATE REVISION DESCRIPTION

D1.1

Sheet Number

ENLARGED REMOVALS
FLOOR PLAN & NOTES

SCALE: 1/4" = 1'-0"