


John Hastings
370 Capisic St.
Portland, ME ~~04103~~

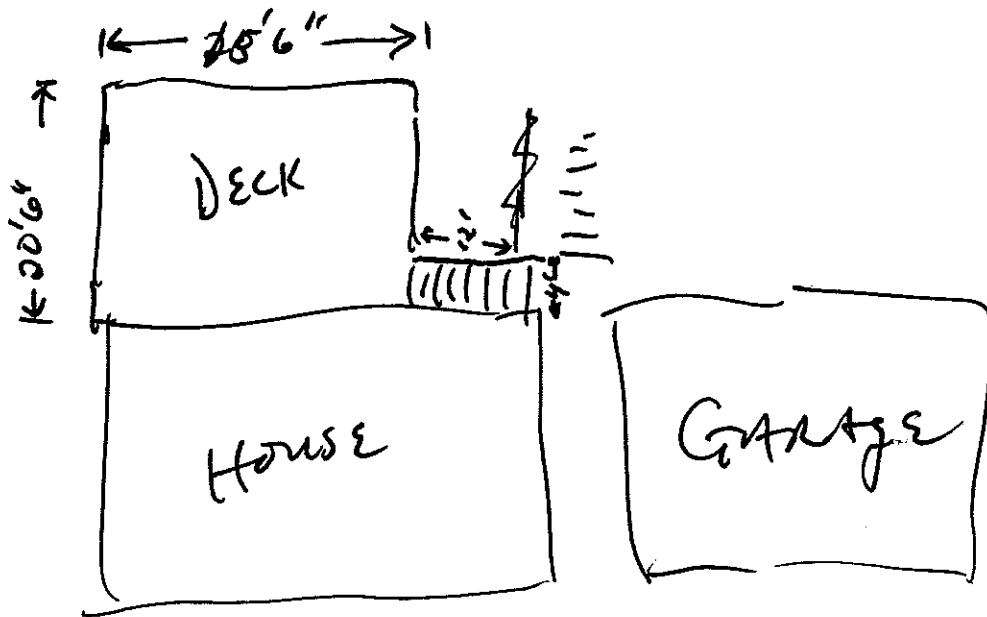

- ① Remove existing decking & handrails.
- ② Replace decking w/ $5/4 \times 6$ PT decking screwed down w/ 2.5" primer and screws.
- ③ Replace handrails consisting of 4x4 PT posts lag bolted to frame w/ $4 \times 3/8$ galv. lag bolts, 2x4 PT rails, 36"x2"x24" PT balusters, $5/4 \times 6$ " PT CAP.

No change in the existing footprint.