




### \FLOOR-MOUNTED CHAIR OUTLET

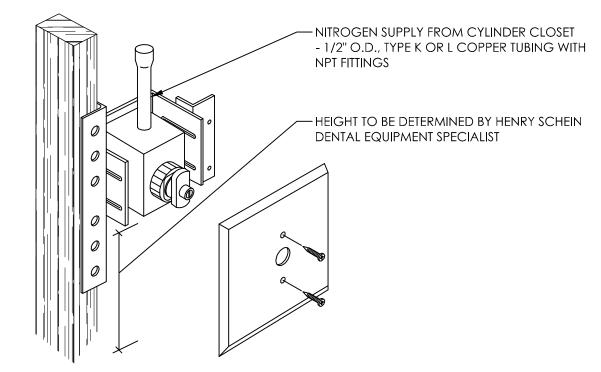


1. THIS IS A TYPICAL OUTLET. REFER TO MANUFACTURER'S INSTALLATION LITERATURE FOR EXACT REQUIREMENTS. 2. CONSULT LOCAL FIRE AND PLUMBING CODES BEFORE INSTALLATION.

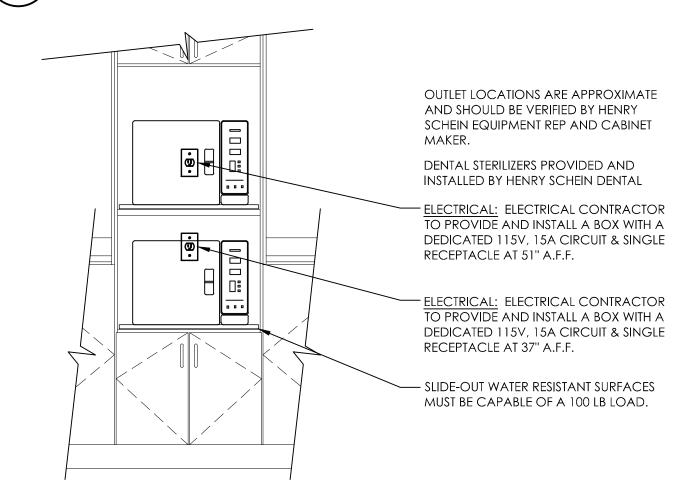

# STACKED STERILIZERS (AUTOCLAVES) NOT TO SCALE

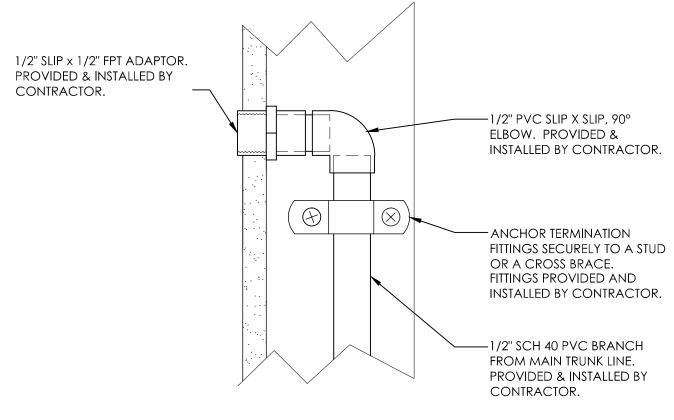


VACUUM WALL OUTLET

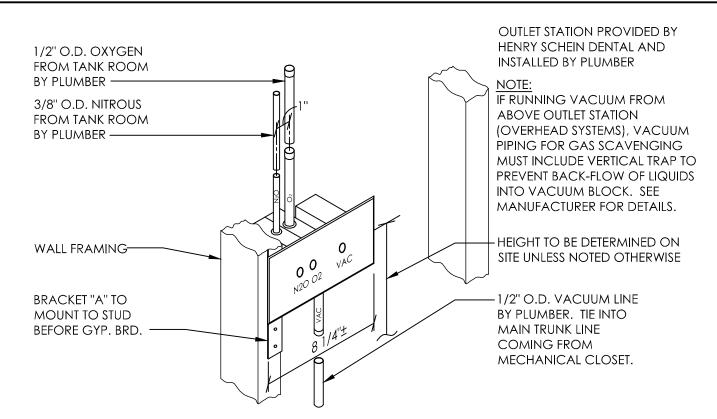


THIS DRAWING REPRESENTS A TYPICAL INSTALLATION AND IS FOR INFORMATIONAL PURPOSES ONLY. REVIEW MANUFACTURER SPECIFICATIONS FOR EXACT MODEL AND SYSTEM REQUIREMENTS.


## N2O, O2 AND VACUUM OUTLET STATION

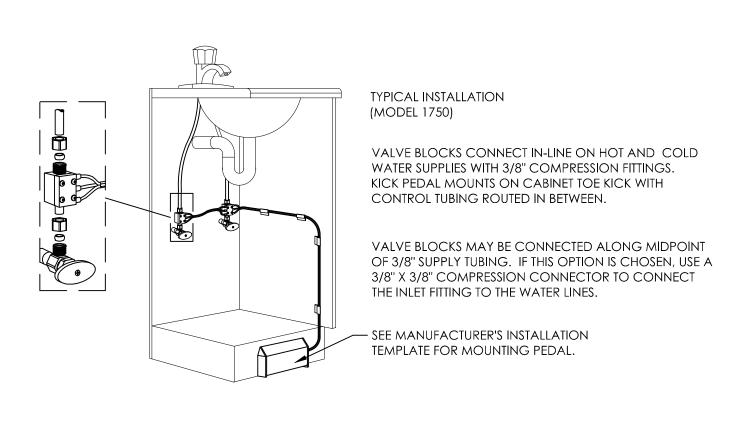

### TAPMASTER FAUCET CONTROL

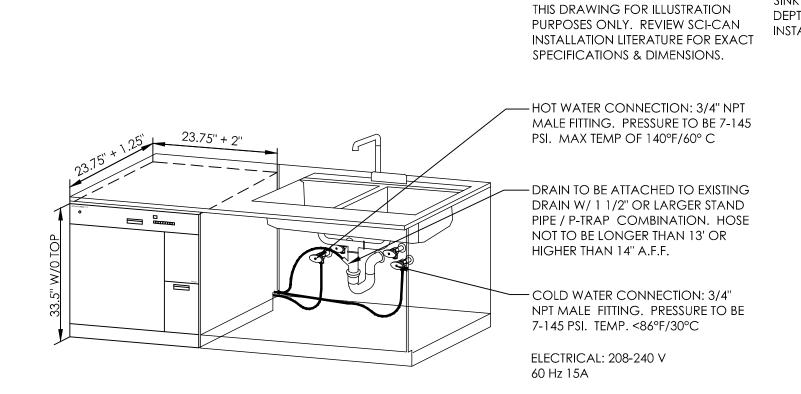


#### HYDRIM INSTRUMENT WASHER

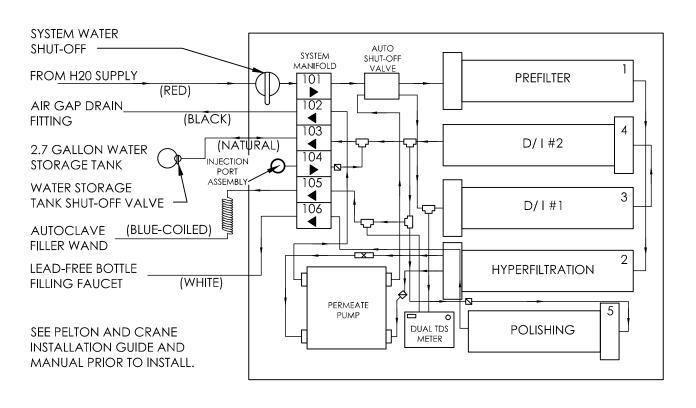

\*IF NOT ALREADY MOUNTED IN ANOTHER PRODUCT (STERI CENTER) MOUNT NEAR COLD WATER SOURCE AND 1-1/2" DRAIN.


PELTON & CRANE VISTAPURE

\*ALWAYS FOLLOW LOCAL PLUMBING CODES.

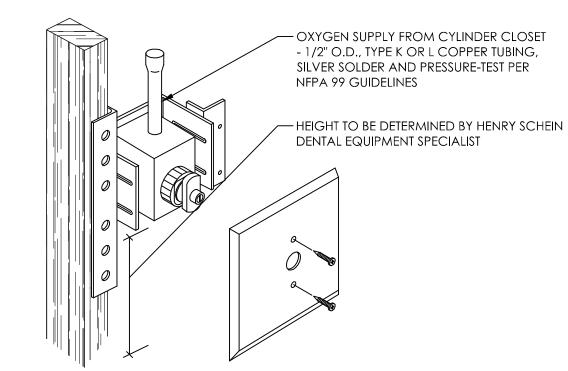


1. THIS IS A TYPICAL OUTLET. REFER TO MANUFACTURER'S INSTALLATION LITERATURE FOR EXACT REQUIREMENTS. 2. REVIEW NFPA 99, CHAPTER 4 FOR OXYGEN PIPING GUIDELINES. CONSULT LOCAL FIRE CODES BEFORE


### **OXYGEN OUTLET**

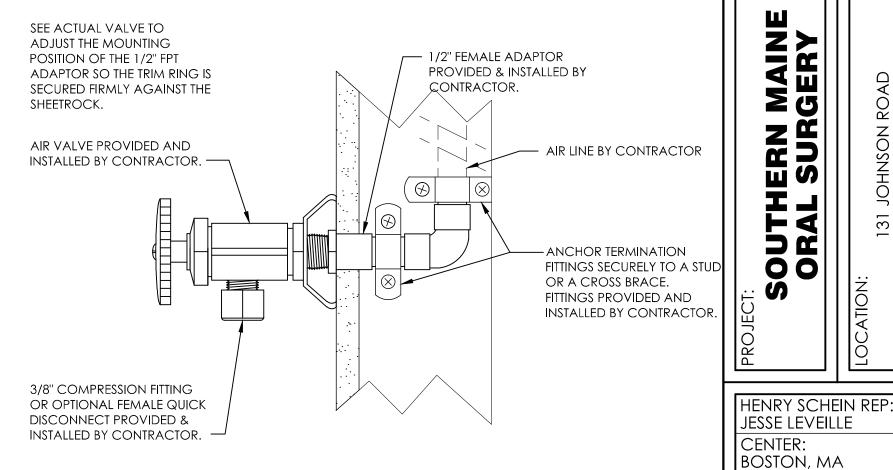



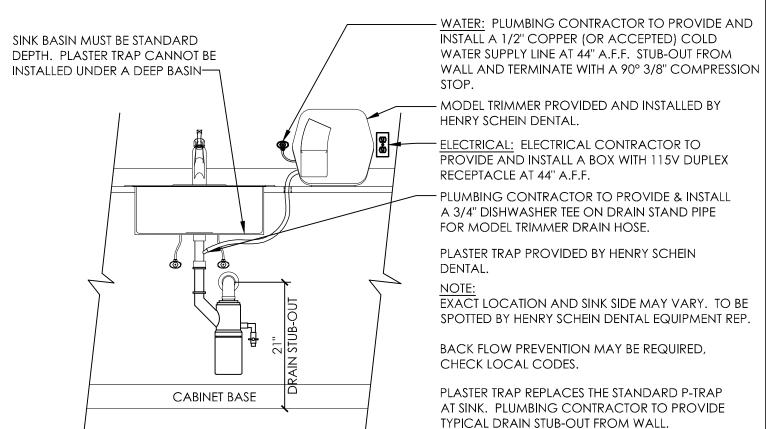

#### MODEL TRIMMER & GLECO PLASTER TRAP

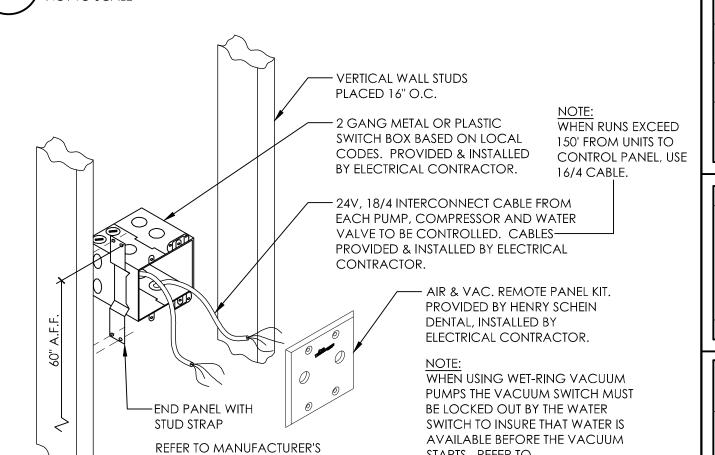

STARTS. REFER TO

FOR DETAILS.

MANUFACTURER'S INSTALL GUIDE

AIRTECH CONTROL PANEL (2 SWITCH)

INSTALLATION GUIDE FOR FINAL WIRE

HOOKUP TO CONTROL PANEL.

CHECKED BY: REVISIONS: 10/24/14 AKL INT.SQ.FT.=

SCALE: SHT. SIZE: SEE DTL. D MECHANICAL DETAILS SPE

© 2014 by HENRY SCHEIN, INC.

ORTANT EN PREPAR ID IS NOT A ID HEREIN A

HENR.

ERN MAIR SURGER

RA

00

PHONE #: (207) 233-4978

**DE** 1092

DRAWING NAME: SMOS-1c-D PROJECT START DATE: 08/11/2014 FINALS START DATE: 08/20/2014 DRAWN BY: AKL/CAS FINALS BY: