



6. Install Bottom Mounting Angles (Level 2 Flat Fascia)

- Install the white bottom angles on Level 2 (Flat Fascia) sides of the canopy only so that they are continuous and flush with the bottom of the canopy.
- If a Pecten logo is required, attach the bottom logo track at 60" from that corner of the canopy.
- Use fasteners appropriate for site conditions. Maintain a 2" gap to the bottom of the gutter.

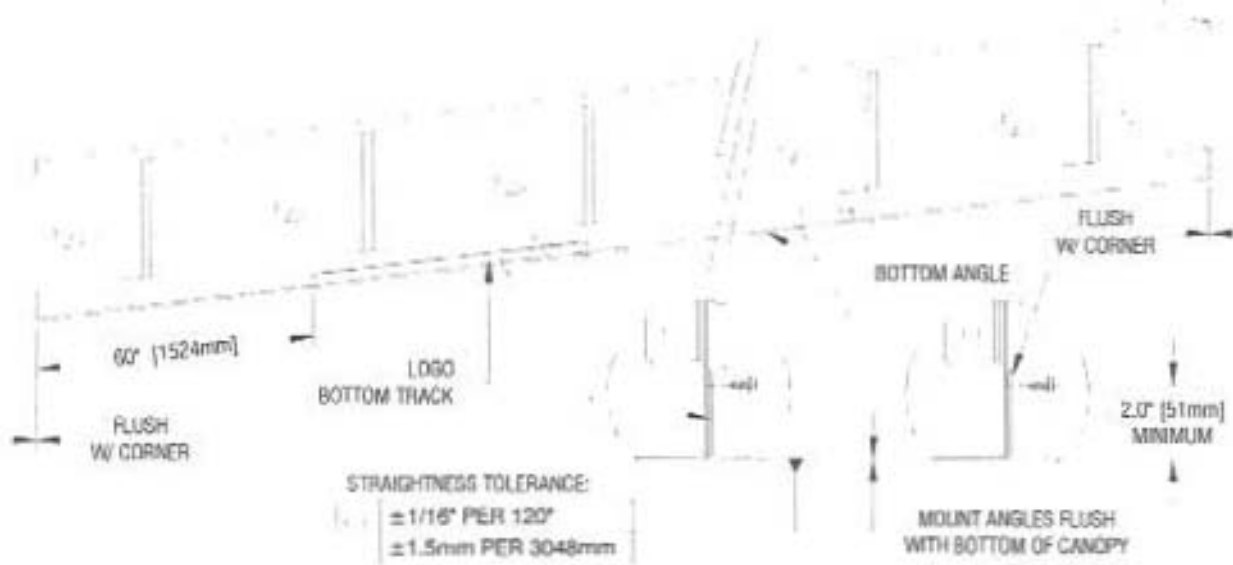

7. Install Pecten Logo Brackets


- At all Pecten logo locations (Level 1 or 2), install two Pecten logo brackets as illustrated.
- IMPORTANT:** The brackets **must be** mounted so they are square (90°) to the bottom logo track.
- NOTICE:** Verify that the two cage nuts in each bracket remained in place after shipping.

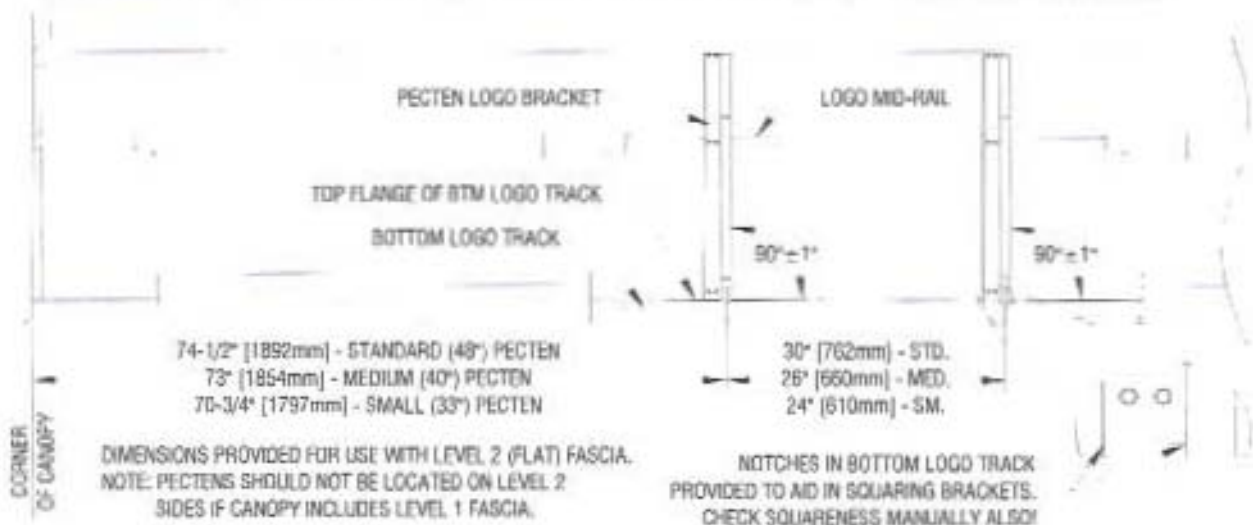

8. Install Pecten ACM Panels

NOTICE: For canopies over 40" install the logo extension panel (step 10) **BEFORE** the Pecten panel.

- Begin ACM installation on Level 1 sides with the white Pecten ACM panels (where required).
- Adjust the panel so holes line up with the nuts in logo brackets and it is flush with bottom track.
- Check that both the mid-rail and bottom brackets are seated in the notches of the return flanges. If not the panel is sticking out too far and will not be flush with the adjoining panels.
- Caulk along the seam between the back of the panel and the mid-rail logo bracket.

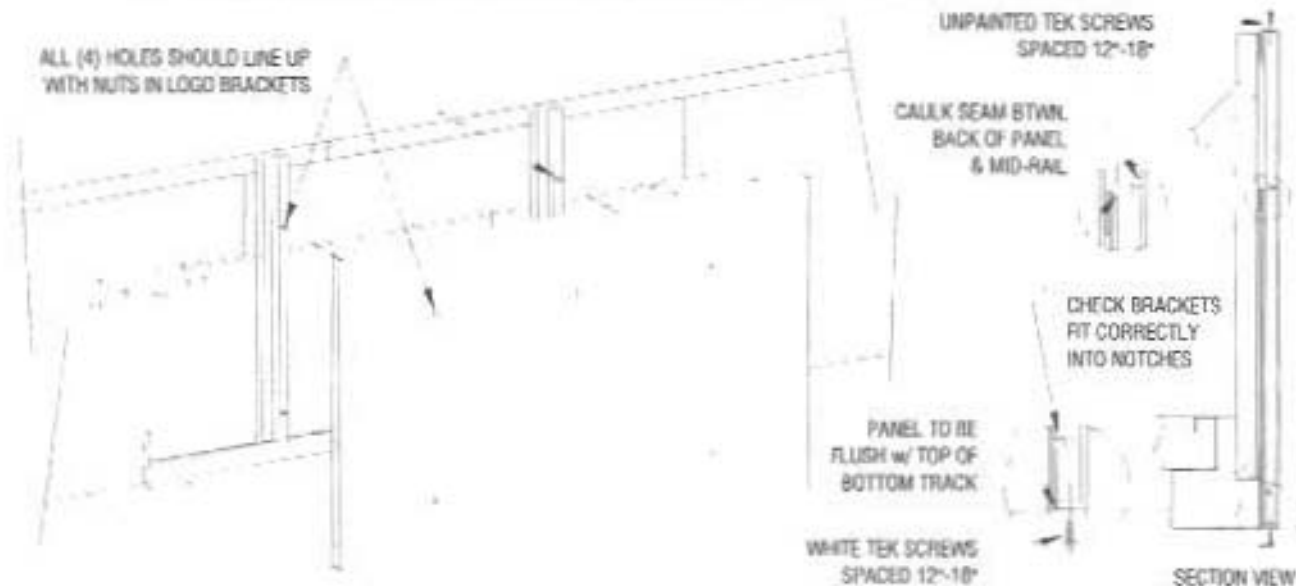

~~9. Install Curved Yellow ACM Panels~~

- On the ground, bend flanges of the panels to the final shape (NOTE: bend below curve is reverse).
- **IMPORTANT:** Back of panel must be clean and dry before attaching end caps / joint straps.
- Attach left/right end caps on any sections that terminate at either the corners or Pecten panels.
 - o Ensure the routed groove in the end cap is as tight to the edge of the panel as possible. Use very light pressure until positioned correctly then press firmly down on VHB tape.
 - o **DO NOT** bend the top flange of the end cap until after the panel has been installed.
- Attach joint-straps to the left edge of any panels that share a seam with another yellow panel.
 - o Joint strap should be centered over edge of panel.
- Set panels in position. Butt panels tight against corners & Pecten panels, but leave a 1/8" gap at joints between curved panels. Fasten bottom flange only using white TEK screws every 12"-18".
- Install the upper panel mounting clips as shown (4 per 2.7M panel & 2 per 1.35M panel). Push the panel against canopy and at the same time pull the bracket toward the front of panel. Fasten through both the top flange of the curved panel and the bracket using (2) unpainted TEK screws.
- For the last piece measure distance to the corner panel and subtract 1/8" to allow for proper gap. Trim the edge furthest from the corner. Panels should **NOT BE SHORTER** than 1.35M (53-1/8").