

Demolition Notes

- | | | |
|--|---|--|
| 1 Remove existing door, frame and blocking. Prep opening for infill wall. Save door for possible re-use. | 7 Remove and store existing ceiling tile, re-install as required. | 13 Remove wall framing and prep wall for relocated door. |
| 2 Remove existing wall and prep opening for new door. | 8 Prep wall for replacement panel. Use salvaged panels from other locations. | 14 Remove existing door, frame and blocking. Store door for reuse. |
| 3 Remove existing wall. | 9 Remove existing window, demo wall for new overhead door system. | 15 Remove existing open shelving. Patch wall and prep for new paint. |
| 4 Remove existing carpet, backing and accessories. | 10 Create opening in exterior wall for ductwork penetrations. | 16 Remove existing electrical conduit back to junction box, sub panel or as required by electrical code. |
| 5 Remove plumbing fixtures. Cap all un-used supply and waste lines at penetration. | 11 Remove existing light fixtures and overhead wiring as req'd. | 17 Remove flooring and concrete as required to accommodate new plumbing. |
| 6 Remove existing countertops, cupboards and damaged drywall as required. Prep wall for new paint. | 12 Remove damaged wall panels. Replace with salvaged panels from other locations. | 18 Remove wood framed storage mezzanine above ceiling. |




20 Demolition Plan
0 4 12 24



10 Existing Conditions Plan
0 4 12 24

--- wall construction to be demolished or removed
= interior or exterior wall construction to remain

project name
COMNAV
project location
430 Riverside Street
Portland, Maine

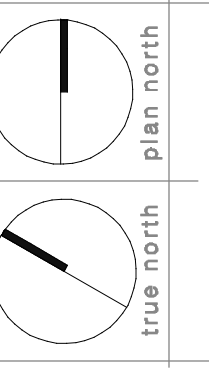

SUBMITTED FOR BUILDING PERMITS
02/17/2012

date
February 17, 2012
scale
1/8" = 1'-0"
project #
2011-016
drawing title
Exisit. Conditions & Demolition Plans
drawing number
E101