



- SPECIFIC REMOVALS NOTES:**
- 1 VACUUM OR BLOW CLEAN UNDERSIDE OF ROOF AND ROOF STRUCTURE, WALL STRUCTURE, AND WALL SURFACES THROUGHOUT WAREHOUSE. WASH DOWN INTERIOR LINER PANEL THROUGHOUT WAREHOUSE. PRESSURE WASH CONCRETE SLAB THROUGHOUT WAREHOUSE.
 - 2 REMOVE/MODIFY A PORTION OF EXTERIOR WALL ASSEMBLY AS REQUIRED FOR THE INSTALLATION OF NEW WINDOW ASSEMBLY. REFERENCE NEW WORK PLAN FOR MORE INFORMATION.
 - 3 REMOVE/MODIFY PORTION OF CMU WALL ASSEMBLY AS REQUIRED FOR INSTALLATION OF DOOR ASSEMBLY. REFERENCE NEW WORK PLAN FOR MORE INFORMATION.
 - 4 REMOVE/MODIFY A PORTION OF GWB WALL ASSEMBLY AS REQUIRED FOR INSTALLATION OF DOOR ASSEMBLY. REFERENCE NEW WORK PLAN FOR MORE INFORMATION.
 - 5 REMOVE DOOR AND DOOR FRAME ASSEMBLY, COMPLETE.
 - 6 REMOVE COUNTERTOP AND BASE CABINET ASSEMBLY, COMPLETE.
 - 7 REMOVE WALL CABINET ASSEMBLY, COMPLETE.
 - 8 REMOVE PLUMBING FIXTURE. CAP PIPING WITHIN WALL/FLOOR ASSEMBLY. REFERENCE PLUMBING DOCUMENTS FOR MORE INFORMATION.
 - 9 REMOVE FLOOR FINISHES AND WALL BASE TO EXTENTS INDICATED ON PLAN. PREPARE CONCRETE SLAB FOR NEW FLOORING SYSTEM PER FLOOR FINISH MANUFACTURER'S RECOMMENDATIONS.
 - PROVIDE SANDING AND/OR SAND BLASTING AS RECOMMENDED BY FLOOR FINISH MANUFACTURER.
 - REFERENCE ROOM FINISH SCHEDULE & FLOOR FINISH PLAN FOR MORE INFORMATION.
 - PROVIDE LEVELING COMPOUND AND/OR PATCHING MATERIAL AS REQUIRED.
 - 10 REMOVE WOOD STAIR ASSEMBLY, COMPLETE.
 - 11 REMOVE AND SALVAGE INTERIOR METAL LINER PANEL ASSEMBLY, FULL HEIGHT.
 - 12 REMOVE EXHAUST FAN ASSEMBLY, COMPLETE.
 - 13 REMOVE METAL RAILING SYSTEM, COMPLETE.
 - 14 REMOVE AND SALVAGE ELECTRICAL COMPONENTS FOR RELOCATION. REFERENCE ELECTRICAL DOCUMENTS FOR MORE INFORMATION.
 - 15 PREPARE CONCRETE SLAB FOR NEW FLOORING SYSTEM PER FLOOR FINISH MANUFACTURER'S RECOMMENDATIONS.
 - PROVIDE SANDING AND/OR SAND BLASTING AS RECOMMENDED BY FLOOR FINISH MANUFACTURER.
 - REFERENCE ROOM FINISH SCHEDULE & FLOOR FINISH PLAN FOR MORE INFORMATION.
 - PROVIDE LEVELING COMPOUND AND/OR PATCHING MATERIAL AS REQUIRED.
 - 16 REMOVE COUNTERTOP AND SINK ASSEMBLIES. EXISTING CABINETS TO REMAIN. COUNTERTOP AND SINK ASSEMBLIES TO BE REPLACED - REFERENCE NEW WORK FLOOR PLAN FOR MORE INFORMATION.
 - 17 REMOVE LOUVER(S) - REFERENCE NEW WORK FLOOR PLAN FOR INFILL INFORMATION.
 - 18 REMOVE GWB WALL FINISHES ALONG EXTERIOR WALL ASSEMBLY. REFERENCE NEW WORK FLOOR PLAN FOR INFILL INFORMATION.
- GENERAL NOTES:**
1. PREPARE ALL METAL DOORS AND METAL DOOR FRAMES FOR NEW PAINT FINISHES PER MANUFACTURER'S RECOMMENDATIONS. REFERENCE ID-SERIES AND SPECIFICATIONS FOR MORE INFORMATION.
 2. REMOVE ALL "NOT AN EXIT" SIGNS FROM ALL DOORS.



CWS ARCHITECTS

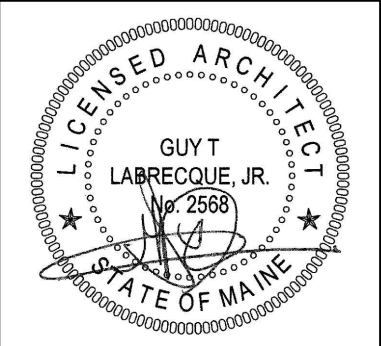

CWS ARCHITECTS
ARCHITECTURE | INTERIOR DESIGN
434 CUMBERLAND AVENUE
PORTLAND, MAINE 04101
P: 207.774.4016
F: 207.774.4016
WWW.CWSARCH.COM

DESIGNER

OWNER

UNITIL

6 LIBERTY LANE WEST
HAMPTON, NEW HAMPSHIRE
03842

PROJECT

NORTHERN UTILITIES, INC.
FIT-UP

400 RIVERSIDE INDUSTRIAL PARKWAY
PORTLAND, MAINE 04101

DRAWING


ENLARGED AREA "A"
FIRST FLOOR
REMOVALS PLAN

REVISIONS

DRAWING NUMBER

AD1.11

SCALE: 1/8" = 1'-0"
DATE: 04/17/15

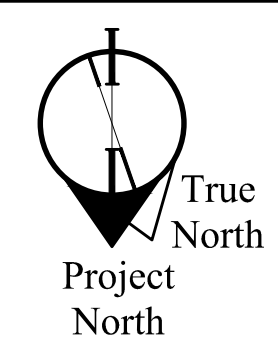

A5 ENLARGED AREA "A" - FIRST FLOOR REMOVALS PLAN
REFERENCED FROM: SCALE: 1/8" = 1'-0"