
▼ Attach string line from top of level landing to point where ramp will end.

▼ Bolt Module #4 to landing with 3/8"x 4" carriage bolts. Match module slope to string.

◆ FASTEN ERS

Attach cross support for Module #4 as shown in detail 2.

▼ Cross supports for the junction of Modules #4 and #5 will be attached to the 4x4 at the junction of Modules #2 and #3.

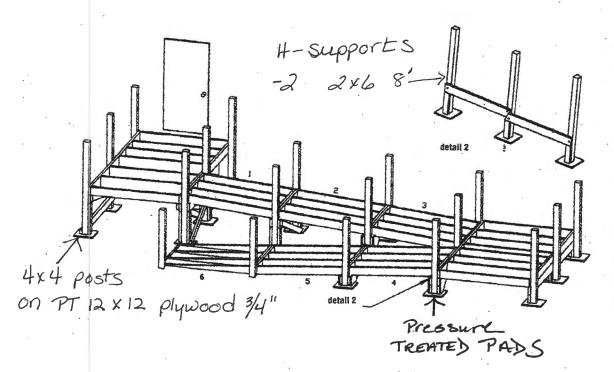

Note: The same options for transition to the ground are used for this design. Guardrail/handrail options are also the same except the inside guardrail on the lower portion of the ramp will be attached to the center 4x4's.

Between modules 3 & 4 some 2x2x30'spindles will need to be screwed in place from inside the ramp.

COMPONENT MODILES MATERIA 1) Large Landing 8x5: -2 216 -4 2x6 10° 7-12168 -5 5/4 x 6 14'
Decking 1 Small Landing -4 216 10' -5 5/4 x6 10' Decking -2 2×6 10' 12x6 Decking