


**7**

**INSTALL PATIO DOOR - CONTINUED**


**T-ASTRAGAL FLUSH BOLT STRIKE PLATES (FRENCH DOORS ONLY)**

To install the T-Astragal flush bolt strike plates, follow the instructions that came with the product. If they are missing, complete the next four steps, otherwise, skip to section 8, "INSTALL SCREEN SYSTEM."

1. Locate the T-Astragal attached to the edge of the inactive door panel that secures the panel when the door is closed. There are flush bolts at the top and bottom of the T-Astragal.
2. With the inactive door closed, mark where the flush bolts touch the head jamb and sill cap.

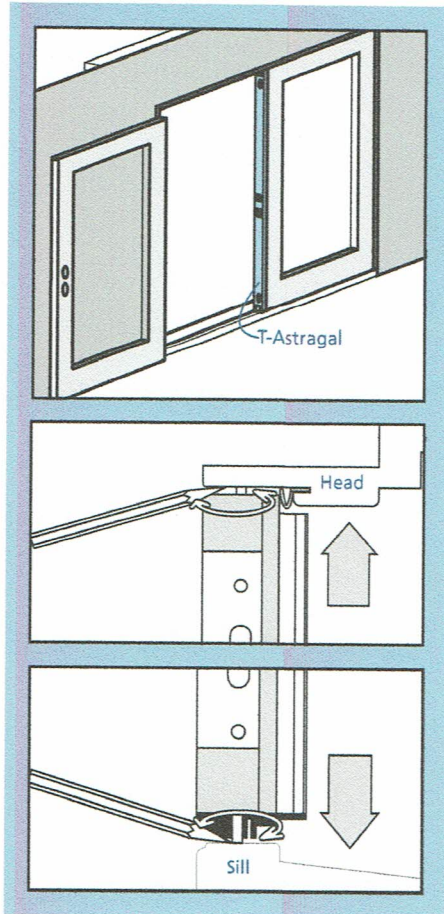

3. Drill 3/8" holes (1" deep) at these spots and apply the strike plates (provided) to the sill cap and head jamb as shown.

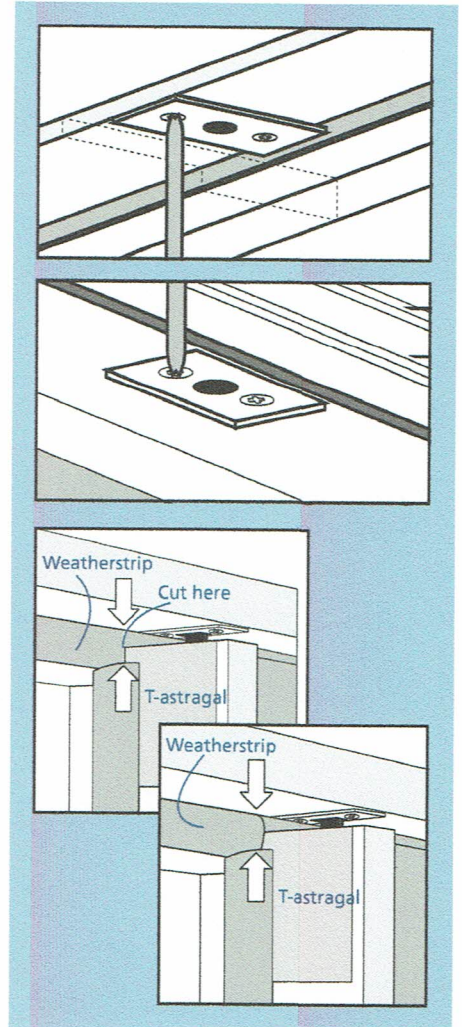

4. With the inactive door closed, mark the head jamb weatherstrip with a sharp utility knife at the edge of the T-Astragal where it touches the weatherstrip. Open the inactive door and cut through the weatherstrip so that when the door is closed the weatherstrip clears the T-Astragal.