



9

COMPLETE INSTALLATION - CONTINUED

2. The foam wedges included with French and Patio doors are used to complete the weatherstrip seal at each bottom corner of the operating door panel(s). Doors will be provided with one of two types of wedges. One has an upturned L-shaped leg (shown) and the other is a simple wedge. For both types, gently pull the weatherstrip flap away from the frame and position the wedge behind the weatherstrip and against the sill so that the thin edge faces the edge of the door as it swings closed. Remove the backing paper and stick the wedge to the frame. Apply a bead of sealant at the intersection of the jambs, brickmoulds, thresholds and floor as shown.

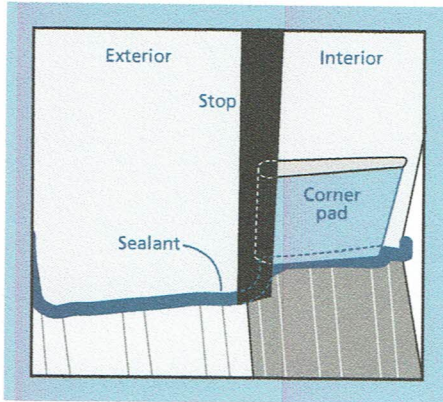

3. Apply sealant at the bottom where the sill meets the frame on both sides. If a sill extender is used, apply a bead of sealant between the sill and the extender. Apply sealant around any mulls at the intersection of the mull and door sill.

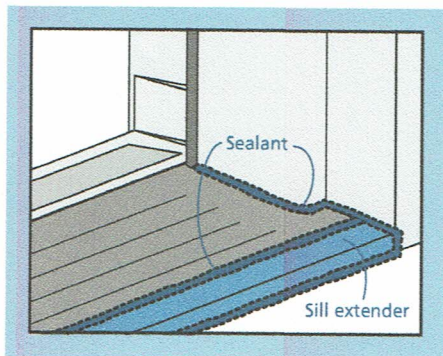

4. Apply sealant around the outside of the door unit between the siding and brickmould and between the brickmould and the jamb. Also apply sealant between the jamb sides and the threshold. Run a bead of sealant, leaving 1" gaps every 2', along the front side of the threshold where it meets the slab/rough opening.

5. Create a continuous air seal on the interior between the rough opening and the frame with low expansion foam.

COMPLETE INSTALLATION

1. Ensure sealant on back dam of the sill pan fully seals to the inside face of the sill. Apply more sealant as necessary.
2. Install lockset hardware per supplied instructions.
3. On the exterior of step-down landings, install support trim underneath the sill where it extends past the landing. Position trim snugly against the bottom of the sill toe.
4. Fill any nail/screw holes in wood and sand smooth.
5. Finish all six sides of the door panel(s) as well as the frame.

AFTER INSTALLATION

- Install exterior wall surface within seven days of installation.
- Maintain gap of 1/4" -3/8" between door frame and final exterior wall surface (siding, stucco, etc.)
- Seal this gap on the sides with backer rod and sealant. For step-down landings, also seal under the door sill with a discontinuous joint. Do not apply sealant on top of the drip cap.
- Remove protective film (if applicable) on glass within one year.
- Protect recently installed units from damage from plaster, paint, etc. by covering the unit with plastic.
- Install any interior trim as desired.

Please visit jeld-wen.com for warranty and care and maintenance information.

Thank you for choosing

