
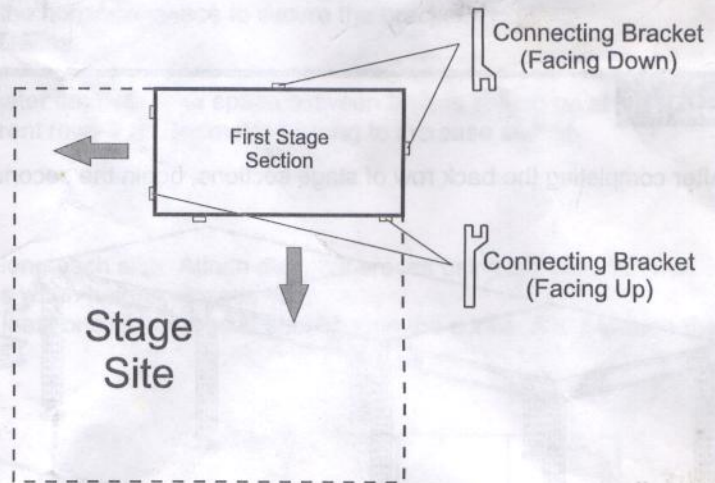
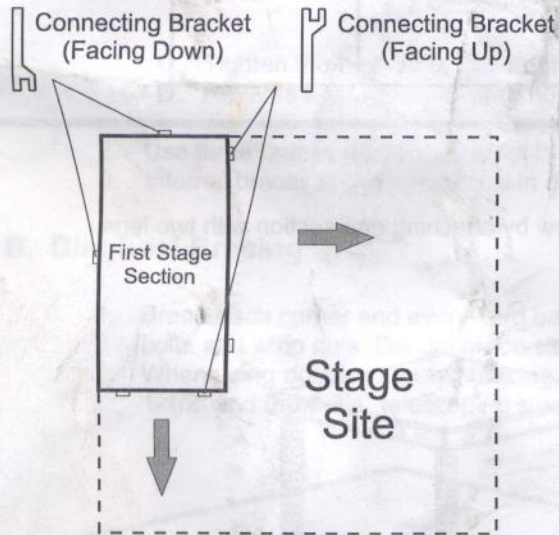


Step 3 Setting the Stage, Continued

- Set first stage section in back left-hand corner of stage site. Any corner may be used as a starting point when using 4' x 4' decks exclusively.
- Align the stage section so that the connecting brackets facing up are inside the starting area and the connecting brackets facing down are outside, as shown in the diagram. As additional stage sections are added, always make sure that the up-facing connecting brackets face toward the stage site. Build stage in the direction(s) indicated by the arrows in the diagrams below and at right.

NOTE: When using 4' x 8' stage sections, adjust the starting point to achieve desired stage position and shape. Up-facing connecting brackets should always face toward the stage site.

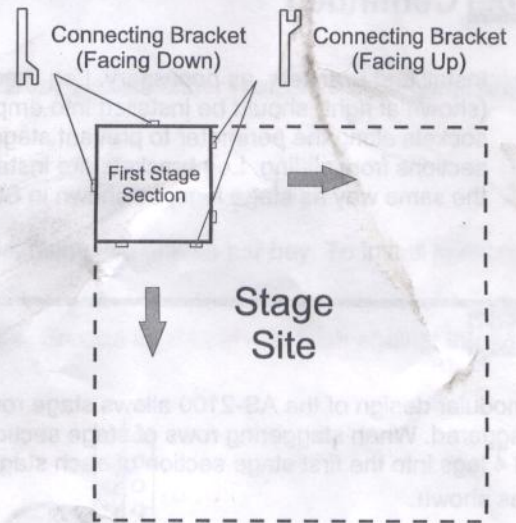

Step 4

- Set the back row of stage sections first.
- Insert two legs into each additional stage section, as shown, and attach to previous section by inserting the connecting brackets into the C-Channel of the adjacent stage section.
- Additional stage sections should be attached so that connecting brackets facing up are inside the starting area.

