SINCE 1966



# EST Fire Alarm System Addition King's Head Tenant Fit Up Portland, ME

Prepared For: Waterfront Maine 14 Main St Box 15 Brunswick, ME 04011 ATTN: Joe Somma

Prepared By: Tim Biron R.B. Allen Co., Inc. 131 Lafayette Road North Hampton, NH 03862

Click Here to View Bill of Material/Index



Reviewed By: Tom DuBois R.B. Allen Co., Inc. 131 Lafayette Road North Hampton, NH 03862 3/17/2014

# EST-EDWARDS SYSTEMS TECHNOLOGY FIRE ALARM SYSTEM (EXISTING) KING'S HEAD

Portland, Maine

(Existing Equipment/Devices Shown in Gray)

# Click on a Description to View Data Sheet

ITEM#	QTY.	<u>ADD</u>	CAT#	DESCRIPTION	DATA SHEET #
1	1	1	iO500	Fire Alarm Control Panel  FIRE ALARM CONTROL PANEL (Existing) Includes: Surface Mount Enclosure Red Door Main Power Supply RS-232 Serial Communications Card Addressable Loop Driver Card SA-CLA Class 'A' NAC Adapter (2) Notification Appliance Circuits	85005-0131
	2	2	12V17A	18 Ah Batteries	85010-0127
2	1	1	RLCD RA-ENC1	Fire Alarm Annunciator Remote Fire Alarm Annunciator Remote Annunciator Enclosure	85005-0128 85005-0128
3	13 145 146 1 0 7 18 3 1 3 9	3 1 3 1 1 1 1 0 0	SIGA-278 SIGA2-PS SIGA-SB SIGA2-HFS SIGA2-COS SIGA-CT1 SIGA-CT2 SIGA-SD SD-Txx SD-Trk SIGA-CR	Intiating Devices  Addressable Pull Station - Double Action Addressable Photoelectric Smoke Detector Smoke Detector Base Addressable Heat Detector Carbon Monoxide Detector Addressable Single Monitor Module Addressable Single Monitor Module Addressable SuperDuct Duct Smoke Duct Smoke Sampling Tube (xx-inch Length to Suit) Remote Test Stations for Duct Detectors Addressable Control Relay	85001-0279 85001-0619 85001-0620 85001-0622 85001-0241 85001-0241 85001-0584 85001-0584 85001-0584 85001-0584
4		2 6 1 2	G1RF-VM G1RF-HDVM BPS6A 12V6.5A	Indicating / Miscellaneous Devices Genesis Strobe Unit (Adjustable Candela) Genesis Horn/Strobe Unit (Adjustable Candela) Remote Fire Alarm Booster Panel 7.2 Ah Batteries	85001-0573 85001-0573 85005-0125 85010-0127

# **Supporting Documentation**

# **Click on a Document to View Content**

System Descriptive Narrative

System Sequence of Operation Matrix

System Warranty

5

Fire Alarm Control Panel Battery Calculations

Fire Alarm Booster Panel Battery Calculations

Appliance Circuit Voltage Drop/Max Length Calculations

Fire Alarm System Floor Plan

Fire Alarm System Riser Diagram

# iO500 Addressable Fire Alarm System King's Head Tenant Fit Up Portland, ME

# Click Here to Return to Bill of Material/Index

# System Narrative

# In the event of an alarm from an actuated device, the following shall

**OCCUT:** (Devices reporting an alarm: Manual Station, Smoke, or Waterflow Switch)

- 1) Notify the Portland Fire Department via the Existing Radio Master Box;
- 2) Activate the exterior Strobe/Beacon
- 3) If Waterflow Alarm, activate exterior waterflow bell
- 4) Sound a Code 3 Temporal on all Horn Circuits
- 5) Flash all strobe appliance circuits in a synchronized manner

# In the event of a supervisory condition from an actuated device, the

**following shall occur:** (Devices reporting as supervisory: Tamper Switch, Sprinkler Supervisory Switch)

- 1) Notify the Portland Fire Department via the Existing Radio Masterbox.
- 2) Annunciate audibly, visually, and in plain english the active initiating device at the fire alarm control panel.

# In the event of a system trouble report, the following shall occur:

1) Annunciate audibly, visually, and in plain english the active initiating device at the fire alarm control panel.

# **SEQUENCE OF OPERATION MATRIX**

	Alarm Signal to E:	Annunciate at Fire Department via	Acivate Evaluate Annunciator	Activate Ex.	Activate Ext	Aerior Waterflow Bell
System Inputs	Α	В	С	D	Е	System Inputs
System Waterflow	Х	Х	Х	Х	Х	System Waterflow
System Tamper Switch		х				System Tamper Switch
Low Water Pressure Switch		х				Low Water Pressure Switch
Manual Pull Stations	х	х	х	x		Manual Pull Stations
Area Smoke Detector	x	х	x	x		Area Smoke Detector
Area Heat Detector	x	x	x	x		Area Heat Detector
Area Duct Smoke Detector	х	x	x	x		Area Duct Smoke Detector
Fire Alarm - AC Failure		x				Fire Alarm - AC Failure
Fire Alarm - Low Battery		х				Fire Alarm - Low Battery
Signal Line Open Circuit		х				Signal Line Open Circuit
Signal Line Ground Fault		х				Signal Line Ground Fault
Horn/Strobe Circuit		х				Horn/Strobe Circuit
Open Horn/Strobe Circuit Ground		х				Open Horn/Strobe Circuit Ground
System Ground Fault		x				System Ground Fault
	Α	С	D	Е	F	

SINCE 1966

NE 1-800-258-7264 FAX (603) 964-8885

P.O. Box 770 131 Lafayette Rd. No. Hampton, NH 03862 (603) 964-8140

R.B. Alk

# Service and Warranty

R.B. Allen Co., Inc. is a UL Certified ISO 9001 registered Fire Alarm Distributor since 1966 with offices located in North Hampton, NH and Woonsocket, RI. The service policies of R.B. Allen Company are no charge to the customer for warranty work including parts and labor for one (1) year from the time of final acceptance.

R.B. Allen Company warranty applies only to the equipment it provides and does not cover defective wiring or equipment provided by the Electrical Contractor.

Service calls resulting from acts of nature, acts of vandalism, or acts which are beyond the control of the equipment manufacturer are excluded under the guarantee and shall be considered a billable call.

R.B. Allen Company factory trained and certified technician will provide job site supervision during installation of the system and perform final connections, testing and adjusting of the Fire Alarm System. They also will instruct the owner's personnel on the operation and maintenance of the fire alarm system.

Click Here to Return to Bill of Material/Index

# iO500 Addressable Fire Alarm System King's Head Tenant Fit Up Portland, ME

# Click Here to Return to Bill of Material/Index

#### **BATTERY STANDBY CALCULATIONS - Fire Alarm Control Panel**

			Quie	escent	Alarm	l otal	l otal	
QTY	Model #	Description	Curi	rent	Current	Quiescent	Alarm	
1	iO500	Base Panel	0.1	72000	0.267000	0.172000	0.267000 Ar	mp
1	SA-232	Serial Communications Card	0.0	13000	0.020000	0.013000	0.020000 Ar	mp
1	SLC1	Primary Loop Circuit	0.0	55000 *	0.125000 *	0.055000	0.125000 Ar	.mp
1	SLC2	XAL250 Loop Expander	0.0	60000 **	0.125000 **	0.060000	0.125000 Ar	.mp
1	SA-CLA	NAC Class 'A' Adapter	0.0	003000	0.060000	0.003000	0.060000 Ar	.mp
80	SIGA2-PS	Addressable Smoke Detector	0.0	00045	0.000045	0.003600	0.003600 Ar	mp
					Total	0.3066	1A <b>3006.0</b>	mp
			Total Quiescent x Ti	me Requi	red (24 Hours):	7.3584	Al	h
			Total Alarm x Tim	e Require	d (15 Minutes):		<b>0.15015</b> Al	.h
			•	Total Bat	tery Required:		7.50855 Al	h
			Total Battery Required (	+) 20% S <sub>I</sub>	pare Capacity:		9.01026 A	.h

**Battery Supplied:** 18 Ah

<sup>\*</sup> Currents shown are for fully loaded loop (129 Actual = 48.4% Spare Capacity)
\*\* Currents shown are for fully loaded loop (93 Actual = 62.8% Spare Capacity)

# King's Head - Portland, ME

**Booster Power Supply #1 Standby Battery Calculations** 

_												
	G1RF-HDVM (20v)			757	757 G1RF-VM (20		CGF-VMH AB4GT		AB4G	Outcoccat	Alama	
	15cd	30cd	75cd	110cd	15cd	30cd	177cd	Sounder	Sounder	Quiescent	_	
(mA)	88	109	193	188	71	98	429	1.46/31	1.46/24	Current	Current	
Panel										0.0700		
Circuit 1	1		1		2					0.0000	0.4230	
Circuit 2	1	2	1							0.0000	0.4990	
n/a										0.0000	0.0000	
n/a										0.0000	0.0000	
-										0.0700	0.9220	

Remaining % of Ckt Capacity

83.08 %
80.04 %
100.00 %
100.00 %

85.82 % Remaining % Panel

All currents are expressed as mA.

Max current per ckt = 2.5 Amps. Max current per panel = 6.5 Amps.

Total Quiescent Amp x Time Required (24 Hours) 1.680 AmpHr

Total Alarm Amp x Time Required (5 Minutes) 0.077 AmpHr
Total Battery Required 1.757 AmpHr

Battery Supplied 7.2 AmpHr

**NAC Circuit Voltage Drop/Maximum Length Calculations** 

Formulas Used:  $Rt = (D) \times (Rw) / 1000'$ 

 $Vd = (Rt) \times (It)$ 

Substitute for (Rt) and solve for D

 $D = ((4.0) \times (1000)) / ((Rw) \times (lt))$ 

Rt = Total Circuit Resistance

Total

Quiescent

D = Total Circuit Length (Feet)

Rw = Wire Resistance (Ω) per 1000' Pair (Ohms)

VD = Circuit Voltage Drop (Max allowed is 4.0Vdc)

Total

Alarm

Notes: 1 NAC Circuit terminal voltage 24Vdc.

- 2 A maximum allowable voltage drop of 4Vdc will provide a minimum of 20 Vdc per circuit.
- 3 Current values listed per device are based on 20Vdc.

#### STROBE CIRCUIT MAX WIRE LENGTH CALCULATION

	G1RF-HDVM (20v)		757	G1RF-V	'M (20v)	CGF-VMH	AB4GT	AB4G	Total	Ω per 1000' Pair	
	15cd	30cd	75cd	110cd	15cd	30cd	177cd	Sounder	Sounder	Circuit	12 per 1000 Pari
	88	109	193	188	71	98	429	1.46/31	1.46/24	Current	14AWG (5.2)
Circuit 1	1	0	1	0	2	0	0	0	0	0.4230	1818.51 Ft
Circuit 2	1	2	1	0	0	0	0	0	0	0.4990	1541.54 Ft
n/a	0	0	0	0	0	0	0	0	0	0.0000	#DIV/0! Ft
n/a	0	0	0	0	0	0	0	0	0	0.0000	#DIV/0! Ft

# iO500 Intelligent Life Safety System









# Overview

The EST iO500 intelligent life safety system offers the power of high-end intelligent processing in a configuration that delivers an uncomplicated solution for small to mid-sized applications. With intelligent detection, electronic addressing, automatic device mapping, optional Ethernet® connectivity, and a full line of easily-configured option cards and modules, this flexible system offers offers versatility that benefits building owners and contractors alike.

The iO500 provides one Class A or Class B analog device loop that supports up to 250 device addresses. A second 250-point loop may be added to the iO500 to expand total system capacity to up to 500 device addresses. The panel includes four NACs that may be wired for either Class A or Class B operation.

The iO500 supports a wide range of accessories and related equipment, including:

- Signature Series intelligent modules, detectors, and bases
- R-Series remote annunciators
- option cards that expand system capacity and extend system capabilities.

## **Features**

- Comes standard with one loop (expandable to two) that supports up to 250 (expandable to 500) intelligent devices: each iO500 loop supports up to 125 detectors and up to 125 modules.
- Supports Signature Series intelligent modules and detectors
- Four Class B NACs or two Class A NACs.
- Form C contacts for alarm and trouble, Form A for supervisory
- Electronic addressing with automatic device mapping
- Optional Ethernet port for diagnostics, programming and a variety of system reports
- Two programmable switches with LEDs and custom labeling
- Supports Genesis horn silence over two wires and UL 1971-compliant strobe synchronization
- Supports up to eight serial annunciators, (LCD, LED-only, and graphic interface).
- 1,000 event panel history log
- Can use existing wiring for most retrofit applications
- Upload/download remotely or locally
- Two-level maintenance alert reporting
- · Pre-alarm and alarm verification by point
- Adjustable detector sensitivity
- 4 x 20 character backlit LCD display

DATA SHEET 85005-0130

Not to be used for installation purposes. Issue 4.1

# Application

The iO500 life safety system is a powerful intelligent solution for small to mid-sized buildings. Advanced analog technology delivers the benefits of flexible system installation, while a clean and easyto-operatate user interface makes panel operation and system maintenance quick and intuitive.

#### The smart choice

Signature Series electronic addressing eliminates the tedium of setting dipswitches, and automatic device mapping ensures that each device resides on the system at its correct location. Meanwhile, innovative programming allows the designer to customize the system to precisely suit the needs of the building owner.

#### Flexibility built right in

Two fully-programmable front panel switch/LED combinations provide an added measure of flexibility. Their slide-in labels take the mystery out of custom applications, and present a clean finished appearance.

#### Perfect for retrofits

The iO500 is particularly well-suited to retrofit applications. All connections are made over standard wiring - no shielded cable required. This means that in most situations existing wiring can be used to upgrade a legacy control panel to iO500 technology without the expense or disruption of rewiring the entire building.

#### Signals with a difference

iO500 NACs are configurable to fully support the advanced signaling technology of Edwards Genesis and Enhanced Integrity notification appliances. These devices offer precision synchronization of strobes to UL 1971 standards. For Genesis devices, enabling this feature allows connected horns to be silenced while strobes on the same two-wire circuit continue to flash until the panel is reset.

#### Clear-cut remote annunciation

Remote annunciation is a strong suit of the iO500. Up to eight annunciators can be installed on a single system. Compatible annunciators include a range of LED and LCD models that provide zone or point annunciation, as well as common control capabilities.


The iO500 also supports graphic annunciation with optional graphic annunicator interface modules. Each interface provides common control, indicators, and LED drivers. Consult the Ordering Information section for details.

#### A complete line of accessories

The iO500 life safety system is supported by a complete line of intelligent detectors, modules and related equipment. Consult the Ordering Information section for details.

# Operation

The front panel provides an easy-to-use operator's interface, as well as all the necessary controls for front panel programming. A large back-lit 80-character LCD displays system status, event details, and programming prompts. Large tactile control buttons are easy to see in low light conditions, and bright

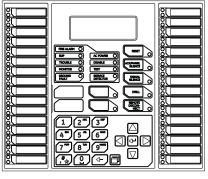

multi-color LEDs offer at-a-glance status indication.

#### **Control buttons**

Button	Description
Reset	Initiates a system reset.
ACK/Panel Silence	Silences the panel and remote annunciators during an active trouble, supervisory, or alarm event and acknowledges new event activations.
Signal Silence	Alarm mode: Silences active notification appliances. Pressing Signal Silence a second time turns NACs back on.
Drill	Initiates a drill confirmation. Pressing drill a second time turns off the drill function.
Remote Disconnect	Dialer: Disables or enables dialer.  Dialer set to modem only: Disables or enables the common alarm relay.
Left arrow	Display mode: Moves the cursor to the left.  Menu mode: Toggles between programming selections.
Right arrow	Display mode: Moves the cursor to the right.  Menu mode: Retrieves a programming option's sub menu and toggles between a programming option's selections.
Up arrow	Display mode: Advances to the previous event.  Menu mode: Moves the cursor up.
Down arrow	Display mode: Advances to the next event.  Menu mode: Moves the cursor down.
Enter	Display mode: Displays selected event details.  Menu mode: Retrieves a programming option's sub menu or jumps to the Save function in the menu.  Entry mode: Enters the selected data into the system.
Cancel	Display mode: Exits the detailed information display.  Menu mode: Exits the current menu level.  Entry mode: Clears the current entry.
Menu	Display mode: Enters the menu mode Menu mode: Exits menu mode
Space	Enters a space, such as a space between words.
Alphanumeric keypad	Entry mode: Pressing a button once enters the number on the button. Pressing the button twice enters the secondary value.
Programmable buttons	These buttons can be programmed to control outputs, disable devices or unlatch system outputs. The buttons can be labeled with a slip-in insert.

DATA SHEET **85005-0130** Page 2 of 8

#### **System LEDs**

Led	Description
Fire Alarm	Red LED. On steady when there is an active alarm.
Trouble	Yellow LED. Flashes when there is a fault on a monitored circuit or system component, or when a circuit is disabled.
Sup	Yellow LED. On steady when there is an active supervisory event.
Ac Power	Green LED. On when the panel has AC power.
Disable	Yellow LED. Double-flashes when there is a disabled circuit, alarm relay, or remote annunciator.
Ground Fault	Yellow LED. On steady during an active ground fault.
Test	Yellow LED. Flashes when performing an audible walk test. Steady indicates a silent test.
Monitor	Yellow LED. On steady when there is an active monitor event.
Service Detector	Yellow LED. Indicates that detector needs servicing.
Signal Silence	Yellow LED. On steady indicates that NAC circuits are turned off but the panel is still in alarm.
Remote Disconnect	Yellow LED. On steady indicates that the dialer is disabled or that the alarm relay is enabled or disabled when the dialer is set to modem only.
Drill	Yellow LED. Indicates that the panel is in drill.
Reset	Yellow LED. Indicates that the panel is resetting.
Panel	Yellow LED. Indicates that the panel has been
Silence	silenced during an active trouble, supervisory, or
	alarm event and indicates that new event activations have been acknowledged.
User Keys	Yellow LED. Programmable.

#### **Panel Operation Options**

Language	English or French
Marketplace	U.S. or Canada
AC fail delay	Off: Off-premise notification of an AC power failure is immediate.  1 to 15 hours: Delays the off-premise notification of an AC power failure by the time period selected.
Zone resound	On: NACs resound each time a device in the zone goes into alarm even if they were silenced Off: Inhibits the NACs from turning on again (after they were silenced) when a second device in the zone goes into alarm.
Reset inhibit after NACs turn on	Off: Panel reset is operational immediately.  1 minute: Panel reset is inhibited for one minute.
Auto signal silence	Off: Allows immediate silencing of signals from an off-normal condition using the Signal Silence button 5 to 30 minutes: Delays the silencing of signals from an off-normal condition by disabling the Signal Silence button for the time period selected.
Day start	Start time for daytime sensitivity
Night start	Start time for nighttime sensitivity
Date	U.S.: MM/DD/YYYY, Canada: DD/MM/YYYY
Sounder Base	Six configuration settings
Mapping	Disabled: Device mapping is not available Enabled: Device mapping is available
LCD banner	Banner text for line one and line two. Each line is capable of up to 20 characters.
Event notification	Zone: When a device is a member of a zone, only the zone information is sent to the LCD display, LEDs, printer, and dialer.  Zone/device: Zone information is sent to the LCD display and LEDs. Device information is sent to the printer and dialer.  Device: Only device information is reported.

# Programming

iO500 life safety systems are simple to set up, yet also offer advanced programming features that put these small building panels into a class of their own. The auto programming feature quickly gets the panel operational using factory default settings. Basic zone and point settings can be programmed easily through the front panel interface, so the system is up and running in no time.

For more advanced system configuration and correlation groups programming, iO500 systems interface to a PC running compatible iO-CU software. This option offers full system configuration in the familiar Windows® operating environment. Connection is typically made to a laptop through the panel's optional RS-232 communications port, which can also be used to connect a system printer.


Among the many innovative features of iO500 control panels is the optional network card. This module provides a standard 10/100 Base T Ethernet® network connection that permits access to the control panel from any remote location with the correct communications protocols. The connection can be used to download to the panel from the iO-CU, or upload and view system reports using the iO-CU.

Available system reports include:

- Correlation groups
- Device maintenance
- Internal status
- System status
- Dialer

- Device details
- History
- System configuration
- Walk test

# **Dimensions**

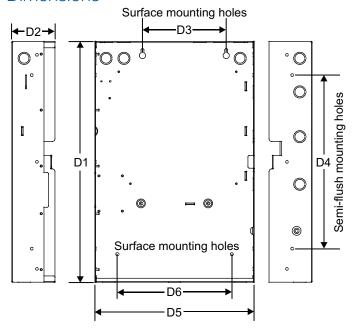

	Panel dimensions, in (cm)								
	Model	D1*	D2	D3	D4	D5*	D6		
	:0500	28.0	3.85	9.0	22.0	15.75	10.25		
iO500	(71.1)	(9.8)	(22.8)	(55.8)	(40.0)	(26.0)			

<sup>\*</sup> Add 1-1/2 in. (3.81 cm) to D1 and D5 dimensions for trim kit.

# Wiring & Configuration

#### Notification appliance circuits (TB2)

iO500 control panels come equipped with four notification appliance circuits. Each circuit can be individually configured for continuous, temporal, synchronized, latching, and coded output.

Circuit spec	Circuit specifications					
Circuit Type	4 Class B or 2 Class A, 2.5 amps each					
Voltage	24 VFWR					
Current	6.0 A total, 2.5 A max. per circuit at 120/230 VAC 60 Hz 5.0 A total at 230VAC 50 Hz, 2.5 A max. per circuit					
Impedance	26 $\Omega$ total, 0.35 μF max					
EOLR	15 K Ω, ½ W					

#### 




NAC4

NAC4+

 $\bigcirc$ 

Class B wiring

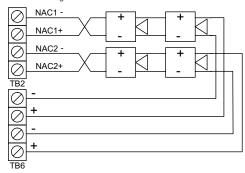

Marking indicates output signal polarity when the circuit is active. Polarity reverses when the circuit is not active. Wire notification appliances accordingly. Notification appliance polarity shown in active state.

FOI R

#### **Auxiliary & Smoke power outputs (TB3)**

The control panel provides two auxiliary power outputs which can be used for powering ancillary equipment such as remote annunciators and two wire smoke detectors. Aux 2 can be software selected to operate continuous. The circuit is supervised for shorts and grounds.

Note: For a complete list of devices that can be connected to this circuit, refer to the iO Series compatibility list (p/n 3101064).


Circuit specifications					
Circuit voltage range	21.9 to 28.3 V				
Resettable circuit	24 VDC nominal at 500 mA				
(Aux power 2)					
Continuous circuit	24 VDC nominal at 500 mA. Use this circuit for				
(Aux power 1)	powering two-wire smoke detectors.				

Note: Any current above 0.5 amp connected to both Aux 1 and 2 will reduce the total available NAC power by that amount.

#### **Signature Device loop**

The system provides one device loop circuit that can be used with any mix of Signature Series detectors and modules. The loop circuit is supervised for opens, shorts, and grounds.

Circuit specifications						
Device loops	1 loop, expandable to 2, Class A or B, each loop supporting up to 250 device addresses					
Communication line voltage	Maximum 20 V peak-to-peak					
Circuit current	0.5 A max					
Circuit impedance	66Ω total, 0.5 μF, max					
Isolators	64 maximum					




#### **Annunciator loop (TB4)**

The control panel provides a connection for up to eight serially driven and supervised remote annunciators.

#### **Circuit specifications**

Device loops	Class B (Style Y) or Class A (Style Z)
Circuit voltage	2.55 V
Circuit current	30 mA max
Circuit	Up to 8 annunciators or 4000 feet
impedance	



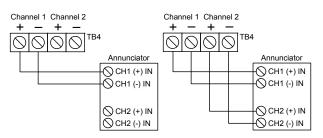

#### Alarm, trouble, and supervisory relay (TB3)

The trouble relay is normally-open, held closed, and opens on any trouble event or when the panel is de-energized. The supervisory relay is normally-open, and closes on any supervisory event. The alarm relay changes over on any alarm event.

#### **Relay specifications**


	Alarm	Trouble	Supervisory
Type	Form C		Form A
Voltage	24 VDC at 1 A resistive	24 VDC at	1 A resistive

Relay circuits can only be connected to power-limited sources.

# **Option Cards**

iO500 panels are supported by a complete line of modules and related equipment that enhance performance and extend system capabilities. Option cards plug directly into the control panel main circuit board or are connected to it with a ribbon cable. After installation, terminals remain accessible. The cabinet provides ample room for wire routing, keeping wiring neat at all times.

#### **SA-ETH Ethernet Interface Card**

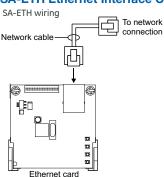

The SA-ETH card provides a standard 10/100 Base T Ethernet network connection for connecting to an intranet, a local network, or the Internet. The card can be used to download configuration programming from the iO-CU to the panel over the network.

The Ethernet card is installed on the plastic assembly and connects to the main circuit board via a ribbon cable.


# SA-ETH specifications Ethernet 10/100 Base T Operating environment Temperature 32 to 120°F (0 to 49°C) Humidity 0 to 93% RH, noncondensing at 90°F

(32°C)

# **XAL250 Loop Expander Card**

The XAL250 Loop Expander Card provides an additional Signature Series device loop on the control panel. The card expands the control panel's device capacity to 500 total device addresses, 250 per loop. The card is compatible with Class B or Class A wiring. It is compatible with iO500 control panels only.


The loop expander card connects to connector J7 on the main circuit board.



XAL250 specifications	
Device addresses on loop	125 detectors and 125 modules
Wiring	Class B (Style Y) or Class A (Style Z)
Operating voltage	20 V peak-to-peak
Operating current	0.5 A total
Circuit impedance	66 Ω, 0.5 μF, max
Terminal rating	12 to 18 AWG (0.75 to 2.5 sq mm)
Operating environment	
Temperature	32 to 120°F (0 to 49°C)
Humidity	0 to 93% RH, noncondensing at 90°F (32°C)

#### **SMK Smoke Power Converter**


The SMK Smoke Power Converter Module provides a regulated power source for two-wire smoke circuits connected to a Signature data circuit. The SMK monitors the operating power from the power supply. When power begins to degrade, the SMK provides the necessary operating voltage to the two-wire smoke detection circuits.

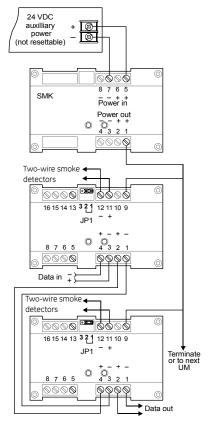

SMK specifications	
Input voltage	21.9 to 28.3 VDC (not resettable)
Output voltage	24 VDC nom. at 200 mA, max., special applications
Ground fault impedance	10 k ohm
Operating environment Temperature Humidity	32 to 120°F (0 to 49°C) 0 to 93% RH, noncondensing at 90°F (32°C)
Storage temperature	-4 to 140°F (-20 to 60°C)
Compatible electrical boxes	North American 4 inch square x 2-1/2 in. (64 mm) deep 2 gang box or Standard 4 in. square box 1-1/2 in. (38 mm) deep
Wire size	14, 16, or 18 AWG wire (1.5, 1.0, or 0.75 sq. mm) (Sizes 16 and 18 AWG are preferred)

#### **SA-DACT Dialer**

The SA-DACT provides communications between the control panel and the central station over a telephone line system. It transmits system status changes (events) to a compatible digital alarm communicator receiver over the public switched telephone network. The dialer is capable of single, dual, or split reporting of events to two different account and telephone numbers. The modem feature of the SA-DACT can also be used for uploading and downloading panel configuration, history, and current status to a PC running the iO-CU.

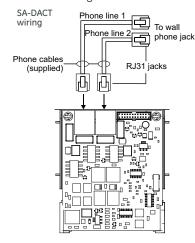

The dialer phone lines connect to connectors on the dialer's main circuit board. Phone line 1 connects to connector J4 and phone line 2 connects to connector J1.

The SA-DACT gueues messages and transmits them based on priority (alarm, supervisory, trouble, and monitor). Activations are transmitted before restorations.


The SA-DACT is installed on the plastic assembly and connects to the main circuit board via a ribbon cable.

<b>SA-DACT</b> specifications	
Phone line type	One or two loop-start lines on a public, switched network
Phone line connector	RJ-31/38X (C31/38X)
Communication formats	Contact ID (SIA DC-05)
Operating environment	
Temperature	32 to 120°F (0 to 49°C)
Humidity	0 to 93% RH, noncondensing at 90°F (32°C)

Compatible DACRs		
Receiver	Models	Formats
Ademco	685	Contact ID
FBII	CP220	Contact ID
Osborne-Hoffman	OH 2000	Contact ID
Radionics	D6600	Contact ID
Silent Knight	9800	Contact ID
Sur-Gard	SG-MLR1, MLR2	Contact ID

#### SA-232 RS-232 interface

The SA-232 card provides an RS-232 interface with iO500 panels. It can be used for connecting a printer to the control panel to print system events. The card also can be used for connecting a computer to download a configuration program from the iO-CU to the control panel.



The RS-232 card is installed on the plastic assembly and connects to the main circuit board via a ribbon cable.

SA-232 specifications	
Operating voltage	Standard EIA-232
Terminal rating	12 to 18 AWG (0.75 to 2.5 sq mm)
Operating environment	
Temperature	32 to 120°F (0 to 49°C)
Humidity	0 to 93% RH, noncondensing at 90°F (32°C)

# **Specifications**

Device loops	1 loop, expandable to 2, Class A or B, each loop supporting up to 250 device addresses
NAC circuits	4 Class B or 2 Class A, 2.5 amps each
Power supply	6.0 A total, 2.5 A max. per circuit at 120/230 VAC 60 Hz
	5.0 A total at 230VAC 50 Hz, 2.5 A max. per
	circuit
	0.5 amps aux power
NAC Operating	24 VDC. NAC minimum voltage: 19.5 VDC @
voltage	20.4 V battery voltage
Loop circuit	20 V peak-to-peak
operating voltage	
SLC Primary power	120 VAC, 60 Hz, 230 VAC 50-60 Hz
Aux Power 1	24 VDC nominal at 500 mA. A SMK module is
(Continuous circuit)	required when using the SIGA-UM module to
	support two-wire smoke detectors.
Aux Power 2	24 VDC nominal at 500 mA
(Resettable circuit)	
Auxiliary output	19 to 25.7 VDC
Base panel	Standby: 172 mA
current draw	Alarm: 267 mA
Panel History Log	1,000 events

Battery placement	iO500 cabinets accommodate up to 18 A/H batteries. Use a external cabinet for larger battery sizes.
Batteries	Batteries must be sealed lead acid type only.  Maximum charging capacity = 26 Ah.
Loop circuit	Maximum loop resistance: $66~\Omega$ . Maximum loop capacitance: $0.5~\mu$ F. Style 4, 6, and 7 wiring. $64$ isolators maximum.
SIGA-UM/SIGA- MAB	1.5 mA (see the UL and ULC compatibility list for for the maximum quantity of detectors per circuit)
Compatibility ID	100
Alarm contact	Form C 24 VDC @ 1 A (resistive load)
Trouble contact	Form C 24 VDC @ 1 A (resistive load)
Supervisory contact	Form A 24 VDC @ 1 A (resistive load)
Environmental	Temperature: 0 to 49°C (32 to 120°F). Humidity: 0 to 93% RH, noncondensing
Terminal rating	All terminals rated for 12 to 18 AWG (0.75 to 2.5 mm²)
Serial communications	Voltage: 2.55 V. Current: 30 mA max
Remote annunciator	8 drops max, RS-485 Class A or B
Input zones	32 max.
Agency Listing	UL, CSFM and ULC

# Ordering Information

Part	Description
O500 Intellig	ent Multi-Loop Analog Systems
O500G	1 Loop system, 500 point capacity, 4 NACs, gray door, surface mount enclosure, 115 Vac, English.
O500G-2	1 Loop system, 500 point capacity, 4 NACs, gray door, surface mount enclosure, 230 Vac, English.
O500GC	Canada only: 1 Loop system, 500 point capacity, 4 NACs, 16-zone LED display, grey door, surface mount, 115 Vac, English.
0500G-F	Canada only: 1 Loop system, 500 point capacity, 4 NACs, 16-zone LED display, grey door, surface mount, 115VAC, French.
0500GD	1 Loop system, 500 point capacity, two-line dialer, 4 NACs, Gray door, surface mount enclosure, 115VAC transformer, English.
iO500GD	1 Loop system, 500 point capacity, 4 NACs, red Door, surface mount enclosure, 115VAC transformer, English.
iO500R-2	1 Loop system, 500 point capacity, 4 NACs, red door, surface mount enclosure, 230VAC transformer, English.
O500RD	1 Loop system, 500 point capacity, two-line dialer, 4 NACs, Red Door, surface mount enclosure, 115VAC transformer, English.
0500RD	1 3 7 1 1 37 7 7 7
	1 Loop system, 500 point capacity, 4 NACs, gray door, surface mount enclosure, 115vac, Spanish.
0500G-2-SP	1 3 7 1 1 37 70 3 7
iO500G-PG	1 Loop system, 500 point capacity, 4 NACs, gray door, surface mount enclosure, 115vac, Portuguese.
iO500G-2-PG	1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2
SA-TRIM2	Flush mount trim, black
Donlooomon	t Electronics
500elec-iO	t Electronics  Replacement electronics kit, complete motherboard and user interface, English
	P Replacement electronics kit, complete motherboard and user interface, Spanish
	G Replacement electronics kit, complete motherboard and user interface, Spanish
	R Replacement electronics kit, complete motherboard and user interface, Portuguese
0000100-10-17	Trippiacement dicentries fut, complete monitorocald and user interface, Canadian Hellon
Option Cards	
SA-DACT	Dual Line Dialer/Modem, supports Contact ID, mounts in cabinet on base plate.
SA-232	Serial Port (RS-232), for connection to printers & computers, mounts in cabinet to base plate
SA-232 SA-ETH	Ethernet Port, Slave, mounts in cabinet on base plate.
	<u> </u>
XAL250	Signature Loop Expansion Module. Adds second loop to iO500 systems, 250 point capacity. Mounts in cabinet on main board.
D16L-iO-2	LED Annunciator module, 16 X 2-LED zones (4 programmable for sup). Mounts in cabinet to right of LCD display for zones 17-32.
D16L-iO-1	LED Annunciator module, 16 X 2-LED zones (4 programmable for sup). Mounts in cabinet to left of LCD display for zones 1-16.
D8RY-iO-2	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to right of LCD display for zones 17-32.
	Modrits in Capinet to right of LOD display for Zones 17-32.
D8RY-iO-1	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory).
D8RY-iO-1	
	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.
Remote Ani	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory).  Mounts in cabinet to left of LCD display for zones 1-16.  nunciators (refer to Data Sheet 85005-0128)
Remote Ani	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory).  Mounts in cabinet to left of LCD display for zones 1-16.  nunciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)
Remote Ani LCD Remote RLCD	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory).  Mounts in cabinet to left of LCD display for zones 1-16.  nunciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.
Remote Ani LCD Remote RLCD RLCD-R	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory).  Mounts in cabinet to left of LCD display for zones 1-16.  nunciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.
Remote Ani LCD Remote RLCD RLCD-R RLCD-C	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory).  Mounts in cabinet to left of LCD display for zones 1-16.  nunciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.
Remote Ani LCD Remote RLCD RLCD-R RLCD-C RLCD-CR	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory).  Mounts in cabinet to left of LCD display for zones 1-16.  Munciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.
Remote And LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Munciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.
Remote And LCD Remote RLCD-R RLCD-C RLCD-C RLCD-CR RLCD-SP RLCD-PG	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Munciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.
Remote And LCD Remote RLCD-R RLCD-C RLCD-C RLCD-CR RLCD-SP RLCD-PG	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Munciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.
Remote And LCD Remote RLCD-R RLCD-C RLCD-CR RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Munciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.
Remote And LCD Remote RLCD-R RLCD-C RLCD-CR RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLCD-C-PG	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Munciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.
Remote And LCD Remote RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLCD-C-PG RLCD-C-SP	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Munciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.
Remote And LCD Remote RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-PG RLCD-C-SP RLCD-C-SP RLCD-C-SP	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Munciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD & Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, common controls and status indicators. White housing. Portuguese.
Remote And LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLED-C-SP RLED-C-SP RLED-C-SP RLED-C-PG RED-C-PG	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  Munciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD. & Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control, add suffix F to model number.
Remote And LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLED-C-SP RLED-C-PG RED-C-PG RED-	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Inunciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese.
Remote And LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLCD-C-PG RLED-C-PG	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  Annunciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control, add suffix F to model number.  Annunciators & Expander (mount to standard 4" square electrical box)
Remote And LCD Remote RLCD RLCD-R RLCD-C RLCD-C RLCD-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLED-C-SP RLED-C-R RLED-C-R RLED-C-R RLED-C-R RLED-C-R RLED-C-R	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Mounts in cabinet to left of LCD display for zones 1-16.  **Mounts in cabinet to left of LCD display for zones 1-16.  **Mounts in cabinet to left of LCD display for zones 1-16.  **Mounts in cabinet to left of LCD display for zones 1-16.  **Mounts in cabinet to left of LCD display for zones 1-16.  **Mounts in cabinet to left of LCD display for zones 1-16.  **Mounts in cabinet to left of LCD display for zones 1-16.  **Remote Annunciators (mount to standard 4" square electrical box)  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control, add suffix F to model number.  **Annunciators & Expander (mount to standard 4" square electrical box)  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing. French.
Remote And LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLED-C-SP RLED-C-R RLED-C-R RLED-C-R RLED-C-R RLED-C	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  Munciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, common controls and status indicators. White housing. Portuguese.  Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control, add suffix F to model number.  Annunciators & Expander (mount to standard 4" square electrical box)  Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing. French.  Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.
Remote And LCD Remote RLCD-R RLCD-C RLCD-C RLCD-CR RLCD-C-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLED-C-SP RLED-C-R RLED-C-R RLED-C-R RLED-C-R RLED-C-R RLED-C	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  Munciators (refer to Data Sheet 85005-0128)  Annunciators (mount to standard 4" square electrical box)  Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  Remote Annunciator, 4X20 LCD. Common Indicators for displaying system status. Red housing.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Spanish.  Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese.  Annunciators & Expander (mount to standard 4" square electrical box)  Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing. Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  Remote Annunciator. Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Gray housing.
Remote And LCD Remote RLCD-R RLCD-C RLCD-C RLCD-CR RLCD-SP RLCD-C-SP RLCD-C-SP RLCD-C-PG RLED-C-PG RLED-C-PG RLED-C-PG RLED-C-PG RLED-C-R RLED-C RLED	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Nunciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Spanish.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  **Remote Annunciator. Zone expander. 24 X 2-LED groups with custom label areas for display of
Remote Ann LCD Remote RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-PG RLED-C-PG RLED-C-PG RLED-C-PG RLED-C-R RLED-CR	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Nunciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Spanish.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LE
Remote Ann LCD Remote RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-PG RLED-C-PG RLED-C-PG RLED-C-R RLED-C-R RLED-CR	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Nunciators (refer to Data Sheet 85005-0128)**  **Annunciators (mount to standard 4" square electrical box)**  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control, add suffix F to model number.  **Annunciators & Expander (mount to standard 4" square electrical box)*  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  **Remote Annunciator Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Gray housing.  **Remote Annunciator Zone expander. 24 X 2-LED groups with custom label
Remote Anni LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLED-C-PG For French com. LED Remote RLED-C RLED-CR RLED	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Punciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Bed housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Spanish.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control, add suffix F to model number.  **Annunciators & Expander (mount to standard 4" square electrical box)*  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Red housing.  **Remote Annunciator. Common controls and status indicators with 16 X
Remote Ani LCD Remote RLCD Remote RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-PG RLED-C-PG For French com. LED Remote RLED-C RLED-CR RLED-C	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Provision of LCD display for zones 1-16.**  **Provision of LCD display for zone 2-16.**
Remote And LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLCD-C-PG RLED-C-PG RLED-C-PG RLED-C-R RLED-C RLED	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Nunciators (refer to Data Sheet 85005-0128)  **Annunciators (mount to standard 4" square electrical box)  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Spanish.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Spanish.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese.  **Annunciators F to model number.**  **Annunciators Expander (mount to standard 4" square electrical box)  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for
Remote Anni LCD Remote RLCD RLCD-R RLCD-C RLCD-CR RLCD-SP RLCD-PG RLCD-C-SP RLCD-C-SP RLCD-C-PG RLED-C-PG For French com. LED Remote RLED-C RLED-CR RL	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LCD display for zones 1-16.  **Provision of LCD display for zones 1-16.**  **Provision of LCD display for zone 2-16.**
Remote And LCD Remote RLCD RLCD-R RLCD-CR RLCD-CR RLCD-SP RLCD-C-SP RLCD-C-SP RLCD-C-PG RLED-C-PG RED-C-PG RED-C-PG RED-C-R RED-C-R RED-CR RLED-CR RLE	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LOD display for zones 1-16.  **Nunciators (refer to Data Sheet 85005-0128)*  **Annunciators (mount to standard 4" square electrical box)*  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Spanish.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control. add suffix F to model number.  **Annunciators & Expander (mount to standard 4" square electrical box)*  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Gray housing.  **Remote Annunciator Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Red housing.  **Remote Annunciator Enclosure, key locked
Remote Ani LCD Remote RLCD R RLCD-C RLCD-CR RLCD-CR RLCD-SP RLCD-C-SP RLCD-C-SP RLCD-C-SP RLED-C-SP RLED-C-PG For French com. LED Remote RLED-CR RLED-CR RLED-CR RLED-CR RLED-CR RLED24 RLED24R REmote Anni RA-ENC1 RA-ENC2	Canada only: LED Annunciator module, two LEDs per zone, 16 zones (4 alarm only, 8 supervisory only, 4 alarm or supervisory). Mounts in cabinet to left of LOD display for zones 1-16.  **Nunciators (refer to Data Sheet 85005-0128)*  **Annunciators (mount to standard 4" square electrical box)*  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Gray housing.  **Remote Annunciator, 4X20 LCD & Common Indicators for displaying system status. Red housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Gray housing.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. Red housing.  **Remote Annunciator, 4X20 LCD. Common system status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, 4X20 LCD. Common controls and status indicators. White housing. Portuguese.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Spanish.  **Remote Annunciator, common controls and status indicators. 16 groups w/2 LEDs each for zone display. White housing. Portuguese mon control. add suffix F to model number.  **Annunciators & Expander (mount to standard 4" square electrical box)*  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator. Common controls and status indicators with 16 X 2-LED groups for zone display. Gray housing.  **Remote Annunciator Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Gray housing.  **Remote Annunciator Zone expander. 24 X 2-LED groups with custom label areas for display of alarm and trouble. Red housing.  **Remote Annunciator Enclosure, key locked



#### Detection & alarm since 1872

U.S. T 888-378-2329 F 866-503-3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T: +65 6391 9300 F: +65 6391 9306

India

T: +91 80 4344 2000 F: +91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

# Intelligent Analog Addressable Devices & Accessories

Part #	Description	Ship wt.
Intelligent D	etectors & Bases	
SIGA-HFS	Intelligent Fixed Temperature Heat Detector	
SIGA-HRS	Intelligent Fixed Temperature/Rate-of-Rise Heat Detector	
SIGA-IPHS	Intelligent 4D Multisensor Detector	
SIGA-IPHSB	Intelligent 4D Multisensor Detector (Black)	0.5 (0.00)
SIGA-PHS	Intelligent 3D Multisensor Detector	0.5 (0.23)
SIGA-PS	Intelligent Photoelectric Detector	
SIGA-IS	Intelligent Ionization Detector	
SIGA-SD	Intelligent Duct Detector	
SIGA-SB	Detector Mounting Base	
SIGA-SB4	4-inch Detector Mounting Base c/w SIGA-TS Trim Skirt	
SIGA-RB	Detector Mounting Base w/Relay	
SIGA-RB4	4-inch Detector Mounting Base /w Relay c/w SIGA-TS Trim Skirt	0.2 (0.09)
SIGA-IB	Detector Mounting Base w/Fault Isolator	, ,
SIGA-IB4	4-inch Detector Mounting Base w/ Fault Isolator c/w SIGA-TS Trim Skirt	
SIGA-LED	Remote Alarm LED	
SIGA-AB4G	Audible (Sounder) Base	0.3 (0.15)
SIGA-TS4	Trim Skirt (supplied with 4-inch bases)	0.1 (.04)
Modules	- (Verlit)	. ( . ,
SIGA-CC1	Single Input Signal Module (Standard Mount)	0.5 (0.23)
SIGA-MCC1	Single Input Signal Module (UIO Mount)	0.18 (0.08)
SIGA-CC1S	Synchronization Output Module (Standard Mount)	0.5 (0.23)
SIGA-MCC1S	<u> </u>	0.18 (0.08)
SIGA-CC2	Dual Input Signal Module (Standard Mount)	0.5 (0.23)
SIGA-MCC2	Dual Input Signal Module (UIO Mount)	0.18 (0.08)
SIGA-CR	Control Relay Module (Standard Mount)	0.4 (0.15)
SIGA-MCR	Control Relay Module (UIO Mount)	0.18 (0.08)
SIGA-CRR	Polarity Reversal Relay Module (Standard Mount)	0.4 (0.15)
SIGA-MCRR	Polarity Reversal Relay Module (UIO Mount)	0.18 (0.08)
SIGA-RM1	Riser Monitor Module (Standard Mount)	0.5 (0.23)
SIGA-MRM1	Riser Monitor Module (Plug-in)	0.18 (0.08)
SIGA-IO	Input/Output Module (Standard Mount)	0.34 (0.15)
SIGA-MIO	Input/Output Module (Plug-in)	0.22 (0.10)
SIGA-MAB	Universal Class A/B Module (Plug-in)	0.18 (0.08)
SIGA-CT1	Single Input Module	0.4 (0.15)
SIGA-CT2	Dual Input Module	0.4 (0.15)
SIGA-MCT2	Dual Input Plug-in (UIO) Module	0.1 (0.05)
SIGA-IM	Fault Isolator Module	0.5 (0.23)
SIGA-MM1	Monitor Module	0.4 (.15)
SIGA-WTM	Waterflow/Tamper Module	0.4 (.15)
SMK	Smoke Power Converter Module	0.4 (0.15)
SIGA-UIO2R	Universal Module Board w/Riser Inputs - Two Module Positions	0.32 (0.15)
SIGA-UIO6R	Universal Module Board w/Riser Inputs - Six Module Positions	0.62 (0.28)
SIGA-UIO6	Universal Module Board - Six Module Positions	0.56 (0.25)
Accessories		
GCI	Graphic Annunciator Driver, provides outputs for common indicators and 32 alarm/supv zones as well as inputs for common switches.  Provided with a snap track for mounting in custom graphic enclosures.	
CTM	City Tie Module. Provides connection to a local energy fire alarm box.	0.6 (0.3)
RPM	Reverse Polarity Module	3.0 (1.36)
BC-1	Battery Cabinet. 14.0" x 18.25" x 7.25". Holds 2 12V24A batteries.	50.0 (22.7)
BC-1R	Battery Cabinet - Red. 14.0" x 18.25" x 7.25". Holds 2 12V24A batteries.	50.0 (22.7)
MFC-A	Multifunction Fire Cabinet, 8" x 14" x 3.5" - RED.	20.6 (9.4)
PT-1S	System Printer - Desktop style.	36.6 (16.6)

Click Here to Return to Bill of Material/Index



# Click Here to Return to Bill of Material/Index

Sealed Lead-Acid Batteries



# Overview

Rechargeable sealed lead-acid batteries are ideal for use as a secondary (standby) power source as defined by NFPA 72. Their low maintenance and high energy density make them ideal for fire alarm signaling applications.

## Standard Features

- Rechargeable
- Non-spillable
- Non-hazardous
- Low maintenance
- · High energy density

# **Application**

When multiple power supplies are provided, each power supply's battery requirements should be calculated individually. Consult the specific system manual to determine battery capacity requirements.

#### **Safety Information**

Due to a battery's low internal resistance and high power density, high levels of short circuit current can develop across battery terminals. Put on protective eye covering and remove all jewelry before working on batteries. Do not rest tools or cables on the battery, and only use insulated tools. Follow all manufacturers installation instructions and diagrams when installing or maintaining batteries.



#### Detection & alarm since 1872

U.S. T 888-378-2329 F 866-503-3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T: +65 6391 9300 F: +65 6391 9306

T: +91 80 4344 2000 F: +91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

# Specifications

Case Material	ABS Thermoplastic
Regulatory Information	DOT Class 60, Batteries, non-hazardous, non-spillable
Operating Environment	32° F to 120° F (0° C to 49° C) 0 to 93% RH, Non-condensing

# Ordering Information

Catalog Number	Description	Shipping Weight, lb (kg)
12V1A2	1.2 Ah Sealed Lead Acid Battery - 12 Vdc	1.25 (0.57)
12V4A	4.5 Ah Sealed Lead Acid Battery - 12 Vdc	5 (2.27)
12V6A5	7.2 Ah Sealed Lead Acid Battery - 12 Vdc	6 (2.72)
6V8A	8 Ah Sealed Lead Acid Battery - 6 Vdc	4 (1.81)
6V10A	12 Ah Sealed Lead Acid Battery - 6 Vdc	5 (2.27)
12V10A	11 Ah Sealed Lead Acid Battery - 12 Vdc	10 (4.45)
12V17A	18 Ah Sealed Lead Acid Battery - 12 Vdc	13 (5.90)
12V24A	26 Ah Sealed Lead Acid Battery - 12 Vdc	20 (9.07)
12V40A	40 Ah Sealed Lead Acid Battery - 12 Vdc	32 (14.51)
12V50A	50 Ah Sealed Lead Acid Battery - 12 Vdc	40 (18.14)
12V65A	65 Ah Sealed Lead Acid Battery - 12 Vdc	49 (22.23)



# Click Here to View Bill of Material/Index

# Manual Pull Stations SIGA-270, SIGA-270P,



# Overview

SIGA-278

The SIGA-270 and SIGA-278 series Manual Pull Stations are part of EST's Signature Series system. The SIGA-270 Fire Alarm Manual Pull Stations feature our very familiar teardrop shape. They are made from die-cast zinc and finished with red epoxy powder-coat paint complemented by aluminum colored stripes and markings. With positive pull-lever operation, one pull on the station handle breaks the glass rod and turns in a positive alarm, ensuring protection plus fool-proof operation. Presignal models (SIGA-270P) are equipped with a general alarm (GA) keyswitch for applications where two stage operation is required. The up-front highly visible glass rod discourages tampering, but is not required for proper operation.

EST's double action single stage SIGA-278 station is a contemporary style manual station made from durable red colored lexan. To initiate an alarm, first lift the upper door marked "LIFT THEN PULL HANDLE", then pull the alarm handle.

## Standard Features

**Note:** Some features described here may not be supported by all control systems. Check your control panel's Installation and Operation Guide for details.

- Traditional familiar appearance
   SIGA-270 models feature our familiar teardrop design with simple positive pull action and sturdy die-cast metal body.
- One stage (GA), two stage (pre-signal), and double action models

SIGA-270 models are available for one or two stage alarm systems. The single stage double action SIGA-278 features a rugged Lexan housing with keyed reset mechanism.

#### Break glass operation

An up-front visible glass rod on the SIGA-270 discourages tampering.

#### • Intelligent device with integral microprocessor

All decisions are made at the station allowing lower communication speed while substantially improving control panel response time. Less sensitive to line noise and loop wiring properties; twisted or shielded wire is not required.

### ADA Compliant

Meets ADA requirements for manual pull stations.

#### • Electronic Addressing with Non-volatile memory

Permanently stores programmable address, serial number, type of device, and job number. Automatically updates historic information including hours of operation, last maintenance date, number of alarms and troubles, and time and date of last alarm.

#### Automatic device mapping

Each station transmits wiring information to the loop controller regarding its location with respect to other devices on the circuit.

#### Stand-alone operation

The station inputs an alarm even if the loop controller's polling interrogation stops.

## Diagnostic LEDs

Status LEDs; flashing GREEN shows normal polling; flashing RED shows alarm state.

 Designed for high ambient temperature operation Install in ambient temperatures up to 120 °F (49 °C).

# **Application**

The operating characteristics of the fire alarm stations are determined by their sub-type code or "Personality Code". NORMALLY-OPEN ALARM - LATCHING (Pesonality Code 1) is assigned by the factory; no user configuration is required. The device is configured for Class B IDC operation. An ALARM signal is sent to the loop controller when the station's pull lever is operated. The alarm condition is latched at the station.

# Compatibility

Signature Series manual stations are compatible only with EST's Signature Loop Controller.

# Warnings & Cautions

This device will not operate without electrical power. As fires frequently cause power interruption, we suggest you discuss further safeguards with your local fire protection specialist.

# Testing & Maintenance

To test (or reset) the station simply open the station and operate the exposed switch. The SIGA-270 series are opened with a tool; the SIGA-278 requires the key which is supplied with that station.

The station's automatic self-diagnosis identifies when it is defective and causes a trouble message. The user-friendly maintenance program shows the current state of each Signature series device and other pertinent messages. Single devices may be deactivated temporarily, from the control panel. Availability of maintenance features is dependent on the fire alarm system used.

Scheduled maintenance (Regular or Selected) for proper system operation should be planned to meet the requirements of the Authority Having Jurisdiction (AHJ). Refer to current NFPA 72 and ULC CAN/ULC 536 standards.

# Typical Wiring

The fire alarm station's terminal block accepts #18 AWG (0.75mm²) to #12 AWG (2.5mm²) wire sizes. See Signature Loop Controller catalog sheet for detailed wiring requirement specifications.

#### **Wiring Notes**

- Refer to Signature Loop Controller manual for maximum wire distance.
- 2. All wiring is power limited and supervised.

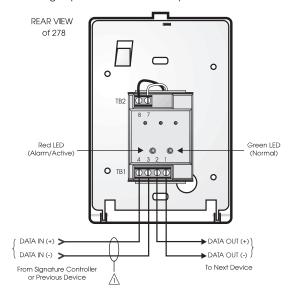


Figure 4. Single Stage Systems

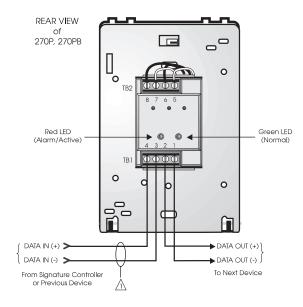


Figure 5. Two Stage Systems

# Installation

Single-stage Signature Series fire alarm manual pull stations mount to North American 2½ inch (64 mm) deep 1-gang boxes.

Two stage presignal (270P) models require 1½ inch (38 mm) deep 4-inch square boxes with 1-gang, ½-inch raised covers. Openings must be angular. Rounded openings are not acceptable. Recommended box: Steel City Model 52-C-13; in Canada, use Iberville Model CI-52-C-49-1/2.

**All models** include terminals are suited for #12 to #18 AWG (2.5 mm² to 0.75 mm²) wire size. Edwards recommends that these fire alarm stations be installed according to latest recognized edition of national and local fire alarm codes.

**Electronic Addressing:** The loop controller electronically addresses each manual station, saving valuable time during system commissioning. Setting complicated switches or dials is not required. Each station has its own unique serial number stored in its on-board memory. The loop controller identifies each device on the loop and assigns a "soft" address to each serial number. If desired, the stations can be addressed using the SIGA-PRO Signature Program/Service Tool.

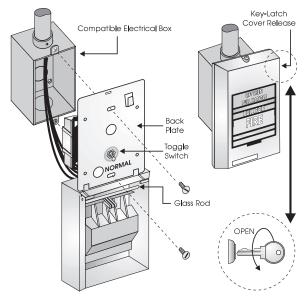


Figure 1. SIGA-278 installation

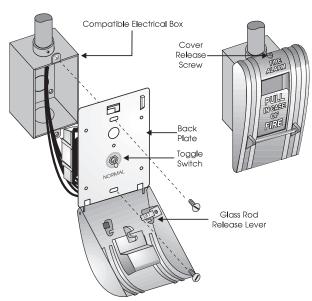


Figure 2. SIGA-270, SIGC-270F, SIGC-270B installation

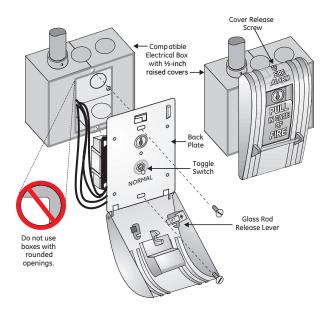


Figure 3. SIGA-270P, SIGC-270PB installation



#### Detection & alarm since 1872

U.S. T 888-378-2329 F 866-503-3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T: +65 6391 9300 F: +65 6391 9306

India

T: +91 80 4344 2000 F: +91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

# **Specifications**

Catalog Number	SIGA-270, SIGC- 270F, SIGC-270B	SIGA-270P, SIGC-270PB	SIGA-278
Description	Single Action - One Stage	Single Action -Two Stage (Presignal)	Double Action - One Stage
Addressing Requirements	Uses 1 Module Address	Uses 2 Module Addresses	Uses 1 Module Address
Operating Current	Standby = 250µA Activated = 400µA	Standby = 396µA Activated = 680µA	Standby = 250µA Activated = 400µA
Construction & Finish	Diecast Zinc - Red Epoxy with aluminum markings		Lexan - Red with white markings
Type Code		Factory Set	
Operating Voltage	15.2	to 19.95 Vdc (19 Vdc nor	minal)
Storage and Operating Environment	Operating Temperature: 32°F to 120°F (0°C to 49°C)  Storage Temperature: -4°F to 140°F (-20°C to 60°C) Humidity: 0 to 93%  RH		,
LED Operation	On-board Green LED - Flashes when polled On-board Red LED - Flashes w hen in alarm Both LEDs - Glow steady when in alarm (stand-alone)		
Compatibility	Use With: Signature Loop Controller		
Agency Listings	UL, ULC (note 1), MEA, CSFM		

**Note:** SIGC-270F, SIGC-270B and SIGC-270PB are ULC listed only. Suffix "F" indicates French markings. Suffix "B" indicates English/French biling ual markings.

# Ordering Information

276B-RSB

Catalog Number	Description	Ship Wt. lbs (kg)
SIGA-270	One Stage Fire Alarm Station, English Markings - UL/ULC Listed	
SIGC-270F	One Stage Fire Alarm Station, French Markings - ULC Listed	
SIGC-270B	One Stage Fire Alarm Station, French/English Markings - ULC Listed	
SIGA-270P	Two Stage (Presignal) Fire Alarm Station, English Markings - UL/ULC Listed	1 (0.5)
SIGC- 270PB	Two Stage (Presignal) Fire Alarm Station, French/English Markings - ULC Listed	
SIGA-278	Double Action (One Stage) Fire Alarm Station, English Markings - UL/ULC Listed	
Accessories	3	
32997	GA Key w/Tag - for pre-signal station (CANADA ONLY)	
276-K2	GA Key - for pre-signal station (USA ONLY)	
276-K1	Station Reset Key, Supplied with all Key Reset Stations	0.1 (05)
27165	12 Glass Rods - for SIGA-270 series (CANADA ONLY)	— 0.1 (.05)
270-GLR	20 Glass Rods - for SIGA-270 series (USA ONLY)	
276-GLR	20 Glass Rods - for SIGA-278 series	

Surface Mount Box, Red - for SIGA pull stations

# Click Here to View Bill of Material/Index

1 (0.6)



# Click Here to Return to Bill of Material/Index

Life Safety & Communications

# Intelligent Smoke Detector with Optional CO Sensor SIGA2-PS, SIGA2-PCOS



# Overview

Signature Series SIGA2-P(CO)S photoelectric detectors bring advanced sensing technology to a practical design that increases efficiency, saves installation time, cuts costs, and extends life safety and property protection capabilities. Continuous self-diagnostics ensure reliability over the long-haul, while innovative field-replacable smoke chambers make detector maintenance literally a snap. With its modular CO sensor, this detector pulls double-duty — continually monitoring the environment for signs of smoke, as well as its invisible yet deadly companion, carbon monoxide.

Like all Signature Series detectors, the SIGA2-P(CO)S is an intelligent device that gathers analog information from its smoke and CO sensor (if present), converting this data into digital signals. To make an alarm decision, the detector's on-board microprocessor measures and analyzes sensor readings and compares this information to historical data. Digital filters remove signal patterns that are not typical of fires, thus virtually eliminating unwanted alarms.

The SIGA2-PCOS includes an advanced carbon monoxide sensor and daughterboard. When the electrochemical cell reaches its end of life after approximately six years, the detector signals a trouble condition to the control panel. The sensor/daughterboard module is field-replaceable.

# Standard Features

- Optical smoke sensing technology with optional carbon monoxide sensor
- Field-replacable smoke chamber
- Field-replacable carbon monoxide sensor/daughterboard module
- Uses existing wiring
- · Automatic device mapping
- · Ground fault detection by module
- Up to 250 devices per loop
- Two levels of environmental compensation
- · Two levels of dirty detector warning
- Twenty pre-alarm settings
- Five sensitivity settings
- Non-volatile memory
- · Electronic addressing
- Environmental compensation
- · Identification of dirty or defective detectors
- Automatic day/night sensitivity adjustment
- Bicolor (green/red) status LED
- Standard, relay, fault isolator, and audible mounting bases

DATA SHEET 85001-0619

Not to be used for installation purposes. Issue 1

# **Application**

#### **Smoke detection**

The SIGA2-PS detects extremely small particles of combustion and triggers an alarm at the first sign of smoke. Thanks to its highperformance forward scattering reflective response technology, the photoelectric smoke sensor responds quickly and reliably to a wide range of fire types, especially slow burning fires fuelled by combustibles typically found in modern multi-use buildings.

#### **Carbon monoxide detection**

CO detection has rapidly become a standard part of life safety strategies everywhere. Monitored CO detection is becoming mandated with increasing frequency in all types of commercial applications, but particularly in occupancies such as hotels, rooming houses, dormitories, day care facilities, schools, hospitals, assisted living facilities, and nursing homes. In fact, more than half of the U.S. population already lives in states requiring the installation of CO detectors in some commercial occupancies. This is because carbon monoxide is the leading cause of accidental poisoning deaths in America. Known as the "Silent Killer," CO is odorless, tasteless, and colorless. It claims nearly 500 lives, and results in more than 15,000 hospital visits annually.

### Installation

Signature Series detectors mount to North American 1-gang boxes, 3-1/2 inch or 4 inch octagon boxes, and to 4 inch square electrical boxes 1-1/2 inches (38 mm) deep. They mount to European BESA and 1-gang boxes with 60.3 mm fixing centers. See mounting base installation and wiring for more information.

# Testing & Maintenance

Each detector automatically identifies when it is dirty or defective and causes a "dirty detector" message. The detector's sensitivity measurement can also be transmitted to the loop controller. A sensitivity report can be printed to satisfy NFPA sensitivity measurements which must be conducted at the end of the first year and every two years thereafter.

The user-friendly maintenance program shows the current state of each detector and other pertinent messages. Single detectors may be turned off temporarily from the control panel. Availability of maintenance features is dependent on the fire alarm system. used. When the CO sensor's electrochemical cell reaches its end of life, the detector signals a trouble condition to the control panel. The sensor/daughterboard module is field-replaceable. Scheduled maintenance (Regular or Selected) for proper detector operation should be planned to meet the requirements of the Authority Having Jurisdiction (AHJ). Refer to current NFPA 72, NFPA 720, and ULC CAN/ULC 536 standards.

This detector will NOT sense fires that start in areas where smoke cannot reach the detector. Smoke from fires in walls, roofs, or on the opposite side of closed doors may not reach the detector to alarm it.

# Sensing and reporting technology

The microprocessor in each detector provides four additional benefits - Self-diagnostics and History Log, Automatic Device Mapping, Stand-alone Operation and Fast, Stable Communication.

Self-diagnostics and History Log - Each Signature Series detector constantly runs self-checks to provide important maintenance information. The results of the self-check are automatically updated and permanently stored in the detector's non-volatile memory

Automatic Device Mapping - The loop controller learns where each device's serial number address is installed relative to other devices on the circuit. The mapping feature provides supervision of each device's installed location to prevent a detector from being reinstalled (after cleaning etc.) in a different location from where it was originally.

Stand-alone Operation - A decentralized alarm decision by the detector is guaranteed. On-board intelligence permits the detector to operate in stand-alone mode. If loop controller CPU communications fail for more than four seconds, all devices on that circuit go into stand-alone mode. The circuit acts like a conventional alarm receiving circuit.

Fast Stable Communication - On-board intelligence means less information needs to be sent between the detector and the loop controller. Other than regular supervisory polling response, the detector only needs to communicate with the loop controller when it has something new to report.

### Accessories

Detector mounting bases have wiring terminals that are accessible from the "room-side" after mounting the base to the electrical box. The bases mount to North American 1-gang boxes and to 3½ inch or 4 inch octagon boxes, 1½ inches (38 mm) deep. They also mount to European BESA and 1-gang boxes with 60.3 mm fixing centers. The SIGA-SB4, SIGA-RB4, and SIGA-IB4 mount to North American 4 inch sq. electrical boxes in addition to the above boxes. They include the SIGA-TS4 Trim Skirt which is used to cover the "mounting ears" on the base. The SIGA-AB4G mounts to a 4" square box only.



SIGA-SB







SIGA-AB4G/T

SIGA-IB

SIGA-LED

Remote LED SIGA-LED - The remote LED connects to the SIGA-SB or SIGA-SB4 Standard Base only. It features a North American size 1-gang plastic faceplate with a white finish and red alarm LED.

SIGA-TS4 Trim Skirt - Supplied with 4 inch bases, it can also be ordered separately to use with the other bases to help hide surface imperfections not covered by the smaller bases.

SIGA-AB4G and SIGA-AB4GT - These sounder bases are designed for use where localized or group alarm signaling is required. The SIGA-AB4G is compatible with Signature Series smoke and heat detectors. The SIGA-AB4GT sounder base, when used with the SIGA-TCDR Temporal Pattern Generator module, adds an audible output function to any Signature Series detector, including fire and CO detectors.

# Typical Wiring


The detector mounting bases accept #18 AWG (0.75mm<sup>2</sup>), #16 (1.0mm<sup>2</sup>), #14 AWG (1.5mm<sup>2</sup>), and #12 AWG (2.5mm<sup>2</sup>) wire sizes.

Note: Sizes #16 AWG (1.0mm<sup>2</sup>) and #18 AWG (0.75mm<sup>2</sup>) are preferred for ease of installation. See Signature Loop Controller catalog sheet for detailed wiring requirement specifications.

#### Standard Detector Base, SIGA-SB, SIGA-SB4

This is the basic mounting base for Edwards Signature Series detectors. The SIGA-LED Remote LED is supported by the Standard Base.



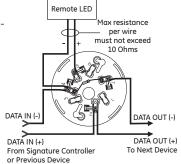


#### Isolator Detector Base, SIGA-IB, SIGA-IB4

This base includes a built-in line fault isolator for use on Class A circuits. A detector must be installed for it to operate. The isolator base does not support the SIGA-LED Remote LED.

lators to open within 23 msec - at 10 msec intervals. beginning on one side of the Class A circuit nearest the loop controller, the isolators close to provide the next isolator down the

line with power

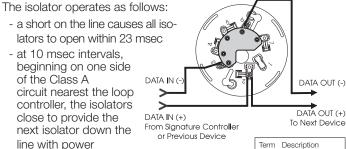

Not Used DATA IN/OUT (+)

DATA IN (-)

Not Used

Not Used

Not Used

Normally-Normally-

DATA OUT (-)


DATA OUT (-)

- when the isolator next to the short closes, reopens within 10 msec.

The process repeats beginning on the other side of the loop controller.


#### Relay Detector Base, SIGA-RB, SIGA-RB4

This base includes a relay. Normally open or closed operation is selected during installation. The dry contact is rated for 1 amp (pilot duty) @ 30 Vdc. The relay's position is supervised to avoid accidentally jarring it out of position. The SIGA-RB can be operated as DATA IN (a control relay if programmed to do so at the control panel (EST3 V.2 only). The relay base does not support the SIGA-LED Remote LFD.

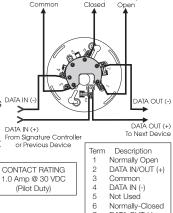

#### Audible Detector Base for CO and Fire Detectors, SIGA-AB4GT


The Signature Series AB4GT sounder base, when used with the SIGA-TCDR Temporal Pattern Generator, adds an audible output function to any Signature Series detector. For more information on this device, refer to Data Sheet 85001-0623 -- Sounder Base for CO and Fire Detectors.

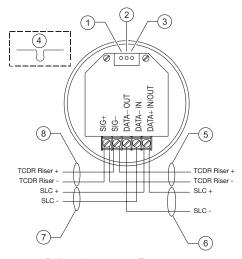

- Volume setting. Default is high volume. For low volume, cut trace per item 4.
- 2 Reserved for future use. Do not cut
- 3. Reserved for future use. Do not cut.
- 4 To configure output volume, cut trace as shown.
- To next SIGA-AB4GT sounder base or EOL relay. 5.
- 6. SLC OUT to next intelligent addressable device.
- 7. SLC\_IN from intelligent addressable controller or previous device.
- 8. From SIGA-TCDR Temporal Pattern Generator or previous SIGA-AB4GT sounder base.

#### **Audible Detector Base, SIGA-AB4G**

This base is designed for use where localized or group alarm signaling is required. When the detector senses an alarm condition, the audible base emits a local alarm signal. The optional SIGA-CRR Polarity Reversal Relay can be used for sounding to other audible bases on the same 24 Vdc circuit.

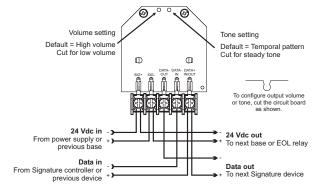

Relay and Audible Bases operate as follows:

- at system power-up or reset, the relay is de-energized
- when a detector is installed in the base with the power on, the relay energizes for four seconds, then de-energizes
- when a detector is removed from a base with the power on, the relay is de-energized
- when the detector enters the alarm state, the relay is energized.



#### Detection & alarm since 1872

U.S. T 888 378 2329 F 866 503 3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T: +65 6391 9300 F: +65 6391 9306

India

T: +91 80 4344 2000 F: +91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

# Compatibility

SIGA2-P(CO)S detectors are compatible only with the Signature Loop Controller.

# Warnings & Cautions

This detector will not operate without electrical power. As fires frequently cause power interruption, we suggest you discuss further safeguards with your fire protection specialist.

This detector will NOT sense fires that start in areas where smoke cannot reach the detector. Smoke from fires in walls, roofs, or on the opposite side of closed doors may not reach the detector to alarm it.

# **Specifications**

	SIGA2-PS	SIGA2-PCOS
Normal operating current	45 µA	70 μA
Alarm current	18 mA	18 mA
Standalone alarm current	45 µA	70 μA
Operating voltage	15.20 to	19.95 VDC
Air velocity	0 to 4,000 ft./min (0 to 20 m/s).	
Construction	High impact engineering polymer	
Wall mounting	Maximum 12 in (305 mm) from ceiling	
Mounting	Plug-in	
Shipping weight	hipping weight 0.44 lb. (164 g)	
Compatible bases	See Ordering Information	
Operating environment 32 to 120°F (0 to 49°C), 0 to 93% RH, noncondensi		to 93% RH, noncondensing
Storage temperature -4 to 140°F (-20 to 60°C)		(-20 to 60°C)
Environmental compensation Automatic		omatic

# Ordering Information

Catalog Number	Description	Ship Wt. lbs (kg)
SIGA2-PS	Intelligent Photoelectric Detector	0.4 (0.16)
SIGA2-PCOS	Intelligent Photoelectric Detector with carbon monoxide sensor	0.4 (0.16)
SIGA2-PCOS-CA	Intelligent Photoelectric Detector with carbon monoxide sensor (for use in Canadian markets only).	0.4 (0.16)

SIGA-SB	Detector Mounting Base - Standard	
SIGA-SB4	4-inch Detector Mounting Base c/w Trim Skirt	
SIGA-RB	Detector Mounting Base w/Relay	
SIGA-RB4	4-inch Detector Mounting Base w/Relay, c/w Trim Skirt	0.2 (.09)
SIGA-IB	Detector Mounting Base w/Fault Isolator	
SIGA-IB4	4-inch Detector Mounting Base w/ Fault Isolator, c/w Trim Skirt	
SIGA-LED	Remote Alarm LED (not for EN54 applications)	
SIGA-AB4G	Audible (Sounder) Base for Fire Detectors	0.3 (0.15)
SIGA-AB4GT	Audible (Sounder) Base for CO and Fire Detectors	0.3 (0.15)
SIGA-TCDR	Temporal Pattern Generator	0.3 (0.15)
SIGA-TS4	Trim Skirt (supplied with 4-inch bases)	0.1 (.04)
2-SPRC1*	Replacement Smoke Chamber (for SIGA2-PS detectors)	0.1 (.04)
2-SPRC2*	Replacement Smoke Chamber (for SIGA2-PCOS detectors)	0.1 (.04)
2-CORPL*	Replacement CO Sensor	0.1 (.04)

Click Here to Return to Bill of Material/Index

\*Release pending.



# Intelligent Heat Detectors with Optional CO Sensors

SIGA2-HFS, SIGA2-HRS, SIGA2-HCOS



# Overview

Signature Series fixed temperature and rate-of-rise heat detectors bring advanced sensing technology to a practical design that increases efficiency, saves installation time, cuts costs, and extends property protection capabilities. Continuous self-diagnostics ensure reliability over the long-haul, while the latest thermister technology makes these detectors ideal whereever dependable heat detection is required. With their modular CO sensor, these devices pull double-duty — continually monitoring the environment for heat from combustion, as well as its invisible yet deadly companion, carbon monoxide.

Like all Signature Series detectors, these are intelligent device that gather analog information from their heat and CO sensor (if present), converting this data into digital signals. To make an alarm decision, the detector's on-board microprocessor measures and analyzes sensor readings and compares this information to historical data. Digital filters remove signal patterns that are not typical of fires, thus virtually eliminating unwanted alarms.

The SIGA2-HCOS is a fixed temperature heat detector that includes an advanced carbon monoxide sensor and daughter-board. When the electrochemical cell reaches its end of life after approximately six years, the detector signals a trouble condition to the control panel. The sensor/daughterboard module is field-replaceable.

# Standard Features

**Note:** Some features described here may not be supported by all control systems. Check your control panel's Installation and Operation Guide for details.

- Fixed temperature or rate-of-rise heat detection with optional carbon monoxide sensor
- Field-replacable carbon monoxide sensor/daughterboard module
- Uses existing wiring
- Automatic device mapping
- Ground fault detection by module
- Up to 250 devices per loop
- Non-volatile memory
- Electronic addressing
- Bicolor (green/red) status LED
- Standard, relay, fault isolator, and audible mounting bases
- 50 foot (15.2 meter) spacing
- 15 °F (8 °C) per minute rate-of-rise alarm point (HRS)
- 135 °F (57 °C) fixed temperature alarm point (HFS/HCOS)

# **Application**

#### **Heat detection**

SIGA2-HRS rate-of-rise heat detectors provide a 15 °F (9 °C) per minute rate-of-rise heat sensor for the detection of heat due to fire. The heat sensor monitors the temperature of the air and determines whether an alarm should be initiated.


SIGA2-HFS and SIGA2-HCOS fixed temperature heat detectors provide a 135°F (57°C) fixed-temperature heat sensor for the detection of heat due to fire. The heat sensor monitors the temperature of the air and determines whether an alarm should be initiated.

#### Carbon monoxide detection

The SIGA2-HCOS includes a replaceable chemical cell for the detection of carbon monoxide (CO). CO detection has rapidly become a standard part of life safety strategies everywhere. Monitored CO detection is becoming mandated with increasing frequency in all types of commercial applications, but particularly in occupancies such as hotels, rooming houses, dormitories, day care facilities, schools, hospitals, assisted living facilities, and nursing homes. In fact, more than half of the U.S. population already lives in states requiring the installation of CO detectors in some commercial occupancies. This is because carbon monoxide is the leading cause of accidental poisoning deaths in America. Known as the "Silent Killer," CO is odorless, tasteless, and colorless. It claims nearly 500 lives, and results in more than 15,000 hospital visits annually.

# Installation

Signature Series detectors mount to North American 1-gang boxes, 3-1/2 inch or 4 inch octagon boxes, and to 4 inch square electrical boxes 1-1/2 inches (38 mm) deep. They mount to European BESA and 1-gang boxes with 60.3 mm fixing centers. See mounting base installation and wiring for more information.

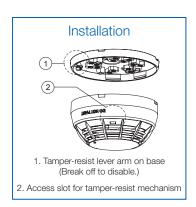

# Testing & Maintenance

The user-friendly maintenance program shows the current state of each detector and other pertinent messages. Single detectors may be turned off temporarily from the control panel. Availability of maintenance features is dependent on the fire alarm system used. When the CO sensor's electrochemical cell reaches its end of life, the detector signals a trouble condition to the control panel. The sensor/daughterboard module is field-replaceable. Scheduled maintenance (Regular or Selected) for proper detector operation should be planned to meet the requirements of the Authority Having Jurisdiction (AHJ). Refer to current NFPA 72, NFPA 720, and ULC CAN/ULC 536 standards.

# Compatibility

SIGA2-PS detectors are compatible only with the Signature Loop Controller.

# Sensing and reporting technology

The microprocessor in each detector provides four additional benefits - Self-diagnostics and History Log, Automatic Device Mapping, Stand-alone Operation and Fast, Stable Communication.

Self-diagnostics and History Log - Each Signature Series detector constantly runs self-checks to provide important maintenance information. The results of the self-check are automatically updated and permanently stored in the detector's non-volatile memory

Automatic Device Mapping - The loop controller learns where each device's serial number address is installed relative to other devices on the circuit. The mapping feature provides supervision of each device's installed location to prevent a detector from being reinstalled (after cleaning etc.) in a different location from where it was originally.

Stand-alone Operation - A decentralized alarm decision by the detector is guaranteed. On-board intelligence permits the detector to operate in stand-alone mode. If loop controller CPU communications fail for more than four seconds, all devices on that circuit go into stand-alone mode. The circuit acts like a conventional alarm receiving circuit.

Fast Stable Communication - On-board intelligence means less information needs to be sent between the detector and the loop controller. Other than regular supervisory polling response, the detector only needs to communicate with the loop controller when it has something new to report.

### Accessories

Detector mounting bases have wiring terminals that are accessible from the "room-side" after mounting the base to the electrical box. The bases mount to North American 1-gang boxes and to 3½ inch or 4 inch octagon boxes, 1½ inches (38 mm) deep. They also mount to European BESA and 1-gang boxes with 60.3 mm fixing centers. The SIGA-SB4, SIGA-RB4, and SIGA-IB4 mount to North American 4 inch sq. electrical boxes in addition to the above boxes. They include the SIGA-TS4 Trim Skirt which is used to cover the "mounting ears" on the base. The SIGA-AB4G mounts to a 4" square box only.











SIGA-AB4G/T

SIGA-SB

SIGA-LED

Remote LED SIGA-LED - The remote LED connects to the SIGA-SB or SIGA-SB4 Standard Base only. It features a North American size 1-gang plastic faceplate with a white finish and red alarm LED.

SIGA-TS4 Trim Skirt - Supplied with 4 inch bases, it can also be ordered separately to use with the other bases to help hide surface imperfections not covered by the smaller bases.

SIGA-AB4G and SIGA-AB4GT - These sounder bases are designed for use where localized or group alarm signaling is required. The SIGA-AB4G is compatible with Signature Series smoke and heat detectors. The SIGA-AB4GT sounder base, when used with the SIGA-TCDR Temporal Pattern Generator module, adds an audible output function to any Signature Series detector, including fire and CO detectors.

# Typical Wiring


The detector mounting bases accept #18 AWG (0.75mm<sup>2</sup>), #16 (1.0mm<sup>2</sup>), #14 AWG (1.5mm<sup>2</sup>), and #12 AWG (2.5mm<sup>2</sup>) wire sizes.

Note: Sizes #16 AWG (1.0mm<sup>2</sup>) and #18 AWG (0.75mm<sup>2</sup>) are preferred for ease of installation. See Signature Loop Controller catalog sheet for detailed wiring requirement specifications.

#### Standard Detector Base, SIGA-SB, SIGA-SB4

This is the basic mounting base for Edwards Signature Series detectors. The SIGA-LED Remote LED is supported by the Standard Base.



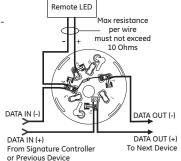


## Isolator Detector Base, SIGA-IB, SIGA-IB4

This base includes a built-in line fault isolator for use on Class A circuits. A detector must be installed for it to operate. The isolator base does not support the SIGA-LED Remote LED.

The isolator operates as follows:

- a short on the line causes all isolators to open within 23 msec
- at 10 msec intervals, beginning on one side of the Class A circuit nearest the loop controller, the isolators close to provide the next isolator down the line with power

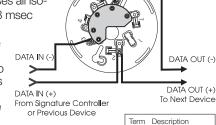


- when the isolator next to

other side of the loop controller.

#### DATA IN (-) the short closes, reopens within 10 msec. Not Used Not Used The process repeats beginning on the DATA OUT (-) Not Used

#### Relay Detector Base, SIGA-RB, SIGA-RB4

This base includes a relay. Normally open or closed operation is selected during installation. The dry contact is rated for 1 amp (pilot duty) @ 30 Vdc. The relay's position is supervised to avoid accidentally jarring it out of position. The SIGA-RB can be operated as DATA IN C a control relay if programmed to do so at the control panel (EST3 V.2 only). The relay base does not support the SIGA-LED Remote LED.

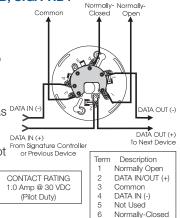


Not Used

DATA IN/OUT (+)

DATA OUT (-)

#### Audible Detector Base for CO and Fire Detectors, SIGA-AB4GT


The Signature Series AB4GT sounder base, when used with the SIGA-TCDR Temporal Pattern Generator, adds an audible output function to any Signature Series detector. For more information on this device, refer to Data Sheet 85001-0623 -- Sounder Base for CO and Fire Detectors.

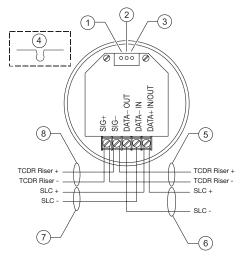

- Volume setting. Default is high volume. For low volume, cut trace per item 4.
- Reserved for future use. Do not cut
- 3. Reserved for future use. Do not cut.
- 4 To configure output volume, cut trace as shown.
- 5. To next SIGA-AB4GT sounder base or EOL relay.
- 6. SLC OUT to next intelligent addressable device.
- 7. SLC\_IN from intelligent addressable controller or previous device.
- From SIGA-TCDR Temporal Pattern Generator or previous SIGA-AB4GT sounder base

## Audible Detector Base, SIGA-AB4G

This base is designed for use where localized or group alarm signaling is required. When the detector senses an alarm condition, the audible base emits a local alarm signal. The optional SIGA-CRR Polarity Reversal Relay can be used for sounding to other audible bases on the same 24 Vdc circuit.

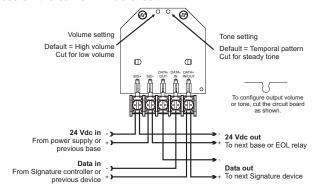

Relay and Audible Bases operate as follows:

- at system power-up or reset, the relay is de-energized
- when a detector is installed in the base with the power on, the relay energizes for four seconds, then de-energizes
- when a detector is removed from a base with the power on, the relay is de-energized
- when the detector enters the alarm state, the relay is energized.



#### Detection & alarm since 1872

T 888 378 2329 F 866 503 3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T: +65 6391 9300 F: +65 6391 9306

T:+91 80 4344 2000 F: +91 80 4344 2050

Australia T+61 3 9239 1200 F+61 3 9239 1299

Europe T +32 2 725 11 20 F+32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

# Click Here to View Bill of Material/Index

# Warnings & Cautions

- This detector does not operate without electrical power. As fires frequently cause power interruption, discuss further safeguards with the local fire protection specialist.
- This detector does not sense fires in areas where heat cannot reach the detector. Heat from fires in walls, roofs, or on the opposite side of closed doors may not reach the detector.
- This heat detector by itself does not provide life safety protection Use this detector with ionization and/or photoelectric smoke detectors.
- This detector does not detect oxygen levels, smoke, toxic gases, or flames. Use this device as part of a broad-based life safety program which includes a variety of information sources pertaining to heat and smoke levels, extinguishment systems, visual and audible devices, and other safety measures.
- Independent studies indicate that heat detectors should only be used when property protection alone is involved. Never rely on heat detectors as the sole means of fire protection.

# **Specifications**

	SIGA2-HRS	SIGA2-HFS	SIGA2-HCOS
Normal operating current	45 µA	45 μΑ	45 µA
Standalone alarm current	18 mA	18 mA	18 mA
Alarm Current	45 µA	45 μΑ	45 µA
Actual alarm point	15°F (8°C)/min.	130 to 140°F	(54 to 60°C)
Operating voltage	15.20 to 19.95 VDC		
Maximum spacing	50 ft. (15.2 m) centers*		
Construction	High impact engineering polymer		
Mounting	Plug-in		
Shipping weight	0.44 lb. (164 g)		
Compatible bases	See Ordering Information		
Operating environment	32 °F to 100 °F (0 °C to 38 °C), 0 to 93% RH, noncondensing		
Storage temperature	– 4 °F to 140 °F (– 20 °C to 60 °C)		

<sup>\*</sup>When replacing SIGA-HRS/HFS ensure spacing is 50ft or less.

# Ordering Information

Catalog Number	Description	Ship Wt. lbs (kg)
SIGA2-HRS	Intelligent rate-of-rise heat detector	0.4 (0.16)
SIGA2-HFS	Intelligent fixed temperature heat detector	0.4 (0.16)
SIGA2-HCOS	Intelligent fixed temperature heat detector with CO sensor	0.4 (0.16)

SIGA-SB	Detector Mounting Base - Standard	
SIGA-SB4	4-inch Detector Mounting Base c/w Trim Skirt	_
SIGA-RB	Detector Mounting Base w/Relay	
SIGA-RB4	4-inch Detector Mounting Base w/Relay, c/w Trim Skirt	0.2 (.09)
SIGA-IB	Detector Mounting Base w/Fault Isolator	
SIGA-IB4	4-inch Detector Mounting Base w/ Fault Isolator, c/w Trim Skirt	_
SIGA-LED	Remote Alarm LED (not for EN54 applications)	_
SIGA-AB4G	Audible (Sounder) Base for Fire Detectors	0.3 (0.15)
SIGA-AB4GT	Audible (Sounder) Base for CO and Fire Detectors	0.3 (0.15)
SIGA-TCDR	Temporal Pattern Generator	0.3 (0.15)
SIGA-TS4	Trim Skirt (supplied with 4-inch bases)	0.1 (.04)
2-CORPL*	Replacement CO Sensor	0.1 (.04)

<sup>\*</sup>Release pending.



# Intelligent Carbon Monoxide Detector SIGA2-COS



# Overview

Signature Series SIGA2-COS carbon monixide detectors bring advanced sensing technology to a practical design that increases efficiency, saves installation time, cuts costs, and extends life safety capabilities. Continuous self-diagnostics ensure reliability over the long-haul, while advanced electrochemical CO sensing technology provides performance benefits that keep occupants safe from the "silent killer".

Like all Signature Series detectors, the SIGA2-COS is an intelligent device that gathers analog information from its CO sensor, converting this data into digital signals. To make an alarm decision, the detector's on-board microprocessor measures and analyzes sensor readings over time. Digital filters remove signal patterns that are not typical of life safety events, thus virtually eliminating unwanted alarms.

The SIGA2-COS includes an advanced carbon monoxide sensor and daughterboard. When the electrochemical cell reaches its end of life after approximately six years, the detector signals a trouble condition to the control panel. The sensor/daughterboard module is field-replaceable.

# Standard Features

- Advanced electrochemical carbon monoxide sensing technology
- Field-replacable carbon monoxide sensor/daughterboard module
- Uses existing wiring
- Automatic device mapping
- Ground fault detection by module
- Up to 250 devices per loop
- Non-volatile memory
- · Electronic addressing
- · Automatic day/night sensitivity adjustment
- Bicolor (green/red) status LED
- Standard, relay, fault isolator, and audible mounting bases

# **Application**

CO detection has rapidly become a standard part of life safety strategies everywhere. Monitored CO detection is becoming mandated with increasing frequency in all types of commercial applications, but particularly in occupancies such as hotels, rooming houses, dormitories, day care facilities, schools, hospitals, assisted living facilities, and nursing homes. In fact, more than half of the U.S. population already lives in states requiring the installation of CO detectors in some commercial occupancies. This is because carbon monoxide is the leading cause of accidental poisoning deaths in America. Known as the "Silent Killer," CO is odorless, tasteless, and colorless. It claims nearly 500 lives, and results in more than 15,000 hospital visits annually.

## Installation

Signature Series detectors mount to North American 1-gang boxes, 3-1/2 inch or 4 inch octagon boxes, and to 4 inch square electrical boxes 1-1/2 inches (38 mm) deep. They mount to European BESA and 1-gang boxes with 60.3 mm fixing centers. See mounting base installation and wiring for more information.

# Testing & Maintenance

The user-friendly maintenance program shows the current state of each detector and other pertinent messages. Single detectors may be turned off temporarily from the control panel. Availability of maintenance features is dependent on the

fire alarm system used. When the CO sensor's electrochemical cell reaches its end of life, the detector signals a trouble condition to the control panel. The sensor/daughterboard module is field-replaceable. Scheduled maintenance (Regular or Selected) for proper detector operation should be planned to meet the requirements of the Authority Having Jurisdiction (AHJ). Refer to current NFPA 72, NFPA 720, and ULC CAN/ULC 536 standards.

# Sensing and reporting technology

The microprocessor in each detector provides four additional benefits - Self-diagnostics and History Log, Automatic Device Mapping, Stand-alone Operation and Fast, Stable Communication.

**Self-diagnostics and History Log** - Each Signature Series detector constantly runs self-checks to provide important maintenance information. The results of the self-check are automatically updated and permanently stored in the detector's non-volatile memory


**Automatic Device Mapping** - The loop controller learns where each device's serial number address is installed relative to other devices on the circuit. The mapping feature provides supervision of each device's installed location to prevent a detector from being

reinstalled (after cleaning etc.) in a different location from where it was originally.

Stand-alone Operation - A decentralized alarm decision by the detector is guaranteed. On-board intelligence permits the detector to operate in stand-alone mode. If loop controller CPU communications fail for more than four seconds, all devices on that circuit go into stand-alone mode. The circuit acts like a conventional alarm receiving circuit.

Fast Stable Communication - On-board intelligence means less information needs to be sent between the detector and the loop controller. Other than regular supervisory polling response, the detector only needs to communicate with the loop controller when it has something new to report.

# Installation

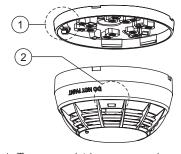

- 1. Tamper-resist lever arm on base (Break off to disable.)
- 2. Access slot for tamper-resist mechanism

### Accessories

**Detector mounting bases** have wiring terminals that are accessible from the "room-side" after mounting the base to the electrical box. The bases mount to North American 1-gang boxes and to 3½ inch or 4 inch octagon boxes, 1½ inches (38 mm) deep. They also mount to European BESA and 1-gang boxes with 60.3 mm fixing centers. The SIGA-SB4, SIGA-RB4, and SIGA-IB4 mount to North American 4 inch sq. electrical boxes in addition to the above boxes. They include the SIGA-TS4 Trim Skirt which is used to cover the "mounting ears" on the base. The SIGA-AB4G mounts to a 4" square box only.



**Audible Base** 



Standard Base

SIGA-IB

**Isolator Base** 





SIGA-RB SIGA-LED Relay Base Remote LED

**Remote LED SIGA-LED** - The remote LED connects to the SIGA-SB or SIGA-SB4 Standard Base only. It features a North American size 1-gang plastic faceplate with a white finish and red alarm LED.

**SIGA-TS4 Trim Skirt** - Supplied with 4 inch bases, it can also be ordered separately to use with the other bases to help hide surface imperfections not covered by the smaller bases.

**SIGA-AB4G and SIGA-AB4GT** - These sounder bases are designed for use where localized or group alarm signaling is required. The SIGA-AB4G is compatible with Signature Series smoke and heat detectors. The SIGA-AB4GT sounder base, when used with the SIGA-TCDR Temporal Pattern Generator module, adds an audible output function to any Signature Series detector, including fire and CO detectors.

# Typical Wiring


The detector mounting bases accept #18 AWG (0.75mm²), #16 (1.0mm²), #14 AWG (1.5mm²), and #12 AWG (2.5mm²) wire sizes.

Note: Sizes #16 AWG (1.0mm²) and #18 AWG (0.75mm²) are preferred for ease of installation. See Signature Loop Controller catalog sheet for detailed wiring requirement specifications.

#### Standard Detector Base, SIGA-SB, SIGA-SB4

This is the basic mounting base for Edwards Signature Series detectors. The SIGA-LED Remote LED is supported by the Standard Base.



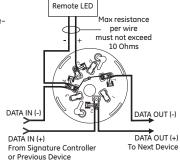


#### Isolator Detector Base, SIGA-IB, SIGA-IB4

This base includes a built-in line fault isolator for use on Class A circuits. A detector must be installed for it to operate. The isolator base does not support the SIGA-LED Remote LED.

The isolator operates as follows:

- a short on the line causes all isolators to open within 23 msec
- at 10 msec intervals, beginning on one side of the Class A circuit nearest the loop controller, the isolators close to provide the next isolator down the line with power
- when the isolator next to the short closes, reopens within 10 msec.

The process repeats beginning on the other side of the loop controller.

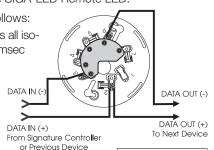

Term Description
1 Not Used
2 DATA IN/OUT (+)

3 DATA IN (-) 4 Not Used

4 Not Used 5 Not Used

6 DATA OUT (-) 7 Not Used

Normally- Normally-

Normally-Closed


DATA OUT (-)

#### Relay Detector Base, SIGA-RB, SIGA-RB4

This base includes a relay. Normally open or closed operation is selected during installation.


The dry contact is rated for 1 amp (pilot duty) @ 30 Vdc. The relay's position is supervised to avoid accidentally jarring it out of position.

The SIGA-RB can be operated as a control relay if programmed to do so at the control panel (EST3 V.2 only). The relay base does not support the SIGA-LED Remote LED.

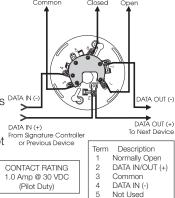

# Audible Detector Base for CO and Fire Detectors, SIGA-AB4GT


The Signature Series AB4GT sounder base, when used with the SIGA-TCDR Temporal Pattern Generator, adds an audible output function to any Signature Series detector. For more information on this device, refer to *Data Sheet 85001-0623 -- Sounder Base for CO and Fire Detectors*.

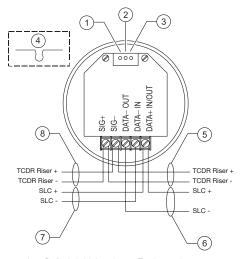

- 1. Volume setting. Default is high volume. For low volume, cut trace per item 4.
- Reserved for future use. Do not cut.
- Reserved for future use. Do not cut.
- 4. To configure output volume, cut trace as shown.
- 5. To next SIGA-AB4GT sounder base or EOL relay.
- 6. SLC OUT to next intelligent addressable device.
- 7. SLC\_IN from intelligent addressable controller or previous device.
- From SIGA-TCDR Temporal Pattern Generator or previous SIGA-AB4GT sounder base.

#### **Audible Detector Base for Fire Detectors, SIGA-AB4G**

This base is designed for use where localized or group alarm signaling is required. When the detector senses an alarm condition, the audible base emits a local alarm signal. The optional SIGA-CRR Polarity Reversal Relay can be used for sounding to other audible bases on the same 24 Vdc circuit.

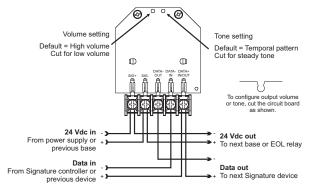

Relay and Audible Bases operate as follows:

- at system power-up or reset, the relay is de-energized
- when a detector is installed in the base with the power on, the relay energizes for four seconds, then de-energizes
- when a detector is removed from a base with the power on, the relay is de-energized
- when the detector enters the alarm state, the relay is energized.



#### Detection & alarm since 1872

U.S. T 888 378 2329 F 866 503 3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T: +65 6391 9300 F: +65 6391 9306

T: +91 80 4344 2000 F: +91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

# Compatibility

SIGA2-COS detectors are compatible only with the Signature Loop Controller.

# Warnings & Cautions

This detector will not operate without electrical power. As fires frequently cause power interruption, we suggest you discuss further safeguards with your fire protection specialist.

# **Specifications**

Operating voltage	15.20 to 19.95 VDC
Normal operating current	45 μA
Standalone alarm current	18 mA
Alarm current	45 μΑ
Construction	High impact engineering polymer
Mounting	Plug-in
Shipping weight	0.44 lb. (164 g)
Compatible bases	See Ordering Information
Operating environment	32 to 120°F (0 to 49°C), 0 to 93% RH, noncondensing
Storage temperature	-4 to 140°F (-20 to 60°C)
Environmental compensation	Automatic

# Ordering Information

Catalog Number	Description	Ship Wt. lbs (kg)
SIGA2-COS	Intelligent Carbon Monoxide Detector	0.4 (.16)
Accessories		
SIGA-SB	Detector Mounting Base - Standard	
SIGA-SB4	4-inch Detector Mounting Base c/w Trim Skirt	
SIGA-RB	Detector Mounting Base w/Relay	
SIGA-RB4	4-inch Detector Mounting Base w/Relay, c/w Trim Skirt	0.2 (.09)
SIGA-IB	Detector Mounting Base w/Fault Isolator	
SIGA-IB4	4-inch Detector Mounting Base w/ Fault Isolator, c/w Trim Skirt	
SIGA-LED	Remote Alarm LED (not for EN54 applications)	
SIGA-AB4G	Audible (Sounder) Base for Fire Detectors	0.3 (0.15)
SIGA-AB4GT	Audible (Sounder) Base for CO and Fire Detectors	0.3 (0.15)
SIGA-TCDR	Temporal Pattern Generator (for use with SIGA-AB4GT)	0.2 (0.1)
SIGA-TS4	Trim Skirt (supplied with 4-inch bases)	0.1 (.04)
2-CORPL*	Replacement CO Sensor	0.1 (.04)
2-CORPL*	Replacement CO Sensor	0.1 (.0

<sup>\*</sup>Release pending.

# Click Here to View Bill of Material/Index



# Click Here to View Bill of Material/Index

# Input Modules SIGA-CT1, SIGA-CT1HT, SIGA-CT2, SIGA-MCT2



# Overview

The SIGA-CT1 Single Input Module, SIGA-CT1HT High Temperature Single Input Module and SIGA-CT2/SIGA-MCT2 Dual Input Modules are intelligent analog addressable devices used to connect one or two Class B normally-open Alarm, Supervisory, or Monitor type dry contact Initiating Device Circuits (IDC).

The actual function of these modules is determined by the "personality code" selected by the installer. This code is downloaded to the module from the Signature loop controller during system configuration

The input modules gather analog information from the initiating devices connected to them and convert it into digital signals. The module's on-board microprocessor analyzes the signal and decides whether or not to input an alarm.

The SIGA-CT1, SIGA-CT1HT and SIGA-CT2 mount to standard North American 1-gang electrical boxes, making them ideal for locations where only one module is required. Separate I/O and data loop connections are made to each module.

The SIGA-CT1HT module operates at an expanded temperature range of 32 °F to 158 °F (0 °C to 70 °C) for those applications requiring more extreme environmental temperature variation.

**The SIGA-MCT2** is part of the UIO family of plug-in Signature Series modules. It functions identically to the SIGA-CT2, but takes advantage of the modular flexibility and easy installation that characterizes all UIO modules. Two- and six-module UIO mother-boards are available. All wiring connections are made to terminal blocks on the motherboard. UIO assemblies may be mounted in Edwards enclosures.

# Standard Features

#### Multiple applications

Including Alarm, Alarm with delayed latching (retard) for waterflow applications, Supervisory, and Monitor. The installer selects one of four "personality codes" to be downloaded to the module through the loop controller.

- SIGA-CT1HT rated for high temperature environments
   Suitable for attic installation and monitoring high temperature
   heat detectors.
- Plug-in (UIO) or standard 1-gang mount

UIO versions allow quick installation where multiple modules are required. The 1-gang mount version is ideal for remote locations that require a single module.

#### Automatic device mapping

Signature modules transmit information to the loop controller regarding their circuit locations with respect to other Signature devices on the wire loop.

#### Electronic addressing

Programmable addresses are downloaded from the loop controller, a PC, or the SIGA-PRO Signature Program/Service Tool. There are no switches or dials to set.

#### Stand-alone operation

The module makes decisions and inputs an alarm from initiating devices connected to it even if the loop controller's polling interrogation stops. (Function availability dependent upon control panel.)

Ground fault detection by address

Detects ground faults right down to the device level.

DATA SHEET 85001-0241

Not to be used for installation purposes. Issue 8

# Signature Series Overview


The Signature Series intelligent analog-addressable system from Edwards Security is an entire family of multi-sensor detectors and mounting bases, multiple-function input and output modules, network and non-network control panels, and user-friendly maintenance and service tools. Analog information from equipment connected to Signature devices is gathered and converted into digital signals. An onboard microprocessor in each Signature device measures and analyzes the signal and decides whether or not to input an alarm. The microprocessor in each Signature device provides four additional benefits – Self-diagnostics and History Log, Automatic Device Mapping, Stand-alone Operation and Fast, Stable Communication.

**Self-diagnostics and History Log** – Each Signature Series device constantly runs self-checks to provide important maintenance information. The results of the self-check are automatically updated and permanently stored in its non-volatile memory. This information is accessible for review any time at the control panel, PC, or using the SIGA-PRO Signature Program/Service Tool.


**Automatic Device Mapping** –The Signature Data Controller (SDC) learns where each device's serial number address is installed relative to other devices on the circuit. The SDC keeps a map of all Signature Series devices connected to it. The Signature Series Data Entry Program also uses the mapping feature. With interactive menus and graphic support, the wired circuits between each device can be examined. Layout or "as-built" drawing information showing branch wiring (T-taps), device types and their address are stored on disk for printing hard copy.

# Installation

SIGA-CT1, SIGA-CT1HT and SIGA-CT2: modules mount to North American  $2\frac{1}{2}$  inch(64 mm) deep 1-gang boxes and  $1\frac{1}{2}$  inch (38 mm) deep 4 inch square boxes with 1-gang covers and SIGA-MP mounting plates. The terminals are suited for #12 to #18 AWG (2.5 mm² to 0.75 mm²) wire size.

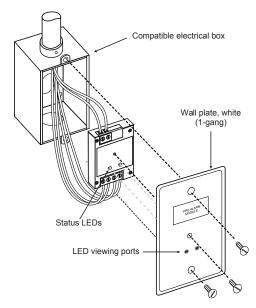

SIGA-MCT2: mount the UIO motherboard inside a suitable Edwards enclosure with screws and washers provided. Plug the SIGA-MCT2 into any available position on the motherboard and secure the module to the motherboard with the captive screws. Wiring connections are made to the terminals on the motherboard (see wiring diagram). UIO motherboard terminals are suited for #12 to #18 AWG (2.5 mm² to 0.75 mm²) wire size.

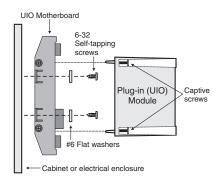

**Electronic Addressing** - The loop controller electronically addresses each module, saving valuable time during system commissioning. Setting complicated switches or dials is not required. Each module has its own unique serial number stored in its on-board memory. The loop controller identifies each device on the loop and assigns a "soft" address to each serial number. If desired, the modules can be addressed using the SIGA-PRO Signature Program/Service Tool.

Edwards recommends that this module be installed according to latest recognized edition of national and local fire alarm codes.

# **Application**

The duty performed by the SIGA-CT1 and SIGA-CT2/MCT2 is determined by their sub-type code or "Personality Code". The code is selected by the installer depending upon the desired application and is downloaded from the loop controller.

One personality code can be assigned to the SIGA-CT1. Two personality codes can be assigned to the SIGA-CT2/MCT2. Codes 1, 2, 3 and 4 can be mixed on SIGA-CT2/MCT2 modules only. For example, personality code 1 can be assigned to the first address (circuit A) and code 4 can be assigned to the second address (circuit B).

#### NORMALLY-OPEN ALARM - LATCHING (Personality Code 1)

- Assign to one or both circuits. Configures either circuit A or B or both for Class B normally open dry contact initiating devices such as Pull Stations, Heat Detectors, etc. An ALARM signal is sent to the loop controller when the input contact is closed. The alarm condition is latched at the module.

NORMALLY-OPEN ALARM - DELAYED LATCHING (Personality Code 2) - Assign to one or both circuits. Configures either circuit A or B or both for Class B normally-open dry contact initiating devices such as Waterflow Alarm Switches. An ALARM signal is sent to the loop controller when the input contact is closed for approximately 16 seconds. The alarm condition is latched at the module.

#### **NORMALLY-OPEN ACTIVE - NON-LATCHING (Personality**

**Code 3)** - Assign to one or both circuits. Configures either circuit A or B or both for Class B normally-open dry contact monitoring input such as from Fans, Dampers, Doors, etc. An ACTIVE signal is sent to the loop controller when the input contact is closed. The active condition is not latched at the module.

#### **NORMALLY-OPEN ACTIVE - LATCHING (Personality Code**


**4)** - Assign to one or both circuits. Configures either circuit A or B or both for Class B normally open dry contact monitoring input such as from Supervisory and Tamper Switches. An ACTIVE signal is sent to the loop controller when the input contact is closed. The active condition is latched at the module.


# Typical Wiring

Modules will accept #18 AWG (0.75mm²), #16 (1.0mm²), and #14AWG (1.50mm²), and #12 AWG (2.50mm²) wire sizes.

Note: Sizes #16 AWG (1.0mm²) and #18 AWG (0.75mm²) are preferred for ease of installation. See Signature Loop Controller catalog sheet for detailed wiring requirement specifications.

Initiating (Slave) Device Circuit Wire Specification	ons		
Maximum Allowable Wire Resistance	50 ohms (25 ohms per wire) per Circuit		
Maximum Allowable Wire Capacitance	0.1µF per Circuit		
For Design Reference:	Wire Size	Maximum Distance to EOLR	
	#18 AWG (0.75 mm²)		
	#16 AWG (1.00 mm²)	4,000 ft (1,219 m)	
	#14 AWG (1.50 mm²)	4,000 11 (1,219111)	
	#12 AWG (1.50 mm²)		

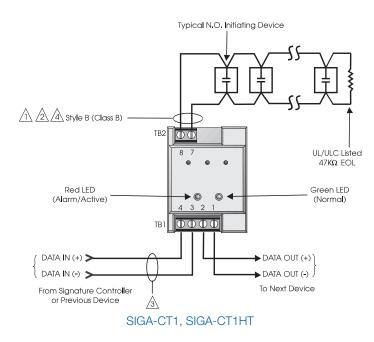

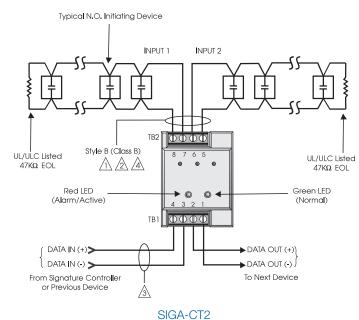

### NOTES

Maximum 25 Ohm resistance per wire.

Maximum #12 AWG (2.5 mm<sup>2</sup>) wire; Minimum #18 AWG (0.75 mm<sup>2</sup>).

Refer to Signature controller installation sheet for wiring specifications.

4 Maximum 10 Vdc @ 350 μA

5 The SIGA-UIO6R and the SIGA-UIO2R do not come with TB14.


- 6 All wiring is supervised and power-limited.
- 7 These modules will not support 2-wire smoke detectors.

# Warnings & Cautions

This module will not operate without electrical power. As fires frequently cause power interruption, we suggest you discuss further safeguards with your local fire protection specialist.

# Compatibility

The Signature Series modules are compatible only with EST's Signature Loop Controller.

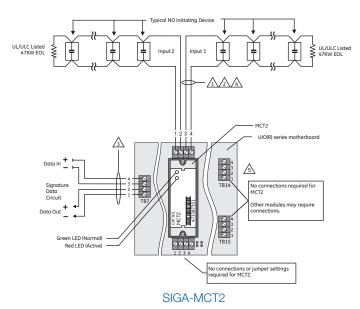



#### Detection & alarm since 1872

U.S. T 888-378-2329 F 866-503-3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T: +65 6391 9300 F: +65 6391 9306

India

T: +91 80 4344 2000 F: +91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

## Specifications

Catalog Number	SIGA-CT1HT	SIGA-CT1	SIGA-CT2	SIGA-MCT2	
Description	Single Inp	ut Module	Dual Input Module		
Type Code	48 (factory set) (personality cod	Four sub-types es) are available	49 (factory set) Four sub-types (personality codes) are available		
Address Requirements	Uses One Mo	dule Address	Uses Two Mod	dule Addresses	
Operating Current	Standby Activated	1 '		= 396µA; = 680µA	
Operating Voltage	15.2 to 19.95 Vdc (19 Vdc nominal)				
Construction	High Impact Engineering Polymer				
Mounting	North American 2½ inch (64 mm) deep one-gang boxes and 1½ inch (38 mm) deep 4 inch square boxes with one-gang covers and SIGA-MP mounting plates				
Operating Environment	32°F to 158°F (0°C to 70°C) 32°F to 120°F (0°C to 49°C)			9°C)	
Storage Environment	-4°F to 140°F (-20°C to 60°C); Humidity: 0 to 93% RH				
LED Operation	On-board Green LED - Flashes when polled; On-board Red LED - Flashes when in alarm/active. Both LEDs - Glow steady when in alarm (stand-alone)				
Compatibility	Use with Signature Loop Controller				
Agency Listings		UL, ULC, MEA, CSFM			

## Ordering Information

Catalog Number	Description	Ship Wt. Ibs (kg)
SIGA-CT1	Single Input Module — UL/ULC Listed	0.4 (0.15)
SIGA-CT1HT	Single Input Module High Temperature Operation UL/ULC Listed	0.4 (0.15)
SIGA-CT2	Dual Input Module — UL/ULC Listed	0.4 (0.15)
SIGA-MCT2	Dual Input Plug-in (UIO) Module — UL, ULC Listed	0.1 (0.05)

Related Equipment						
27193-11	Surface Mount Box - Red, 1-gang	1.0 (0.6)				
27193-16	Surface Mount Box - White, 1-gang	1.0 (0.6)				
SIGA-UIO2R	Universal Input-Output Module Board w/Riser Inputs — Two Module Positions	0.32 (0.15)				
SIGA-UIO6R	Universal Input-Output Module Board w/Riser Inputs  — Six Module Positions	0.62 (0.28)				
SIGA-UIO6	Universal Input-Output Module Board — Six Module Positions	0.56 (0.25)				
MFC-A	Multifunction Fire Cabinet $-$ Red, supports Signature Module Mounting Plates	7.0 (3.1)				
SIGA-MB4	Transponder Mounting Bracket (allows for mounting two 1-gang modules in a 2-gang box)	0.4 (0.15)				
SIGA-MP1	Signature Module Mounting Plate, 1 footprint	1.5 (0.70)				
SIGA-MP2	Signature Module Mounting Plate, 1/2 footprint	0.5 (0.23)				
SIGA-MP2L	Signature Module Mounting Plate, 1/2 extended footprint	1.02 (0.46)				

Click Here to View Bill of Material/Index



## Click Here to View Bill of Material/Index

Field Configurable Horns and Strobes Genesis Series



#### Overview

The Genesis line of fire alarm and mass notification/emergency communications (ECS/MNS) signals are among the smallest, most compact audible-visible life safety signaling devices in the world. About the size of a deck of playing cards, these devices are designed to blend with any decor.

Thanks to patented breakthrough technology, Edwards Genesis strobes do not require bulky specular reflectors and lenses. Instead, an exclusive cavity design conditions light to produce a highly controlled distribution pattern. Significant development efforts employing this new technology have given rise to a new benchmark in strobe performance - FullLight technology.

FullLight strobe technology produces a smooth light distribution pattern without the spikes and voids characteristic of specular reflectors. This ensures the entire coverage area receives consistent illumination from the strobe flash. As a result, Genesis strobes with FullLight technology go well beyond the UL-1971 and ULC-S526 light distribution requirements.

Genesis strobes and horn-strobes offer selectable candela output by means of a conveniently-located switch on the side of the device. Models are also available that offer fixed 15/75 cd output. The candela output setting remains clearly visible even after final installation, yet it stays locked in place to prevent unauthorized tampering.

Genesis ECS/MNS appliances offer emergency signaling with clear or amber lenses and with optional ALERT housing labels. They are ideal for applications that require differentiation between fire alarm and mass notification alerts.

#### Standard Features

#### Unique low-profile design

- The most compact UL-1971/ULC-S526 listed strobe available
- Ultra-slim protrudes less than one inch
- Attractive appearance
- No visible mounting screws

#### · Four field-configurable options in one device

- Select 15, 30, 75, or 110 cd strobe output
- Select high (default) or low dB horn output
- Select temporal (default) or steady horn output
- Select public mode flash rate (default) or private mode temporal flash

#### Fixed 15/75 cd model available

#### **ECS/MNS** models available

#### Easy to install

- Fits standard 1-gang electrical boxes no trim plate needed
- Optional trim plate accommodates oversized openings
- Pre-assembled with captive hardware
- #12 AWG terminals ideal for long runs or existing wiring

#### • Unparalleled performance

- Industry's most even light distribution
- Meets tough synchronizing standards for strobes
- Single microprocessor controls both horn and strobe
- Independent horn control over a single pair of wires
- Highly regulated in-rush current
- Multiple frequency tone improves sound penetration
- Field-programmable temporal strobe output option

DATA SHEET 85001-0573 Page 1 of 6

#### **Application**

Genesis strobes are UL 1971-listed for use indoors as wall-mounted public-mode notification appliances for the hearing impaired. Prevailing codes require strobes to be used where ambient noise conditions exceed 105 dBA (87dBA in Canada), where occupants use hearing protection, and in areas of public accommodation as defined in the *Americans with Disabilities Act* (see application notes – USA).

Combination horn-strobe signals must be installed in accordance with guidelines established for strobe devices. Consult with your Authority Having Jurisdiction for details.

All Genesis strobes exceed UL synchronization requirements (within 10 milliseconds over a two-hour period) when used with a synchronization source. Synchronization is important in order to avoid epileptic sensitivity.

**WARNING:** These devices will not operate without electrical power. As fires frequently cause power interruptions, further safeguards such as backup power supplies may be required.

#### **Horns**

Genesis horn output reaches as high as 99 dB and features a unique multiple frequency tone that results in excellent sound penetration and an unmistakable warning of danger. Horns may be configured for either coded or non-coded signal circuits. They can also be set for low dB output with a jumper cut that reduces horn output by about 5 dB. Horn-only models may be ceiling-mounted or wall-mounted.

The suggested sound pressure level for each signaling zone used with alarm signals is at least 15 dB above the average ambient sound level, or 5 dB above the maximum sound level having a duration of at least 60 seconds, whichever is greater, measured 5 feet (1.5 m) above the floor. The average ambient sound level is, A-weighted sound pressure measured over a 24-hour period.

Doubling the distance from the signal to the ear will theoretically result in a 6 dB reduction of the received sound pressure level. The actual effect depends on the acoustic properties of materials in the space. A 3 dBA difference represents a barely noticeable change in volume.

#### **ECS/MNS** Applications

Genesis ECS/MNS strobe appliances bring the same highperformance fire alarm features and unobtrusive design to mass notification applications. Available with amber lenses and optional ALERT housing labels, they are ideal for applications that require differentiation between fire alarm and mass notification alerts.

#### Installation

Genesis horns and strobes mount to any standard one-gang surface or flush electrical box. Matching optional trim plates are used to cover oversized openings and can accommodate one-gang, two-gang, four-inch square, or octagonal boxes, and European 100 mm square.



Genesis Horn/Strobe with optional trim plate

All Genesis signals come pre-assembled with captive mounting screws for easy installation. Two tabs at the top of the signal unlock the cover to reveal the mounting hardware. The shallow depth of Genesis devices leaves ample room behind the signal for extra wiring. Once installed with the cover in place, no mounting screws are visible.

#### **Field Configuration**

Temporal horn and horn-strobe models are factory set to sound in a **three-pulse temporal pattern**. Units may be con-

figured for use with coded systems by cutting a jumper on the circuit board. This results in a **steady output** that can be turned on and off (coded) as the system applies and removes power to the signal circuit. A Genesis Signal Master is required when hornstrobe models are configured for coded systems. Non-temporal, horn-only models sound a steady tone.


Genesis clear strobes and horn-strobes are shipped from the factory ready for use as **UL 1971 compliant** signals for public mode operation. These signals may be configured for **temporal flash** by cutting a jumper on the circuit board. This battery-saving feature is intended for private mode signaling only.

Genesis clear strobes and horn-strobes may be set for **15**, **30**, **75**, **or 110 candela output**. The output setting is changed by simply opening the device and sliding the switch to the desired setting. The device does not have to be removed to change the output setting. The setting remains visible through a small window on the side of the device after the cover is closed.

Horns and horn-strobes are factory set for **high dB output**. **Low dB output** may be selected by cutting a jumper on the circuit board. This reduces the output by about 5 dB.

## Wiring

Field wiring terminals accommodate #18 to #12 AWG (0.75 mm² to 2.5 mm²) wiring. Horns, strobes, and combination horn-strobes are interconnected with a single pair of wires as shown below.

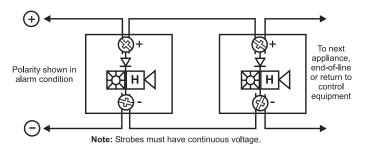

### **Current Draw**

#### Strobes, Horn-Strobes

#### Multi-cd Wall Strobes (G1-VM)

UL	15 cd*	30 cd*	15/75 cd**	75 cd*	110 cd*	Ī
Rating	RMS	RMS	RMS	RMS	RMS	
16 Vdc	103	141	152	255	311	
16 Vfwr	125	179	224	346	392	_

<sup>\*</sup>G1-VM multi-cd; \*\*G1F-V1575 fixed 15/75 cd

Typical	15 cd	30 cd	15/75	75 cd	110 cd
Current	RMS	RMS	RMS	RMS	RMS
16 Vdc	85	127	150	245	285
20 Vdc	71	98	123	188	240
24 Vdc	59	82	104	152	191
33 Vdc	46	64	84	112	137
16 Vfwr	119	169	223	332	376
20 Vfwr	103	143	189	253	331
24 Vfwr	94	129	169	218	262
33 Vfwr	87	112	148	179	205

#### Wall Temporal Horn-strobes - High dB Setting

UL Rating	15 cd*	30 cd*	15/75 cd**	75 cd*	110 cd*
16 Vdc	129	167	172	281	337
16 Vfwr	176	230	269	397	443

\*G1-HDVM multi-cd \*\*G1F-HDV1575 fixed 15/75 cd

15/75 cd

Typical	15 cd	30 cd	15/75	75 cd	110 cd
Current	RMS	RMS	RMS	RMS	RMS
16 Vdc	102	135	160	246	309
20 Vdc	88	109	137	193	248
24 Vdc	81	94	122	161	203
33 Vdc	74	72	106	124	154
16 Vfwr	144	182	247	352	393
20 Vfwr	141	162	220	274	362
24 Vfwr	136	152	203	235	282
33 Vfwr	125	144	196	201	232

#### Wall Temporal Horn-strobes - Low dB Setting

UL		15 cd*	30 cd*	15/75 cd**	75 cd*	110 cd*
Rating	g	RMS	RMS	RMS	RMS	RMS
16 Vd	С	122	160	146	274	330
16 Vfv	vr	162	216	231	383	429

Typical	15 cd	30 cd	15/75	75 cd	110 cd
Current	RMS	RMS	RMS	RMS	RMS
16 Vdc	96	130	158	243	302
20 Vdc	79	104	133	189	241
24 Vdc	68	88	119	156	197
33 Vdc	56	71	100	118	146
16 Vfwr	128	180	241	344	389
20 Vfwr	118	157	213	266	343
24 Vfwr	113	144	195	230	279
33 Vfwr	112	137	182	197	226

#### Horns

#### Wall or Ceiling Mounted Temporal Horns (G1-HD)

UL Rating	High dB (RMS)	Low dB (RMS)	
16 Vdc	26	19	
24 Vdc	36	27	
33 Vdc	41	33	
16 Vfwr	51	37	
24 Vfwr	69	52	
33 Vfwr	76	70	

Typical	High dB	Low dB
Current	RMS	RMS
16 Vdc	22	17
20 Vdc	24	19
24 Vdc	27	22
33 Vdc	32	26
16 Vfwr	34	30
20 Vfwr	40	34
24 Vfwr	45	38
33 Vfwr	52	47

#### **Wall or Ceiling Mounted Horns (G1-P)**

<b>UL Designation</b>	Voltage Range	Max. Current, RMS
Regulated 24 Vdc	16 - 33 Vdc	13 mA
24 fwr	16 - 33 Vfwr	11 mA

Typical Current	RMS
24 Vdc	10
24 Vdc	11
31 Vdc	12
20 Vfwr	9
24 Vfwr	10

Current values are shown in mA.

## dBA output

#### Temporal Horns, Horn-strobes (G1-HD, G1-HDVM series)

			, -	
High	UL	464	Average	Peak
dB Setting	Temporal	Steady	Temporal/ Steady	Temporal/ Steady
16 Vdc	81.4	85.5	91.4	94.2
24 Vdc	84.4	88.6	94.5	97.6
33 Vdc	86.3	90.4	96.9	99.5

Low dB	UL	464	Average	Peak
Setting	Temporal	Steady	Temporal/ Steady	Temporal/ Steady
16 Vdc	76.0	80.1	86.3	89.2
24 Vdc	79.4	83.5	89.8	92.5
33 Vdc	82.1	86.5	92.5	95.3

#### **Steady Tone Horns (G1-P series)**


	UL464	Average	Peak
16 Vdc	77 dBA, min	85 dBA	91 dBA
16 Vfwr	77 dBA, min	85 dBA	91 dBA

#### Notes

- 1. All values shown are dBA measured at 10 feet (3.01m).
- 2. UL464 values measured in reverberant room.
- 3. Average and Peak values are measured in anechoic chamber.


## Average Sound Output (dBA)

(High dB setting, anechoic, 24V, measured at 10ft)

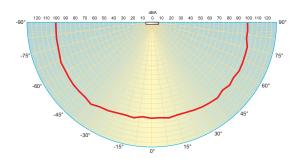

## Light output - (effective cd)

Percent of UL rating versus angle

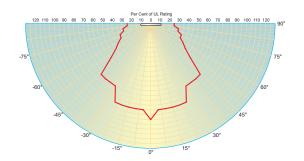

## Specifications

Housing	Red or white textured UV stabilized, color impregnated engineered plastic. Exceeds 94V-0 UL flammability rating.
Lens	Optical grade polycarbonate (clear)
	Strobes and horn-strobes are for wall-mount installation only. Horn-only models may be ceiling- or wall-mounted.
Mounting	Flush mount: 2½ inch (64 mm) deep one-gang box
(indoor only)	Surface mount: Model 27193 surface mount box, wiremold box, or equivalent surface-mount box
	With optional trim plate: One-gang, two-gang, four-inch square, octagonal, or European single-gang box
Wire connections	Screw terminals: single input for both horn and strobe. #18 to #12 AWG (0.75 mm² to 2.5 mm²) wire size
Operating environment	Indoor only: 32-120°F (0-49°C) ambient temperature. 93% relative humidity
Aganay liatings/approvals	UL 1971, UL 1638, UL 464, ULC S525, ULC S526, CSFM, CE, FCC, MEA.
Agency listings/approvals	(All models comply with ADA Code of Federal Regulation Chapter 28 Part 36 Final Rule.)
Dimensions (HxWxD)	Signal: 4-1/2" x 2-3/4" x 13/16" (113 mm x 68 mm x 21 mm)
DIFFICISIONS (FIXVVXD)	Trimplate: 5" (127 mm); Height – 5-7/8" (149 mm); Depth – ½" (13 mm)
	G1-HD series temporal-tone horns: non-coded, filtered 16-33 Vdc or unfiltered 16-33 Vdc FWR (or coded when horn
	set to steady tone)
Operating voltage	G1-HDVM series temporal-tone horn-strobes: non-coded, filtered 16-33 Vdc or unfiltered 16-33 Vdc FWR (or coded
Operating voltage	(audible NAC only) when used with optional G1M Genesis Signal Master)
	G1-VM series strobes: non-coded, filtered 16 - 33 Vdc or unfiltered 16-33 Vdc FWR
	G1-P series steady-tone horns: coded or non-coded, filtered 20-31 Vdc or unfiltered 20-27 Vfwr
	UL 1971, UL 1638, ULC S526: selectable 15 cd, 30 cd, 75 cd, or 110 cd output
Strobe output rating	UL 1971: 15 cd (fixed 15/75 cd models)
	UL 1638, ULCS526: 75 cd (fixed 15/75 cd models)
	G1-VM strobes and G1-HDVM series temporal-tone horn-strobes: one flash per second synchronized with optional
Strobe flash rate	G1M Genesis Signal Master indefinitely within 10 milliseconds. Temporal setting (private mode only): synchronized to
	temporal output of horns on same circuit
	SIGA-CC1S, SIGA-MCC1S, SIGA-CC2A, SIGA-MCC2A, G1M-RM
Synchronization Sources	BPS6A, BPS10A, APS6A, APS10A, iO64, iO500, Fireshield Plus 3, 5 and 10 zone.
	Add G1M for G1-CVM &G1-HDVM devices only.
Horn pulso rata	G1-HD temporal-tone horns and G1-HDVM series temporal-tone horn-strobes: temporal rate synchronized with optional
Horn pulse rate	G1M Genesis Signal Master indefinitely within 10 milliseconds. G1-P steady-tone horns: continuous, steady tone only
Temporal audible pattern	½ sec ON, ½ sec OFF, ½ sec ON, ½ sec OFF, ½ sec ON, 1½ sec OFF, then repeat cycle

## Candela Output

Lens Color	Rating	Switch Position A	Switch Position B	Switch Position C	Switch Position D
Amber	UL 1638	110 cd	75 cd	30 cd	15 cd
Amber	UL 1971*	88 cd	60 cd	24 cd	12 cd
Clear	UL 1971	110 cd	75 cd	30 cd	15 cd

<sup>\*</sup> Equivalent Rating

Fire appliances available with white or red housings.



ECS/MNS appliances available with clear or amber lenses.



## Ordering Information

Model	Housing	Marking	Lens	Strobe	Horn	Ship Wt. lbs (kg
Fire Alarm Applia	nces (c/w ru	nning man	icon screen	printed on housing)		
G1-VM	White	None	Clear	Selectable 15, 30, 75, or 110 cd	Strobe only	0.25 (0.11)
G1F-HD	White	FIRE	Clear	Horn only	Selectable high/low dB	0.25 (0.11)
G1F-HDV1575	White	FIRE	Clear	15/75 cd <sup>1</sup>	Temporal hi/lo dB-24V	0.25 (0.11)
G1F-HDVM	White	FIRE	Clear	Selectable 15, 30, 75, or 110 cd	Selectable high/low dB	0.25 (0.11)
G1F-P	White	FIRE	Clear	Steady Horn (not compatible with	Genesis Signal Master)	0.25 (0.11)
G1F-V1575	White	FIRE	Clear	15/75 cd <sup>1</sup>	Strobe only	0.25 (0.11)
G1F-VM	White	FIRE	Clear	Selectable 15, 30, 75, or 110 cd	Strobe only	0.25 (0.11)
G1-HD	White	None	Clear	Horn only	Selectable high/low dB	0.25 (0.11)
G1-HDVM	White	None	Clear	Selectable 15, 30, 75, or 110 cd	Selectable high/low dB	0.25 (0.11)
G1-P	White	None	Clear	Steady Horn (not compatible with	Genesis Signal Master)	0.25 (0.11)
G1RF-HD	Red	FIRE	Clear	Horn only	Selectable high/low dB	0.25 (0.11)
G1RF-HDV1575	Red	FIRE	Clear	15/75 cd <sup>1</sup>	Temporal hi/lo dB-24V	0.25 (0.11)
G1RF-HDVM	Red	FIRE	Clear	Selectable 15, 30, 75, or 110 cd	Selectable high/low dB	0.25 (0.11)
G1RF-P	Red	FIRE	Clear	Steady Horn (not compatible with	Genesis Signal Master)	0.25 (0.11)
G1RF-V1575	Red	FIRE	Clear	15/75 cd <sup>1</sup>	Strobe only	0.25 (0.11)
G1RF-VM	Red	FIRE	Clear	Selectable 15, 30, 75, or 110 cd	Strobe only	0.25 (0.11)
G1R-HD	Red	None	Clear	Horn only	Selectable high/low dB	0.25 (0.11)
G1R-HDVM	Red	None	Clear	Selectable 15, 30, 75, or 110 cd	Selectable high/low dB	0.25 (0.11)
G1R-P	Red	None	Clear	Steady Horn (not compatible with	Genesis Signal Master)	0.25 (0.11)
G1R-VM	Red	None	Clear	Selectable 15, 30, 75, or 110 cd	Strobe only	0.25 (0.11)
ECS/MNS Applia	nces (no run	ning man ic	on on hous	ing)		,
G1WA-VMA	White	ALERT	Amber	Selectable A, B, C or D	Strobe only	0.25 (0.11)
G1WA-VMC	White	ALERT	Clear	Selectable 15, 30, 75, or 110 cd	Strobe only	0.25 (0.11)
G1WN-VMA	White	None	Amber	Selectable A, B, C or D	Strobe only	0.25 (0.11)
G1WN-VMC	White	None	Clear	Selectable 15, 30, 75, or 110 cd	Strobe only	0.25 (0.11)
Trim Plates						
G1T	White	None	Genesis Tr	im Plate (for two-gang or 4" square b	ooxes)	0.15 (0.7)
G1RT	Red	None		im Plate (for two-gang or 4" square b	· · · · · · · · · · · · · · · · · · ·	0.15 (0.7)
G1T-FIRE	White	FIRE	Genesis Tr	im Plate (for two-gang or 4" square b	ooxes)	0.15 (0.7)
G1RT-FIRE	Red	FIRE	Genesis Tr	im Plate (for two-gang or 4" square b	ooxes)	0.15 (0.7)
G1WT-ALERT	White	ALERT		im Plate (for two-gang or 4" square b		0.15 (0.7)
Surface Boxes						
27193-16	White	N/A	One-gang	surface mount box		1 (0.4)
27193-11	Red	N/A		surface mount box		1 (0.4)

<sup>&</sup>lt;sup>1</sup> These 15/75 cd models provide fixed output and are not multi-candela devices. The 15 cd output component complies with UL1971, while the 75 cd output component complies with UL 1638.

DATA SHEET **85001-0573** Page 5 of 6 Not to be used for installation purposes. Issue 11



#### Detection & alarm since 1872

U.S. T 888 378 2329 F 866 503 3996

Canada Chubb Edwards T 519 376 2430 F 519 376 7258

Southeast Asia T:+65 6391 9300 F:+65 6391 9306

India T:+91 80 4344 2000 F:+91 80 4344 2050

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T +32 2 725 11 20 F +32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

utcfireandsecurity.com

© 2010 UTC Fire & Security. All rights reserved.

Click Here to View Bill of Material/Index

# Click Here to View Bill of Material/Index

# EST Life Safety & Communications Power Supplies

#### Overview

The Booster Power Supply (BPS) is a UL 864, 9th Edition listed power supply. It is a 24 Vdc filtered-regulated, and supervised unit that can easily be configured to provide additional notification appliance circuits (NACs) or auxiliary power for Mass Notification/Emergency Communication (MNEC), as well as life safety, security, and access control applications.

The BPS contains the circuitry to monitor and charge internal or external batteries. Its steel enclosure has room for up to two 10 ampere-hour batteries. For access control-only applications, the BPS can support batteries totaling up to 65 ampere-hours in an external enclosure. The BPS has four Class B (convertible to two Class A) NACs. These can be activated in one or two groups from the BPS's unique dual input circuits.

The BPS is available in 6.5 or 10 ampere models. Each output circuit has a capacity of three amperes; total current draw cannot exceed the unit's rating.

The BPS meets current UL requirements and is listed under the following standards:

5	
Standard (CCN)	Description
UL864 9th ed.ition (UOXX)	Fire Alarm Systems
UL636 (ANET, UEHX7)	Holdup Alarm Units and Systems
UL609 (AOTX, AOTX7)	Local Burglar Alarm Units and Systems
UL294 (ALVY, UEHX7)	Access Control Systems
UL365 (APAW, APAW7)	Police Station Connected Burglar Alarm Units and Systems
UL1076 (APOU, APOU7)	Proprietary Burglar Alarm System Units
UL1610 (AMCX)	Central Station Alarm Unit
ULC-S527 (UOXXC)	Control Units, Fire Alarm (Canada)
ULC-S303 (AOTX7)	Local Burglar Alarm Units and Systems (Canada)
ULC-S304 (AMCX7)	Central and Monitoring Station Burglar Alarm Units (Canada)
C22.2 No. 205	Signaling Equipment (Canada)

# Remote Booster Power Supplies

BPS6A, BPS10A

#### Standard Features

- Allows for reliable filtered and regulated power to be installed where needed.
- Cost effective system expansion
- Provides for Genesis and Enhanced Integrity notification appliance synchronization
- Supports coded output operation
- Self-restoring overcurrent protection
- Multiple signal rates
- Can be cascaded or controlled independently
- Easy field configuration
- On-board diagnostic LEDs identify wiring or internal faults
- Standard GE Security keyed lockable steel cabinet with removable door
- 110 and 230 Vac models available
- Accommodates 18 to 12 AWG wire sizes
- Optional tamper switch
- Dual battery charging rates





### **Application**

The BPS provides additional power and circuits for notification appliances and other 24 Vdc loads. It is listed for indoor dry locations and can easily be installed where needed.

Fault conditions are indicated on the on-board diagnostic LEDs, opening the BPS input sense circuit and the trouble relay (if programmed). While this provides indication to the host system, the BPS can still be activated upon command. A separate AC Fail contact is available on the BPS circuit board, which can be programmed for trouble or AC Fail. There are seven on-board diagnostic LEDs: one for each NAC fault, one for battery fault, one for ground fault, and one for AC power.

The unique dual-input activation circuits of the BPS can be activated by any voltage from 6 to 45 VDC (filtered-regulated) or 11 to 33 Vdc (full-wave rectified, unfiltered). The first input circuit can be configured to activate 1-4 of the four possible outputs. The second input circuit can be configured to control circuits 3 and 4. When outputs are configured for auxiliary operation, these circuits can be configured to stay on or automatically deactivate 30 seconds after AC power is lost. This feature makes these circuits ideal for door holder applications. The BPS also has a separate 200 mA 24 Vdc output that can be used to power internal activation modules.

BPS NACs can be configured for a 3-3-3 temporal or continuous output. California temporal rate outputs are also available on certain models. This makes the BPS ideal for applications requiring signaling rates that are not available from the main system.

In addition to the internally generated signal rates, the BPS can also be configured to follow the coded signal rate of the main system NACs. This allows for the seamless expansion of existing NACs.


The BPS enclosure has mounting brackets for up to three Signature modules to the right of the circuit board.


## **Engineering Specification**

Supply, where needed, GE Security BPS Series Booster Power Supplies (BPS) that are interconnected to and supervised by the main system. The BPS shall function as a stand-alone auxiliary power supply with its own fully-supervised battery compliment. The BPS battery compliment shall be sized to match the requirements of the main system. The BPS shall be capable of supervising and charging batteries having the capacity of 24 ampere-hours for Mass Notification/Emergency Communication (MNEC), life safety and security applications, and the capacity of 65 ampere-hours for access control applications.

The BPS shall provide a minimum of four independent, fully supervised Class B circuits that can be field configurable for notification appliance circuits or auxiliary 24 Vdc power circuits. BPS NACs shall be convertible to a minimum of two Class A NACs. Each BPS output circuit shall be rated at 3 amperes at 24 Vdc. Each output circuit shall be provided with automatically restoring overcurrent protection. The BPS shall be operable from the main system NAC and/or GE Security Signature Series control modules. BPS NACs shall be configurable for continuous, 3-3-3 temporal or optionally, California rate. Fault conditions on the BPS shall not impede operation of main system NAC. The BPS shall be provided with ground fault detection circuitry and a separate AC fail relay.

#### **Dimensions**

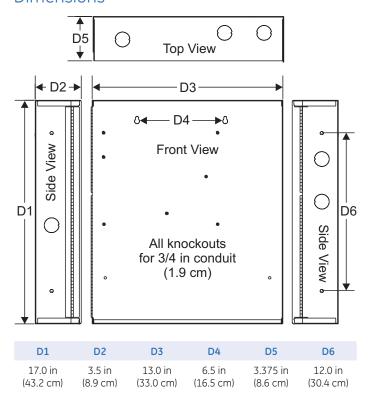

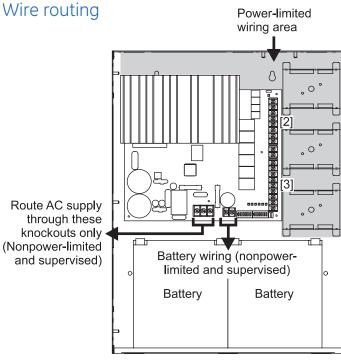


#### Notes

- Maintain 1/4-inch (6 mm) spacing between power-limited and nonpower-limited wiring or use type FPL, FPLR, or FPLP cable per NEC.
- [2] Power-limited and supervised when not configured as auxiliary power. Non-supervised when configured as auxiliary power.
- [3] Source must be power-limited. Source determines supervision.
- When using larger batteries, make sure to position the battery terminals towards the door.

### **Typical Wiring**


## Single or castcaded booster anywhere on a notification appliance circuit

Existing NAC end-of-line resistors are not required to be installed at the booster's terminals. This allows multiple boosters to be driven from a single NAC circuit without the need for special configurations.

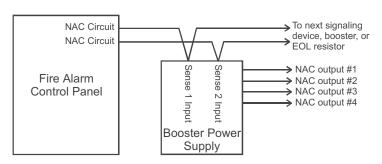


## Configuring the Booster for AC Power Fail delay operation\*

## Multiple CC1(S) modules using the BPS's sense inputs

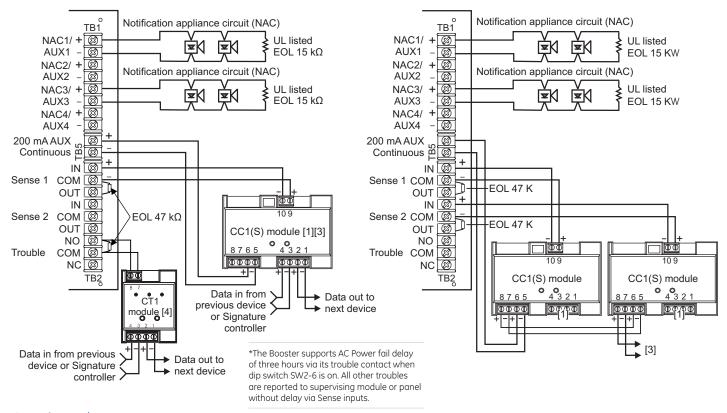

#### Security and access

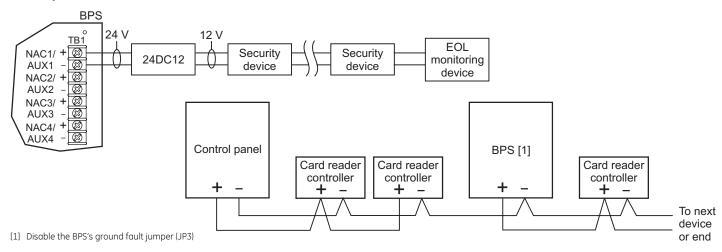

## GE Security

U.S. T 888-378-2329 F 866-503-3996

Canada T 519 376 2430 F 519 376 7258

Asia T 852 2907 8108 F 852 2142 5063

Australia T +61 3 9239 1200 F +61 3 9239 1299

Europe T 32 2 725 11 20 F 32 2 721 86 13

Latin America T 305 593 4301 F 305 593 4300

www.gesecurity.com/est

© 2009 General Electric Company All Rights Reserved

Signature Series is a Trademark of GE Security.

## Click Here to View Bill of Material/Index

## **Specifications**

The state of the s				
Model	6.5 amp Booster	10 amp Booster		
AC Line Voltage	120VAC or 220-240VAC 50/60Hz 390 watts	120VAC or 220-240VAC 50/60Hz 580 watts		
Notification Appliance Circuit Ratings	3.0A max. per circuit @ 24Vdc nominal 6.5A max total all NACs	3.0A max. per circuit @ 24Vdc nominal 10A max total all NACs		
Trouble Relay	2 Amps	@ 30Vdc		
Auxiliary Outputs		ACs 1, 2, 3 or 4. as auxiliary outputs I auxiliary. (See note 2.)		
Input Current (from an existing NAC)	3mA @ 12Vdc,	6mA @ 24Vdc		
Booster Internal Supervisory Current	70mA			
Signature Mounting Space	Accomodates three	two-gang modules.		
Maximum Battery Size	10 Amp Hours (2 of 12V10A) in cabinet up to 24 Amp hours with ex- ternal battery cabinet for fire and security applications; up to 65 Amp hours for access control applications in external battery box.			
Terminal Wire Gauge	18-12	? AWG		
Relative Humidity	0 to 93% non co	ndensing @ 32°C		
Temperature Rating	32° to 120°f	F (0° to 49°C)		
NAC Wiring Styles	Class A or Class B			
Output Signal Rates	Continuous, California rate, 3-3-3 temporal, or follow installed panel's NAC. (See note 1.)			
Ground Fault Detection	Enable or Disable via jumper			
Agency Listings	UL, ULC, CSFM			

- 1. Model BPS\*CAA provides selection for California rate, in place of temporal.
- 2. Maximum of 8 Amps can be used for auxiliary output.

## **Ordering Information**

Catalog Number	Description	Shipping Wt. lb (kg)
BPS6A	6.5 Amp Booster Power Supply	13 (5.9)
BPS6AC	6.5 Amp Booster Power Supply (ULC)	13 ( 5.9)
BPS6A/230	6.5 Amp Booster Power Supply (220V)	13 ( 5.9)
BPS6CAA	6.5 Amp Booster Power Supply with California rate	13 ( 5.9)
BPS10A	10 Amp Booster Power Supply	13 ( 5.9)
BPS10AC	10 Amp Booster Power Supply (ULC)	13 ( 5.9)
BPS10A/230	10 Amp Booster Power Supply (220V)	13 ( 5.9)
BPS10CAA	10 Amp Booster Power Supply with California rate	13 ( 5.9)

Related Equipm	nent	
12V6A5	7.2 Amp Hour Battery, two required	3.4 (1.6)
12V10A	10 Amp Hour Battery, two required	9.5 (4.3)
3-TAMP	Tamper switch	
BC-1	Battery Cabinet (up to 2 - 40 Amp Hour Batteries)	58 (26.4)
BC-2	Battery Cabinet (up to 2 - 17 Amp Hour Batteries)	19 (8.6)
12V17A	18 Amp Hour Battery, two required (see note 1)	13 ( 5.9)
12V24A	24 Amp Hour Battery, two required (see note 1)	20 (9.07)
12V40A	40 Amp Hour Battery, two required (see notes 1, 2)	32 (14.5)
12V50A	50 Amp Hour Battery, two required (see notes 1, 2)	40 (18.14)
12V65A	65 Amp Hour Battery, two required (see notes 1, 2)	49 (22.2)

- 1. Requires installation of separate battery cabinet.
- 2. BPS supports batteries greater than 24 Amp hours for access control applications only.



